

SAMSUNG

SAMSUNG MEDISON
DIAGNOSTIC ULTRASOUND SYSTEM

HS40

Service Manual



Version 1.00

HS40

Service Manual

English

SM-HS40-ENG-01

(Empty page)

Safety Requirements

■ Classification

- Type of protection against electric shocks: Class I
- Degree of protection against electric shocks (when the patient is in physical contact): Type BF or type CF mounting
- Degree of protection against the ingress of harmful liquids: General equipment
- Degree of safety of use in the presence of flammable anesthetic agent mixed with air, oxygen, or nitrous oxide: Not suitable for use near flammable anesthetic agent mixed with air, oxygen, or nitrous oxide
- Mode of operation: Continuous operation

■ Safety standards the device conforms to

- Medical Electrical Equipment - Part 1: General Requirements for Basic Safety and Essential Performance **[IEC 60601-1:2005/A1:2012]**
- Medical Electrical Equipment - Part 1-2: General Requirements for Basic Safety and Essential Performance - Collateral Standard: Electromagnetic Compatibility – Requirements and Tests **[IEC 60601-1-2:2007]**
- Medical Electrical Equipment - Part 1-6: General Requirements for Basic Safety and Essential Performance - Collateral Standard: Usability **[IEC 60601-1-6:2010]**
- Medical Electrical Equipment - Part 2-37: Particular Requirements for the Basic Safety and Essential Performance of Ultrasonic Medical Diagnostic and Monitoring Equipment **[IEC 60601-2-37:2007]**
- Medical Electrical Equipment - Part 1: General Requirements for Safety [IEC 60601-1:1988, A1:1991, A2:1995]
- Medical Electrical Equipment - Part 1-1: General Requirements for Safety – Collateral Standards: General Requirements for Medical Electrical Systems **[IEC 60601-1-1:2000]**
- Medical Electrical Equipment - Part 1-2: General Requirements for Safety – Collateral Standards: Electromagnetic Compatibility – Requirements and Tests **[IEC 60601-1-2:2001, A1:2004]**
- Medical Electrical Equipment - Part 1-4: General Requirements for Safety – Collateral Standards: Programmable Electrical Medical Systems **[IEC 60601-1-4:1996, A1:1999]**
- Medical Electrical Equipment - Part 2-37: Particular Requirements for the Basic Safety and Essential Performance of Ultrasonic Medical Diagnostic and Monitoring Equipment **[IEC 60601-2-37:2001, A1:2004, A2:2005]**
- Medical Devices – Application of Risk Management to Medical Devices **[ISO 14971:2007]**
- Medical Electrical Equipment - Part 1: General Requirements for Safety **[UL 60601-1:2003]**
- Medical Electrical Equipment – Part 1: General Requirements for Basic Safety and Essential Performance **[CAN/CSA C22.2 No. 60601-1:14]**

- Medical Electrical Equipment – Part 1: General Requirements for Basic Safety and Essential Performance [ANSI /AAMI ES60601-1:2005/(R)2012, AND C1:2009 AND A2:2010(R)2012]
- Biological Evaluation of Medical Devices – Part 1: evaluation and testing [**ISO 10993-1: 2009**]
- Standard Means for Reporting the Acoustic Output of Medical Diagnostic Ultrasonic Equipment [**IEC 61157:2007**]

■ Statements



Nemko-CCL mark with the indicators “C” and “US” means that the product is certified for both the U.S. and Canadian markets, to the applicable U.S. and Canadian standards.



This mark certifies that the product conforms to applicable EEC standards and has been certified by the European certification agency.



This mark certifies that the product conforms to applicable EEC standards.



The GMP symbol indicates the Good Manufacturing Practice in accordance with the Korean quality management regulations.

Precautions for Use

Be sure to read this Service Manual thoroughly to familiarize yourself with the operation of the product and the relevant safety information before attempting to use the product.

- Keep this service manual near the product and refer to it when using the product.
- Please familiarize yourself with the safety precautions in “Chapter 2. Safety” and “Chapter 10. Maintenance” in particular.
- This service manual does not include diagnosis results or opinions. Also, check the reference information for the measured area of the body before using the application’s measurement results in any diagnosis.
- This product is an ultrasound diagnosis device and cannot be used from the user’s PC. The manufacturer is not responsible for any problems that may be caused by such attempts.
- This product must only be used by persons who have sufficient knowledge of and/or a qualification in clinical pathology. Unqualified persons are prohibited from using the product.
- The manufacturer is not responsible for any damage to this product caused by user carelessness and/or neglect.
- Product orders are based on individually agreed specifications and may not include all functions specified in this service manual.
- Some functions or options, probes, and the like may not be used in certain countries.
- All reference material on standards, regulations, and related revisions are valid at the time of the publication of this service manual.
- Screen images in this service manual are examples and may differ from the actual screen or system.
- The content of this service manual is subject to change without prior notice.
- Products that are not manufactured by Samsung Medison are indicated with the trademarks of their respective owners.
- The following terms are used to highlight precautions that the user must pay particular attention to:



DANGER

Disregarding this instruction may result in death, serious injury, or other dangerous situations.



WARNING

Follow these instructions to prevent a serious accident or damage to property.



CAUTION

Follow these instructions to prevent minor accidents and damage to property.



NOTE

The accompanying information covers installation, operation, and maintenance procedures that require careful attention from the user, but have little chance of leading directly to a dangerous situation.

Revision History

The revision history of this service manual is as follows:

VERSION	DATE	REASON FOR CHANGE
1.00.00	2017.04.01	Initial Release

If You Need Assistance

If you need a service manual or any assistance with the product, please contact the Samsung Medison customer service department or your local vendor.

Patient Privacy Policy

Treatment of Patients' Personal Information

One of Samsung Medison's social responsibilities is to recognize the importance of patient privacy and to handle and protect the personal information provided by our patients in an appropriate manner.

Patient information stored in repaired and demo products should be handled as follows:

- Patient Information: Refers to information, such as IDs, names, DOBs, and images, which can be used to identify specific patients.
- Patient Information Management: Personal information provided by patients must be managed carefully and solely for the purposes of repairs and demonstrations of Samsung Medison products, and they must not be used for unauthorized purposes, be lost, be revised, or be shared with a third party.

Management of Patient Information on Demo and Trade Products

- Patient information stored on a product during the course of its use must be handled as the patient desires. (delete or backup)
- When completing a demonstration and/or collecting a trade product, patient information must be deleted if so requested by the client, to prevent its unintended distribution to outside parties.

Management of Patient Information on Repaired Hospital Products

- Before removing the product from hospital premises for repairs, all patient information should be backed up to a storage device such as external HDD or memory, and then handed over to the hospital.
- Before removing the product from hospital premises, each patient should sign the patient privacy agreement.

Request for Repairs and Patient Privacy Agreement

Date: YYYY/MM/DD

【Customer Information】

Hospital	
Handler	

【Product Information】

Product name	
Software version	
S/N	
Symptom	
Stored item	<input type="checkbox"/> None <input type="checkbox"/> Main unit <input type="checkbox"/> HDD <input type="checkbox"/> DVD/CD <input type="checkbox"/> USB <input type="checkbox"/> Photo <input type="checkbox"/> Other ()
Outsourced product	<input type="checkbox"/> None <input type="checkbox"/> Provide details if applicable ()

【Administration】

Handling date	YY MM DD
Customer service representative	

※ Please sign inside the box below if you agree to the following:

- ☐ Data saved on memory devices of products being repaired (e.g., hard disks) may become lost during tests and repairs.
- ☐ Data saved on a product being repaired must be backed up by the customer.
- ☐ Samsung will not be held responsible for any loss of data not backed up.
- ☐ Samsung Medison does not use patient information for unauthorized purposes, modify such information, or provide it to third parties.

【Customer Signature】

I entrust my product to () for repair and agree to the policies above.	
Date: YY/MM/DD	Name: (Signature)

Table of Contents

Chapter 1	Introduction	1
1.1.	Product Specifications.....	2
1.2.	Product Configuration	5
1.2.1.	Monitor	7
1.2.2.	Control Panel	9
1.2.3.	Console	16
1.2.4.	Peripheral Devices	18
1.2.5.	Probes.....	20
1.2.6.	Accessories	22
1.2.7.	Optional Accessories	23
1.2.8.	Optional Functions	24
Chapter 2	Safety	1
2.1.	Purpose of Use	2
2.1.1.	Contraindications	2
2.2.	Safety Information.....	3
2.2.1.	Safety Symbols	3
2.2.2.	Symbols	7
2.2.3.	Labels	7
2.3.	Electrical Safety	8
2.3.1.	Prevention of Electric Shocks.....	8
2.3.2.	ECG-Related Information.....	10
2.3.3.	ESD	10
2.3.4.	EMI	11
2.3.5.	EMC.....	11
2.4.	Mechanical Safety.....	18
2.4.1.	Moving the Equipment	18
2.4.2.	Precautions for Use	19
2.5.	Biological Safety.....	22
2.5.1.	ALARA Principle.....	22
2.6.	Protecting the Environment	35
2.6.1.	EU WEEE Directive	35
2.6.2.	EU REACH Regulation	35
2.6.3.	State of California Proposition 65 Warning (US Only).....	35

Chapter 3. Installing Product	1
3.1. Transporting	3
3.1.1. Precautions During Transport	3
3.1.2. Brakes	3
3.1.3. Precautions on Ramps	3
3.1.4. Humidity and Temperature	4
3.2. Unpacking the Product	5
3.2.1. Dismantling the Product's Box	5
3.2.2. Accessories	6
3.2.3. Release of the Locking Mechanism	6
3.3. Installation Environment	7
3.3.1. Caution	7
3.4. Installing the Product	8
3.4.1. Installation Safety	8
3.4.2. Connecting Peripherals	10
3.5. System Power	13
3.5.1. Turning the Power On	13
3.5.2. Shutting Down the System	13
3.6. System Settings	14
3.6.1. General System Settings	15
3.6.2. General	15
3.6.3. Display	19
3.6.4. Patient	20
3.6.5. Quick Preset	23
3.6.6. EzExam+	24
3.6.7. Imaging	27
3.6.8. Application/Preset	30
3.6.9. Application	32
3.6.10. Measurement Settings	33
3.6.11. Report	49
3.6.12. Annotation	52
3.6.13. Body Marker	57
3.6.14. Customize	60
3.6.15. Peripherals	64
3.6.16. Connectivity	67
3.6.17. Service	86
3.6.18. Help	86

Chapter 4. Product Inspection	1
4.1. Inspecting Functions	2
4.1.1. Basic Inspections	2
4.1.2. Detailed Inspections	3
Chapter 5. Product Structure	1
5.1. Overview	3
5.2. System Block Diagram	5
5.2.1. System Block Diagram	5
5.2.2. System Rack Design	6
5.3. Basic Structure of the Product	7
5.3.1. Electronic Structure	7
5.3.2. Ultrasound System Part	7
5.3.3. PC Part	8
5.3.4. User Interface Part	8
5.3.5. Power Part	8
5.4. Ultrasound System Part	9
5.4.1. Main Functions of PSA (Probe Select Assembly)	9
5.4.2. Beam Former Board	11
5.4.3. Back End Board	15
5.5. PC Part	20
5.5.1. PC Module	20
5.5.2. Rear IO Board	21
5.5.3. Software DSC	23
5.6. User Interface Part	24
5.6.1. Control Panel	24
5.6.2. Main Monitor	26
5.6.3. Touch-Screen	27
5.6.4. Display Layout	28
5.7. Power Part	29
5.7.1. ADM	29
5.7.2. Power Block Diagram	30
5.7.3. Specification	30
5.8. Interconnect Diagram	31
5.8.1. HS40 Interconnect Diagram	31
5.8.2. Cable Description	32

Chapter 6. Service Mode	1
6.1. Service Mode	3
6.1.1. How to Enter the Service Mode	3
6.2. Service Information	4
6.3. Configuration	5
6.3.1. Clock	5
6.3.2. Keyboard/Region	5
6.3.3. TCP/IP	6
6.3.4. Option	7
6.3.5. User Account and User Account Management	8
6.3.6. Printer	9
6.4. System	10
6.4.1. Upgrade Software	10
6.4.2. System Serial Number	11
6.4.3. Window Explorer	12
6.4.4. Install Recovery System	13
6.5. Diagnostics	14
6.5.1. Control Panel Test	14
6.5.2. Keyboard Test	14
6.5.3. Power On Self Test	14
6.5.4. Built in Self Test	14
6.5.5. Monitor Test	14
6.6. Backup and Restore	15
6.6.1. Backup	15
6.6.2. Restore	15
6.6.3. Log Backup	15
6.7. Report	16
6.7.1. Report	16
6.8. Demo Play	17
6.8.1. Demo Play	17
6.9. Enter Installation Key	18

Chapter 7. Troubleshooting	1
7.1. Power Issues	2
7.1.1. Power Does Not Turn On	2
7.1.2. Power Does Not Turn Off	2
7.1.3. Power Turns Off by Itself	2
7.2. Monitor	3
7.2.1. Nothing Is Displayed on the Screen	3
7.2.2. Screen is Discolored	3
7.3. Error Messages	4
7.3.1. Error Occurs During Booting	4
7.4. Image	4
7.4.1. 2D Mode: There is No IMAGE ECHO or IMAGE FORMAT	4
7.4.2. Lines (Noise) Appear in 2D Mode Image	4
7.4.3. M, C, PW, CW Mode Trouble	4
7.5. USB Drive Unrecognized	5
7.5.1. Failed to recognize the USB (Removable device) device	5
7.6. Trouble Shooting Tree	6
 Chapter 8. Disassembly and Assembly	 1
8.1. Preparation	2
8.1.1. Preparation	2
8.2. Product Disassembly	3
8.2.1. Front Side Disassembly	3
8.2.2. Rear Side Disassembly	6
8.2.3. Control Panel Disassembly	7
8.2.4. Touch Panel Disassembly	8
8.2.5. Track Ball	9
8.2.6. Speaker Disassembly	10
8.2.7. Monitor Disassembly	11
8.2.8. Monitor ARM Disassembly	12
8.3. Installation of Optional Parts	13
8.3.1. Overview of Optional Parts	13
8.3.2. Option Parts	14
8.3.3. Installation of External Physical Keyboard	16
8.3.4. Installation of Gel Warmer	16
8.3.5. Installation of Endo Cavity Holder	17
8.3.6. Installation of Holder Chart	18
8.3.7. Installation of Rear Tray	18

8.3.8.	Installation of Printer Tray (1/2)	19
8.3.9.	Installation of Printer Tray (2/2)	19

Chapter 9 Probes 1

9.1.	Probes	2
9.1.1.	Probe List	2
9.1.2.	Ultrasound Transmission Gel	9
9.1.3.	Sheaths	10
9.1.4.	Probe Safety Precautions	11
9.1.5.	Cleaning and Disinfecting the Probe	13
9.2.	Biopsy	22
9.2.1.	Biopsy Kit Components	22
9.2.2.	Using the Biopsy Kit	23
9.2.3.	Assembling the Biopsy Kit	26
9.2.4.	Cleaning and Disinfecting the Biopsy Kit	30

10. Maintenance 1

10.1.	Operational Environment	2
10.2.	Product Maintenance	3
10.2.1.	Cleaning and Disinfecting	3
10.2.2.	Cleaning	3
10.2.3.	Cleaning Air Filters	5
10.2.4.	Accuracy Checks	6
10.3.	Data Maintenance	7
10.3.1.	User Settings Backup	7
10.3.2.	Backing Up Patient Information	7
10.3.3.	Software	7

Chapter 11. Service Part List 1

11.1.	Body Cover Parts	2
11.2.	Control Panel Parts	5

Chapter 1

Introduction

1.1. Product Specifications	2
1.2. Product Configuration	5
1.2.1. Monitor	7
1.2.2. Control Panel	9
1.2.3. Console	16
1.2.4. Peripheral Devices	18
1.2.5. Probes	20
1.2.6. Accessories	22
1.2.7. Optional Accessories	23
1.2.8. Optional Functions	24

1.1. Product Specifications


Physical Dimensions	Height: 1,620 mm (with Monitor) Width: 520 mm Depth: 730 mm (with Keyboard) Weight: 54 kg (without accessories) Weight: Approx. 57 kg (with Safe Working Load)
Imaging Modes	2D Mode M Mode Color M Mode Anatomical Mode Color Doppler Mode Pulsed Wave (PW) Spectral Doppler Mode Continuous Wave (CW) Doppler Mode Tissue Doppler Imaging (TDI) Mode Tissue Doppler Wave (TDW) Mode Power Doppler (PD) Mode ElastoScan Mode 3D/4D/XI STIC imaging Mode Dual Mode Quad Mode Combined Mode Simultaneous Mode Zoom Mode
Gray Scale	256 (8 bits)
Focusing	Transmit focusing, maximum of eight points (four points simultaneously selectable) Digital dynamic receive focusing (continuous)
Probes (Type BF/IPX7)	Linear Array LA3-16AD Curved Array CA2-8AD, CF4-9 Phased Array PN2-4 Endo Cavity EVN4-9 3D VN4-8, V5-9

	Pencil DP2B
Probe Connections	3 Probe Connectors, 4 Probe Connectors for option CW Probe Connector
Monitor	Main Monitor Number of Pixel: 1920 x 1080 21.5 inch LCD Monitor (LED Backlight unit, hereafter referred to as "LCD monitor") Touch Screen Monitor Number of Pixel: 1280 x 800 10.1 inch LCD Monitor (LED Backlight unit, hereafter referred to as "LCD monitor")
ECG	USB Type (Type CF)
Rear Panel Input/Output Connections	Audio Output Port (Right/Left) VGA monitor LAN USB Port CW HDMI output HDMI Input (HDMI Input is currently not supported.)
Image Storage	Maximum 45,000 frames for Cine memory Maximum 14,000 Lines for Loop memory Image filing system
Application	Obstetrics, Gynecology, Urology, Abdomen, Cardiac, Vascular, Small Parts, TCD, MSK, Pediatric
Electrical Parameters	100 - 240VAC, 620VA, 50/60Hz
Measurement Packages	Abdomen, Obstetrics, Gynecology, MSK, Pediatric, Small Parts, Urology, Vascular, Cardiac * Refer to the 'Chapter 8. Measurements and Calculations' for additional information.
Signal Processing (Pre-processing)	Acoustic Power Control Analog TGC Control Dynamic Aperture Control Dynamic Apodization Control


	Dynamic LPF Control
Signal Processing (Post-processing)	Digital TGC Control Slider TGC Control Mode-Independent Gain Control Black Hole/Noise Spike Filtering 1D Lateral/Axial Filtering 2D Edge/Blurring Filtering Frame average M/D Mode Sweep Speed Control Zoom Image View Area Control Image Orientation (left/right and up/down)
Measurement	Trackball operation of multiple cursors <ul style="list-style-type: none"> • 2D mode: Linear measurements and area measurements using elliptical approximation or trace • M mode: Continuous readout of distance, time, and slope rate • Doppler mode: Velocity and trace
Auxiliary	DVD Multi-Drive Digital B/W Video Printer Digital Color Video Printer USB Printer DVD Recorder Foot switch (IPX8) USB Flash Memory Media USB HDD USB ECG Monitor
User Interface	English, German, French, Spanish, Italian, Russian, Chinese, Portuguese
Pressure Limits	Operating: 700 – 1060hPa Storage: 700 – 1060hPa
Humidity Limits	Operating: 30 – 75% Storage & Shipping: 20 – 90%
Temperature Limits	Operating: 10 – 35°C Storage & Shipping: -25 – 60°C

1.2. Product Configuration

This product consists of monitor, control panel, console, peripheral devices and probes.

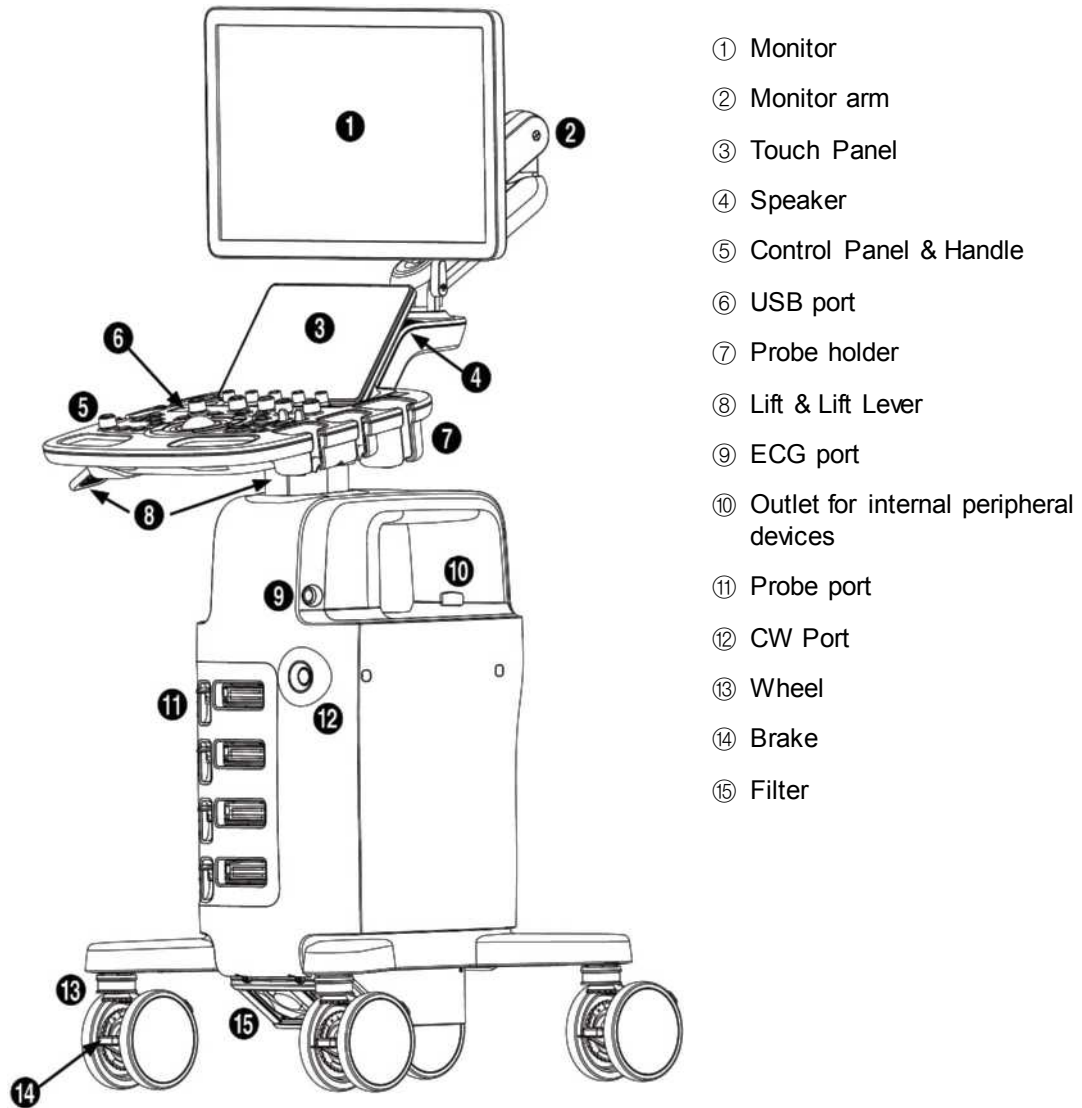

[Figure 1.1 Front of the Product]

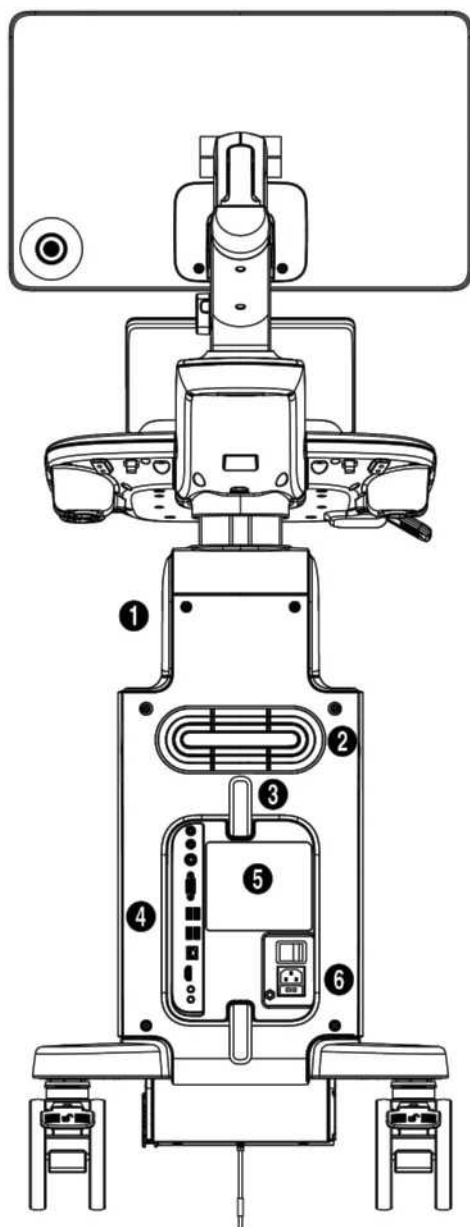

- ① Storage compartments
- ② Ventilation
- ③ Cable holder
- ④ Rear panel
- ⑤ ID label
- ⑥ Power connection

[Figure 1.2 Back of the Product]

1.2.1. Monitor

Ultrasound images and other information are displayed on the color LCD monitor.

1.2.1.1. Screen Layout

The monitor displays ultrasound images, operation menus and a variety of other information.



[Figure 1.3 Monitor Display]

① Title Area

Displays patient information, hospital name, application, frame rate, depth, probe information, acoustic output information, and the current date and time.

② Image Area

Displays ultrasound images. Image information, annotation, and measurement information are also displayed.

③ Thumbnail Area

Images saved by pressing the preset **Store** button are shown in the thumbnails. When you save Single screens, up to 4 images are shown in a list; for Quad screens, up to 12 images are shown. Click it with the pointer to enlarge the preview image.

④ User Information and Status Information Area

Information that is useful to the user, such as current system status, image information, selectable items, etc., is displayed.

⑤ User Key (User Defined Key) Area

Settings for User Defined Keys, including the positions of **Set** and **Exit** buttons, are displayed. You can change the setting of each button in Setup > Customize > Buttons.



NOTE

For information on User Key Setup, please refer to 'Chapter 3. Utilities'.

TIP Principles of Operation of the Diagnostic Ultrasound System

Medical ultrasound images are created by digital memory and computer when they convert the high-frequency wave signals that are transmitted and received by the probe.

As ultrasound waves propagate through the human body, they generate reflected signals whenever they encounter a change in density. For example, reflected signals are generated when signals pass from fatty tissues to muscle tissues. Reflected signals return to the probe, where they are converted into electronic signals. The reflected signals are amplified and processed by analog and digital circuits that have filters for various frequencies and response time options. Then they are again converted into high-frequency electronic signals, and saved as a series of digital image signals. The monitor displays the image signals stored on the storage device in real time. The entire process of transmitting, receiving, and processing signals is controlled by the computer.

1.2.2. Control Panel

The system can be controlled by using the control panel.





















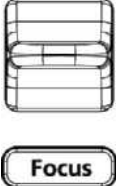

[Figure 1.4 Control Panel]










The control panel consists of a soft menus, buttons, dials, dial-buttons, a slider, and a trackball. The dial-button can be used both as a dial and a button.

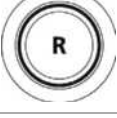1.2.2.1. Functions of the Control Panel

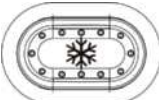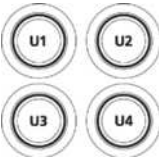The following are the descriptions and instructions for the controls on the control panel. For more information on controls with multiple functions, see 'Chapter 3. Utilities' and later in this manual.

 On/Off	Button	Turns the system on/off.
 End Exam	Button	Finishes the exam of the currently selected patient and resets the related data.
 SonoView	Button	Displays the screen for viewing and managing stored images.
 Report	Button	Displays the Report screen that shows the measurement results of the current application and other information.
 EzExam	Dial-button	When you press the dial-button, the menu items that are available in the current scan mode are shown on screen. Rotating the EzExam dial-button to the right selects the menu one row above the current menu selected, and rotating it to the left selects the menu one row below.
 Body Marker	Button	Allows the user to enter a Body Marker over an image.
 Angle X	Dial-button	Adjusts the angle of the sample volume in Spectral Doppler mode. It is also used to adjust the Arrow's angle or the probe angle for a Body Marker. In 3D View, turning this dial-button will rotate the image around the x-axis.
 PW Y	Dial-button	Enter or exit PW Spectral Doppler Mode. Rotate this dial-button to adjust the Gain value. In 3D View, turning this dial-button will rotate the image around the y-axis.
 C Z	Dial-button	Enter or exit Color Doppler Mode. Rotate this dial-button to adjust the Gain value. In 3D View, turning this dial-button will rotate the image around the z-axis.


	Dial-button	Press this button to enter 2D Mode. Rotate this dial-button to adjust the Gain value.
	Button	Enter or exit M Mode. Rotate this dial-button to adjust the Gain value.
	Button	Enter or exit CW Spectral Doppler Mode. Available only with the phased array probe.
	Button	Enter or exit Power Doppler Mode.
	Button	Use this button to enter or exit 3D or 4D Mode.
	Button	Press this button to turn the Quick Scan function on. The 'Q scan' mark will appear at the top of the image. This can be used in applications for all probes.
	Button	Compares two independent images. The active image mode is shown on the left.
	Button	Compares two independent images. The activated image mode is shown on the right.
	Switch	Adjusts the scanning depth of the image.
	Switch	Moves the focus to the target area for observation.
	Dial-button	Makes the Zoom Box appear. In order to exit Zoom Mode, press the Exit button.

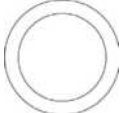	Button	Pauses an image being scanned or reactivates a paused image.
	Button	Stands for User Key; the user can assign functions they need to each button. The function for each button can be assigned in Setup > Customize > Buttons.
 Set/Exit	Button	The user can select, set up, and use Set/Set , Set/Exit , or Exit/Set . The function for each button can be assigned in Setup > Customize > Buttons. <ul style="list-style-type: none"> – Set: Selects an item or value using the trackball. Alternatively, this can be used to change the function of the trackball. – Exit: Exits the function currently being used and returns to the previous screen.
 Clear	Button	Deletes text, Arrows, Body Markers, measurement results, etc., displayed on an image.
 Pointer	Button	In Scan Mode, an arrow-shaped pointer appears on the screen.
 Change	Button	Changes to a different function that can be supported by the current trackball setting.
 T	Button	Allows the user to place text over an image.
 Calculator	Button	Starts measurements by application.
 Trackball	Trackball	Moves the cursor on the screen. Also, scrolls through Cine images.

1.2.2.2. Touch Screen

The touch screen is an operating tool that can be touched by the user to input data. The functions that are available in the current mode are shown in the form of buttons or a dial-button.

■ Touch Screen Layout

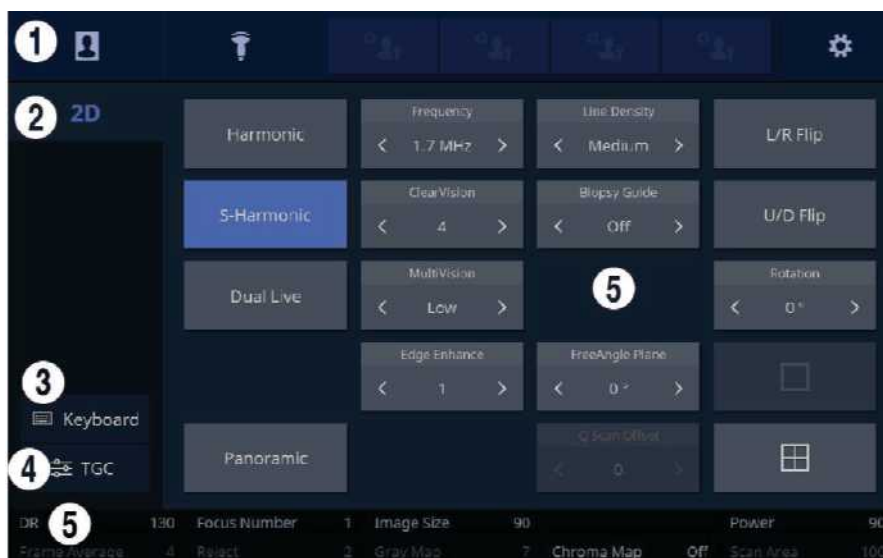

[Figure 1.5 Touch Screen Display]

- ① These buttons are always displayed on the touch screen. Buttons that are in use are shown in blue and buttons that cannot be used are deactivated.

Patient	The <i>Patient Information</i> screen will appear, where you can select a Patient ID in the list or enter new patient information.
Probe	It displays the <i>Probe Selection</i> screen where you can select and modify the probe and application.
Quick Preset 1–4	It shows up to 4 Preset buttons configured at Setup.
Setup	The general system settings that do not have a direct bearing on imaging are explained below.



NOTE

For further details about setting up Quick Preset, please refer to 'Setup > System > Quick Preset' in 'Chapter 3. Utilities'.

- ② Displays the mode that is currently used.
- ③ This is the Keyboard button. Clicking this button will activate the On-screen Keyboard.
- ④ This is the TGC area. Adjust TGC Slide when TGC Curve is activated on the touch screen. Move the slider to the right to increase Gain and brighten the image. TGC stands for Time Gain Compensation.



CAUTION

Too great a difference in the gain value settings of adjacent TGC sliders may cause stripes in an image.

- ⑤ Menu Area: The menu items that are available in the current input mode are shown in the form of buttons. The user can access the desired menu item by pressing the corresponding button. The menu currently in use is shown in blue. To change the values in the menu, use the ◀ and ▶ buttons.
- ⑥ Soft Menu Area: The Soft Menu items that are available in the current input mode are shown. Press or rotate the dial-buttons right below each menu.

TIP When there are Two Soft Menus

When there are two menus available - upper and lower, both menus can be adjusted with the corresponding dial-button. Or tap the button for the menu you want to use on the touch screen and then use the dial-button.


1.2.2.3. Adjusting the Control Panel



CAUTION

- Do not apply excessive force to the control panel.
- Use the handles on the console when moving the product.

■ Adjusting the Height

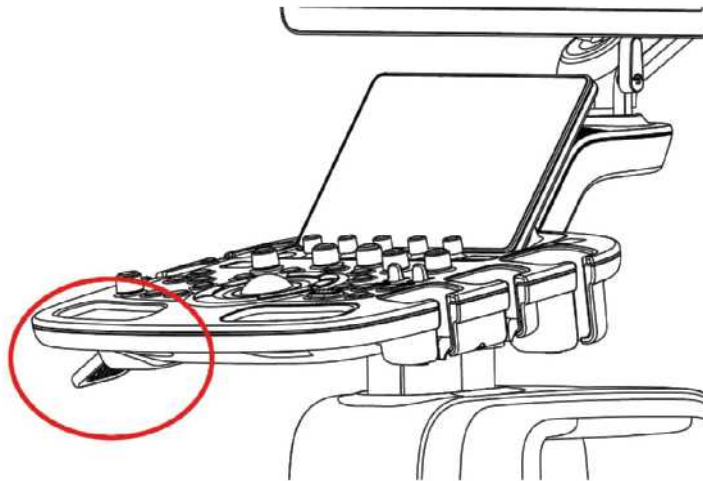

[Figure 1.6 Control Panel]



NOTE


You can move the control panel up and down only while pulling the lever at the side of the control panel.

1.2.3. Console

The console consists of two parts - the inner and outer units. The interior of the console mainly contains devices that produce ultrasound images. On the exterior of the console are various connectors, probe holders, storage compartments, handles, and wheels, etc.

1.2.3.1. Rear Panel

A monitor and other peripheral devices, like a printer, are connected via the rear panel at the back of the system.

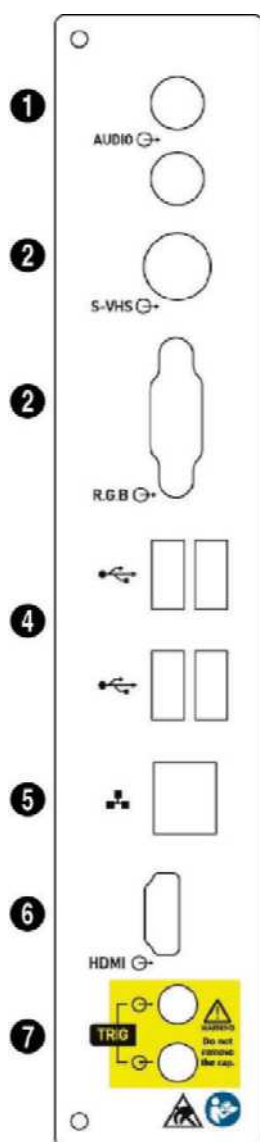


- ① Audio port (Output): Used for audio signal output. (Input: Not supported.)
- ② S-VHS Port (Output): Provides an S-VHS connection for a VCR.
- ③ RGB Port (Output): Provides analog signal output to be displayed on the monitor.
- ④ USB port: Used to connect to peripheral USB devices.
- ⑤ Network port: Connect to a network. You can transfer patient information to another server via DICOM network.
- ⑥ HDMI port (Output): Outputs digital signals to the monitor. (Input: Not supported.)
- ⑦ Trig port (In/Output): Not used.

[Figure 1.7 Rear Panel]

1.2.3.2. Power Connection Part

The power connection part is located at the bottom on the rear panel.

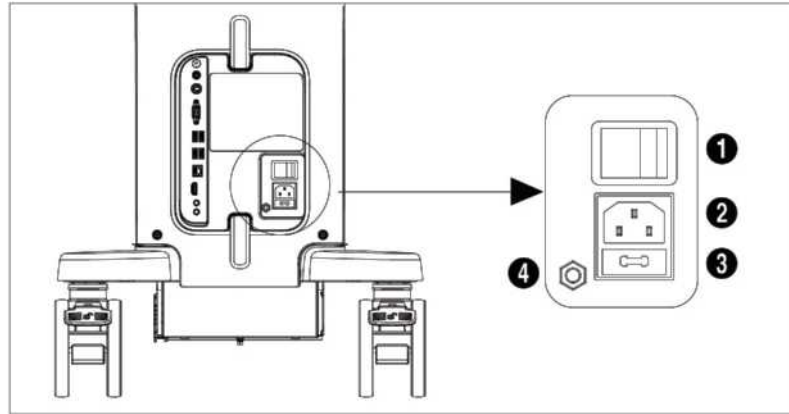

[Figure 1.8 Power Connection Part]

- ① Power switch: Turns on the power of the product, and cuts off power if overcurrent or overvoltage occurs.
- ② Power inlet: Accepts the power cord, which connects to an external power supply.
- ③ Power fuse: Cuts off power if overcurrent or overvoltage occurs.
- ④ Equipotential Terminal: This should be connected to the equipotential connection part in the exam room.

1.2.3.3. Probe Holder

Probe holders are mounted at the left and right-hand sides of the control panel.

The holders can be removed for easy cleaning.

TIP **Hockey Stick Probe Holder**

Insert the Hockey stick probe holder into the probe holder to mount. It is provided as an option.


1.2.4. Peripheral Devices

Peripheral devices can be connected to their corresponding ports on the left/right or rear sides of the console, as needed.



CAUTION

- Do not install peripheral devices that are not listed in this user manual in the patient environment. If you install an unlisted device in the patient environment, it may cause an electrical hazard.
- Do not connect additional external peripheral devices to the auxiliary socket outlet. Doing so may decrease safety level.

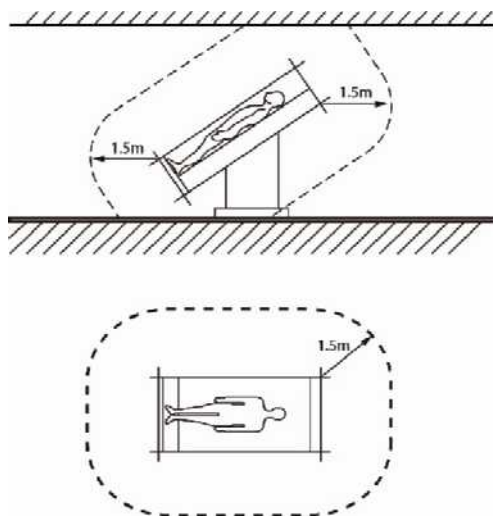

[Figure 1.9 Patient Environment]



NOTE

- Refer to the user manual of the peripheral device for its operating information.

1.2.4.1. Internal Peripheral Devices

These are peripheral devices mounted in the system.

■ DVD-Multi

DVD±R, DVD±RW, DVD-RAM, CD-R, CD-RW

■ Solid State Drive

SSD 512G

1.2.4.2. External Peripheral Devices

These are peripheral devices that can be connected for use when needed and are connected via the USB port located at the rear panel.



CAUTION

When using a peripheral device via a USB port, always turn the power off before connecting/disconnecting the device. Connection/disconnection of USB devices while the power is on may lead to malfunction of the system and the USB devices.

- TIP**
- The console's USB ports are located on the rear panels of both the control panel and the console.
 - We recommend that you connect USB storage devices (flash memory media, etc.) to the ports on the control panel, and other USB peripheral devices to the rear panel for convenience.

The following products are recommended:

■ Digital Video Printer

- Black and White: Sony UP-D897 (UP-897MD, UP-X898MD, UP-D898MD), Mitsubishi P95DE (P95DW, P95D, P95DE)
- Color: Sony UP-D25MD, Mitsubishi CP30DW

■ USB Printer

Samsung CLP-620NDK, Samsung ML-2950

■ DVD Recorder

Sony DVO-1000MD



CAUTION

- You must install a printer and drivers that are compatible with Microsoft Windows 7 (English version). Contact Samsung Medison customer support division for inquiries about printer driver installation.
- When connecting the printer, ensure that the printer is configured under Microsoft Windows or system setup and has been chosen as the default printer.
- Please check the port that the printer uses before connecting. Printers should be connected to the printer port while the USB printer should be connected to the USB port.

■ Foot Switch

- 3 Pedals HID Type

To configure the foot switch function, go to Setup > Customize > Buttons > Foot Switch.

You can individually set the Left, Middle, and Right foot switches to one of the following:

Exit, Freeze, U1, U2, U3, U4, Update, Single, or Quad.



CAUTION

Connecting or removing the Foot Switch while the product is turned on may cause the system to malfunction.

■ **Misc.**

Flash Memory Media



NOTE

- The system cannot recognize USB 1.1 flash memory. Remove the flash memory from the console and equip again with an appropriate device.
- Regarding file formats that are not ordinarily saved: Please check first to see if it is possible to save the file format on a desktop PC before trying to save the file on flash memory.
- Do not use flash memory media which contain anti-virus programs or are defective. Otherwise, the product may fail to work properly.

1.2.5. Probes

Probes are devices that generate ultrasound waves and process reflected wave data for the purpose of image formation.



NOTE

For information on probes, refer to 'Chapter 9. Probes' and the Reference Manual.

1.2.5.1. Connecting Probes


Be sure to connect or disconnect probes when the power is off to ensure the safety of the system and the probes.

1. Connect probes to the probe connectors on the front panel of the system. Up to four (options inclusive) (five including CW) probes may be connected.
2. Lift up the probe's lockdown switch and disconnect the probe.
3. Connect the probe to the probe port.
4. Push down the probe's lockdown switch to lock it in place.



NOTE

If the probe does not connect properly, try reconnecting it after removing any foreign objects.

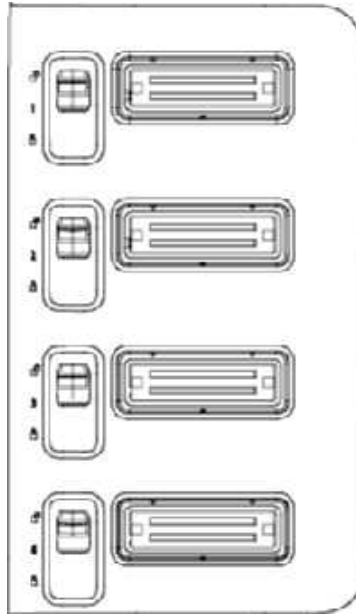

[Figure 1.10 Probe Connector]


1.2.6. Accessories

An accessory box containing the items below is supplied with the product.



NOTE


Accessories can be different according to the country.

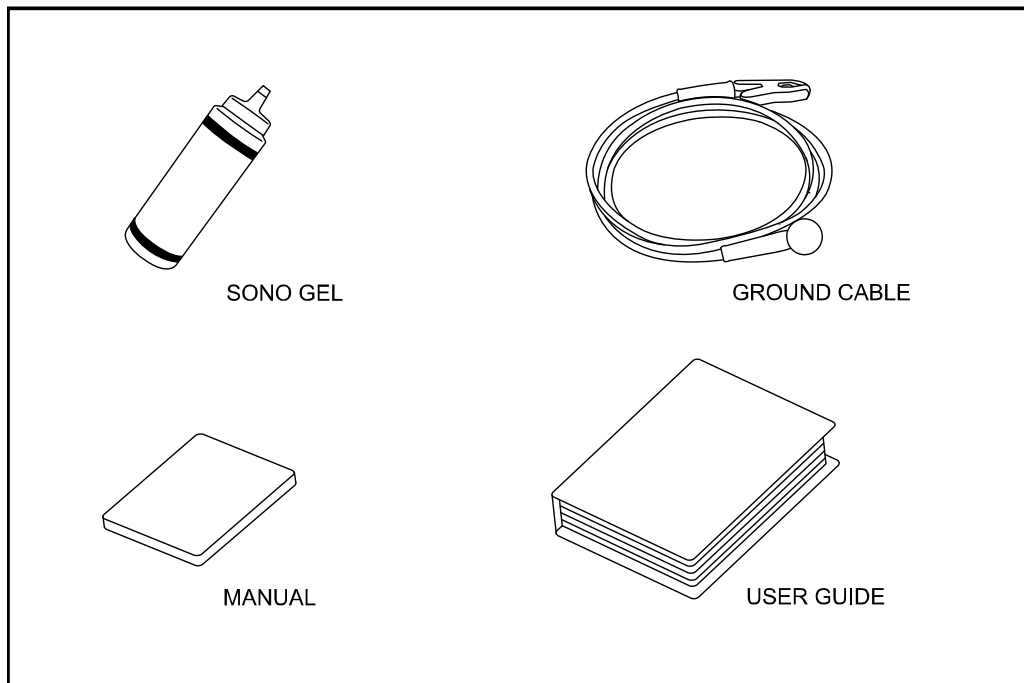

[Figure 1.11 Accessories]

1.2.7. Optional Accessories

The following optional accessories are provided with the product.

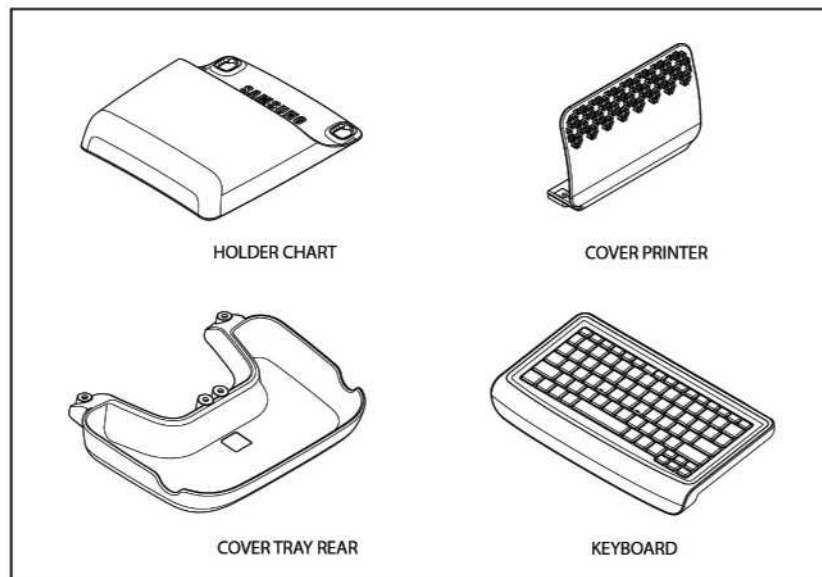

1.2.8. Optional Functions

HS40 products have the following options based on the version:

- 4D
- 3DXI™
- DICOM
- EzExam+
- MultiVision
- 5D NT
- CW Function
- Cardiac Measurement
- Strain+
- XI STIC
- SEE Stream (RU region only)
- Needle Mate
- Realistic Vue
- Mobile Export
- 5D Follicle
- Auto IMT+
- ElastoScan
- Panoramic

For further information about optional functions, please refer to the relevant chapters in this manual.

Chapter 2

Safety

2.1. Purpose of Use	2
2.1.1. Contraindications	2
2.2. Safety Information	3
2.2.1. Safety Symbols	3
2.2.2. Symbols	7
2.2.3. Labels	7
2.3. Electrical Safety.....	8
2.3.1. Prevention of Electric Shocks.....	8
2.3.2. ECG-Related Information.....	10
2.3.3. ESD	10
2.3.4. EMI	11
2.3.5. EMC.....	11
2.4. Mechanical Safety	18
2.4.1. Moving the Equipment	18
2.4.2. Precautions for Use	19
2.5. Biological Safety.....	22
2.5.1. ALARA Principle.....	22
2.6. Protecting the Environment.....	35
2.6.1. EU WEEE Directive	35
2.6.2. EU REACH Regulation	35
2.6.3. State of California Proposition 65 Warning (US Only)	35

2.1. Purpose of Use

Ultrasound diagnostic system and probes were designed for obtaining ultrasound images and analyzing body fluid.

The clinical applications include: Fetal/Obstetrics, Abdominal, Gynecology, Pediatric, Small Organ, Neonatal Cephalic, Adult Cephalic, Trans-rectal, Trans-vaginal, Muscular-Skeletal (Conventional, Superficial), Urology, Cardiac Adult, Cardiac Pediatric and Peripheral vessel.



NOTE

For detailed information on applications and presets, please refer to 'Chapter 1. Introduction' and 'Chapter 9. Probes' in this user manual.

2.1.1. Contraindications

This product must not be used for ophthalmological applications, or any other use that involves the ultrasound beam passing through the eye.



CAUTION

- Federal law restricts this device to sale by or on the order of a physician.
- The method of application or use of the device is described in the manual 'Chapter 6. Starting Diagnosis' and 'Chapter 7. Diagnosis Modes'.








 
2.2. Safety Information










 
 

Please read the following safety information before using this product. It is relevant to the ultrasound system, the probes, the recording devices, and any of the optional equipment.












The product is intended for use by, or by the order of, and under the supervision of, a licensed physician who is qualified for direct use of the medical device.

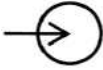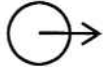





2.2.1. Safety Symbols

The International Electro Technical Commission (IEC) has established a set of symbols for medical electronic equipment, which classify a connection or warn of potential hazards. The classifications and symbols are shown below.



Symbols	Description
	WARNING: The accompanying information must be followed to prevent serious accidents and/or damage to property.
	CAUTION: The accompanying information helps to prevent minor accidents and/or damage to property.
	Refer to the user manual.
	Follow the user manual.
	CAUTION: Risk of electric shock
	Type BF applied part (Classification based on degree of protection against electric hazard)
	Defibrillation-proof type CF applied part (Classification based on degree of protection against electric hazard)
	Power On/Off

Symbols	Description
	Power On
	Power Off
	Power On for part of the product
	Power Off for part of the product
	Alternating current voltage source
	Direct current voltage source
	Dangerous voltage (Indicates dangerous voltages over 1000V AC or 1500V DC)
	Protective earth (ground)
	Equipotentiality
	Data output port
	Data input port
	Data Input/Output port

Symbols	Description
	Input port
	Output port
	Print remote output
	Foot Switch Port
	ECG port
	USB port
	Network port
	Microphone Port
	Probe port
IPX 1	Protected against vertically falling water drops
IPX 7	Protected against the effects of temporary immersion in water
IPX 8	Protected against the effects of continuous immersion in water
	CAUTION: Electrostatic sensitive devices (ESD)
	Do not sit on the product.

Symbols	Description
	Do not push the product.
	Do not lean against the product.
	DANGER: Do not place your fingers, hands, or any other part of your body in this space.
 kg	Do not place objects on the monitor that are heavier than the weight specified by the symbol.
	Do not place heavy objects on the monitor while the monitor mount is folded.
	Do not push down on the monitor while the monitor mount is folded.

2.2.2. Symbols

Symbols	Description
	Authorised Representative In The European Community
	Manufacturer

2.2.3. Labels

Phrases containing the words 'warning' and/or 'caution' are displayed on the product's surface in order to protect it.

2.3. Electrical Safety


This equipment is categorized as a Class I device with Type BF or Type CF (ECG) applied parts.



- As for US requirement, the LEAKAGE CURRENT might be measured from a center-tapped circuit when the equipment connects in the United States to 240V supply system.
- To help assure grounding reliability, connect to a “hospital grade” or “hospital only” grounded power outlet.

2.3.1. Prevention of Electric Shocks

In a hospital environment, hazardous current can form due to potential differences between exposed conductive parts and connected devices. The solution to the problem is consistent equipotential bonding. Medical equipment is connected with connecting leads made up of sockets which are angled to the equipotential bonding network in medical rooms.

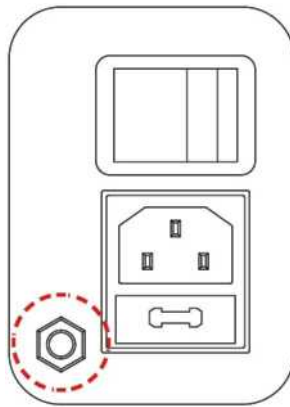

[Figure 2.1 Equipotential Bonding]

Additional equipment connected to medical electrical equipment must comply with the respective IEC standards (e.g. IEC 60950/EN 60950 for data processing equipment, IEC 60601-1/EN 60601-1 for medical devices). Furthermore, all configurations shall comply with the requirements for medical electrical systems (see IEC 60601-1-1/EN 60601-1-1). Anybody connecting additional equipment to signal input and output ports of medical electrical equipment should make sure that the equipment complies with IEC 60601-1-1/EN 60601-1-1.

**WARNING**

- Electric shock may result if this system, including all of its externally mounted recording and monitoring devices, is not properly grounded.
- Never open the cover of the product. Hazardous voltages are present inside. All internal adjustments and replacements must be made by qualified Samsung Medison Customer Support Department personnel.
- Always check the product's housing, cables, cords, and plugs before using the product. Disconnect the power source and do not use the equipment if the housing is damaged such as cracked, and chipped, or if the cable is worn.
- Always disconnect the system from the wall outlet prior to cleaning the system.
- All patient contact devices, such as probes and ECG leads, must be removed from the patient prior to application of a high voltage defibrillation pulse.
- The use of flammable anesthetic gas or oxidizing gases (N₂O) should be avoided. There is a risk of explosion.
- Avoid installing the system in such a way that it is difficult for the operator to disconnect it from the power source.
- Do not use together with HF surgical equipment. HF surgical equipment may be damaged, which may result in fire.
- The system must only be connected to a supply mains with protective earth to avoid risk of electric shock.

**CAUTION**

- The system has been designed for 100-240VAC; you should select the input voltage of any connected printer and VCR. Prior to connecting a peripheral power cord, verify that the voltage indicated on the power cord matches the voltage rating of the peripheral device.
- An isolation transformer protects the system from power surges. The isolation transformer continues to operate when the system is in standby.
- Do not immerse the cable in liquids. Cables are not waterproof.
- Make sure that the inside of the system is not exposed to or flooded with liquids. In such cases, fire, electric shock, injury, or damage to the product may occur.
- The auxiliary socket outlets installed on this system are rated 100-240VAC with maximum total load of 150VA. Use these outlets only for supplying power to equipment that is intended to be part of the ultrasound system. Do not connect additional multiple-socket outlets or extension cords to the system.
- Do not connect any peripheral devices that are not listed in this manual to the auxiliary socket outlet of the system. It may cause an electrical hazard.
- Do not touch SIP/SOP and the patient simultaneously. There is a risk of electric shock from leakage current.

2.3.2. ECG-Related Information



WARNING

- This device is not intended to provide a primary ECG monitoring function, and therefore does not have means of indicating an inoperative electrocardiograph.
- Do not use ECG electrodes with HF surgical equipment. HF surgical equipment may be damaged, which may result in fire.
- Do not use ECG electrodes during cardiac pacemaker procedures or any procedures that involve other types of electrical stimulators.
- Do not use ECG leads and electrodes in an operating room.

2.3.3. ESD

Electrostatic discharge (ESD), commonly referred to as a static shock, is a naturally occurring phenomenon. ESD is most prevalent during conditions of low humidity, which can be caused by heating or air conditioning. The static shock or ESD is a discharge of the electrical energy build-up from a charged individual to a less or non-charged individual or object. An ESD occurs when an individual with an electrical energy build-up comes into contact with conductive objects such as metal doorknobs, file cabinets, computer equipment, and even other individuals.



CAUTION

- The level of electrical energy discharged from a system user or patient to an ultrasound system can be significant enough to cause damage to the system or probes.
- Always perform the pre-ESD preventive procedures before using connectors marked with the ESD warning label.
 - Apply anti-static spray to carpets or linoleum.
 - Use anti-static mats.
 - Ground the product to the patient table or bed.
- It is highly recommended that the user be given training on ESD-related warning symbols and preventive procedures.

2.3.4. EMI

Although this system has been manufactured in compliance with existing EMI (ElectroMagnetic Interface) requirements, use of this system in the presence of an electromagnetic field can cause degradation of the ultrasound image or product damage.

If this occurs often, Samsung Medison suggests a review of the environment in which the system is being used, to identify possible sources of radiated emissions. These emissions could be from other electrical devices used within the same room or an adjacent room. Communication devices such as cellular phones and pagers can cause these emissions. The existence of radios, TVs, or microwave transmission equipment nearby can also cause interference.



CAUTION

In cases where EMI is causing disturbances, it may be necessary to relocate this system.

2.3.5. EMC

The testing for EMC (Electromagnetic Compatibility) of this system has been performed according to the international standard for EMC with medical devices (IEC 60601-1-2). This IEC standard was adopted in Europe as the European norm (EN 60601-1-2).

2.3.5.1. Guidance and Manufacturer's Declaration – Electromagnetic Emission

This product is intended for use in the electromagnetic environment specified below. The customer or the user of this product should ensure that it is used in such an environment.

Emission Test	Compliance	Electromagnetic Environment – Guidance
RF Emission CISPR 11	Group 1	The Ultrasound System uses RF energy only for its internal functions. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF Emission CISPR 11	Class A	The Ultrasound System is suitable for use in all establishments other than domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic Emission IEC 61000-3-2	Class A	
Flicker Emission IEC 61000-3-3	Complies	

2.3.5.2. Approved Cables, Probes and Peripherals for EMC

■ Cables

Cables connected to this product may affect its emissions; use only the cable types and lengths listed in the table below.

Cable	Type	Length
VGA	Shielded	Normal
USB	Shielded	Normal
LAN(RJ45)	Twisted pair	Any
S-Video	Shielded	Normal
Foot Switch	Shielded	2.99m
Audio R.L	Shielded	Normal
Parallel	Shielded	Normal
HDMI	Shielded	Normal
ECG 3-lead	Shielded	Normal

■ Probes

The image probe used with this product may affect its emission. The probe listed in 'Chapter 9. Probes' when used with this product, have been tested to comply with the group1 Class A emission as required by International Standard CISPR 11.

■ Peripherals

Peripherals used with this product may affect its emissions.



CAUTION


When connecting other customer-supplied accessories to the system, it is the user's responsibility to ensure the electromagnetic compatibility of the system.



WARNING

The use of cables, probes, and peripherals other than those specified may result in increased emission or decreased Immunity of the Ultrasound System.

Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment – Guidance
Electrostatic discharge (ESD) IEC 61000-4-2	±6KV Contact ±8KV Air	±6KV Contact ±8KV Air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast transient/burst IEC 61000-4-4	±2KV for power supply lines ±1KV for input/output lines	±2KV for power supply lines ±1KV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1KV differential mode ±2KV common mode	±1KV differential mode ±2KV common mode	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5% U_T for 0.5 cycle (>95% dip in U_T) 40% U_T for 5 cycle (60% dip in U_T) 70% U_T for 25 cycle (30% dip in U_T) <5% U_T for 5 s (<95% dip in U_T)	<5% U_T for 0.5 cycle (>95% dip in U_T) 40% U_T for 5 cycle (60% dip in U_T) 70% U_T for 25 cycle (30% dip in U_T) <5% U_T for 5 s (<95% dip in U_T)	Mains power quality should be that of a typical commercial or hospital environment. If the user of this product requires continued operation during mains power interruptions, it is recommended that this product be powered from an uninterruptible power supply or a battery.
Power frequency (50/60Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
NOTE: U_T is the AC mains voltage prior to application of the test level.			

Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment – Guidance
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80MHz	3V	<p>Portable and mobile RF communications equipment should not be used closer to any part of the Ultrasound System, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.</p> <p>Recommended Separation Distance</p> $d = 1.2\sqrt{P}$ $d = 1.2\sqrt{P} \quad 80\text{MHz to } 800\text{MHz}$ $d = 2.3\sqrt{P} \quad 800\text{MHz to } 2.5\text{GHz}$
Radiated RF IEC 61000-4-3	3 V/m 80 MHz to 2.5GHz	3V/m	<p>Where P is the transmitter's maximum output power rating in watts (W) according to the transmitter's manufacturer, and d is the recommended separation distance in meters (m).</p> <p>Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, ^a should be less than the compliance level in each frequency range. ^b</p> <p>Interference may occur in the vicinity of equipment marked with the following symbol:</p> 
<p>NOTE 1) At 80MHz and 800MHz, the higher frequency range applies.</p> <p>NOTE 2) These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.</p>			
<p>^a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the Ultrasound System is used exceeds the applicable RF compliance level above, the Ultrasound System should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the Ultrasound System, or using a shielded location with a higher RF shielding effectiveness and filter attenuation.</p> <p>^b Over the frequency range 150kHz to 80MHz, field strengths should be less than 3V/m.</p>			

2.3.5.3. Recommended Distance Between Wireless Communication Device and this Product

This product is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of this product can help to prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and this product as recommended below, according to the maximum output power of the communications equipment.

Rated Maximum Output Power of Transmitter (W)	Separation Distance According to Frequency of Transmitter (m)		
	150kHz to 80MHz $d = 1.2\sqrt{p}$	80MHz to 800MHz $d = 1.2\sqrt{p}$	800MHz to 2.5GHz $d = 2.3\sqrt{p}$
0.01	0.12	0.12	0.23
0.1	0.38	0.38	0.73
1	1.2	1.2	2.3
10	3.8	3.8	7.3
100	12	12	23
<p>For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated by using the equation applicable to the frequency of the transmitter, where p is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.</p> <p>NOTE 1) At 80MHz and 800MHz, the separation distance for the higher frequency range applies.</p> <p>NOTE 2) These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.</p>			

2.3.5.4. Electromagnetic Environment – Guidance

It is recommended to use ultrasound systems in shielded locations offering RF shielding effectiveness, with shielded cables. Field strengths outside the shielded location from fixed RF transmitters, as determined by an electromagnetic site survey, should be less than 3V/m.

It is essential that the actual shielding effectiveness and filter attenuation of the shielded location be verified to ensure that they meet the minimum specification.



If the system is connected to other customer-supplied equipment, such as a local area network (LAN), Samsung Medison cannot guarantee that the remote equipment will work correctly in the presence of electromagnetic emission phenomena.

2.3.5.5. Avoiding Electromagnetic Interference

Typical interference on Ultrasound Imaging Systems varies depending on Electromagnetic phenomena. Please refer to the following table:

Imaging Mode	ESD ¹	RF ²	Power Line ³
2D	Change of operating mode, system settings, or system reset. Brief flashes in the displayed or recorded image.	For sector imaging probes, white radial bands or flashes in the centerlines of the image. For linear imaging probes, white vertical bands, sometimes more pronounced on the sides of the image.	White dots, dashes, diagonal lines, or diagonal lines near the center of the image.
M		Increase in the image background noise or white M mode lines.	White dots, dashes, diagonal lines, or increase in image background noise
Color		Color flashes, radial or vertical bands, increase in background noise, or changes in color image.	Color flashes, dots, dashes, or changes in the color noise level.
Doppler		Horizontal lines in the spectral display or tones, abnormal noise in the audio, or both.	Vertical lines in the spectral display, popping type noise in the audio, or both.
<div>1. ESD caused by discharging of electric charge build-up on insulated surfaces or persons.</div> <div>2. RF energy from RF transmitting equipment such as portable phones, hand-held radios, wireless devices, commercial radio and TV, and so on.</div> <div>3. Conducted interference on powerlines or connected cables caused by other equipment, such as switching power supplies, electrical controls, and natural phenomena such as lightning.</div>			

A medical device can either generate or receive electromagnetic interference. The EMC standards describe tests for both emitted and received interference.

Samsung Medison's ultrasound products do not generate electromagnetic interference in excess of standard levels established for such devices.

An Ultrasound System is designed to receive signals at radio frequency and is therefore susceptible to interference generated by RF energy sources. Examples of other sources of interference are medical devices, information technology products, and radio and television transmission towers. Tracing the source of radiated interference can be a difficult task. Customers should consider the following in an attempt to locate the source:

- Is the interference intermittent or constant?
- Does the interference show up only with one transducer operating at the same frequency or with several transducers?
- Do two different transducers operating at the same frequency have the same problem?
- Is the interference present if the system is moved to a different location in the facility?

The answers to these questions will help determine if the problem resides with the system or the scanning environment. After you answer the questions, contact the Samsung Medison Customer Support Department.

2.4. Mechanical Safety

2.4.1. Moving the Equipment



WARNING

Special caution should be taken during movement. Careless transportation of the product may result in product damage or personal injury.

- Before transporting the product, check that the brakes on the wheels are unlocked. Also, make sure to retract the monitor arm completely so that it is secured in a stationary position.
- Always use the handles on the console and move the product slowly.

This product is designed to resist shocks. However, excessive shock, for example, if the product falls over, may cause serious damage.

If the system operates abnormally after repositioning, please contact the Samsung Medison Customer Support Department.

2.4.1.1. Foot Lock

Brakes are mounted to the wheels of the console. To lock the brakes, press the bottom part of the brake with your foot. To unlock them, press the part labeled OFF at the top of the brake with your foot.

You can use the brakes to control the movement of the product. We recommend that you lock the brakes when using the product.

2.4.1.2. Precautions on Ramps

Always make sure that the control panel is facing the direction of movement.



WARNING

Be aware of the castors, especially when moving the system. Samsung Medison recommends that you exercise caution when moving the product up or down ramps.

Leaving the CART unattended on an inclined surface may cause the CART to topple, even if you engage the foot lock. Do not rest the product on ramps.

2.4.2. Precautions for Use




CAUTION

- Do not press the control panel excessively.
- Never attempt to modify the product in any way.
- Check the operational safety when using the product after a prolonged break in service.
- Make sure that other objects, such as metal pieces, do not enter the system.
- Do not block the ventilation slots.
- Do not pull on the power cord to unplug the product. Doing so might damage the cord and cause the product to short-circuit, or the cord itself to break. Unplug the cord by pulling on the plug itself.
- Excessive bending or twisting of cables on patient-applied parts may cause failure or intermittent operation of the system.
- Improper cleaning or sterilization of a patient-applied part may cause permanent damage.
- Servicing the product, including repairs and replacement of parts, must be done by qualified Samsung Medison service personnel. Assuming that the product is used in accordance with the guidelines contained in this manual and maintained by qualified service personnel, the expected service life of the product is approximately 7 years.

Please refer to 'Chapter 10. Maintenance' for detailed information on protection, cleaning, and disinfecting the equipment.

2.4.2.1. Caution for Using Monitor

When adjusting the height or position of the monitor, be careful of the space in the middle of the monitor arm. Catching your fingers or other body parts in it may result in injury.

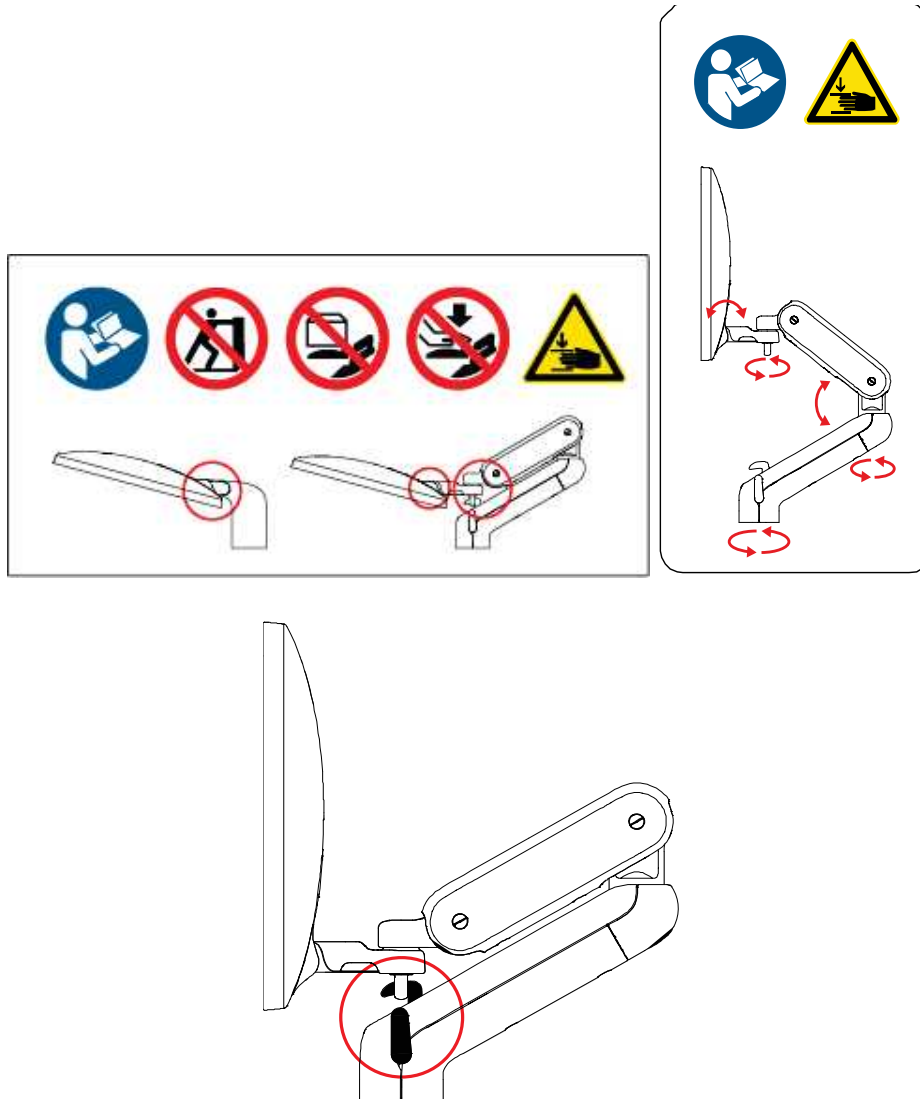

[Figure 2.2 Safety Note for Monitor]




- When moving the product, be sure to keep the monitor arm locked.
- When rotating the monitor, be sure to release the lock first. Rotating the monitor while it is locked may cause damage to the internal cables.

2.4.2.2. Caution for Using Control Panel



- Do not push the control panel with excessive force or lean on it
- Do not sit on the control panel or exert excessive force on it.
- Do not lift the product using the handles on the control panel.

When adjusting the height or position of the control panel, pay attention to the space between the bottom of the control panel and the lever. Catching your fingers or other body parts in it may result in injury.

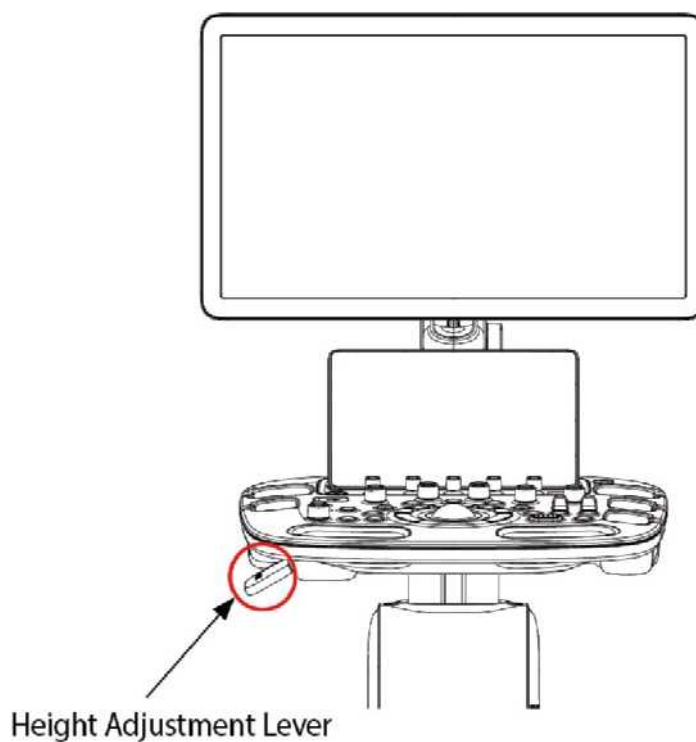

[Figure 2.3 Safety Note for Control Panel]

Pull the height adjustment lever to adjust the height of the control panel.



When you adjust the height of the control panel of this product, a rail mark (or track mark) and oil film may be left on the lift. They are the result of the lift's movements, and not an indication the product is defective.

2.5. Biological Safety

For safety instructions concerning probes and biopsies, refer to 'Chapter 9. Probes'.



WARNING

- Ultrasound waves may have damaging effects on cells and, therefore, may be harmful to the patient. If there is no medical benefit, minimize the exposure time and maintain the ultrasound wave output level at low. Please refer to the ALARA principle.
- Do not use the system if an error message appears on the video display indicating that a hazardous condition exists. Note the error code, turn off the power to the system, and call Samsung Medison customer service department.
- Do not use a system that exhibits erratic or inconsistent functioning. Discontinuities in the scanning sequence are indicative of a hardware failure that should be corrected before use.
- The system limits the maximum contact temperature to 43 degrees Celsius, and the ultrasonic wave output observes American FDA regulations.

2.5.1. ALARA Principle

Guidance for the use of diagnostic ultrasound is defined by the “**As Low As Reasonably Achievable**” (ALARA) principle. The decision as to what is reasonable has been left to the judgment and insight of qualified personnel. No set of rules can be formulated that would be sufficiently complete to dictate the correct response to every circumstance. By keeping ultrasound exposure as low as possible, while obtaining diagnostic images, users can minimize ultrasonic bioeffects.

Since the threshold for diagnostic ultrasound bioeffects is undetermined, it is the sonographer's responsibility to control the total energy transmitted into the patient. The sonographer must reconcile exposure time with diagnostic image quality. To ensure diagnostic image quality and limit exposure time, the Ultrasound System provides controls that can be manipulated during the exam to optimize the results.

The ability of the user to abide by the ALARA principle is important. Advances in diagnostic ultrasound, not only in the technology but also in its applications, have resulted in the need for increased and improved information to guide the user. The output indices are designed to provide that important information.

There are a number of variables, which affect the way in which the output display indices can be used to implement the ALARA principle. These variables include mass, body size, location of the bone relative to the focal point, attenuation in the body, and ultrasound exposure time. Exposure time is an especially useful variable, because the user controls it. The ability to limit the index values over time supports the ALARA principle.

2.5.1.1. Applying ALARA

The system imaging mode used depends upon the information needed. 2D mode and M mode imaging provide anatomical information, while Doppler, Power, and Color imaging provide information about blood flow. Scanned modes, like 2D mode, Power, or Color, disperse or scatter the ultrasonic energy over an area, while an unscanned mode, like M mode or Doppler, concentrate the ultrasonic energy. Understanding the nature of the imaging mode being used allows the sonographer to apply the ALARA principle with informed judgment. The probe frequency, system set-up values, scanning techniques, and operator experience aid the

sonographer in meeting the ALARA principle. The decision as to the amount of acoustic output is, in the final analysis, up to the system operator. This decision must be based on the following factors: type of patient, type of exam, patient history, ease or difficulty of obtaining diagnostically useful information, and the potential localized heating of the patient due to probe surface temperatures. Prudent use of the system occurs when patient exposure is limited to the lowest index reading for the shortest amount of time necessary to achieve acceptable diagnostic results.

Although a high index reading does not mean that a biological effect is actually occurring, it should be taken seriously. Every effort should be made to reduce the possible effects of a high index reading. Limiting exposure time is an effective way to accomplish this goal.

There are several system controls that the operator can use to adjust the image quality and limit the acoustic intensity. These controls are related to the techniques that an operator might use to implement ALARA and can be divided into three categories: direct, indirect, and receiver control.

2.5.1.2. Direct Controls

Application selection and the output intensity control directly affect acoustic intensity. There are different ranges of allowable intensity or output depending on your selection. Selecting the correct range of acoustic intensity for the application is one of the first things required during any exam. For example, peripheral vascular intensity levels are not recommended for fetal exams. Some systems automatically select the proper range for a particular procedure, while others require manual selection. Ultimately, the user bears the responsibility for proper clinical use. Samsung Medison systems provide both automatic and user-definable settings.

Output has direct impact on acoustic intensity. Once the application has been established, the output control can be used to increase or decrease the output intensity. The output control allows you to select intensity levels less than the defined maximum. Prudent use dictates that you select the lowest output intensity consistent with good image quality.

2.5.1.3. Indirect Controls

The indirect controls are those that have an indirect effect on the acoustic intensity. These controls affect the imaging mode, pulse repetition frequency, focus depth, pulse length, and probe selection.

The choice of imaging mode determines the nature of the ultrasound beam. 2D mode is a scanning mode, Doppler is a stationary or unscanned mode. A stationary ultrasound beam concentrates energy on a single location. A moving or scanned ultrasound beam disperses the energy over a wide area and the beam is only concentrated on a given area for a fraction of the time necessary in unscanned mode.

The pulse repetition frequency or rate refers to the number of ultrasound bursts of energy over a specific period of time. The higher the pulse repetition frequency, the more pulses of energy in a given period of time. Several controls affect pulse repetition frequency: focal depth, display depth, sample volume depth, color sensitivity, number of focal zones, and sector width controls.

The focus of the ultrasound beam affects the image resolution. To maintain or increase resolution at a different focus requires a variation of output over the focal zone. This variation of output is a function of system optimization. Different exams require different focal depths. Setting the focus to the proper depth improves the resolution of the structure of interest.

Pulse length is the time during which the ultrasonic burst is turned on. The longer the pulse, the greater the time-average intensity value. The greater the time-average intensity, the greater the likelihood of temperature increase and cavitations. Pulse length, burst length or pulse duration is

the output pulse duration in Pulsed Doppler. Increasing the Doppler sample volume, increases the pulse length.

Probe selection affects intensity indirectly. Tissue attenuation changes with frequency. The higher the probe operating frequency, the greater the attenuation of the ultrasonic energy. Higher probe operating frequencies require higher output intensity to scan at an increased depth. To scan deeper at the same output intensity, a lower probe frequency is required. Using more gain and output beyond a point, without corresponding increases in image quality, can mean that a lower frequency probe is needed.

■ Receiver Controls

Receiver controls are used by the operator to improve image quality. These controls have no effect on output. Receiver controls only affect how the ultrasound echo is received. These controls include gain, TGC, dynamic range, and image processing. The important thing to remember, relative to output, is that receiver controls should be optimized before increasing output. For example; before increasing output, optimize gain to improve image quality.

2.5.1.4. Additional Considerations

Ensure that scanning time is kept to a minimum, and ensure that only medically required scanning is performed. Never compromise quality by rushing through an exam. A poor exam will require a follow-up, which ultimately increases the scanning time. Diagnostic ultrasound is an important tool in medicine, and, like any tool, should be used efficiently and effectively.

2.5.1.5. Output Display Features

The system output display comprises two basic indices: a mechanical index and a thermal index. The thermal index consists of the following indices: soft tissue (TIs), bone (Tlb) and cranial bone (Tlc). One of these three thermal indices will be displayed at all times. The thermal index to be displayed is determined by the system preset or user choice, depending upon the application.

The mechanical index is continuously displayed over the range of 0.0 to 1.9, in increments of 0.1. The thermal index consists of the three indices, and only one of these is displayed all the time. Each diagnostic probe application has a default selection. The Tlb or TIs is continuously displayed over its range of 0.0 to maximum output, based on the probe and application, in increments of 0.1.

The default setting of the application-specific nature is also an important factor of index selection. A default setting is a system control state which is preset by the manufacturer or the operator. The system has default index settings for the probe application. The default settings are applied automatically by the ultrasound system when the power is turned on, new patient data is entered into the system database, or a change of application takes place.

The decision as to which of the three thermal indices to display should be based on the following criteria:

Appropriate index for the application: TIs is used for imaging soft tissue, and Tlb for a focus at or near a bone. Some factors might create artificially high or low thermal index readings (e.g. presence of fluid or bone, or the flow of blood). A highly attenuating tissue path, for example, may cause the potential for local zone heating to be lower than the thermal index indicates.

The selection of scanned modes or unscanned modes of operation also affect the thermal index. For scanned modes, heating tends to be near the surface; for unscanned modes, the potential for heating tends to be deeper in the focal zone.

Always limit ultrasound exposure time. Do not rush the scanning. Ensure that the indices are kept to a minimum, and that exposure time is limited without compromising diagnostic sensitivity.

■ Mechanical Index (MI) Display

Mechanical bioeffects are threshold phenomena that occur when a certain level of output is exceeded. The threshold level varies, however, with the type of tissue. The potential for mechanical biological effects varies with peak pressure and ultrasound frequency. The MI accounts for these two factors. The higher the MI value, the greater the likelihood of mechanical bioeffects occurring. However, there is no specific MI value that means that a mechanical bioeffect will actually occur. The MI should be used as a guide for implementing the ALARA principle.

■ Thermal Index (TI) Display

The TI informs the user of potential temperature increase occurring on the body surface, within body tissue, or at the point of focus of the ultrasound beam on bone. The TI is an estimate of the temperature increase in specific body tissues. The actual amount of any temperature rise is influenced by factors such as tissue type, vascularity, and mode of operation. The TI should be used as a guide for implementing the ALARA principle.

The bone thermal index (Tlb) informs the user about potential heating at or near the focus after the ultrasound beam has passed through soft tissue or fluid, such as the skeletal structure of a 2-3 month old fetus. The cranial bone thermal index (Tlc) informs the user about the potential heating of bone at or near the surface, for example, the cranial bone. The soft tissue thermal index (TIs) informs the user about the potential for heating within soft homogeneous tissue. Tlc is displayed when you select a trans-cranial application.

You can select the TI to display at Setup > Imaging > Display.

■ Mechanical and Thermal Indices Display Precision and Accuracy

The Mechanical and Thermal Indices on the system are precise to 0.1 units.

The MI and TI display accuracy estimates for the system are given in the manual's Acoustic Output Tables. These accuracy estimates are based on the variability ranges of probes and systems, inherent acoustic output modeling errors, and the measurement variability, as described below.

The displayed values should be interpreted as relative information to help the system operator achieve the ALARA principle through prudent use of the system. The values should not be interpreted as actual physical values of investigated tissue or organs. The initial data that is used to support the output display is derived from laboratory measurements based on the AIUM measurement standard. The measurements are then put into algorithms to calculate the displayed output values.

Many of the assumptions used in the process of measurement and calculation are conservative in nature. Over-estimation of actual in situ exposure, for the vast majority of tissue paths, is built into the measurement and calculation process. For example, the acoustic output values measured underwater are derated using a conservative, industry standard, attenuation coefficient of 0.3dB/cm-MHz.

Conservative values for tissue characteristics were selected for use in the TI models. Conservative values for tissue or bone absorption rates, blood perfusion rates, blood heat capacity, and tissue thermal conductivity were selected.

A steady state temperature rise is assumed in the industry standard TI models, and the assumption is made that the ultrasound probe is held steady in one position long enough for a steady state to be reached.

A number of factors are considered when estimating the accuracy of display values: Hardware deviation, algorithm accuracy, and measurement deviation. Deviation among probes and systems in particular is an important factor. Probe deviation results from piezoelectric crystal efficiencies, process-related impedance differences, and sensitive lens focusing parameter variations. Differences in the system pulse voltage control and efficiencies are also a contributor to variability. There are inherent uncertainties in the algorithms used for estimating acoustic output values over the range of possible system operating conditions and pulse voltages. Inaccuracies in laboratory measurements are related to differences in hydrophone calibration and performance, positioning, alignment and digitization tolerances, and variability among test operators.

The conservative assumptions of the output estimation algorithms of linear propagation, at all depths, through a 0.3dB/cm-MHz attenuated medium are not taken into account in the calculation of the accuracy estimate displayed. Neither linear propagation nor uniform attenuation at the 0.3dB/cm-MHz rate occurs in underwater measurements, or in most tissue paths in the body. In the body, different tissues and organs have dissimilar attenuation characteristics. In water, there is almost no attenuation. In the body, and particularly in underwater measurements, non-linear propagation and saturation losses occur as pulse voltages increase.

The display accuracy estimates take into account the variability ranges of probes and systems, inherent acoustic output modeling errors, and the measurement variability. Display accuracy estimates are measured according to AIUM measurement standards but not based on errors caused during the measurement or inherent errors. They are also independent of the effects of non-linear loss on the measured values.

2.5.1.6. Control Effects – Controls Affecting the Indices

As various system controls are adjusted, the TI and MI values may change. This will be most apparent as the Power control is adjusted; however, other system controls will also affect the on-screen output values.

■ Power

Power controls the system acoustic output. Two real-time output values are on the screen: a TI and a MI. They change as the system responds to Power adjustments.

In combined modes, such as simultaneous Color, 2D mode, and Pulsed Doppler, the total TI is the sum of TIs of the individual modes. Each mode is a vital contributor to this total; the displayed MI will be from the mode with the largest peak pressure.

2.5.1.7. 2D Mode Controls

■ 2D Mode Size

Narrowing the sector angle may increase the frame rate. This will increase the TI. Pulse voltage may be automatically adjusted down with software controls to keep the TI below the system maximum. A decrease in pulse voltage will decrease MI.

■ Zoom

Increasing the zoom magnification may increase frame rate. This will increase the TI. The number of focal zones may also increase automatically to improve the resolution. This action may change the MI, since the peak intensity can occur at a different depth.

■ Number of Focal Zones

Increasing the number of focal zones may change both the TI and MI by automatically changing the frame rate or focal depth. Lower frame rates decrease the TI. The MI displayed will correspond to the focal zone with the largest peak intensity.

■ Focus

In general, higher MI values will occur when the focal depth is near the natural focus of the probe (transducer).

2.5.1.8. Color and Power Controls**■ Color Sensitivity**

Increasing the color sensitivity may increase the TI. More time is required for the scanning of color images. Color pulses are the dominant pulse type in this mode.

■ Color Sector Width

Narrower color sector width will increase the color frame rate, and so the TI will increase. The system may automatically decrease the pulse voltage to stay below the system maximum. A decrease in pulse voltage will decrease the MI. If Pulsed Doppler is also enabled, then Pulsed Doppler will remain the dominant mode and the TI change will be small.

■ Color Sector Depth

Deeper color sector depth may automatically decrease color frame rate, or select a new color focal zone or color pulse length. The TI will change due to the combination of these effects. Generally, the TI will decrease with increased color sector depth. MI will correspond to the peak intensity of the dominant pulse type, which is a color pulse. However, if Pulsed Doppler is also enabled, then Pulsed Doppler will remain the dominant mode and the TI change will be small.

■ Scale

Using the Scale control to increase the color velocity range may increase the TI. The system will automatically adjust the pulse voltage to stay below the system maximum. A decrease in pulse voltage will also decrease MI.

■ 2D Mode Size

A narrower 2D mode sector width in Color imaging will increase color frame rate. The TI will increase. MI will not change. If Pulsed Doppler is also enabled, then Pulsed Doppler will remain the dominant mode and the TI change will be small.

2.5.1.9. M Mode and Doppler Controls

■ Simultaneous and Update Methods

Use of combination modes affects both the TI and MI through the combination of pulse types. During Simultaneous mode, the TI is an ancillary element. During auto-update and duplex, the TI will display the dominant pulse type. The displayed MI will be from the mode with the largest peak pressure.

■ Sample Volume Depth

When Doppler sample volume depth is increased, the Doppler PRF may automatically decrease. A decrease in PRF will decrease the TI. The system may also decrease the pulse voltage to remain below the system maximum. A decrease in pulse voltage will decrease MI.

2.5.1.10. Other

■ 2D, Color, M Mode, PW, and CW Modes

When a new imaging mode is selected, both the TI and the MI will change to their default settings. Each mode has a corresponding pulse repetition frequency and maximum intensity point. In combined or simultaneous modes, the TI is the sum of the contribution from the modes enabled, and the MI is the value for the focal zone of the mode with the largest derated intensity. If a mode is turned off and then reselected, the system will return to the previously selected settings.

■ Probe

Each probe model available has unique specifications for the contact area, beam shape, and center frequency. Defaults are initialized when you select a probe. Samsung Medison's factory defaults vary according to the probe, application, and mode. Defaults have been chosen below the FDA limits for intended use.

■ Depth

An increase in the 2D mode depth will automatically decrease the 2D mode frame rate. This would decrease the TI. The system may also automatically choose a deeper 2D mode focal depth. A change of focal depth may change the MI. The MI displayed is that of the zone with the largest peak intensity.

■ Application

Acoustic output defaults are set when you select an application. Factory defaults vary with probe, application, and mode. Defaults have been chosen below the FDA limits for intended use.

2.5.1.11. Related Guidance Documents

For more information about ultrasonic bioeffects and related topics, refer to the following;

- Medical Ultrasound Safety (AIUM, 2014).
- AIUM Consensus Report on Potential Bioeffects of Diagnostic Ultrasound: Executive Summary, J. Ultrasound in Medicine, 2008, Vol. 27, Num. 4.
- WFUMB. Symposium on Safety of Ultrasound in Medicine: Conclusions and Recommendations on Thermal and Non-thermal Mechanisms for Biological Effects. Ultrasound in Med. & Biol; 1998, 24: Supplement 1.
- Bioeffects and Safety of Diagnostic Ultrasound (AIUM, 1993)
- Guidelines for the safe use of diagnostic ultrasound equipment. (BMUS, 2009)
- Information for Manufacturers Seeking Marketing Clearance of Diagnostic Ultrasound Systems and Transducers (U.S. FDA - 2008)
- Particular requirements for the basic safety and essential performance of ultrasonic medical diagnostic and monitoring equipment. (IEC, 2007)
- Acoustic Output Labeling Standard for Diagnostic Ultrasound Equipment (AIUM, 2008)
- Standard Means for the Reporting of the Acoustic Output of Medical Diagnostic Ultrasonic Equipment. (IEC, 2007)
- Standard for Real-Time Display of Thermal and Mechanical Acoustic Output Indices On Diagnostic Ultrasound Equipment (AIUM/NEMA, 2004)
- Ultrasonics - Field characterization -Test methods for the determination of thermal and mechanical indices related to medical diagnostic ultrasonic fields (IEC, 2005)
- Measurement and Characterization of Medical Ultrasonic Fields up to 40 MHz. (IEC, 2007)
- Ultrasonics-Power Measurements- Radiation Force Balances and Performance Requirements. (IEC, 2006)
- Acoustic Output Measurement Standard for Diagnostic Ultrasound Equipment. (AIUM/NEMA, 2004).

2.5.1.12. Acoustic Output and Measurement

Since the first usage of diagnostic ultrasound, the possible human biological effects (bioeffects) of ultrasound exposure have been studied by various scientific and medical institutions. In October 1987, the American Institute of Ultrasound in Medicine (AIUM) ratified a report prepared by its Bioeffects Committee (Bioeffect Considerations for the Safety of Diagnostic Ultrasound, J Ultrasound Med., Sept. 1988: Vol.7, No.9 Supplement), sometimes referred to as the Stowe Report, which reviewed available data on possible effects of ultrasound exposure. Another report, "Bioeffects and Safety of Diagnostic Ultrasound", dated January 28, 1993, provides more up to date information. In addition, periodically updated reports on biological effects, results, and guidelines on safe usage have been published by groups such as the WFUMB (World Federation of Ultrasound in Medicine and Biology), AIUM, and BMUS.

The Acoustic output for this system has been measured and calculated in accordance with the Standard for Real-Time Display of Thermal and Mechanical Acoustic Output Indices On Diagnostic Ultrasound Equipment (AIUM/NEMA, 2004) and Acoustic Output Measurement Standard for Diagnostic Ultrasound Equipment (AIUM/NEMA, 2004).

2.5.1.13. *In Situ*, Derated, and Water Value Intensities

All intensity parameters are measured in water. Since water does not absorb acoustic energy, these water measurements represent the largest possible value. Biological tissue absorbs acoustic energy. The true value of the intensity at any point depends on the amount and type of tissue, and the frequency of the ultrasound that passes through the tissue. The intensity value in the tissue, *In Situ*, has been estimated using the following formula:

$$In\ Situ = Water\ e^{-(0.23alf)}$$

Where: *In Situ* = *In Situ* Intensity Value

Water = Water Value Intensity

e = 2.7183

a = Attenuation Factor

Tissue a (dB/cm-MHz)

Brain .53

Heart .66

Kidney .79

Liver .43

Muscle .55

l = Skin line to measurement depth (cm)

f = Center frequency of the transducer/system/mode combination (MHz)

Since the ultrasonic path during an examination is likely to pass through varying lengths and types of tissue, it is difficult to estimate the true *In Situ* intensity. An attenuation factor of 0.3 is used for general reporting purposes; therefore, the *In Situ* value is commonly reported using this formula:

$$In\ Situ\ (derated) = Water\ e^{-(0.069lf)}$$

Since this value is not the true *in situ* intensity, the term "derated" is used.

The maximum derated and maximum water values do not always occur under the same operating conditions. Therefore, the reported maximum water and derated values may not be related to the *In Situ* (derated) formula. For example, a multi-zone array transducer has the greatest water value intensities at its deepest zone. The same transducer may have its largest derated intensity at one of its shallowest focal zones.

2.5.1.14. Terms and Symbols Related to Acoustic Output and Measurement

The terms and symbols used in the acoustic output tables are defined in the following paragraphs.

A_{aprt}	-12dB OUTPUT BEAM AREA, ultrasonic beam area induced by -12dB output beam size (unit: cm^2)
d_{eq} at max. I_{pi}	EQUIVALENT BEAM DIAMETER, the acoustic beam's diameter at the location where the PULSE-INTENSITY INTEGRAL is maximal, expressed as an equivalent beam area (unit: cm)
$d_{\text{eq}}(Z_b)$	EQUIVALENT BEAM DIAMETER, the acoustic beam's diameter at Z_b location, expressed as an equivalent beam area (unit: cm^2)
Dim of A_{aprt}	-12dB OUTPUT BEAM DIMENSIONS, the dimensions of an ultrasound beam (whose pulse beam width is -12dB) from a specific direction that is perpendicular to the transducer output plane and the beam alignment axis (unit: cm)
f_{awf}	ACOUSTIC WORKING FREQUENCY, the arithmetic average of f_1 and f_2 that are farthest from each other among the frequencies of the pressure spectrum of the acoustic signal whose amplitudes are lower than the peak amplitude, i.e. maximum amplitude, by 3dB (unit: MHz)
Focal Length	The focal length in a direction parallel to the beam alignment axis in the defined operational state of the ultrasound system (unit: cm)
$I_{\text{pa},\alpha}$ at max. MI	The average attenuated pulse strength at the location where Mechanical Index (MI) is maximal (unit: W/cm^2)
$I_{\text{ta},\alpha}(z)$	Attenuated average strength over time at a specific focal length (z) (unit: mW/cm^2)
MI	MECHANICAL INDEX, a variable representing potential cavitations within the human body (unit: N/A)
P	OUTPUT POWER, the average power over time of an ultrasonic transducer's emissions into a free field through a specified medium such as water (unit: mW)
$P_{\alpha}(z)$	ATTENUATED OUTPUT POWER, the power of ultrasonic output calculated at a specific distance from the transducer after attenuation occurs (unit: mW)
$P_{r,\alpha}$	ATTENUATED PEAK-RAREFACTIONAL ACOUSTIC PRESSURE, the peak rarefactional acoustic pressure calculated at a specific distance

	after attenuation occurs (unit: MPa)
P_r at max. I_{pi}	The peak rarefactional acoustic pressure at the location where PULSE-INTENSITY INTEGRAL is maximal (unit: MPa)
pr	PULSE REPETITION RATE, the inverse number of the time interval between two contiguous acoustic pulses (unit: Hz)
TIB	BONE THERMAL INDEX, a thermal index for a focal zone formed near a bone after the ultrasound beam passes through soft tissue, e.g. applied to a fetus (in the 2nd or 3rd trimester) or to the head of a neonate (through the fontanel) (unit: N/A)
TIC	CRANIAL BONE THERMAL INDEX, a thermal index for an ultrasound beam entering the body and passing through a bone, e.g. the skull of children or adults (unit: N/A)
TIS_{scan}	Soft tissue thermal index in scanning mode (unit: N/A)
$TIS_{non-scan}$	Soft tissue thermal index in non-scanning mode (unit: N/A)
t_d	PULSE DURATION (unit: us)
$z_{at_max_I_{pi},\alpha}$	Location where PULSE-INTENSITY INTEGRAL is maximal (unit: cm)
z_b	DEPTH FOR BONE THERMAL INDEX (unit: cm)
z_{bp}	BREAK-POINT DEPTH, which is the EQUIVALENT APERTURE DIAMETER multiplied by 1.5 (unit: cm)
z_s	DEPTH FOR SOFT-TISSUE THERMAL INDEX, the distance from a plane where the product of minimum attenuated output power, ATTENUATED SPATIAL-PEAK TEMPORAL-AVERAGE INTENSITY, and 1 cm^2 is maximal at the distance range that is equal to, or greater than, the equivalent aperture diameter multiplied by 1.5, when the beam dimension of -12dB output is defined along the beam alignment axis (unit: cm)

2.5.1.15. Acoustic Measurement Precision and Uncertainty

The Acoustic Measurement Precision and Acoustic Measurement Uncertainty are described below.

Quantity	Precision	Total Uncertainty
$I_{pi,\alpha}$ (attenuated pulse intensity integral)	3.2%	+21% to -24%
P (acoustic power)	6.2%	$\pm 19\%$
$P_{r,\alpha}$ (attenuated rarefaction pressure)	5.4%	$\pm 15\%$
f_{awf} (acoustic working frequency)	< 1%	$\pm 4.5\%$

■ Systematic Uncertainties

For the pulse intensity integral, derated rarefaction pressure $P_{r,3}$, center frequency, and pulse duration, the analysis includes considerations of the effects on accuracy of:

Hydrophone calibration drift or errors.

Hydrophone/Amp frequency response.

Spatial averaging.

Alignment errors.

Voltage measurement accuracy, including.

- Oscilloscope vertical accuracy.
- Oscilloscope offset accuracy.
- Oscilloscope clock accuracy.
- Oscilloscope Digitization rates.
- Noise.

The acoustic power is measured using a Radiation Force for systematic uncertainties through the use of calibrated NIST acoustic power sources.

We also refer to a September 1993 analysis conducted by the working group of the IEC technical committee 87 and prepared by K. Beissner, as a first supplement to IEC publication 1161.

The document includes analysis and discussion of the sources of error/measurement effects due to:

- Balance system calibration.
- Absorbing (or reflecting) target suspension mechanisms.
- Linearity of the balance system.
- Extrapolation to the moment of switching the ultrasonic transducer (compensation for ringing and thermal drift).
- Target imperfections.

- Absorbing (reflecting) target geometry and finite target size.
- Target misalignment.
- Ultrasonic transducer misalignment.
- Water temperature.
- Ultrasonic attenuation and acoustic streaming.
- Coupling or shielding foil properties.
- Plane-wave assumption.
- Environmental influences.
- Excitation voltage measurement.
- Ultrasonic transducer temperature.
- Effects due to nonlinear propagation and saturation loss.

2.5.1.16. Training

The users of this ultrasound system must familiarize themselves with the ultrasound system to optimize the performance of the device and to detect possible malfunctions. It is recommended that all users receive proper training before using the device. You can receive training on the use of the product from the Samsung Medison service department, or any of the customer support centers worldwide.

2.6. Protecting the Environment



- For disposal of the system or accessories that have come to the end of their service lives, contact the vendor or follow appropriate disposal procedures.
- You are responsible for complying with the relevant regulations for disposing of wastes.
- The lithium ion battery used in the product must be replaced by a Samsung Medison service engineer or an authorized dealer.

2.6.1. EU WEEE Directive



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

2.6.2. EU REACH Regulation

For information on Samsung's environmental commitments and product specific regulatory obligations e.g. REACH visit:

[Samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data_corner.html](https://www.samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data_corner.html)

2.6.3. State of California Proposition 65 Warning (US Only)



This product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Chapter 3

Installing Product

3.1. Transporting.....	3
3.1.1. Precautions During Transport.....	3
3.1.2. Brakes.....	3
3.1.3. Precautions on Ramps	3
3.1.4. Humidity and Temperature	4
3.2. Unpacking the Product.....	5
3.2.1. Dismantling the Product's Box.....	5
3.2.2. Accessories	6
3.2.3. Release of the Locking Mechanism	6
3.3. Installation Environment.....	7
3.3.1. Caution.....	7
3.4. Installing the Product	8
3.4.1. Installation Safety	8
3.4.2. Connecting Peripherals	10
3.5. System Power.....	13
3.5.1. Turning the Power On.....	13
3.5.2. Shutting Down the System.....	13
3.6. System Settings	14
3.6.1. General System Settings	15
3.6.2. General	15
3.6.3. Display	19
3.6.4. Patient.....	20
3.6.5. Quick Preset	23

3.6.6.	EzExam+.....	24
3.6.7.	Imaging	27
3.6.8.	Application/Preset	30
3.6.9.	Application.....	32
3.6.10.	Measurement Settings.....	33
3.6.11.	Report	49
3.6.12.	Annotation	52
3.6.13.	Body Marker	57
3.6.14.	Customize	60
3.6.15.	Peripherals	64
3.6.16.	Connectivity.....	67
3.6.17.	Service.....	86
3.6.18.	Help	86

3.1. Transporting

This product is a finely tuned piece of medical electronic equipment; careful attention is required when transporting it.

3.1.1. Precautions During Transport

This product and its packaging are designed to protect the product from physical impacts. However, drops and external impacts may cause serious damage to the product.

- Before transporting the product, check that the wheel brakes are unlocked. Also, be sure to retract the monitor arm completely so that it is secured in a stationary position.
- Always use the handles at the back of the console and move the product slowly.

3.1.2. Brakes

You can use the brakes to control the movement of the product. The brake pedal is located at the center of the console pedal and when pressed brakes all the wheels simultaneously. To lock the brakes, press the front part of the brake pedal with your foot. To unlock the brakes, press the back of the pedal.

We recommend that you lock the brakes when using the product.

3.1.3. Precautions on Ramps

Always make sure that the control panel is facing the direction of movement. If you leave the product on an incline, the product may fall over even if the brakes are engaged. Do not rest the product on a ramp.



WARNING

The product weighs more than 100 kg. Be extra careful when transporting it. Careless transportation of the product may result in product damage or personal injury.



WARNING

Be especially aware of the castors when moving the system. Samsung Medison recommends that you practice transporting the product up or down ramps in advance of any significant relocation.

3.1.4. Humidity and Temperature

Table 3-1. The Product's Humidity and Temperature Tolerance shown below illustrates the appropriate temperature and humidity ranges for transporting, storing, and operating the product.


Category	Temperature [°C]	Humidity [%]
Transporting	-25 – 60	20 – 90
Storage	-10 – 50	20 – 90
Operating	10 – 35	30 – 75

[Table 3-1. The Product's Humidity and Temperature Tolerance]

3.2. Unpacking the Product

3.2.1. Dismantling the Product's Box

1. Open the box.
2. Remove the protective cover.
3. Take out the probe box and accessory box and store them in a safe place.
4. Unlock the brakes on the wheels.
5. Grab the rear handle on the product and move it to the place where you wish to install it.

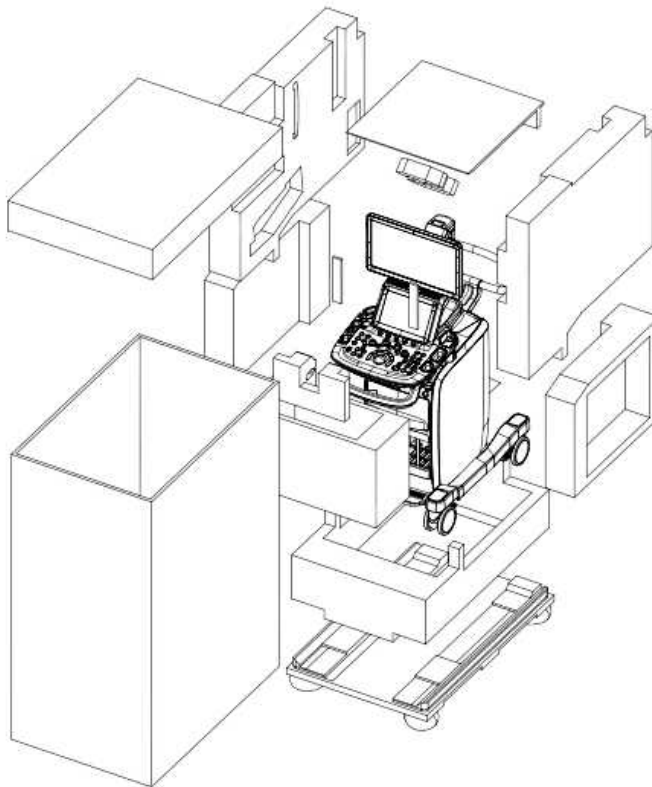

[Figure 3.1 Dismantling the Product's Box]


3.2.2. Accessories

An accessory box containing the items below is supplied with the product. If it does not match your order, please contact the Samsung Medison customer service department or your local vendor.

3.2.3. Release of the Locking Mechanism

When this product is being transported, the monitor arm must be secured in place by the locking mechanism to ensure safety. Release the locking mechanism by following this procedure before using the product:

1. Pull down the locking mechanism on the center of the monitor arm to release the lock.

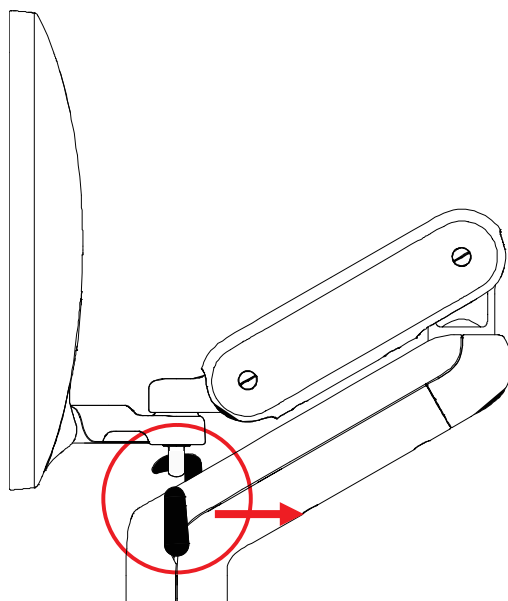

[Figure 3.2 Release of the Locking Mechanism]

3.3. Installation Environment

3.3.1. Caution

When installing the product, please pay attention to the following: For more information on use and setup, please refer to the accompanying manual for this product.



CAUTION

Placing the system near generators, X-ray machines, or broadcast cables may result in screen noise and abnormal visual images.


Sharing the power source with other electrical devices may also produce noise.

- Optimal conditions for the system are a temperature of 10-35° and a humidity of 30-75%.
- Avoid excess humidity.
- Avoid direct sunlight.
- Avoid excessive fluctuations in temperature.
- Avoid installing the product near a heating appliance.
- Avoid dusty and/or poorly ventilated locations.
- Avoid locations that are subject to vibration.
- Avoid locations where chemical substances or harmful gases are present.

3.4. Installing the Product

3.4.1. Installation Safety

The power socket and equipotential terminal are located at the back of the product.

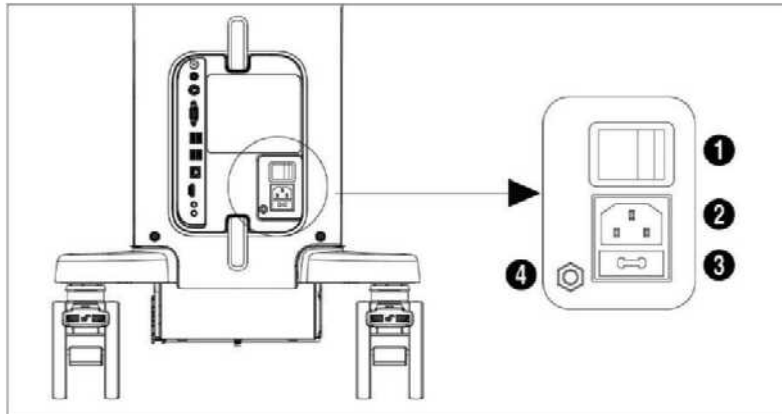

[Figure 3.3 Power Socket and Equipotential Terminal]

- ① Power switch: Supplies power to the entire system or cuts off power. Turn off the power.
- ② Power inlet: Accepts the power cord, which connects to an external power supply.
- ③ Power fuse: Cuts off the power supply if overcurrent or overvoltage occurs.
- ④ Equipotential potential: This should be connected to the equipotential connector in the exam room.

3.4.1.1. Power Cord Connection

Prior to connecting a power cord, verify that the voltage indicated on the power cord matches the voltage rating of the installation point.



NOTE

The product may be shipped with the power cable already connected to the console.



CAUTION

- If the product needs to be transported or stored for an extended period, the temperature and humidity of the environment must be checked.
- A sudden change in temperature may cause condensation and lead to product failure.

Refer to “**Table 3-2. Operational Temperature of Product**” before turning the product on.

Temperature [°C]	-20	-15	-10	-5	0	5	10 – 35	45	50	55	60
Waiting time [Hour]	16	10	8	6	4	2	Use immediately	2	4	6	10

[Table 3.2 Operational Temperature of the Product]


3.4.1.2. Connecting the Equipotential Terminal

In a hospital environment, dangerous electric currents may occur as a result of the potential difference between a contactable conductive part and connected equipment in treatment rooms. The solution to the problem is consistent equipotential bonding. The equipotential terminal of an item of medical equipment must be connected to the equipotential bonding network in its treatment room, as shown in the figure below.

3.4.1.3. Probe Connection

Be sure to turn off the power before connecting or disconnecting a probe to ensure the safe use of the system and the probes.

1. Connect the probes to the probe connectors on the front panel of the system. Up to four (five including CW) probes may be connected. The CW probe should only be connected to its own dedicated connector.
2. To install it, turn the connector turning handle clockwise.

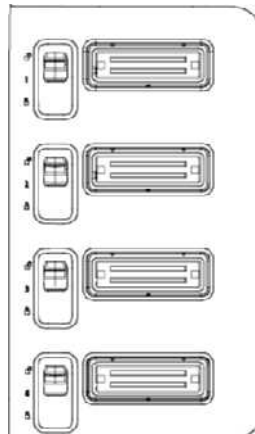


[Figure 3.4 Probe Connector]

3.4.2. Connecting Peripherals



CAUTION

- Do not install peripheral devices within the patient environment that are not listed in this Service Manual. If you install an unofficial device in the patient environment, it may cause an electrical hazard.
- Do not connect additional external peripheral devices to the auxiliary socket outlet. Doing so may increase safety risks.

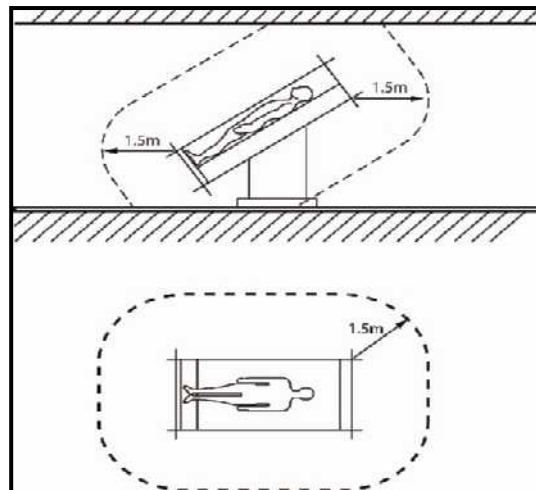

[Figure 3.5 Patient Environment]



NOTE

For more information on the recommended peripheral devices, refer to "Chapter 3. Installing the Product".

3.4.2.1. External Peripheral Devices

These are peripheral devices that can be connected for use when needed and are connected via the USB port located on the rear panel.



When using a peripheral device via a USB port, always turn the power off before connecting/disconnecting the device. Connecting or disconnecting a USB device while the power is turned on may cause the system and/or the USB device to malfunction.



- To remove the removable disk, go to Utility > Storage manager.
- USB ports are located both on the console and its rear panel. We recommend that you connect USB storage devices (flash memory media, etc.) to the ports on the console, and other USB peripheral devices to the rear panel, for convenience.

■ USB Video Printer

The following products are recommended:

- BW: Mitsubishi P-95DE, Sony UP-D897, Sony UP-X898MD, Sony UP-D898MD



[Figure 3.6 B/W Printer Installation Screen]

- Color: Mitsubishi CP-30DW, Sony UP-D25MD



[Figure 3.7 Color Printer Installation Screen]



- You must install a printer and driver compatible with the English version of Microsoft Windows 7. Contact the Samsung Medison customer service department if you have questions about printer driver installation.
- When connecting the printer ensure that it is configured under Microsoft Windows or system setup and has been chosen as the default printer.
- Please check which port the printer uses before connecting. Printers should be connected to the printer port while USB printers should be connected to the USB port.

■ Other

Flash Memory Media



- The system cannot recognize USB 1.1 flash memory. Remove the flash memory from the console and equip again with an appropriate device.
- When using a flash memory device which supports functions other than saving files, please check first to see if it is possible to save the file on a desktop PC.
- Do not use flash memory media which contains anti-virus programs or is defective. Otherwise, the product may fail to work properly.

3.5. System Power

Boot up the system for use.



CAUTION

Make sure to connect the probes and peripheral devices that will be used before powering on the system. If you attempt to connect them during system use, it may lead to patient injury or irreparable damage to the console.

3.5.1. Turning the Power On

Press the **On/Off** button when the power is off. Booting begins, and the product logo appears on the screen. When booting is completed, the 2D mode screen will appear in End Exam status.



CAUTION

Before starting the diagnosis, you must register the patient information.



NOTE

- If the power switch near the power connection port on the rear panel of the product has been switched off, wait for 10 seconds before turning on the product.
- Do not press keyboard keys or buttons while booting is in progress. Doing so may cause the system to malfunction.
- If you turn on the power after turning it off suddenly, the system may turn on and off momentarily. This is a feature of the built-in Intel PC Main Board of the product, and does not indicate a system error.

3.5.2. Shutting Down the System

Press the **On/Off** button while using the system to initiate shutdown. Click **Shut Down** on the screen to shut down the system, or click **Cancel** to cancel.




CAUTION

- If the system does not turn off, keep the **On/Off** button depressed for five seconds or longer to force a shutdown.
- If the ultrasound system is unplugged while working or turned off by forcibly shutting down, the files may get corrupted and it may result in system failure or data loss.
- To ensure that the product is safely cut off from electrical power, set the power switch at the rear of the product to the Off position after using the product.
- Press the **On/Off** button twice to turn off the system. The *Select Next Operation* window appears when you press the **On/Off** button once. The system will turn off if you press the button again.

3.6. System Settings

General system settings that do not have direct bearing on imaging are explained. The setup can be modified depending on your specific needs or preferences.


1. On the touch screen, tap the  button, enter the Utility Menu, and tap the **Setup** button.
2. The **Setup** button will appear on the touch screen. Select a tab that contains items you want to specify.

TIP **Selecting a Tab**

You can select the tab you want in either one of two ways. Select the method that suits you.

- Use the trackball and the **Set** button to select a tab.
- Tap the corresponding button on the touch screen.

3. Specify the settings for each item.
4. Save settings and exit. Click **Exit** on the monitor or tap the **Exit** button on the touch screen to switch to Scan Mode.

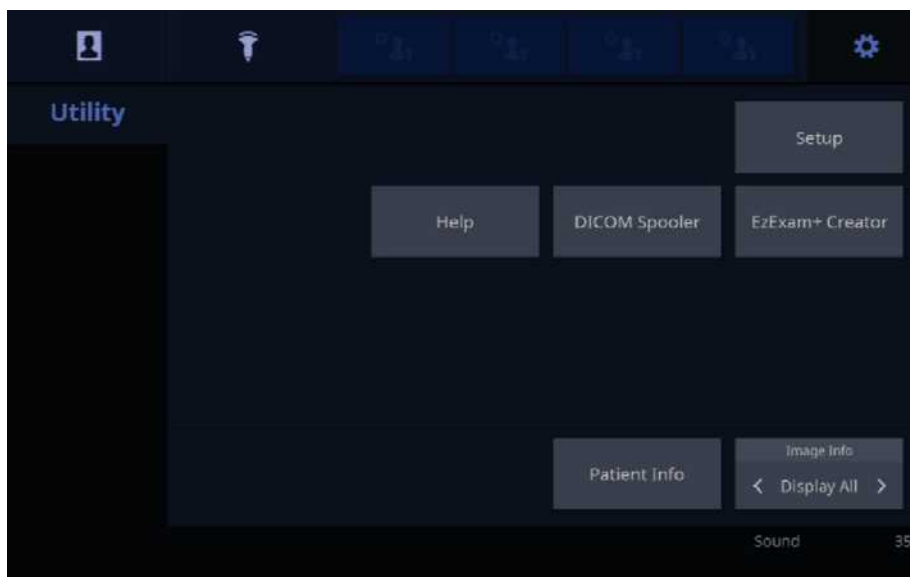

[Figure 3.8 Utility, Setup – Touch Screen]


3.6.1. General System Settings

In the *Setup* screen, select **System** tab. Or tap **System** on the touch screen.

From this tab, you can configure the general system settings.

3.6.2. General

In the *Setup* screen, select **General** tab in the **System** category.

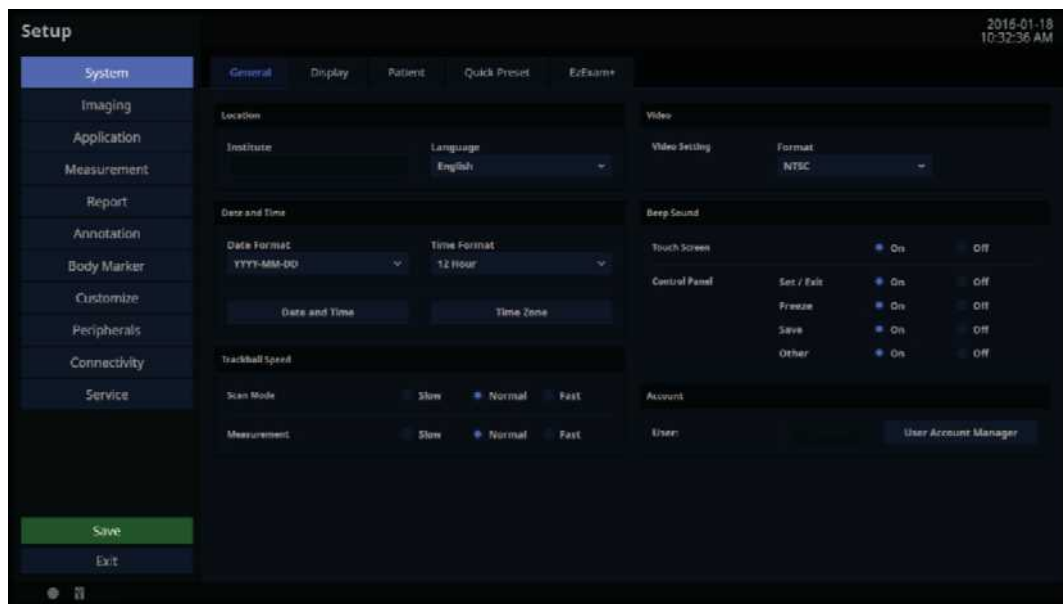

[Figure 3.9 Setup – System – General]

3.6.2.1. Location

You can specify the information that is displayed in the title area on the screen.

■ Institute

Enter the name of the hospital/institution where the product is installed. Special characters can be entered.

■ Language

Select the system language.

(Supported languages: English, German, French, Spanish, Italian, Russian, Simplified Chinese, Portuguese (Brazilian))

TIP


- For Russian, the Russia Restricted Mode option must be disabled.
- The option must be disabled by qualified Samsung Medison service personnel.

3.6.2.2. Date and Time

Set the date and time for use in the system.



- Before starting diagnosis, please confirm the time, date and time zone and modify the settings if necessary.
- Make sure to set the date and time to the time zone in which the system is installed. If it is not set, the date and time can be automatically synchronized to the time zone of the country of the manufacturer.

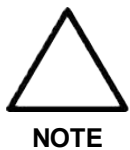

- You cannot change the date and time when a patient ID has been registered. To change the date and time, you should finish the current diagnosis by pressing the **End Exam** button on the control panel.
- When the system time and date are changed, the change is not reflected in the time and date indicated in previous diagnosis results.

■ Date Format

Specify the date format. Select a date format using the combo button. The date format that you specify will be applied to various date fields in *Patient Information*.

■ Time Format

Specify the time format. Press the combo button to select the preferred display format (12 Hour or 24 Hour).

■ Date and Time

Select settings for date and time. When you press this button, the *Date and Time* screen appears.

1. Set the date and time by using the trackball and the **Set** button on the control panel.
2. Press **Save** to apply the settings. Tap **Cancel** or press **Exit** button on the control panel to cancel.

■ Time Zone

Specify the local time zone where the system is used. When you press this button, the *Time Zone Settings* screen appears.

1. Press Time Zone.
2. Specify the time zone by using the trackball and the **Set** button for the combo button.
3. Press **OK** to apply the settings. Tap **Cancel** to cancel.

3.6.2.3. Trackball Speed

■ Scan Mode

Specify the trackball speed in Scanning Mode as Slow, Normal, or Fast.

■ Measurement

Used to specify the trackball's speed during measurement. Select Slow, Normal, or Fast.

Slower speeds allow for more precise measurements.

3.6.2.4. Video

■ Format

Choose between NTSC or PAL.

3.6.2.5. Beep Sound

■ Touch Screen

Set the sound level when using the touch screen. Turn it on or off by using the trackball.

■ Control Panel

Set the sound level of sound when using buttons and dial-buttons in the control panel. You can turn it on or off by using the trackball.

In particular, for **Set/Exit**, **Freeze**, **Save**, and **Other** buttons and dial-buttons, you can turn them on or off.

3.6.2.6. Account

Register a user ID and password.

■ User Login

Set the user account (login) function. If the user log-in is set to on, it can be used for the following areas:


- Screen Saver
- Booting up the System

■ User Account Manager

This is the exclusive administrator function for approval and management of accounts. The *Account List* window will be enabled.

- Create: Fill out the User ID, Password, and Name fields. Then click the **OK** button to create a new ID.
- Change Password: Change password.
- Delete: Delete the selected ID.

- Close: Close Settings.

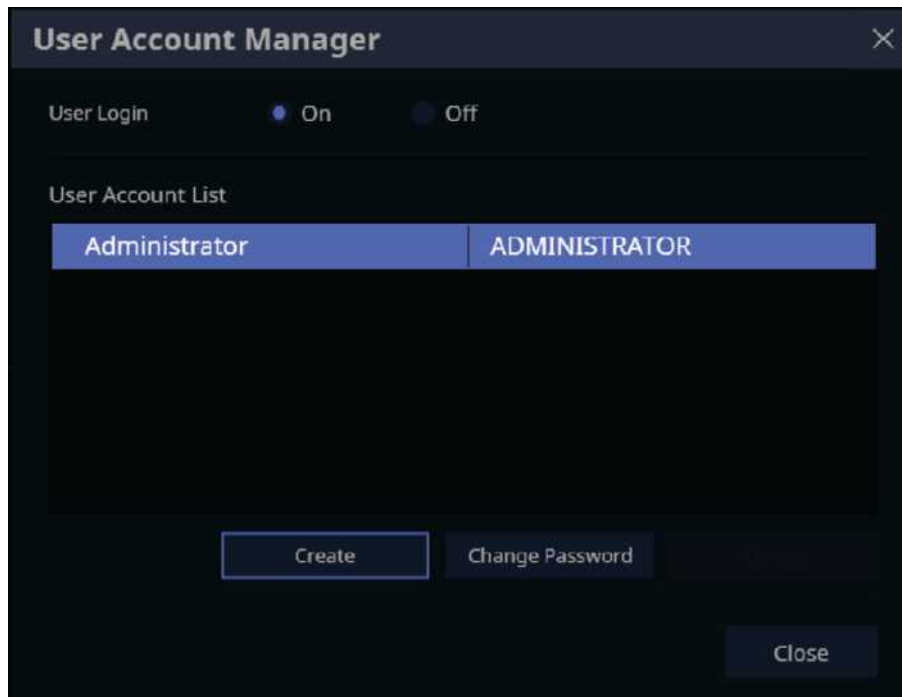

[Figure 3.10 Setup – User Account Manager]

■ Login

You can set a User Account ID after logging in to the Admin account. Please contact the service engineer to learn how to reset user account information including the Admin account.



NOTE

- The Admin account can be configured when you run 'User Account Manager' at Setup for the first time.
- The Admin account cannot be deleted.
- Once the user account function is activated, you cannot load exams without logging in.
- The password must be 8 to 16 characters and composed of at least three of the following:
 - English alphabet upper case
 - English alphabet lower case
 - Numbers
 - Special characters


■ Logout

Close the Admin account.

3.6.3. Display

In the *Setup* screen, select **Display** tab in the **System** category.

Configure the settings for displaying images.

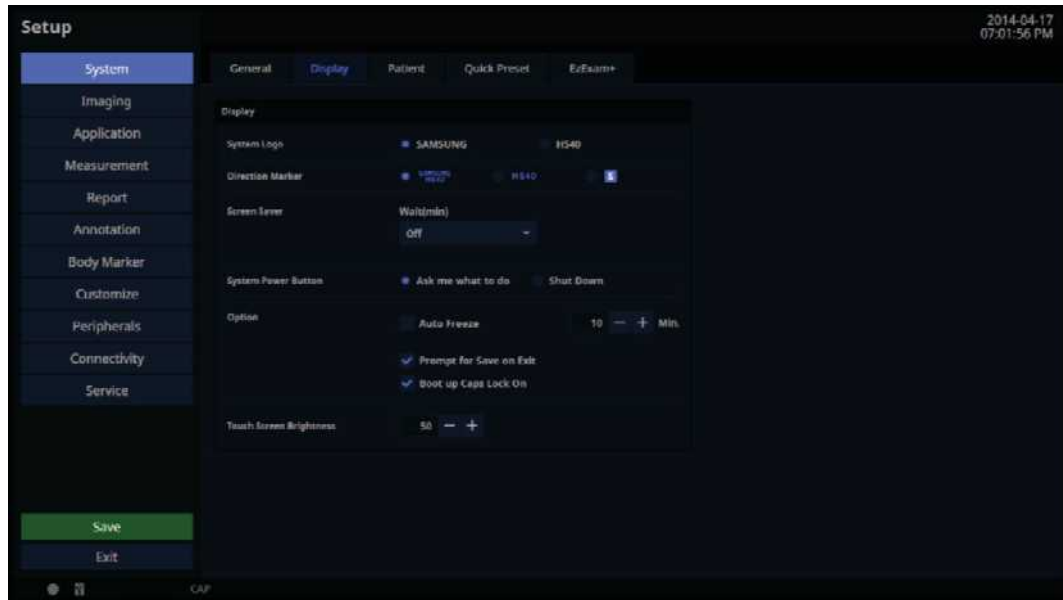

[Figure 3.11 Setup – System – Display]

3.6.3.1. Display

■ System Logo

Choose one of SAMSUNG or HS40.

■ Direction Marker

Set the Direction Marker. Among SAMSUNG HS40, HS40, and S Marker, select a desirable shape.

■ Screen Saver

Select the wait time (in minutes) for the screen saver. Use the trackball to set it off or 5, 10, 30 or 60 minutes.

■ System Power Button

- Ask me what to do: Set a pop-up to appear requesting confirmation before shutting down the system.
- Shut Down: The power will turn off.

■ Option


- Auto Freeze: Automatically switch to freeze state. Set the freeze time between 0 and 60 minutes.
- Prompt for Save on Exit: Use the checkbox to select whether to save or not.
 - Check On: Set a message to recheck whether to save the changes when closing the setup.
 - Check Off: Set it to automatically save changes when closing the setup.
- Boot up Caps Lock On: When the checkbox is selected, Caps Lock is turned on after completing the system booting.

■ Touch Screen Brightness

- By using the trackball, adjust brightness of the touch screen between 0 and 100 in the units of 10.
- Adjust it by pressing – and + buttons.

3.6.4. Patient

In the *Setup* screen, select the **Patient** tab in the **System** category.

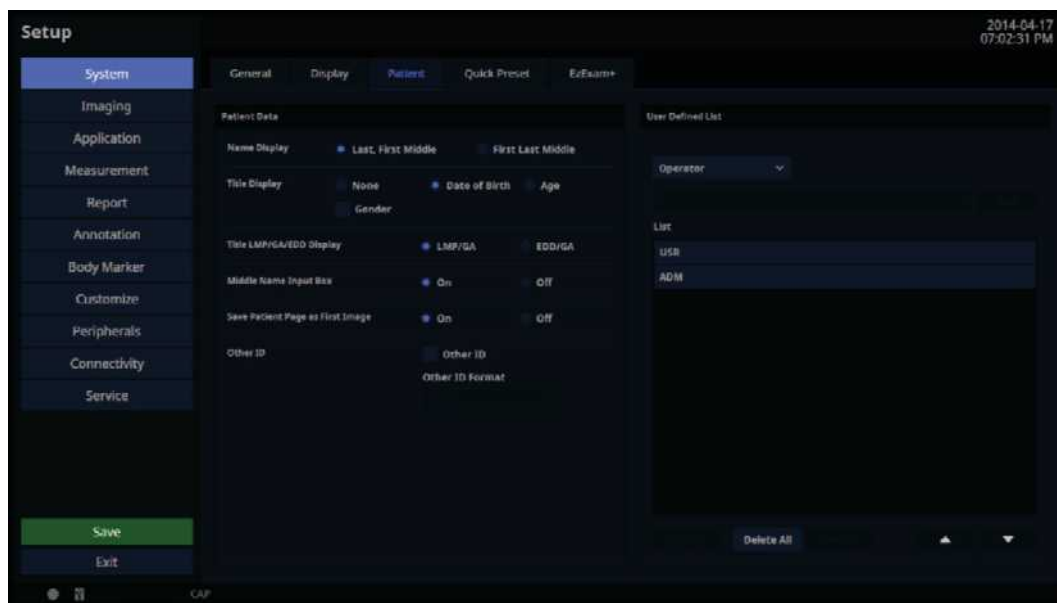

[Figure 3.12 Setup – System – Patient]

3.6.4.1. Patient Data

■ Name Display

- Last, First Middle: Display the name of the patient in the order last name, first name, then middle name.
- First Last Middle: Display the name of the patient in the order first name, last name, then middle name.

■ Title Display

Show or hide patient information in the Title area of the screen.

- None: Patient information is not displayed.
- Date of Birth: Displays the patient's date of birth.
- Age: Displays the patient's age.
- Gender: Select this checkbox to display the patient's gender. Note that the patient's gender can only be displayed if their date of birth or age is also displayed.

■ Title LMP/GA/EDD Display

- LMP/GA: The last menstruation date and estimated gestation weeks are shown on the screen.
- EDD/GA: The expected delivery date and estimated gestation weeks are shown on the screen.

■ Middle Name Input Box

When On is checked, a text input field will be displayed enabling you to enter a middle name when you create a Patient record.

■ Save Patient Page as First Image

If On is checked, Patient information is saved as the first image.

■ Other ID

When a Patient record is created, a GUI for text input is displayed for you to enter the Other ID.

- Other ID Format: Any, Numbers, Letters and Numbers, and NHS Numbers are available. Except Any, inputs in each format type can only be entered as text.


3.6.4.2. User Defined List

You may enter information related to studies beforehand, so that you can assign the information easily when entering patient information. Use the **Change**, **Delete All**, **Delete**, **Up**, and **Down** buttons to add, edit, or delete information; you may create a list of up to 20 for each item.

- Operator: You can save the name of the operator who scanned the patient.
- Diag. Physician: The name of the physician who diagnosed the patient can be saved.
- Ref. Physician: You can save the name of the referring physician.
- Indication: You can save information about the patient's medical history.
- Description: You can save up to 20 diagnostic memos per application.

3.6.5. Quick Preset

In the *Setup* screen, select **Quick Preset** tab in the **System** category.

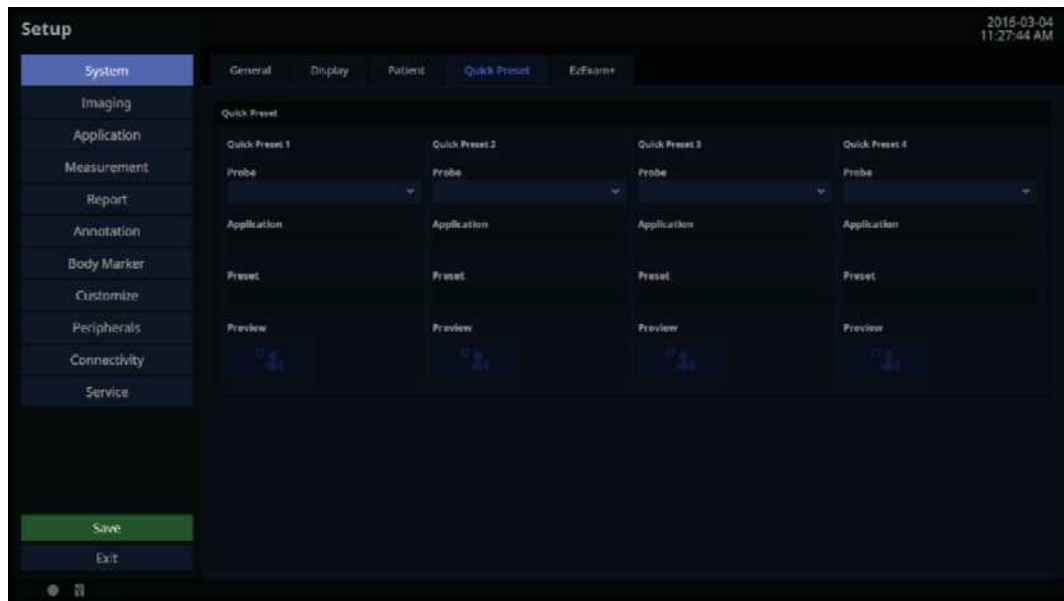

[Figure 3.13 Setup – System – Quick Preset]

3.6.5.1. Quick Preset


After selecting the Probe, Application, and Preset connected to the port, save them to Quick Preset. Up to 4 sets can be saved. By using Preview, you can preview the saved preset.

- In the diagnosis mode, the saved Probe and Preset are shown as a button on the touch screen.

3.6.6. EzExam+

In the *Setup* screen, select the **EzExam+** tab in the **System** category.

EzExam+ is a macro function that saves your frequently used exams as a protocol and runs them together. This feature streamlines the diagnosis process.

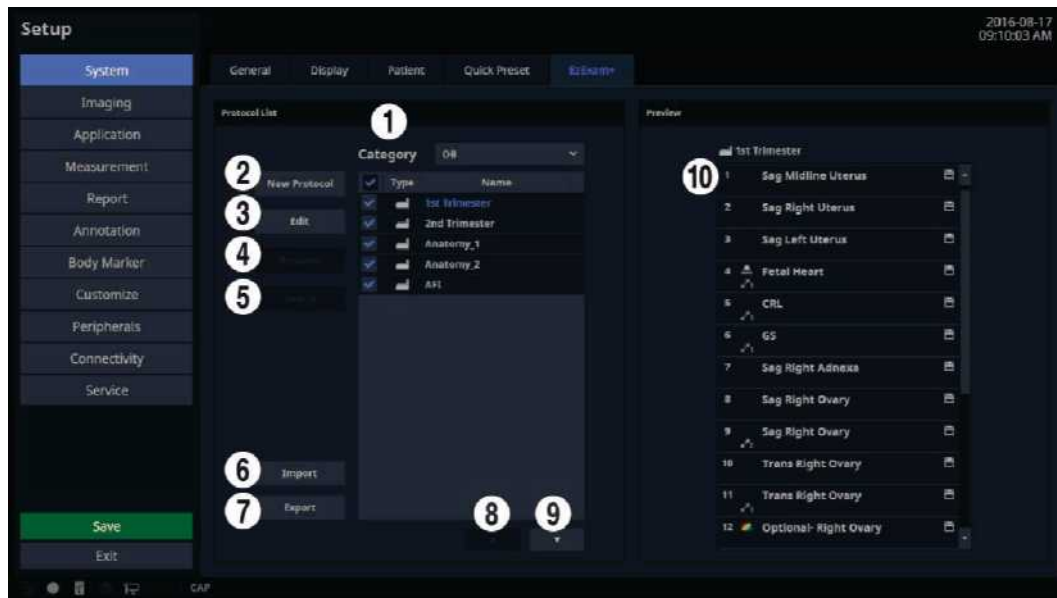

[Figure 3.14 Setup – System – EzExam+]

3.6.6.1. Protocol List


Protocol List: Provides a protocol list for the application. EzExam+ in the Default List cannot be deleted or edited and the addition of new EzExam+ is not allowed.

- ① Category: A list of available applications is shown. If previously configured EzExams are available, they will be shown in the Preset Lists when an application is selected. Selection of ABD, CARD, GYN, MSK, OB, PED, SMP, TCD, URO, or VAS is available.
- ② New Protocol: When *New Protocol* window appears, enter a name and press **OK**. Tap **Cancel** to cancel.
- ③ Edit: You can select any protocol in the protocol list.
- ④ Rename: You can edit the name of any protocol in the protocol list.
- ⑤ Delete: Delete a protocol selected from the protocol list.
- ⑥ Import: Import the protocol data.
- ⑦ Export: Exports the protocol selected from the protocol list.
- ⑧ Move Up Button: Moves the protocol selected from the protocol list up one row.
- ⑨ Move Down Button: Move the protocol selected from the protocol list down one row.

3.6.6.2. Preview

⑩ Task List: Provide a task list which belongs to the protocol selected from the protocol list.


■ EzExam+ Creator

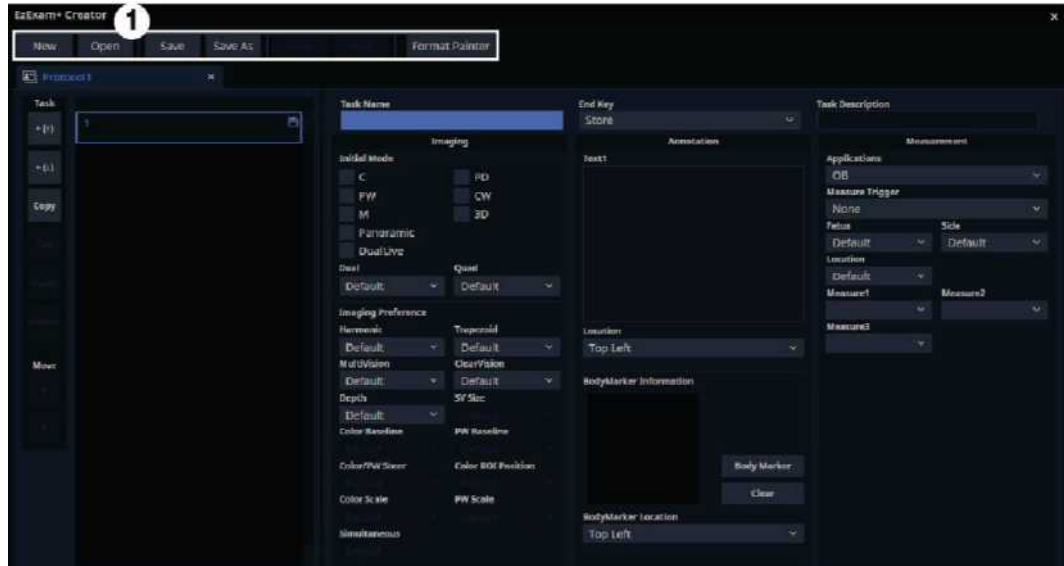

[Figure 3.15 Setup – System – EzExam+ Creator]

① Options in Function Window

- New: Create a new protocol.
- Open: Load an existing protocol.
- Save: Save the current protocol. It is activated at any time even when there is no change of data.
- Save As: Save the current protocol with a different name.
- Undo/Redo: Undo the last performed function, or restores the last undone function. (Up to 50 Undo/Redo actions can be done; this function will be inactive if it cannot be performed.)
- Format Painter: Applies the format settings from one protocol to another.

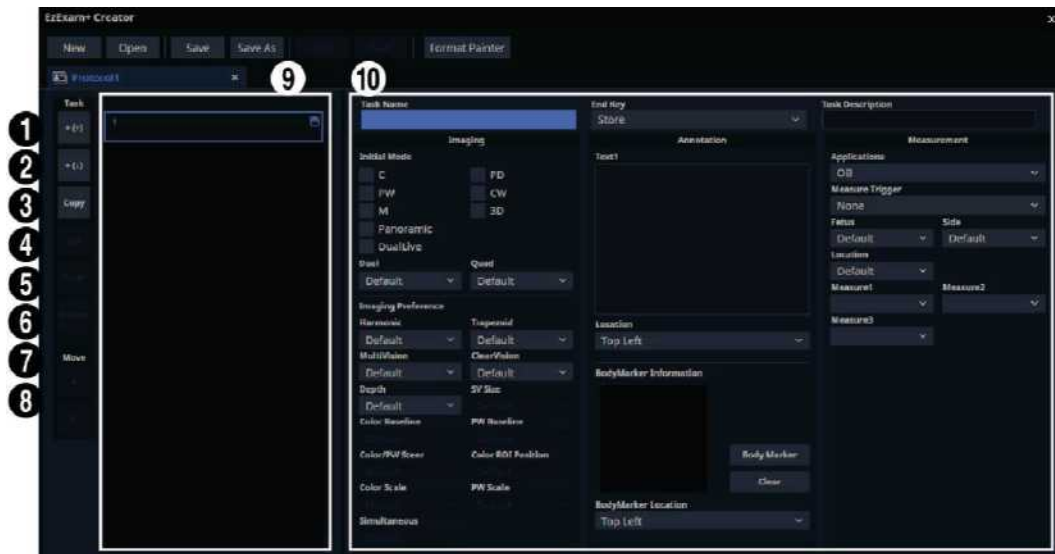

[Figure 3.16 Setup – System – EzExam+ Creator]

- ① Add Task(↑): Create a new task on the row above the task selected from the task list.
- ② Add Task(↓): Create a new task on the row below the task selected from the task list.
- ③ Copy: Copies a task selected from the task list.
- ④ Cut: Cuts a task selected from the task list.
- ⑤ Paste: Pastes a task below the task selected from the task list.
- ⑥ Delete: Delete a task selected from the task list.
- ⑦ Move Up: Move a task selected from the task list up one row.
- ⑧ Move Down: Move a task selected from the task list down one row.
- ⑨ Task List: Provide the task list which belongs to the protocol.
- ⑩ Task Parameter: Provide a parameter which belongs to the protocol selected from the protocol list.


3.6.7. Imaging

In the *Setup* screen, select the **Imaging** tab. Or tap **Imaging** on the touch screen. Configure the settings for displaying images.

Common

Common settings apply to all applications.

You can select multiple items. Use the trackball and **Set** button to select items and set the checkbox.

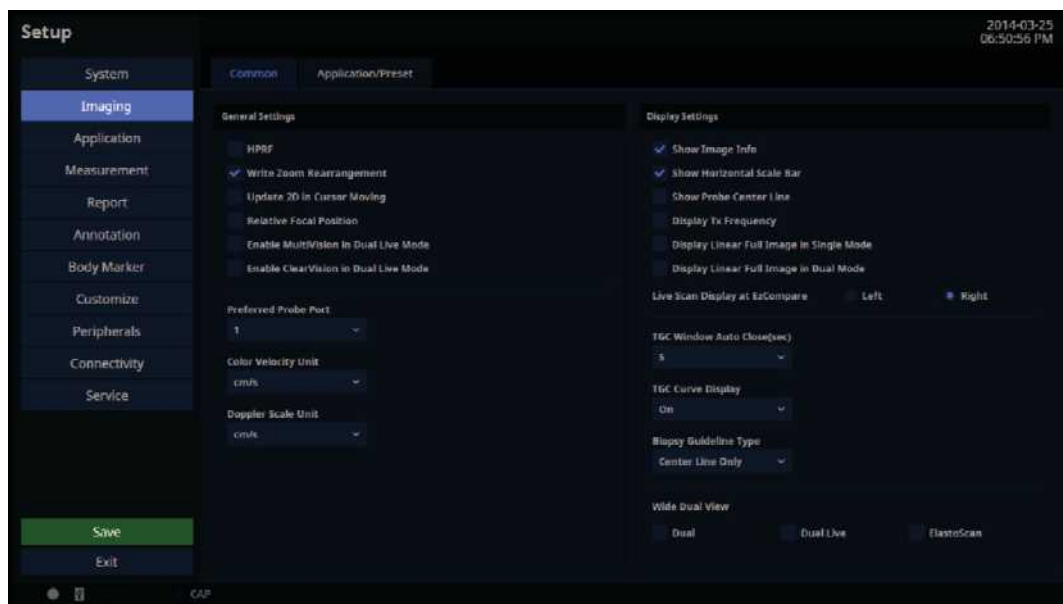

[Figure 3.17 Setup – Imaging – Common]

3.6.7.1. General Setting

■ HPRF

In PW Spectral Doppler Mode, this detects blood flow velocity that exceeds the maximum speed at the depth you want to obtain the Sample Volume from.

■ Write Zoom Rearrangement

Align the Write Zoom images with the center.

- When the option is disabled, Write Zoom images will be displayed in the same position as images on Fov.
- Once you've changed the settings, you will return to 2D Mode.

■ Update 2D in Cursor Moving

Enable the Update 2D function. (In PW Only Mode, when the SV moves, the Trace will stop and the mode will change to 2D Live; when the SV stops moving, the Trace will resume.)

■ Relative Focal Position

When modifying the 2D Depth value, determine whether or not to maintain a similar pre-modification ratio of depth to focus position.

■ Enable MultiVision in DualLive Mode

In Dual Live Mode, irrespective of the Right Image settings, determine whether or not MultiVision should apply to the Left Image. (In B/BC Dual Live Mode, regardless of the settings, MultiVision will apply to both sides equally at all times.)

■ Enable ClearVision in DualLive Mode

In Dual Live Mode, irrespective of the Right Image settings, determine whether or not ClearVision should apply to the Left Image. (In B/BC Dual Live Mode, regardless of the settings, ClearVision will apply to both sides equally at all times.)

■ Preferred Probe Port

Select the Probe Port that takes the highest priority when the system starts or when you select a probe.

■ Color Velocity Unit

Select the units of velocity in Color Mode.

■ Doppler Scale Unit

Select the units of measurement for the axis scale in Spectral Doppler Mode.

3.6.7.2. Display Setting**■ Show Image Info**

Show or hide the image information. If the image information intrudes too much on the screen, When it is turned off, it hides the image information.

■ Show Horizontal Scale Bar

Show or hide the Horizontal Scale Bar in the Scan UI.

■ Show Probe Center Line

Select whether or not to display the Center Line of the probe.

■ Display Tx Frequency

Specify how to display the Tx Frequency for each probe. If checked, the current state will be indicated in MHz; if unchecked, the state will be indicated as PEN, GEN, or RES.

■ Display Linear Full Image in Single Mode

Show the full image of the Linear (including virtual convex) probe in Single Mode. When the sides of an ultrasound image are not visible at a low depth, use this function to view the entire image.

- **Display Linear Full Image in Dual Mode**

Show the full image of the Linear (including virtual convex) probe in Dual (or Dual Live) Mode. When the sides of an ultrasound image are not visible at a low depth, use this function to view the entire image.

- **Live Scan Display at EzCompare**

When EzCompare is executed, you can locate the live images to the left or right.

- **TGC window Auto Close (sec)**

Specify how much time must elapse before the TGC Control Window on the touch screen automatically closes because of a lack of user input. It can be set at 5, 10, 15, or 20 minutes. If Off is checked, it does not automatically close: you must press **Close** button.

- **TGC Curve Display**

Specify how long the TGC Curve is displayed for in Scan UI (On: Always displayed, Off: Never displayed, Auto: Displayed for a specific length of time and then disappears).

- **Biopsy Guideline Type**

Select the type of Biopsy Guide Line displayed. Select one from Center Line Only or Both.


- **Wide Dual View**

Wide screen is provided. Select one from Dual, Dual Live, or ElastoScan.

3.6.8. Application/Preset

These settings specifically apply to the selected application.

You can select multiple items. Use the trackball and the **Set** button to select and check or uncheck items.

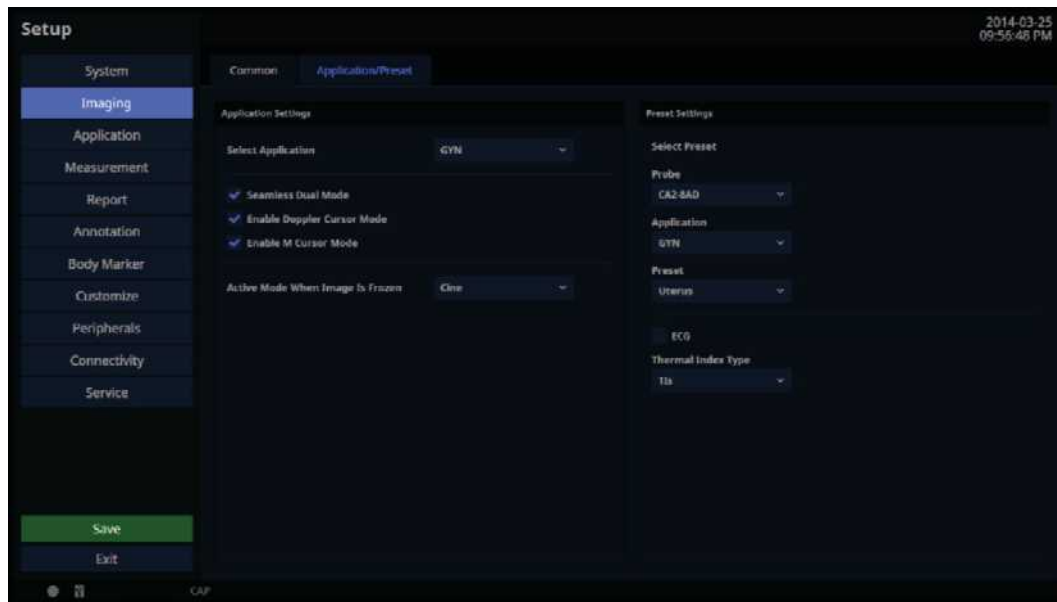

[Figure 3.18 Setup – Imaging – Application/Preset]

3.6.8.1. Application Setting

■ Select Application

Set up the measurement application.

■ Seamless Dual Mode

Select whether or not to use Seamless Dual Mode in Dual Mode.

When checked, no space will be shown between the left and right images in the Dual Mode, while when unchecked, a space will be shown between the left and right images.

■ Enable Doppler Cursor Mode

Select whether or not to enter Cursor Mode before Doppler Mode.

■ Enable M Cursor Mode

Select whether or not to enter Cursor Mode before M Mode.

- **Activated Mode When Image is Frozen**

Select which mode will activate upon freezing an image.

One of the following modes may be selected: Cine, Measurement, Annotation, or Body Marker.

3.6.8.2. Preset Setting

- **Select Preset**

Check the Probe, Application, and Preset.

- **ECG**

Enable or disable ECG for each Preset.


- **Thermal Index Type**

Set the TIs shown on the screen from among TIs (Soft tissue thermal Index), TIb (Bone thermal index), TIc (Cranial bone thermal index). You can specify indices by Preset.

3.6.9. Application

In the *Setup* screen, select the **Application** tab. Or tap **Application** on the touch screen.

General

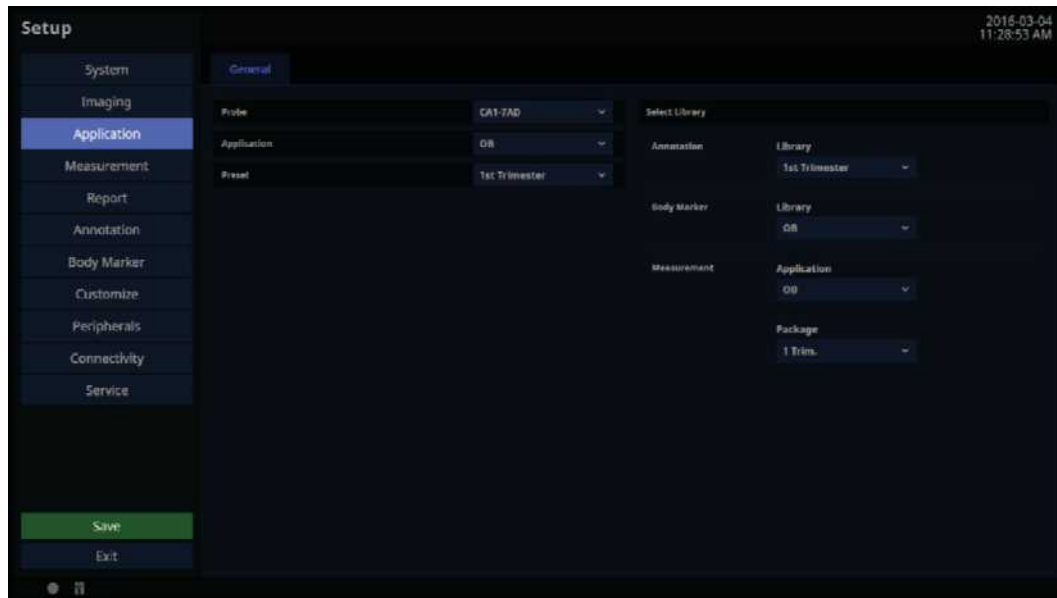

[Figure 3.19 Setup – Application – General]

3.6.9.1. Probe

Select a probe.

3.6.9.2. Application

Select an application.

3.6.9.3. Preset

Select the Preset that is supported by the selected application.

3.6.9.4. Select Library

■ Annotation

Set up a text library.

■ Body Marker

Set up a Body Marker library.

■ Measurement

- Application: Set up the measurement application.
- Package: Set up a package for the measurement application.

3.6.10. Measurement Settings


Specify various setup options for measurements. The setup can be modified depending on your specific needs or preferences.

1. Select the **Measurement** tab. When the *Measurement* screen appears, select the tab that contains the items you wish to configure.
2. Specify the settings for each item.
3. Press the **Save** button to save the settings and finish. You can click **Exit** on the monitor screen or tap **Exit** on the touch screen to exit the *Setup* screen and switch to Scan Mode.

General

In the *Setup* screen, select the **General** tab in the **Measurement** category.

You can specify basic measurement options.

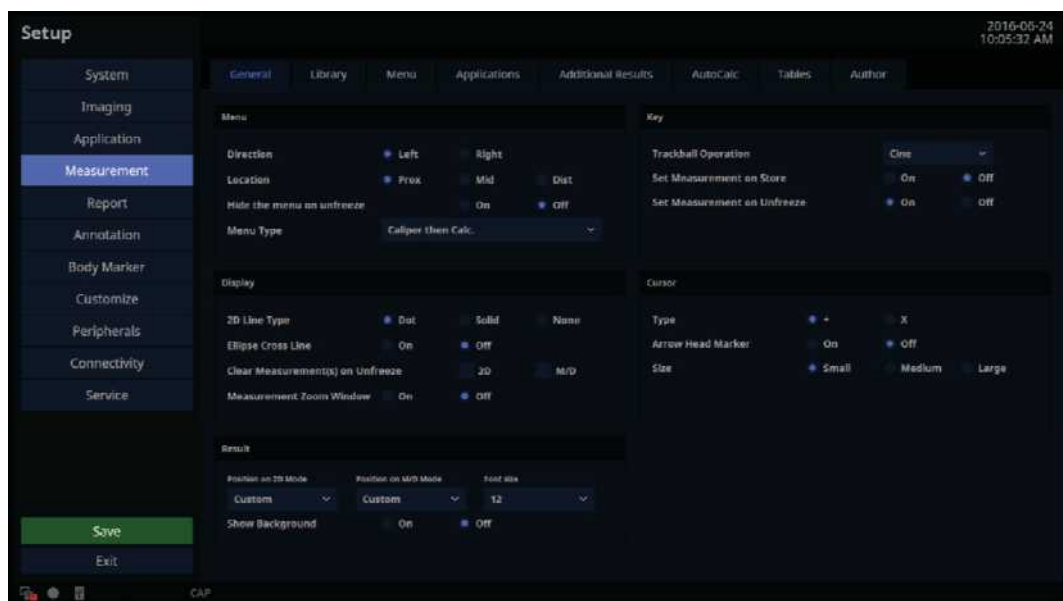

[Figure 3.20 Setup – Measurement – General]

3.6.10.1. Menu

■ Direction

Select the Direction Type to be applied to the measurement target in the initial system status. The options are Left and Right.

■ Location

Select the Location Type to be applied to the measurement target in the initial system status. The options are Prox, Mid, and Dist.

■ Hide the menu on Unfreeze

Hide or show the Measurement menu on the screen after taking measurements. Show the Scan Mode (On) or hide the Measurement menu (Off).

■ Menu Type

- Caliper then Calc: Each press of the **Calculator** button changes the mode in the order of Caliper and Calc.
- Calc. then Caliper: Each press of the **Calculator** button changes the mode in the order of Calc. and Caliper.
- Caliper Only: Each press of the **Calculator** button changes the mode to Caliper.
- Calc. Only: Each press of the **Calculator** button changes the mode to Calc.

3.6.10.2. Display

■ 2D Line Type

Select the type of line to use for measurement in 2D Mode (Solid: Solid line, Dot: Dotted line, None: Start and end points) to use for measurement in 2D Mode.

■ Ellipse Cross Line

Select the type of line for measurements in 2D Mode (Solid: solid line; Dot: dotted line; and None: start point and end point).

■ Clear Measurement(s) on Unfreeze

Show or hide measurement results on the screen when switching to Scan Mode after taking measurements. Select this checkbox to show measurement results in 2D or M/D Mode.

■ Measurement Zoom Window

Generate an enlarged image centered around the marker. You can select On or Off.

3.6.10.3. Result

Select how measurement results are displayed.

■ Position on 2D Mode

Reposition the measurement results when 2D Mode is selected.

- Left-Top: Measurement results are displayed in the top left corner of the screen.
- Left-Bottom: Measurement results are displayed in the bottom left corner of the screen.
- Right-Bottom: Measurement results are displayed in the bottom right corner of the screen.
- Right-Top: Measurement results are displayed in the top right-hand corner of the screen.
- Custom: Measurement results are displayed in a location selected by the user.

■ Position on M/D Mode

Move the measurement results.

- Left-Top: Move the measurement results towards the top left-hand corner of the screen.
- Left-Bottom: Moves the measurement results towards the bottom left corner of the screen.
- Right-Bottom: Moves the measurement results towards the bottom right corner of the screen.
- Right-Top: Moves the measurement results towards the top right corner of the screen.
- Custom: Measurement results are moved to a location selected by the user.

■ Font Size

Select the size of the font used for the measurement results.

■ Show Background

Set the background of the measurement results to black (On) or transparent (Off).

3.6.10.4. Key

■ Trackball Operation

Set the motion of the trackball when using Caliper or Measure.

- Marker: Stand-by and ready to measure; display the basic marker on the measurement screen.
- Cine: Ready to select a Cine frame by using the trackball.

■ Set Measurement on Store

Turn the function on or off that automatically completes measurements when the **Store** key on the control pad is pressed while a measurement is being taken.

■ Set Measurement on Unfreeze

You can enable or disable the function that automatically completes measurements when the image switches to Scan Mode while a measurement is being taken.

3.6.10.5. Cursor

■ Type

Select the shape of the default caliper cursor displayed on the screen. Select between 'Cross' shape (+) and 'X'.

■ Arrow Head Marker


Show or hide the Head Marker when measuring a small area.

■ Size

Select the size of the default caliper cursor displayed on the screen. Select Small, Medium, or Large.

Library

In the *Setup* screen, select the **Library** tab in the **Measurement** category.

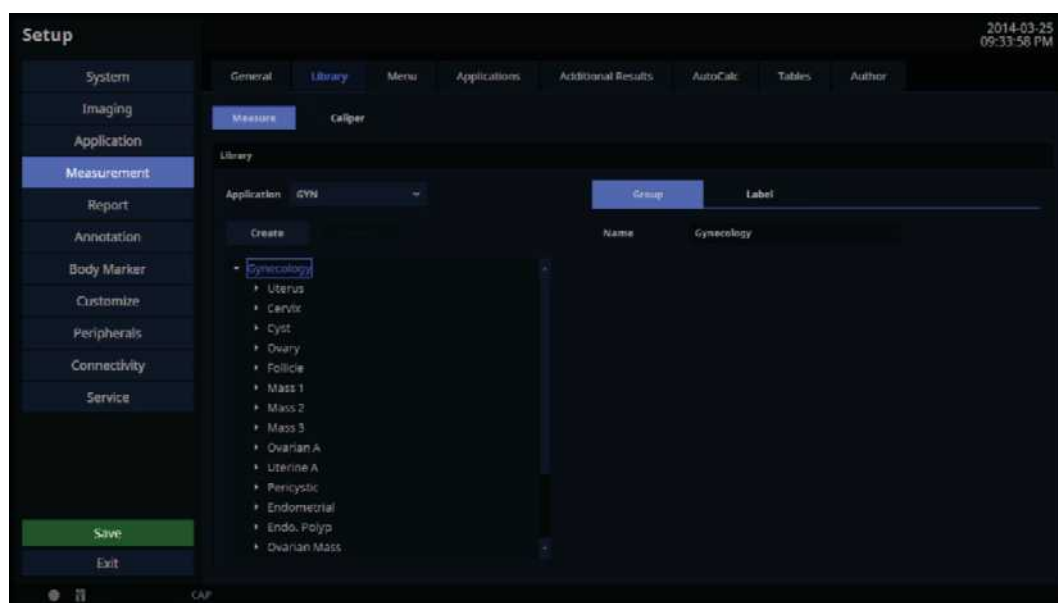

[Figure 3.21 Setup – Measurement – Library]

3.6.10.6. Measure

Library in the Measure category is shown.

■ Application

Select an application.

■ Create

Create a USERGROUP other than default group. A USERLABEL can be created within a created group.



NOTE

'USERLABEL' can be edited.

■ Delete

A newly generated 'LABEL' can be deleted.

3.6.10.7. Caliper

Specify whether additional information will be shown along with the basic measurement values when basic measurements are taken by pressing the control panel's **Caliper** button. If this option is selected, the additional information will be saved as an output along with the measurement results.

Setting 'Application' to General will change the items in 'D Trace'. Setting 'Application' to Cardiac will change the items in 'D Trace' and 'D Velocity'.



NOTE


'Cardiac' setting is activated when the probe setting is Cardiac.

Select the default tool that functions in the measurement cursor state for each Image mode.

- 2D Mode: Distance, Trace, Trace Length, Ellipse, Open Spline, Closed Spline, Distance Stenosis, Trace Length Stenosis, Open Spline Stenosis, Ellipse Stenosis, Trace Stenosis, Closed Spline Stenosis, Ellipse Trace Stenosis, 2 Lines Angle, 3 Point Angle, 1 Dist Volume, 2 Dist Volume, 3 Dist Volume, Ellipse Volume, Ellipse + Dist Vol, Disk Volume
- D Mode: Velocity, Velocity (Cardiac), Accel, Time(D), HR(D), RI, Auto Trace, Limited Trace, Manual Trace, Auto Trace (Cardiac), Limited Trace (Cardiac), Manual Trace (Cardiac), Dist Volume Flow, Trace Length Volume Flow, Open Spline Volume Flow, Ellipse Volume Flow, Trace Volume Flow, Closed Spline Volume Flow, S/D Ratio, D/S Ratio, Velocity(F), Velocity(F) (Cardiac), Auto Trace(F), Limited Trace(F), Manual Trace(F), Auto Trace(F) (Cardiac), Limited Trace(F) (Cardiac), Manual Trace(F) (Cardiac), Dist Volume Flow(F), Trace Length Volume Flow(F), Open Spline Volume Flow(F), Ellipse Volume Flow(F), Trace Volume Flow(F), Closed Spline Volume Flow(F), S/D Ratio(F), D/S Ratio(F)
- M Mode: Distance, Slope, Time(M), HR(M)

Menu

In the *Setup* screen, select the **Menu** tab in the **Measurement** category.

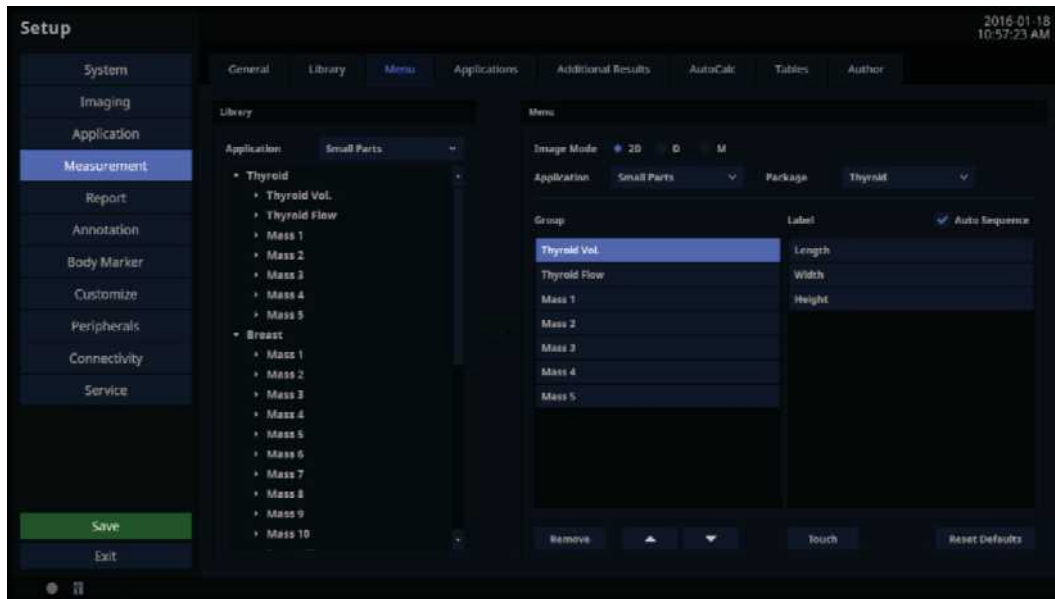

[Figure 3.22 Setup – Measurement – Menu]

3.6.10.8. Library

Measurement items provided for each application are shown in a list.

3.6.10.9. Menu

■ Package

Select the Packages that are supported by each application.

■ Image Mode

View the Menu and the Touch Menu for each Image mode.

■ Group View

Group View lists the groups shown in the Menu. By enabling Group View, you can delete or move a displayed Group.

■ Label View

Label View lists the items shown in the Menu. By enabling Item View, you can delete or move a displayed Item.

■ Auto Sequence

It is activated when the Auto Sequence box is checked. It supports a function to execute all items in a group in sequential order. It also supports the sequential measurement function for measuring AFI and Volume in OB.

■ Up, Down

Adjust the order of the groups or items in Label View.

■ Remove

Delete a group or item selected in Group View or Item View.

■ Touch

A Group or an Item can be placed on the touch screen or shown in the Group View or Item View.


- Click the touch button to display a dialog box that shows the touch button.
- Clear All: Delete all groups and items.
- Add Page: Add a page.
- Remove Page: Delete a page.
- Click the touch button to display the groups and items that may be assigned to the button.
- Deleted groups and items from the Touch will be removed from the Group View or Item View when closing the dialogue box by clicking the **Save** button.

■ Reset Defaults

Press the **Reset Defaults** button and then select **OK** to go to the initial state.

Applications

In the *Setup* screen, select the **Application** tab in the **Measurement** category.

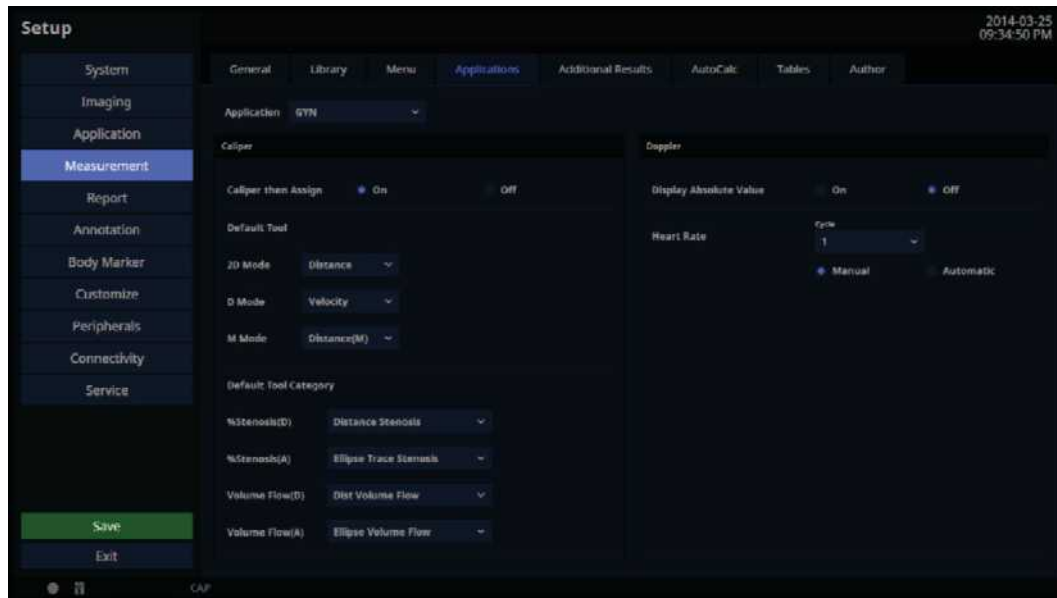

[Figure 3.23 Setup – Measurement – Applications]

3.6.10.10. Caliper

■ Caliper then Assign

After taking a Basic Measurement, the measurement result may be set as a Label. Enable or disable this by choosing On or Off.

■ Default Tool

Select the default tool that functions in the measurement cursor state for each Image mode.

- 2D Mode: Distance, Trace, Trace Length, Ellipse, Open Spline, Closed Spline, %Stenosis(D), %Stenosis(A), 2 Lines Angle, 3 Points Angle, 1 Dist Volume, 2 Dist Volume, 3 Dist Volume, Ellipse Volume, Ellipse+ Dist Vol, Disk Volume
- D Mode: Velocity, Accel, Time(D), HR(D), RI, Limited Trace, Manual Trace, Volume Flow(D), Volume Flow(A), S/D Ratio, D/S Ratio
- M Mode: Distance(M), Slope, Time(M), HR(M)

■ Default Tool Category

Select the default tool for each measurement category.

- %Stenosis(D): Distance Stenosis, Trace Length Stenosis, Open Spline Stenosis
- %Stenosis(A): Ellipse Stenosis, Trace Stenosis, Closed Spline Stenosis, Ellipse Stenosis
- Volume Flow(D): Dist Volume Flow, Trace Length Volume Flow, Open Spline Volume Flow
- Volume Flow(A): Ellipse Volume Flow, Trace Volume Flow, Closed Spline

3.6.10.11. Doppler**■ Display Absolute Value**


The doppler measurement is displayed as an absolute value.

■ Heart Rate

- Cycle: Select the number of heart rate (HR) cycles.
- Manual: Enter the heart rate manually when conducting a measurement.
- Automatic: Heart rate is entered automatically by the ECG while conducting a measurement.

Additional Results

In the *Setup* screen, select the **Additional Results** tab in the **Measurement** category.

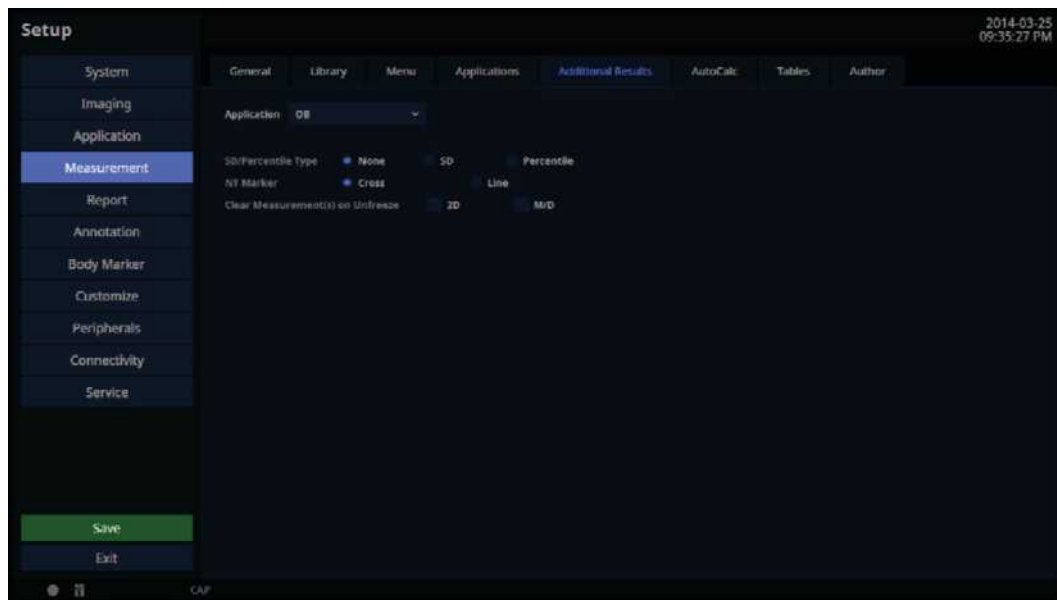

[Figure 3.24 Setup – Measurement – Additional Results]

3.6.10.12. Application

Select an application.

■ Cardiac

- RAP default value: Configure the default value of RAP. You may select 0, 5, 10, 15, 20, or 25mmHg.
- LV Volume Method: Specify how the volume of the left ventricle is measured. Select Teichholz, Gibson, or Cubed. For more information on calculation formulae, please refer to the reference manual.
- LV Study On Straight Line: The measurement direction can be set for each LV measurement. If it is On, the initial measurement direction is fixed. If it is Off, measurement can be conducted in any desirable direction.

■ OB

- SD/Percentile Type: Select None, SD, or Percentile.
- NT Marker: Select the indicator symbol for measuring NT. You can select either Cross or Line type.
- Clear Measurement(s) on Unfreeze: You can set whether to delete the results at Unfreeze. Select either of 2D or M/D or both of them.
 - 2D: Set whether to delete the values shown in the 2D image.
 - M/D: Set whether to delete the values shown in the Trace image.

■ Vascular

ICA/CCA Ratio: Select a measurement item to use to calculate the ICA/CCA ratio. You can select Max, Prox, Mid, or Dist as PS and ED for ICA and CCA, individually.

**NOTE**

You may select this when the application is OB, Vascular, or Cardiac.


AutoCalc.

In the *Setup* screen, select the **AutoCalc.** tab in the **Measurement** category. AutoCalc. is a Spectral Doppler Mode feature that automatically performs specific calculations based on measured values.



NOTE

The specified items will only appear on the screen when the **AutoCalc.** button on the touch screen is tapped in Power Doppler Mode.

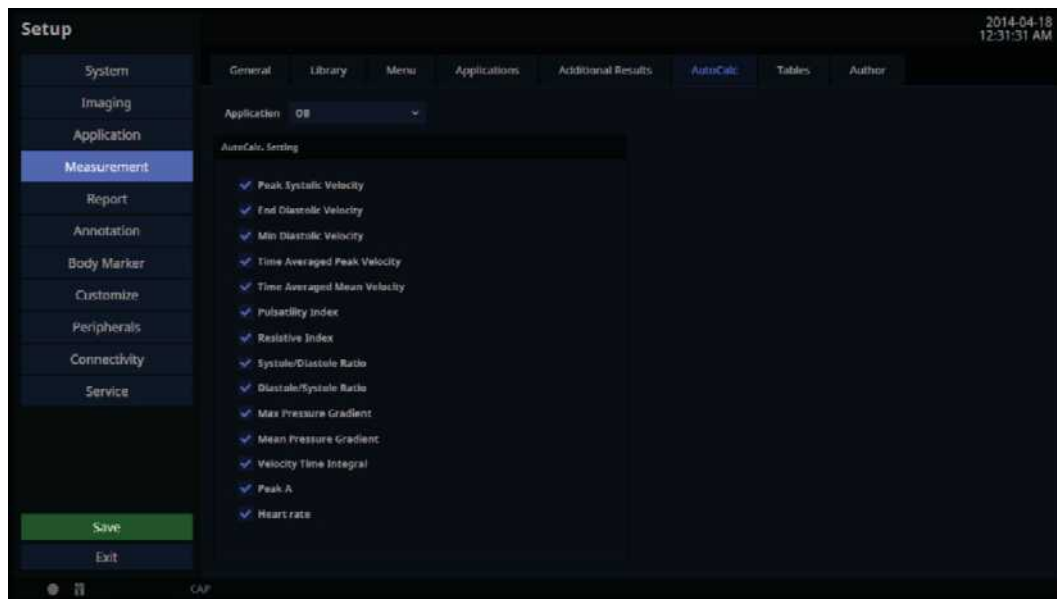

[Figure 3.25 Setup – Measurement – AutoCalc.]

3.6.10.13. AutoCalc. Setting


Add and remove automatic calculations by using the check boxes.

When the Peak Systolic Velocity and End Diastolic Velocity values are 0, not all results for the items will be displayed on the screen. In addition, the resulting value for Time Averaged Mean Velocity is displayed only when Mean Trace is turned on.

Tables

In the *Setup* screen, select the **Tables** tab in the **Measurement** category.

View and edit the Tables and Equations to be used in each measurement item of OB.

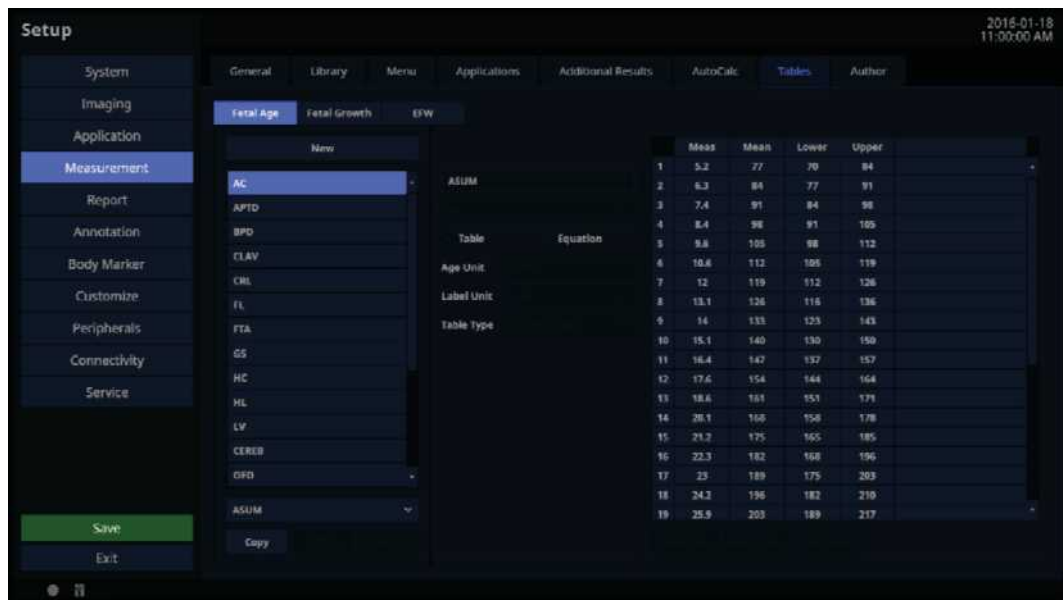

[Figure 3.26 Setup – Measurement – Tables]

■ Select Category

Select a category from Fetal Age, Fetal Growth, and EFW (Estimated Fetal Weight) to view and edit tables and charts for that category.

■ Select Label

Select a Label in the list box; that Label's Author List will be copied into the combo box and the first Author's data will be displayed on screen.

■ Select Author

Select Author in the combo box and the Author's data will be displayed on screen.

■ New

Create new Author data.

■ Copy

Copy the currently selected Author's data to create new Author data.

■ Edit

Modify the currently selected Author data.

■ **Delete**

Delete the currently selected Author data.



NOTE

Only the Author data created by the user may be deleted.

■ **Author Name**

Indicates the currently selected Author's name. The Author's name may be entered when creating new Author data.



NOTE

When creating new Author data, you cannot save the data without entering the Author's name.

■ **Author Data Label**

Indicates the Label that the currently selected Author data belongs to. The Label may be changed when creating new Author data.

■ **Author Data Type**

Represents the currently selected Author data type.



NOTE

Author data type may be changed when creating new Author data by using the **New** button. Note that Table type data cannot be created for EFW.

■ **Age Unit**

Indicates the Fetal Age unit for the currently selected Author data. The age unit may be changed when creating new Author data.

■ **Valid GA Range**

Indicates the valid range of the Gestational Age (GA) for the currently selected Author data. The valid GA range may be changed when creating new Author data.

■ **Label Unit**

Indicates the Label unit for the currently selected Author data. The Label unit may be changed when creating new Author data.

■ **Valid Label Value Range**

Represents the valid range of the Label value for the currently selected Author data. The valid Label value range may be changed when creating new Author data.

■ **Table Type**

Indicates the deviation type of the Fetal Age Table for the currently selected Author data. The deviation type of the Table may be changed when creating new Author data.

■ **SD Type**

Indicates the deviation type of the Fetal Growth Table for the currently selected Author data. The deviation type of the Table may be changed when creating new Author data.

■ **EFW Unit**

Indicates the EFW unit of the currently selected Author data. The EFW unit may be changed when creating new Author data.

■ **Equation**

Indicates the currently selected Author Equation data. The equation may be changed using the Input Parameter list box or the Calculator buttons when creating new Author data.



NOTE

- If the Equation contains a formulaic error, the data cannot be saved.
- If you enter a Label that is not found in the Input Parameter list box, the data cannot be saved.

■ **Table**

Indicates the table for the currently selected Author data. The table may be changed using the **Insert Row**, **Delete Row**, and **Clear Table** buttons when creating new Author data.




NOTE

At least one row of data must be entered into the Table before data can be saved.

Author

In the *Setup* screen, select the **Author** tab in the **Measurement** category.

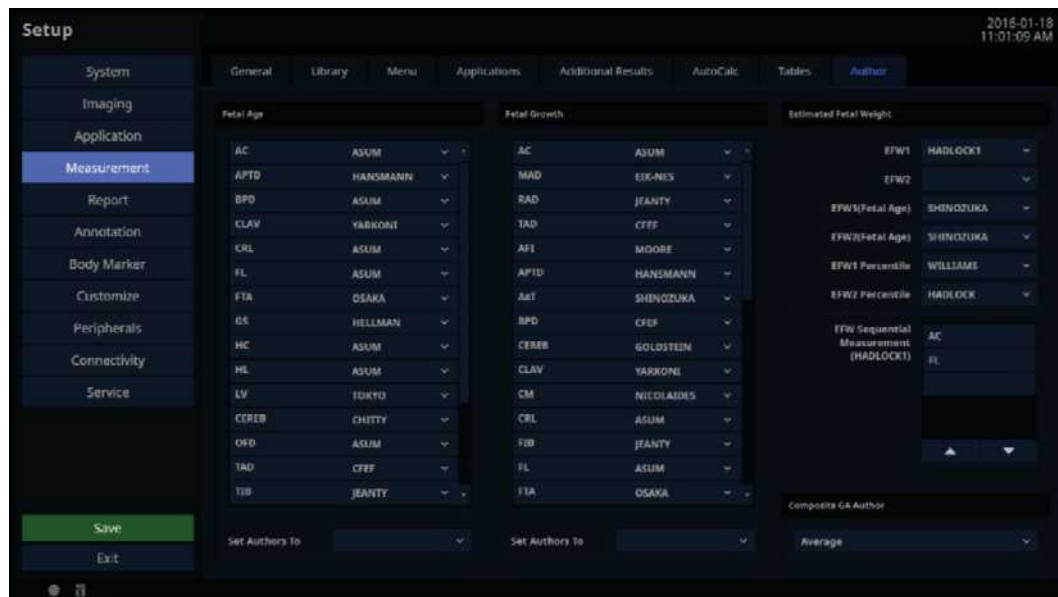

[Figure 3.27 Setup – Measurement – Author]

3.6.10.14. Fetal Age

Specify the Fetal Age Author for each Label.

3.6.10.15. Fetal Growth

Specify the Fetal Growth Author for each Label.

3.6.10.16. Estimated Fetal Weight

Specify the EFW or EFW percentile Author.

3.6.10.17. Composite GA Author


Specify the Author to use for Composite GA.

3.6.10.18. Set Authors To

This enables the user to set all applicable measurement values at a time as selected in the applicable list box.

3.6.11. Report

In the *Setup* screen, select the **Report** tab. Or tap **Report** on the touch screen. Here you can set items related to the measurement report.

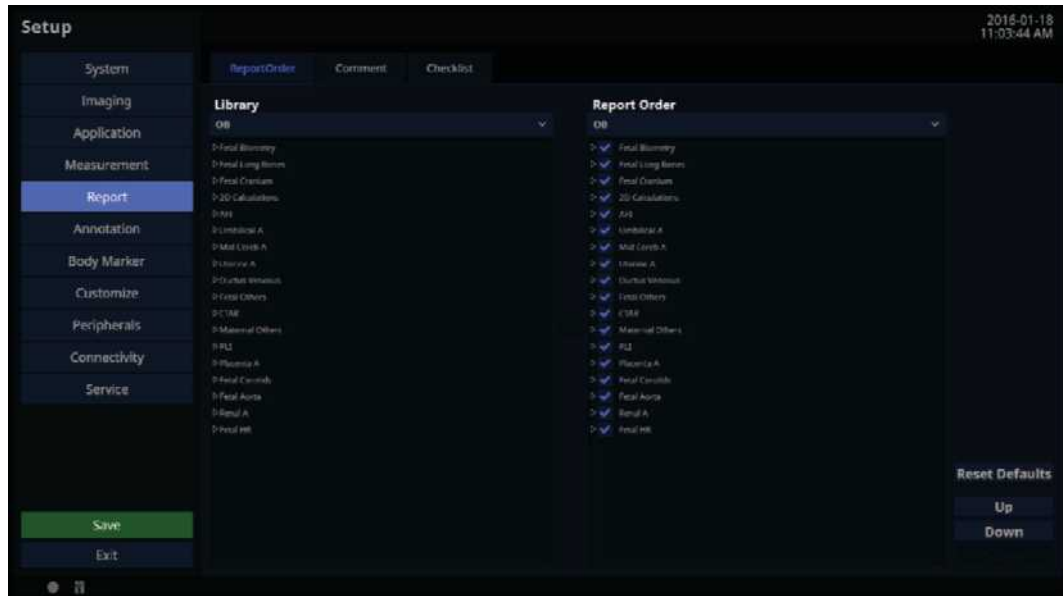

[Figure 3.28 Setup – Report – Report Order]

Report Order

In the *Setup* screen, select the **Report Order** tab in the **Report** category.

3.6.11.1. Library

Application ComboBox: It provides a list of labels for each application.


3.6.11.2. Report Order

You can add items from the library to the Report Order list.

- **Reset Defaults:** Restores the default settings for Report Order.
- **Up/Down:** Change the order (up/down) of the selected items in Report Order.
- **Delete:** Removes the items from the library when they've been moved by the user. (Original items in the application cannot be deleted.)

Comment

In the *Setup* screen, select the **Comment** tab in the **Report** category.

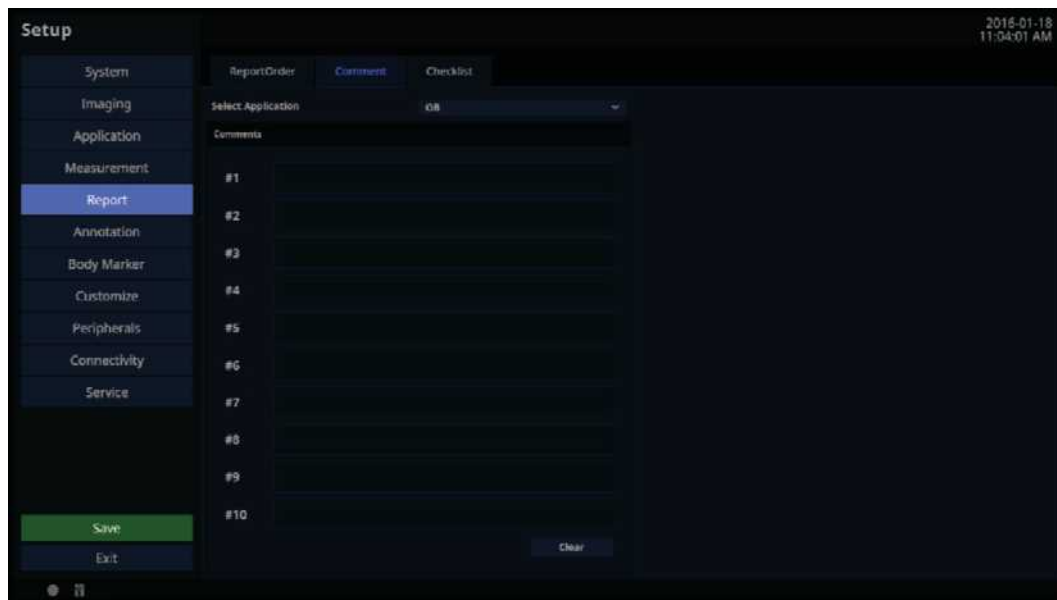

[Figure 3.29 Setup – Report – Comments]

3.6.11.3. Select Application

Display all diagnostic measurement information and select the measurement information to show in Report.

3.6.11.4. Comments


The user can enter comments manually.

■ Clear

Delete saved comments. When executing Unfreeze, any annotation is deleted.

Checklist

In the *Setup* screen, select the **Checklist** tab in the **Report** category.

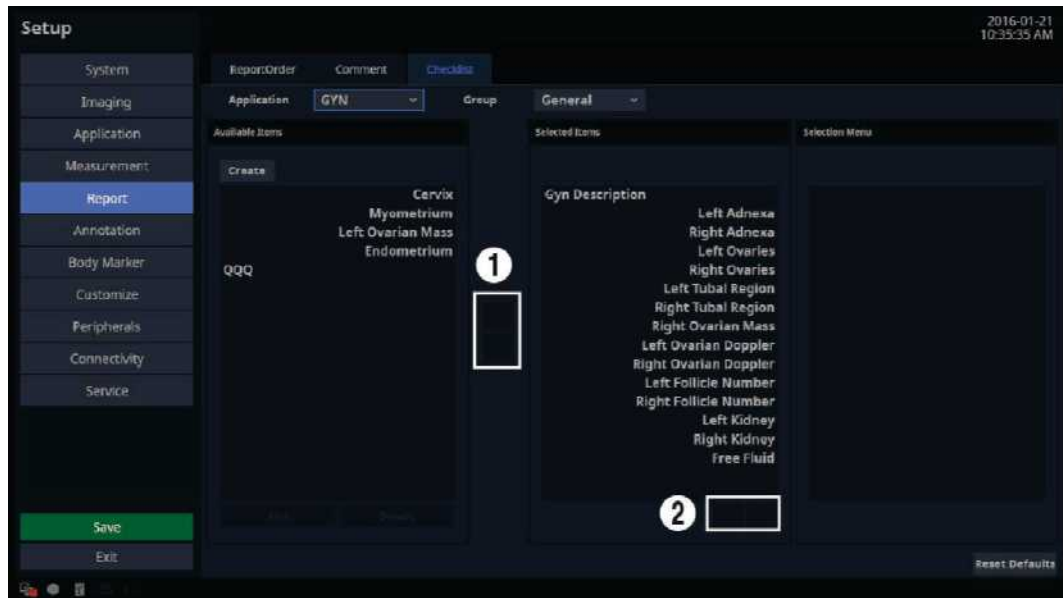

[Figure 3.30 Setup – Report – Checklist]

3.6.11.5. Application

Select an available application. Preset items exist for this application, but for other applications, only user-added items are available.

3.6.11.6. Create

Create a user item. Enter a name and category, then tap the **OK** button to create, or tap the **Cancel** button to reset all values to the defaults.

■ Available Items

This is a category or item list that can be added to the Anatomy page.

■ Selected Items

This is a category or item list that has been added to the Anatomy page.

■ Selection Menu

This is a list of the lower-tier items belonging to an item you have selected that has been added to the Anatomy page.


- Edit: Items added by the user can be edited.
- Delete: Items added by the user can be deleted.
- On the Setup – Report – Checklist screen, users can tap the ① buttons to add or remove a selected item.
- On the Setup – Report – Checklist screen, users can tap the ② buttons to change the order of a selected item.

3.6.12. Annotation

In the *Setup* screen, select **Annotation**. Or tap **Annotation** on the touch screen. Set up options for entering an opinion or a diagnosis.

Library

In the *Setup* screen, select the **Library** tab in the **Annotation** category. You can create, edit, or delete an Annotation library.

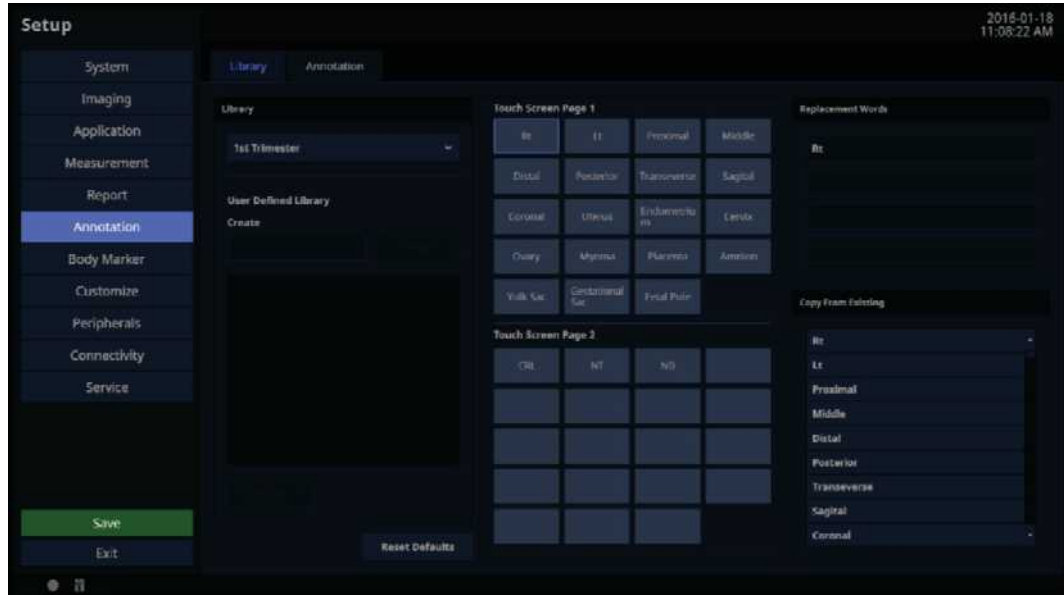

[Figure 3.31 Setup – Annotation – Library]

3.6.12.1. Library

Select an application type.

3.6.12.2. User Defined Library

The user can enter or delete text.

- **Create**

Create text.

- **Delete**

Delete text.

- **Reset Defaults**

Revert to default settings.

3.6.12.3. Touch Screen Page1

Specify the items that will be displayed on the first page of the touch screen.

3.6.12.4. Touch Screen Page2

Specify the items that will be displayed on the second page of the touch screen.

3.6.12.5. Replacement Words


Select and edit the text you wish to modify and then save it by tapping the **Save** button. Up to four different preset text entries can be added for one text button.

3.6.12.6. Copy From Existing

Select and set up items provided by the system.

Annotation

In the *Setup* screen, select the **Annotation** tab in the **Annotation** category. Select whether or not to discard annotations from the screen when in Scan Mode or when the probe or application is changed.

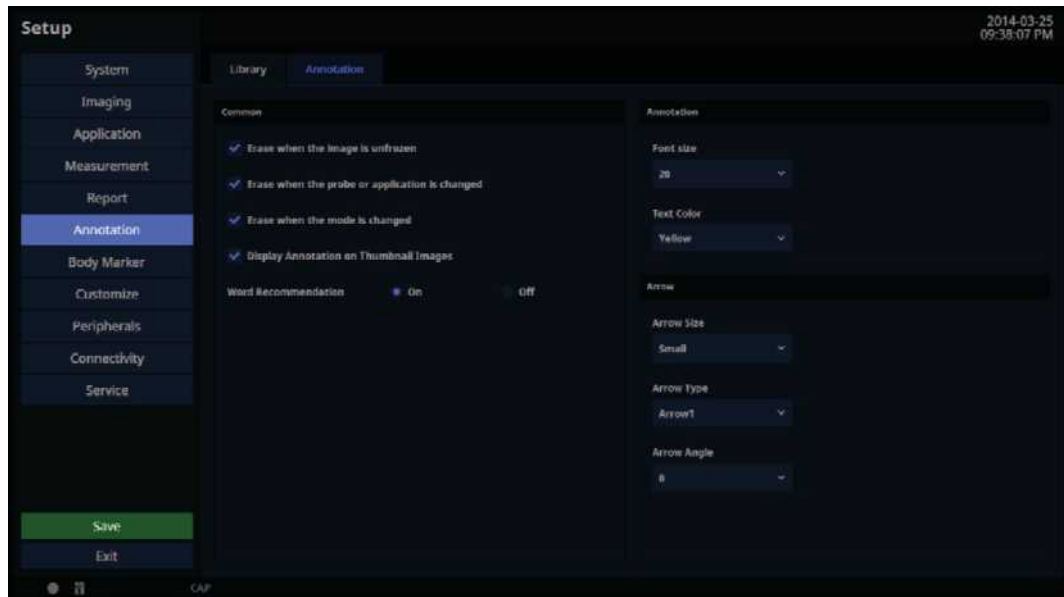

[Figure 3.32 Setup – Annotation – Annotation]

3.6.12.7. Common

- **Erase When the Image is Unfrozen**

When executing Unfreeze, the annotation is deleted.

- **Erase When the Probe or Application is Changed**

Select whether or not to erase annotations when the probe or application is changed.

- **Erase When the Mode is Changed**

Select whether or not to erase annotations when the diagnosis mode is changed.

- **Display Annotation on Thumbnail Images**

Select whether or not to display annotations on thumbnail images.

- **Word Recommendation**

Words that match the entered characters will appear at the top of the OSK. You can turn this option On or Off.

3.6.12.8. Annotation

- **Font Size**

Select the font size to use.

- **Text Color**

Select the font color to use.

3.6.12.9. Arrow

- **Arrow Size**

Select the size of the arrow.

- **Arrow Type**

Select the shape of the arrow.

- **Arrow angle**

Select the angle of the arrow.

3.6.13. Body Marker


In the *Setup* screen, select the **Body Marker** tab. Or tap **Body Marker** on the touch screen.

Library

In the *Setup* screen, select the **Library** tab in the **Body Marker** category.

You can create, edit, or delete a library in the Body Marker category.

1. On Touch Screen Page 1 or Touch Screen Page 2, use the trackball to select the location you want; the touch button will be selected.
2. In Copy From Existing, select the Body Marker you want; the new Body Marker will be created at the location marked in blue.
3. On Touch Screen Page 1 or Touch Screen Page 2, use the trackball to select a Body Marker to display it in blue; tap **Erase** to delete the Body Marker.

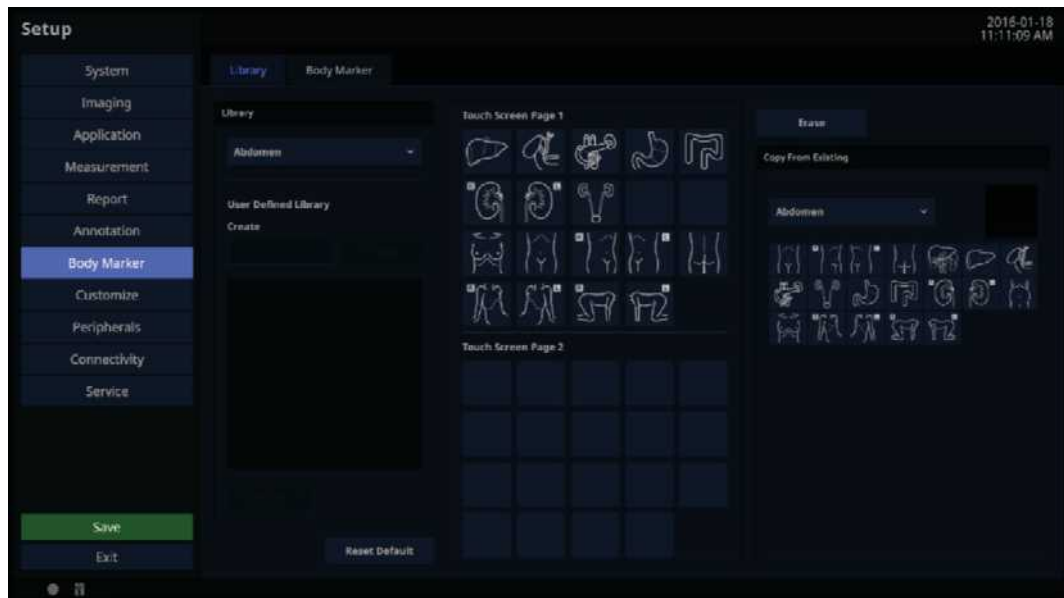

[Figure 3.33 Setup – Body Marker – Library]

3.6.13.1. Library

Select an application.

3.6.13.2. User Defined Library

The user can create or delete a Library.

- **Create**

Create a new Library.

- **Delete**

Delete a Body Marker.

- **Reset Defaluts**

Revert to default settings.

3.6.13.3. Touch Screen Page1

Specify the items that will be displayed on the first page of the touch screen.

3.6.13.4. Touch Screen Page2


Specify the items that will be displayed on the second page of the touch screen.

3.6.13.5. Copy From Existing

Select and set up the Body Marker provided by the system.

Body Marker

In the *Setup* screen, select the **Body Marker** tab in the **Body Marker** category.

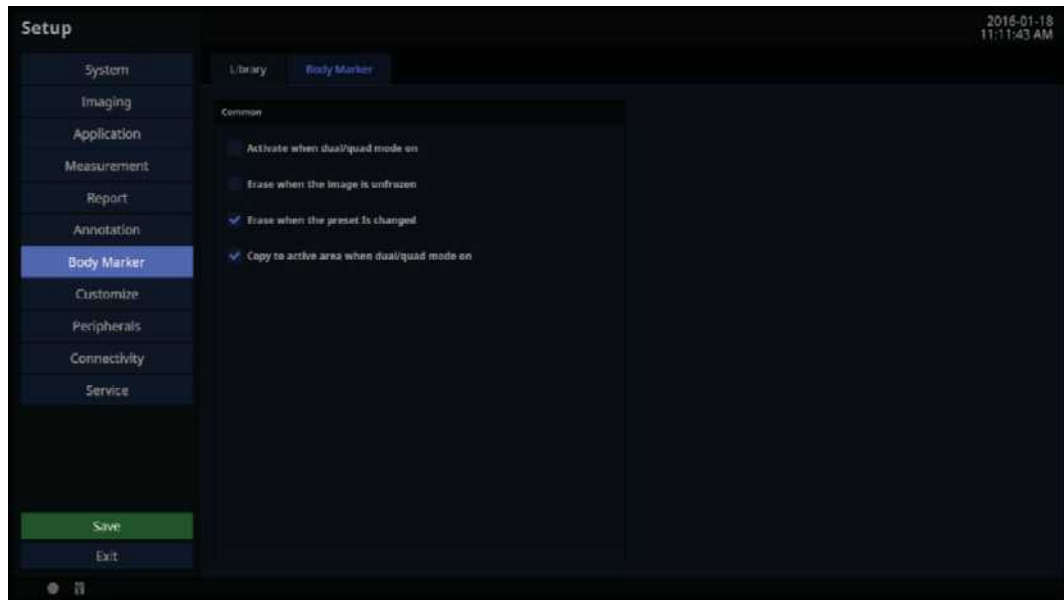

[Figure 3.34 Setup – Body Marker – Body Marker]

3.6.13.6. Common

- **Activate when dual/quad mode on**

Show or hide Body Marker when Dual or Quad Mode is active.

- **Erase when the image is unfrozen**

Choose whether or not pressing the **Freeze** button on the control panel to switch to Scan Mode automatically deletes the Body Marker.

- **Erase when the preset is changed**

Select whether or not to erase the Body Marker when the Preset is changed.


- **Copy to active area when dual/quad mode on**

Select whether or not to copy the Body Marker to the active area when Dual or Quad Mode is activated.

3.6.14. Customize

Buttons

In the *Setup* screen, select the **Buttons** tab in the **Customize** category. You can set the functions of the keys and buttons on the product.

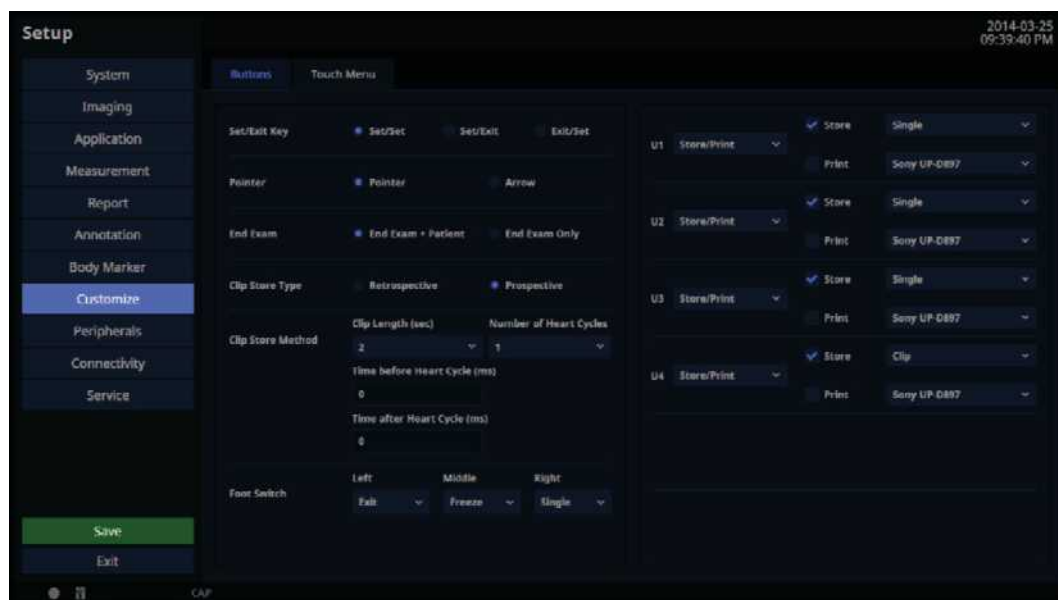

[Figure 3.35 Setup – Customize – Buttons]

3.6.14.1. Set/Exit Key

Select the functions to assign to the buttons on the left and right sides of the trackball on the control panel.

■ Set/Set

Both the left and the right buttons are set to the **Set** function.

■ Set/Exit

The left button is set to **Set** and the right button is set to **Exit**.

■ Exit/Set

The left button is set to **Exit** and the right button is set to **Set**.

3.6.14.2. Pointer

Select Pointer or Arrow.

3.6.14.3. End Exam

- **End Exam + Patient**

Pressing the **End Exam** button on the control panel switches the screen to *Patient Information* screen.

- **End Exam Only**

Pressing the **End Exam** button on the control panel closes the exam and switches the screen to *B mode Scan* screen.

3.6.14.4. Clip Store Type

- **Retrospective**

When saving images, images before pressing the save button are saved.

- **Prospective**

When saving images, images after pressing the save button are saved.

3.6.14.5. Clip Store Method

- **Clip Length (sec)**

Specify the length of the image to save. Select one of 2, 4, 6, 8, 10, 20, 30, 60, 120, 240, and 360 seconds.

- **Number of Heart Cycles**

Specify the number of Heart Cycles to be included in the image.

- **Time before Heart Cycle (ms)**

Specify the time to be included before a Heart Cycle begins from 1 to 10 hours.

- **Time after Heart Cycle (ms)**

Specify the time to be included before a Heart Cycle completes.

3.6.14.6. Foot Switch

Assign functions to the Foot Switch's left, middle, and right pedals. The functions you can assign are as follows:

- Exit, Freeze, U1, U2, U3, U4, Update, Single, and Quad.

3.6.14.7. User Key


Assign functions to the **U1**, **U2**, **U3**, and **U4** buttons on the control panel.

The functions you can assign are as follows:

- Patient, Exit, TGC, Q scan, Harmonic, Single, Quad, Dual Live, Biopsy, Simultaneous, EFW Measure, EFW Result, Arrow, Pointer, Probe Change, TDI, TDW, Store/Print, Text Keyboard
- When Store/Print is set, additional functions for Store (Single, Clip), and Print can be set.

Touch Menu

In the *Setup* screen, select the **Touch Menu** tab in the **Customize** category.

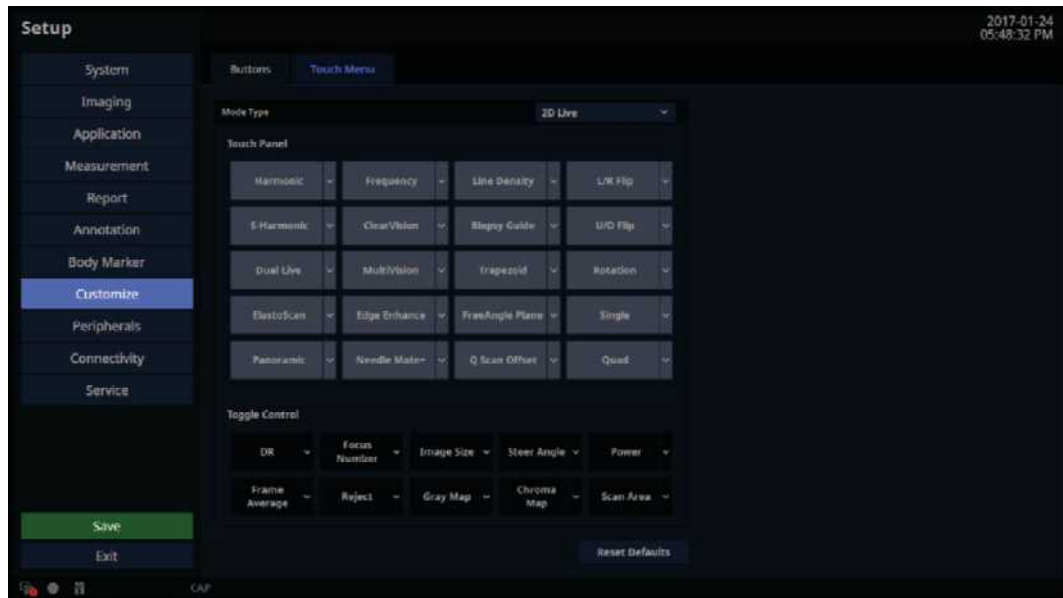

[Figure 3.36 Setup – Customize – Touch Menu]

3.6.14.8. Mode Type

You can configure the following functions: 2D Live, 2D Freeze, C Live, C Freeze, PD Live, PD Freeze, TDI Live, TDI Freeze, S-Flow Live, S-Flow Freeze, PW Live, PW Freeze, TDW Live, TDW Freeze, CW Live, CW Freeze, M Live, M Freeze, ECG Live, ECG Freeze, SEE Stream Live, SEE Stream Freeze, Panoramic Ready, Panoramic Review, ElastoScan Live, ElastoScan Freeze, Strain+Ready, Lithotripsy, and Needle Mate+.

■ Touch Panel

Specify items to be included on the touch screen and their positions.

■ Toggle Control

Specify the dial-button activated items to be included in the bottom menu on the touch screen and their positions.

■ Reset Defaults


Revert to default settings.

3.6.15. Peripherals

In the *Setup* screen, select the **Peripherals** tab. Or tap **Peripherals** on the touch screen. You can configure keys, buttons, and the peripheral devices connected to the product.

Peripherals

In the *Setup* screen, select the **Peripherals** tab in the **Peripherals** category. You can configure peripheral devices connected to the product.

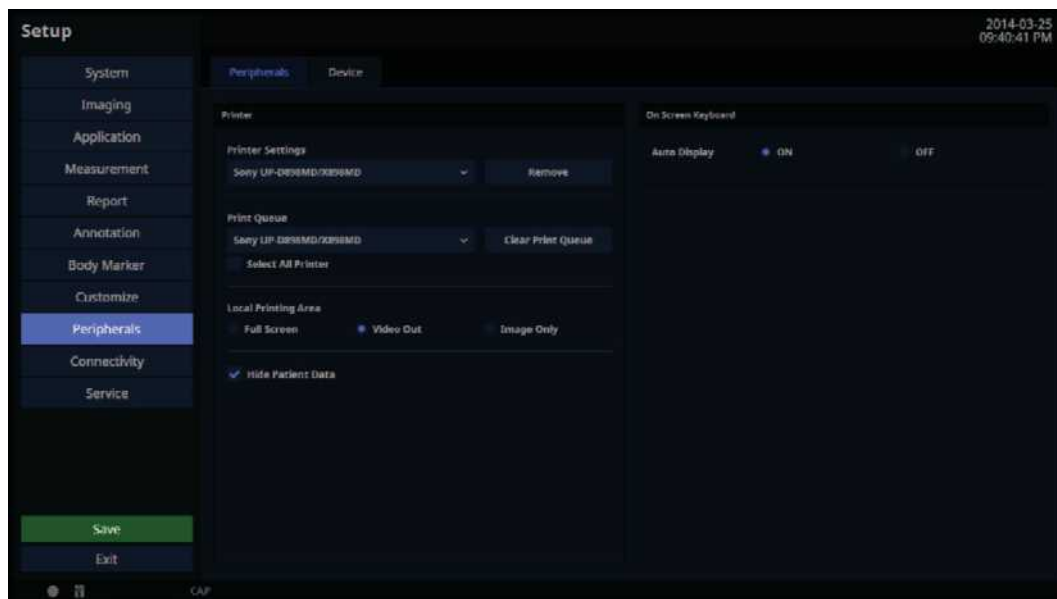

[Figure 3.37 Setup – Peripherals – Peripherals]

3.6.15.1. Printer

■ Printer Settings

Select the printer to use by using the combo button. To remove a printer that is no longer used, select the printer and press the **Remove** button.

■ Printer Queue

Choose whether or not to cancel a printer job while an image is being printed. Use the combo button to select a printer that is printing an image. Press the **Clear Print Queue** button to cancel the print job.

- Select All Printers

Select this checkbox to cancel all print jobs for the connected printer.



NOTE

A print job can be canceled only if the image data to print has not been completely sent to the printer.

■ Local Printing Area

Select the area that will be printed.

- Full Screen: Prints everything shown on the monitor screen.
- Video Out: Prints only a certain area of the screen, including the Image area.
- Image Only: Print out the image area only.

■ Hide Patient Data

Select whether or not to display the patient information.

■ On Screen Keyboard


You can turn the Auto Display function on the touch screen keyboard On or Off.

- If the keyboard has not been installed, a message box will appear prompting you to connect the keyboard.
- If the keyboard has been installed, you can turn the Auto Display function On or Off.

Device

In the *Setup* screen, select the **Device** tab in the **Peripherals** category.

Press the **Eject/Remove** button to eject or remove the disk from the device. Press the **Format Media** button to erase the CD/DVD.

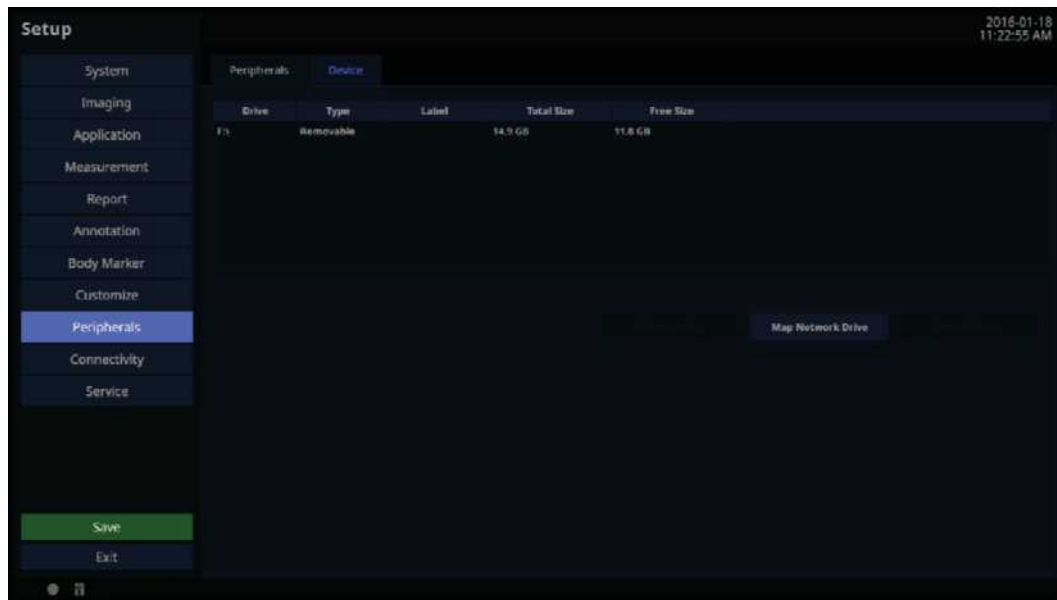

[Figure 3.38 Setup – Peripherals – Device]

■ Map Network Drive

Connect to a network.

1. Press Map Network Drive button.
2. Select a Drive Name.
3. Enter a Network Folder path.
4. Enter User ID and password and then press the **Connect** button.
5. Select a Drive Name and press the **Disconnect** button to close it.

3.6.16. Connectivity

Tap **Connectivity** on the touch screen. You can perform DICOM administration tasks or manage DICOM server settings and network information for your system.


DICOM

In the *Setup* screen, select the **DICOM** tab in the **Connectivity** category. Configure DICOM (Digital Imaging and Communication in Medicine) operation and DICOM server.



NOTE

For more information, please refer to the server's user manual or the DICOM Conformance Statement.

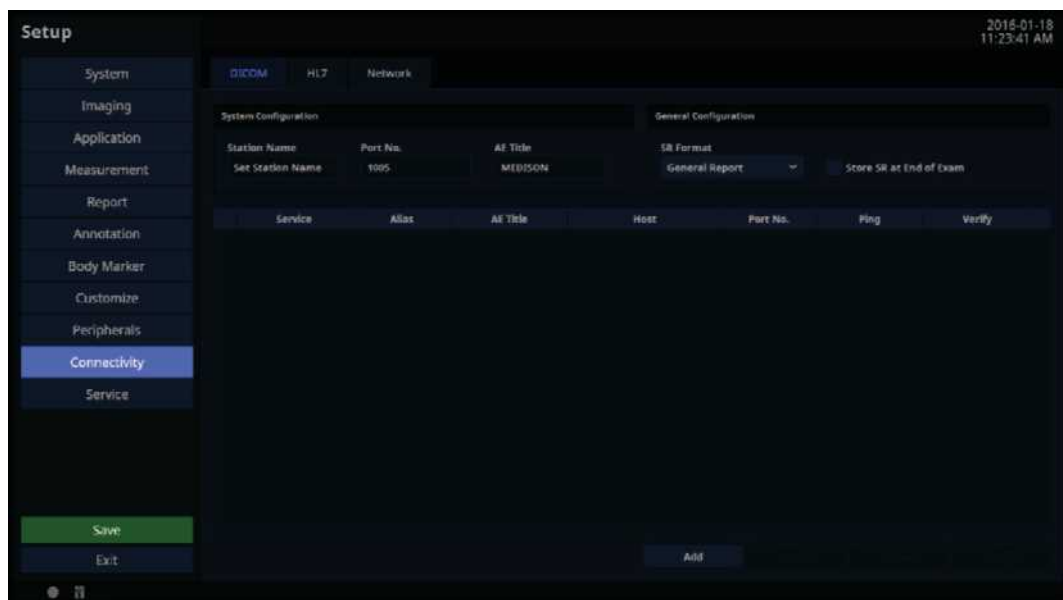

[Figure 3.39 Setup – Connectivity – DICOM]

3.6.16.1. System Configuration

Information about the DICOM server used by the system is displayed.

You can change the information, or add or delete a server. The server information is used to identify the DICOM for the system within a network. It is also used to transfer data to other DICOM servers.



NOTE

For the 'IP Address', 'AE Title', and 'Port No' settings, contact your organization's network administrator.

■ Station Name

Enter the name of the system. Along with AE Title, it is often used to identify the system in the DICOM network.

■ Port No.

Enter the port number of the server being used.

■ AE Title

Enter the name of the DICOM AE (Application Entity). Used for identifying the equipment that uses DICOM on the network.

3.6.16.2. General Configuration

■ SR Format

Select a format to be used to save SR among General Report and Viewpoint.

■ Store SR at End of Exam

Select whether or not to store the SR at the end of the exam. When you select this checkbox, the SR is automatically stored at the end of the exam. Otherwise, it is not stored.

3.6.16.3. Adding DICOM Services

Click **Add** on the screen. A screen is displayed where you can enter a DICOM service to add. After adding a service, click **Apply** to save the information. Tap **Cancel** to cancel.

- **DICOM Services**

Select the type of service to use via DICOM. The supported DICOM servers are Storage, SC, Worklist, Print, PPS, Storage SR, and QR.

- **Alias**

Enter the name of the DICOM server.

- **AE Title**

Enter the AE title of the DICOM server. Consult your network administrator before specifying this option.

- **Host**

Enter the IP address of the server being used. Consult your network administrator before specifying this option.

- **Port No.**

Enter the port number of the server being used. Consult your network administrator before specifying this option.

- **Connect Timeout**

The connection will time out if there is no response from the DICOM server within the configured time period. You can specify this time period in seconds.

- **Read Timeout**

Specify the Read Timeout time limit for the server you are adding.

- **Retry Interval**

Specify how many seconds the system will wait before it retries a failed transmission. You can specify this time period in seconds.

- **Maximum Retries**


Specify how many times a failed transmission will be retried.

- **Packet Size**

Specify the size of the transfer packet.

Storage Server Information

Select 'STORAGE' as the **DICOM Service Options** item. Configure the Image Storage Service using DICOM.

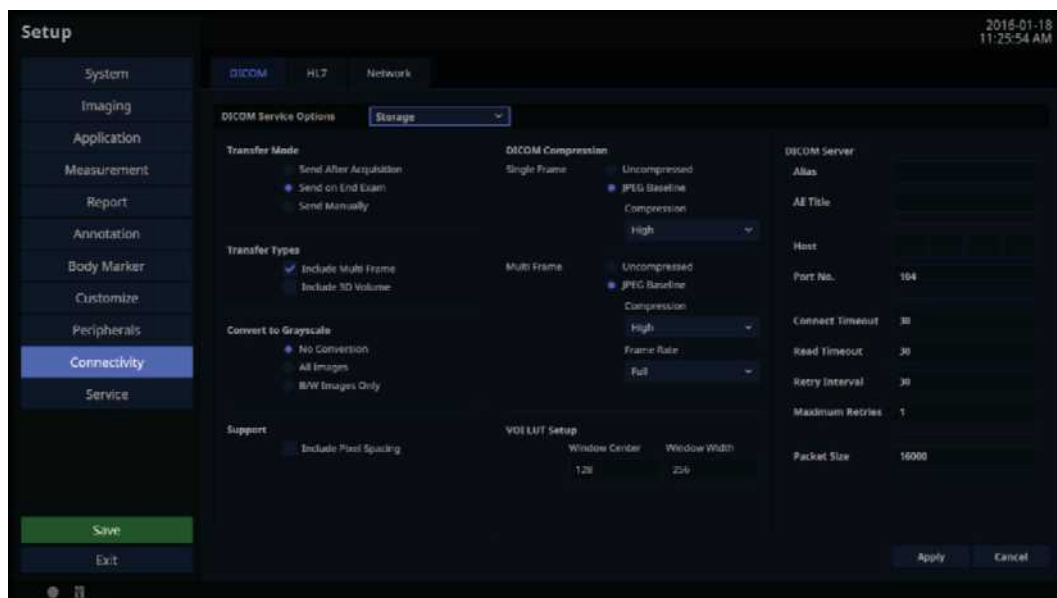

[Figure 3.40 DICOM Configuration – Storage]

■ Transfer Mode

Select a transfer method:

- Send after acquisition: Send an image whenever you press the **Store** button to save it.
- Send on end exam: Send all saved images when you press the **End Exam** button.
- Send manually: Send an image the user selects from the Exam List or in Review.

■ Transfer Types

- Include Multi Frame: Select this checkbox to transfer Cine Loops.
- Include 3D Volume: Select whether or not to send 3D volume data together with the 3D images.



NOTE

Only select this option if you use a storage service that supports the 3D volume data format used by Samsung Medison.

■ Convert to Grayscale

Select the grayscale conversion type for the image you want to apply the DICOM service to.

- No Conversion: Send the original image without converting it.
- All Images: Convert all images to grayscale before sending them.
- B/W Image only: Only the images that do not have color are converted to grayscale before being sent.

■ Support

Include Pixel Spacing: In addition to the area information used in ultrasonography, the area information used in CT or radiography is also included. You can take measurements in a PACS system that does not support ultrasound area information.



NOTE

However, only 2D and 2D Color Mode images are supported. In Dual and Quad Mode, the depths of the included images must be identical.

■ DICOM Compression

Select whether to compress the images for the DICOM service. Use the combo button to select the image type and the compression type (Uncompressed or JPEG Baseline). When you select Uncompressed, the images are saved without compression.

- Single Frame: Specify the compression type for still images.
- Multi Frame: Specify the compression type for Cine images.
- If the JPEG Baseline is selected, you need to select Low, Medium, or High. You can prioritize either the quality or the compression ratio. You can specify the compression type, compression ratio, and frame rate. You can select Full, 10, or 20 as the frame rate for Multi Frame.


■ VOI LUT Setup

Configure the VOI LUT (Value Of Interest Look Up Table). Adjust the brightness and contrast of a DICOM image when saving it. The saved image can be viewed with any PACS device that has DICOM VOI LUT implemented.

- Window Center: Enter a value for the DICOM Tag (0028, 1050) setting. The setting value indicates the brightness of an image that is displayed by the storage service. The image will get darker if the value is set to 128 or higher. Note that this function can be used only when it is supported by the storage service.
- Window Width: Enter a value for the DICOM Tag (0028, 1051) setting. The setting value indicates the contrast of the image displayed by the storage service. Values set to higher than 256 will result in lower contrast. Note that this function is available only when it is supported by the storage service.

SC Server Information

Select 'SC' (Storage Commitment) as the **DICOM Service Options** item. Configure the Storage Commitment Service using DICOM. The Storage Commitment Service is used after a diagnosis is finished and all saved images and reports are sent.

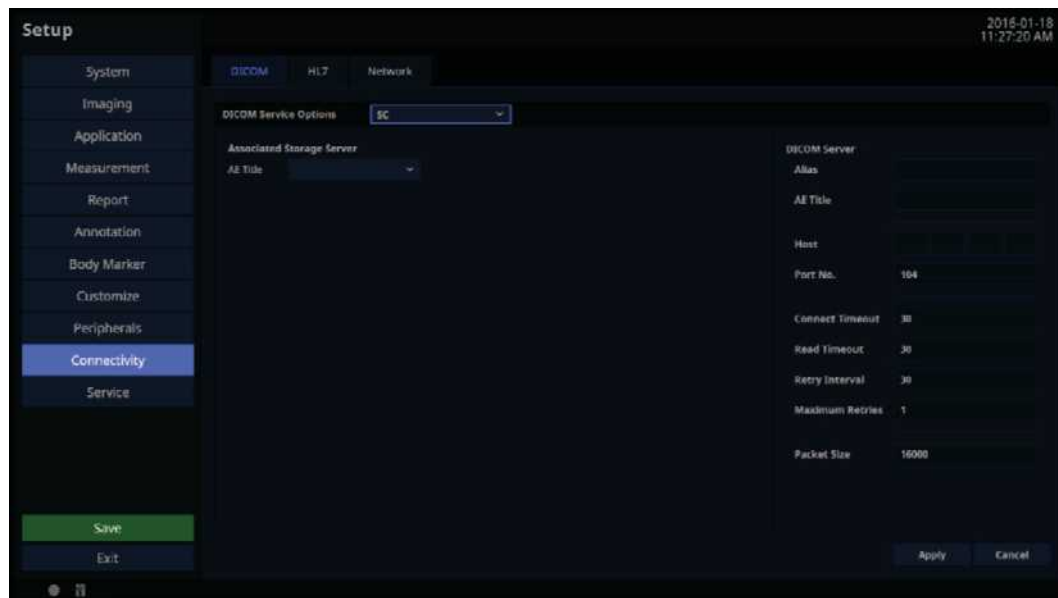


[Figure 3.41 DICOM Service Options – SC]

■ Associated Storage Server

Select an Image Storage server to connect to.

WORKLIST Server Information

Select WORKLIST as the **DICOM Service Options** item. Set Modality Worklist service by using DICOM.

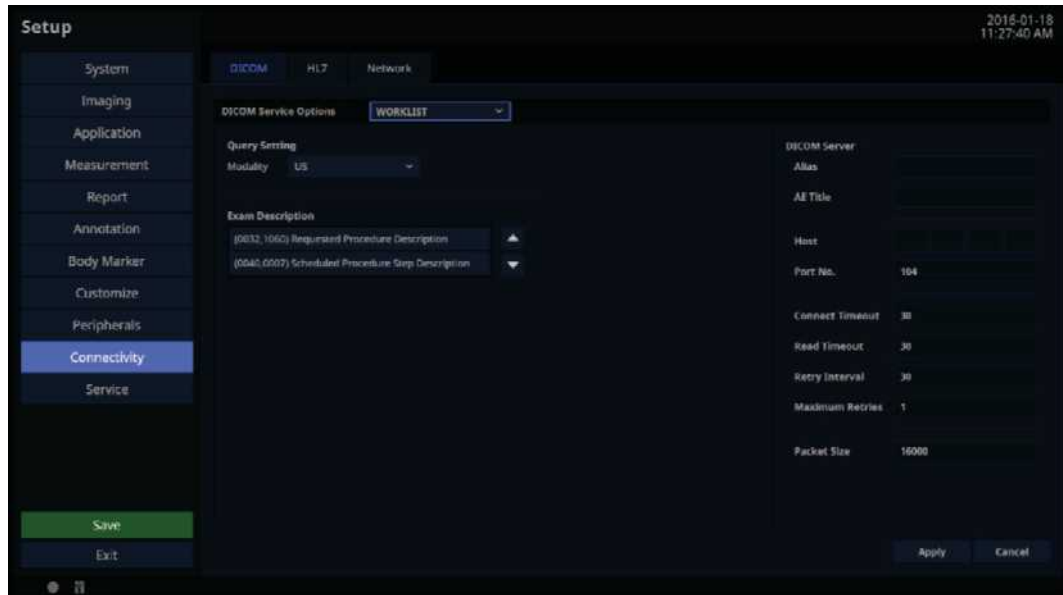

[Figure 3.42 DICOM Service Options – WORKLIST]

■ Query Setting


Select the type of Modality to retrieve when updating the worklist.

- Modality: Select either ultrasound images (US) or all images (All).

TIP After setting up the Worklist service, press the **Patient** button on the control panel to go to the Worklist page.

PRINT Server Information

Select 'PRINT' as the **DICOM Service Options** item. Configure the Print Service using DICOM.

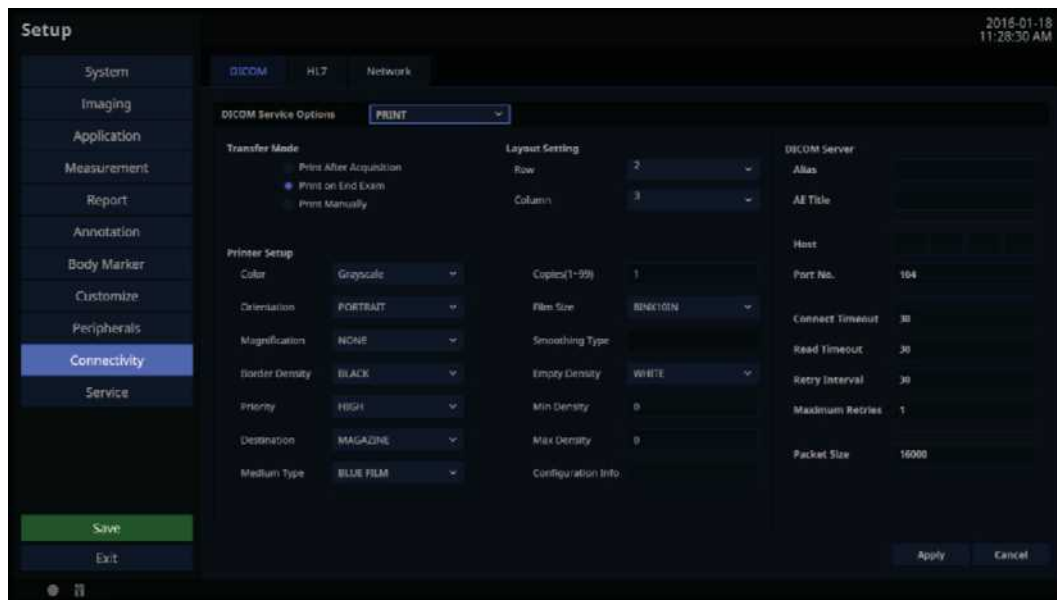

[Figure 3.43 DICOM Configuration – PRINT]



- You can only configure printers connected to the DICOM network.
- Depending on the printer, some of the following functions may not be available. Before configuring a printer, please refer to the printer's user manual, or the DICOM Conformance Statement.

■ Transfer Mode

Select a printing method:

- Print after acquisition: Print an image whenever you press the **Store** button to save it.
- Print on end exam: Print all saved images when you press the **End Exam** button.
- Print manually: Print an image the user selects from the Exam List or in Review.

■ Layout Setting


Specify the paper layout. Between 1 and 6 rows and 1 and 4 columns can be selected.

■ Printer Setup

- Color: Specify whether to use colors. Select Grayscale or RGB.
- Orientation: Specify the paper orientation. Select either Landscape or Portrait.
- Magnification: Specify the interpolation when resizing an image to print. Select from Replicate, Bilinear, Cubic, or None.
- Border Density: Specify the border color of the image to be printed. Select Black or White.
- Priority: Specify a priority for the print command. Select High, Med, or Low.
- Destination: Specify the paper pathway. Select Magazine or Processor.
- Medium Type: Specify the material type for the printout. Select from Paper, Clear Film, Blue Film, Mammo Clear Film, or Mammo Blue Film.
- Copies (1–99): Enter the number of copies to print, using a value between 1 and 99.
- Film Size: Select a paper size from 8×10 inches, 8.5×11 inches, 10×12 inches, 10×14 inches, 11×14 inches, 11×17 inches, 14×14 inches, 14×17 inches, 24×24 cm, 24×30 cm, A4, or A3.
- Smoothing Type: This option is available only when Magnification is set to CUBIC. Enter the value for the printer which is specified in the DICOM Conformance Statement.
- Empty Density: Specify the background color of an image to print. Select Black or White.
- Min Density: Specify the minimum brightness of an image to print. If this option is not specified, the default value is applied.
- Max Density: Specify the maximum brightness of an image to print. If this option is not specified, the default value is applied.
- Configuration Info: Specify the unique value for a printer. Please refer to the DICOM Conformance Statement for the printer.

PPS Server Information

Select **DICOM Service Options** as the 'PPS' (Performed Procedure Step). Configure the Modality Performed Procedure Step Service using DICOM.

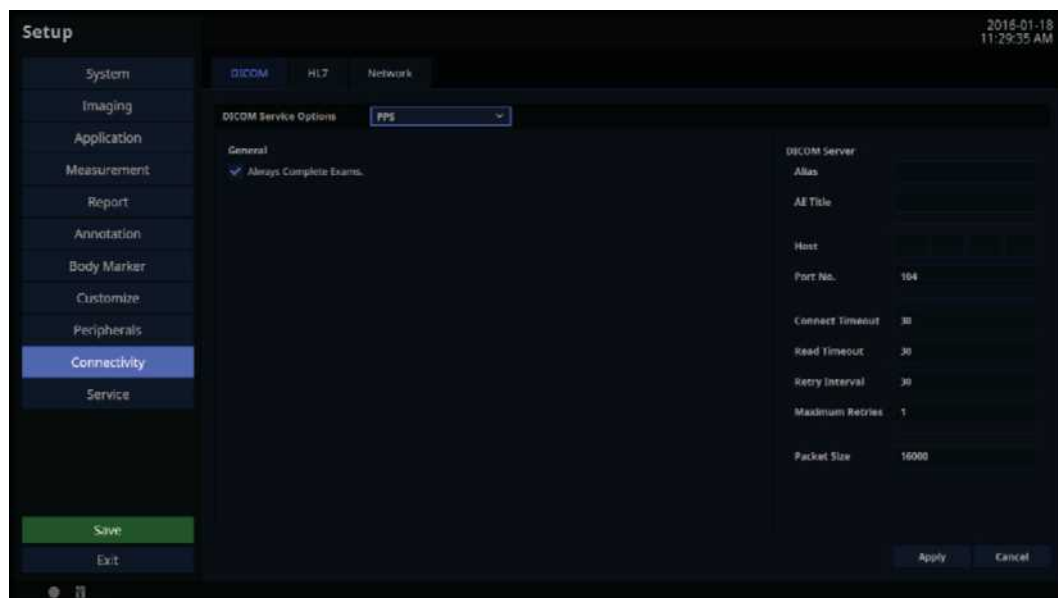


[Figure 3.44 DICOM Service Options – PPS]

■ Always Complete Exams

When you check this checkbox, exams are always reported in their final state. If you press the **End Exam** button without selecting a checkbox, the cancellation message that was selected after you selected the cancellation message for End Exam will be sent to the RIS server.

STORAGE SR Server Information

Select Storage SR (Storage Structured Report) as the **DICOM Service Options** item. Configure the Report Storage Service using DICOM.

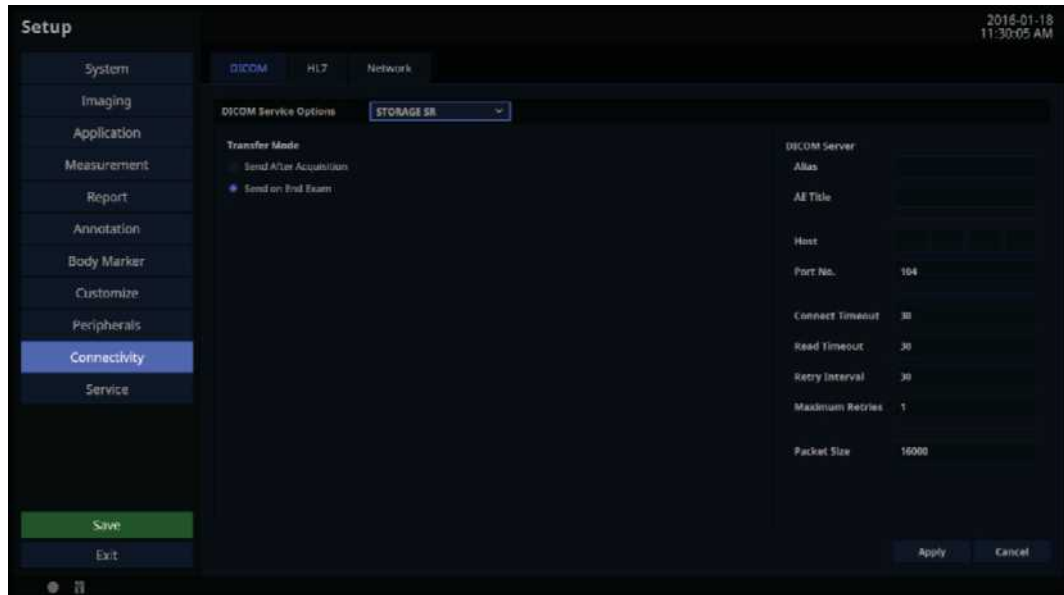

[Figure 3.45 DICOM Service Options – STORAGE SR]

■ Transfer Mode

Select a printing method:

- **Send After Acquisition:** Whenever the **Store** button is pressed, the measurement data in the report will be sent as an SR.
- **Send on End Exam:** Whenever the **End Exam** button is pressed, the measurement data in the report will be sent.

QR Server Information

Select 'QR' as the **DICOM Service Options** item. The configuration options are the same as those for the storage server.

3.6.16.4. Modifying DICOM Information

Select a service and click **Modify** on the screen. The information on the selected service will appear. After changing the information, click **Apply** to save the changes. Tap **Cancel** to cancel.

3.6.16.5. Deleting DICOM Services


Select a service and click **Delete** on the screen.

3.6.16.6. Testing DICOM Servers

Select a service and click **Verify** on the screen. The connection with the selected service is tested and the results are shown under Verify. If the result is Success, the connection is normal.

HL7

Include the Measurement Data PDF in the HL7 Message and send it to the HL7 Repository server. Select the HL7 tab and click the HL7 Manager button on the screen.

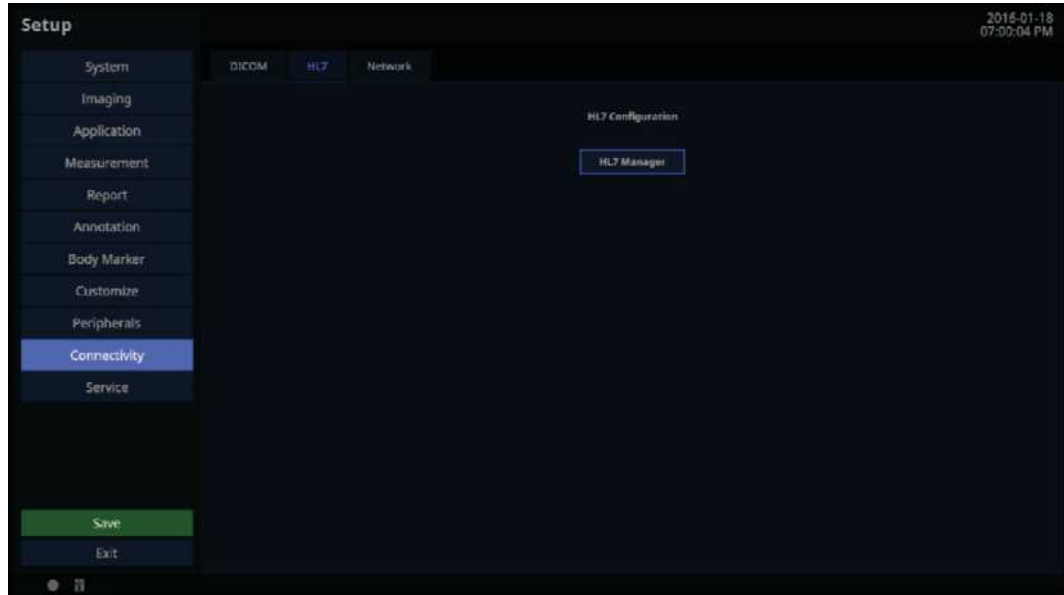


[Figure 3.46 DICOM HL7 – HL7 Manager]

■ Repository

Register, edit, and delete a report repository server to send reports to.

- Add Repository: Add a repository to send an HL7 message.
 - Alias: Refers to a name of the HL7 repository server to send an HL7 message to.
 - IP Address: Enter an IP address for the HL7 repository server.
 - Port No: Enter the port number of the HL7 repository server. (a value between 0 and 65535)
 - Connect Timeout: Select a time for transfer standby in seconds. (a value between 120 and 300)
 - Read Timeout: Set the standby time for transmission in seconds. (a value between 120 and 300)

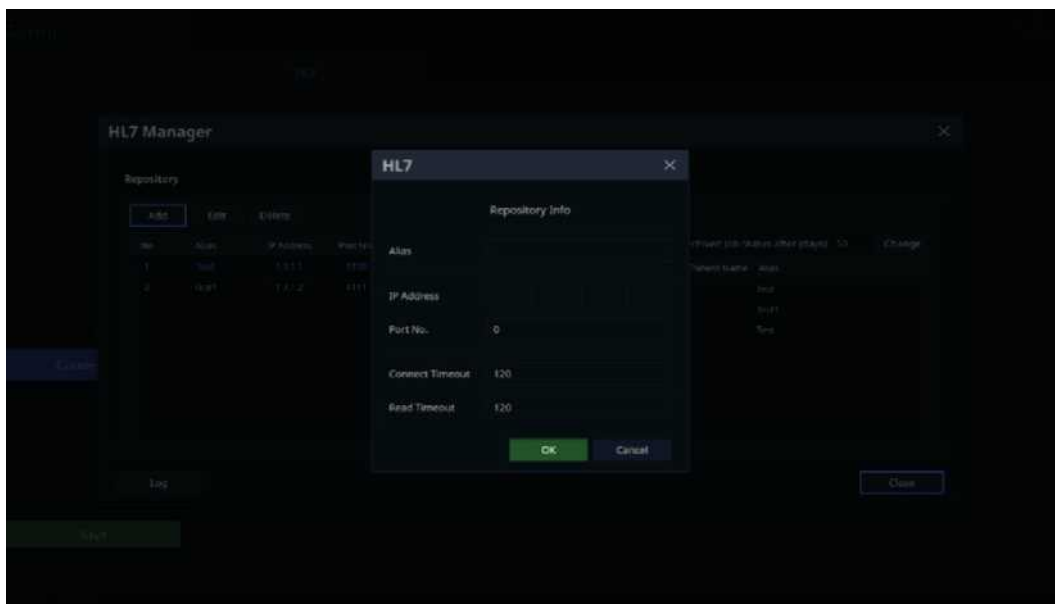


[Figure 3.47 DICOM HL7 – HL7 Manager]

- Edit Repository: Edit the repository server information.
- Delete Repository: Delete the repository server information.
- Active/Inactive Repository: Select whether or not to use the repository server by selecting the Active checkbox for the registered repository.

■ Show Job Status

Shows the information regarding the transfer of the HL7 report into an HL7 message.

- Columns: The user can select columns to check.
- Retry: The user can select and retry the failed jobs.
- Delete: The user can delete a job, whether the status is 'SUCCESS' or 'FAIL'.
- Show All: Shows all jobs.
- Delete Archived Job Status after(days): Delete archived jobs for the selected dates.

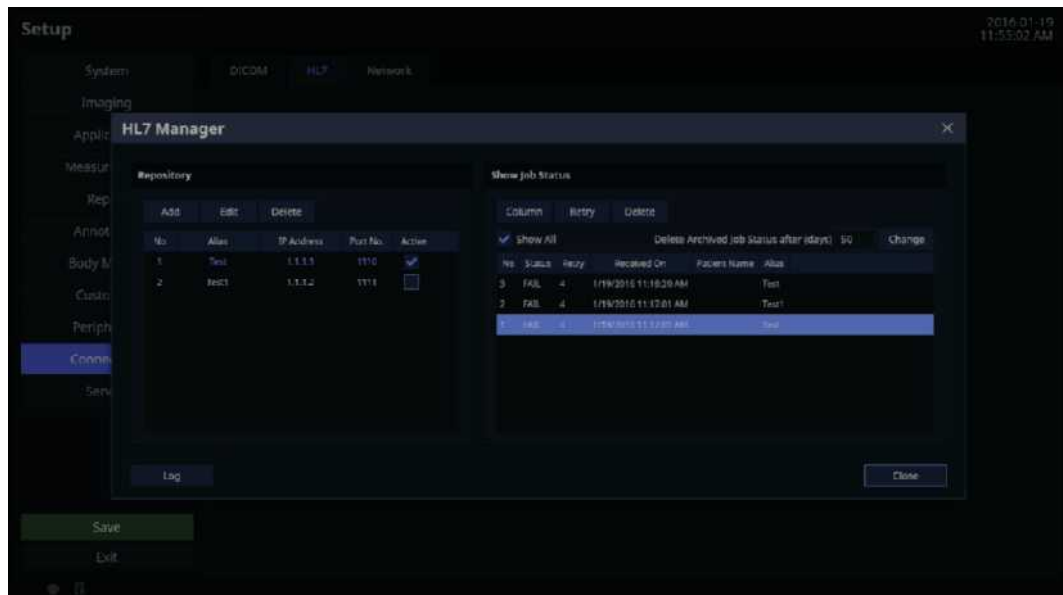

[Figure 3.48 DICOM HL7 – HL7 Manager]

■ HL7 Export

If there is an Active repository server registered to the HL7 Manager, the user can export the report by selecting the **HL7** button after taking at least one measurement on the *Report* screen. (However, patient information must exist and a warning message asking for a valid patient ID will appear if the information has not been entered.)

The screenshot displays the 'Report' screen in a software application. The interface is divided into a left sidebar and a main content area. The sidebar contains buttons for 'Preview', 'Worksheet', 'Main', 'OB Graph', 'Description', 'Image', 'Comment', 'HL7', 'Print', 'Export', and 'Exit'. The main content area is titled 'Report' and contains a form with the following fields:


ID	DOB	Sex	Name	Height	Weight
080815111214AM					
Date of Birth (Age)					
Indication					
Obst. Physician	Ref. Physician	Sonographer			
OB Fetus A					
1MP	GA	1MP	1MP	GA	Para
Composite GA	Average	GA (MP)	GA (MP)	GA (MP)	GA (MP)
Final Summary					
1	2	3	GA	GA	GA
GA	GA	GA	GA	GA	GA

At the bottom of the screen, there is a 'Page 111' indicator and a 'Property' button.

[Figure 3.49 Report – HL7 Export]

Network

In the *Setup* screen, select the **Network** tab in the **Connectivity** category. Or tap **Connectivity** on the touch screen. You can manage the network information for the current equipment.

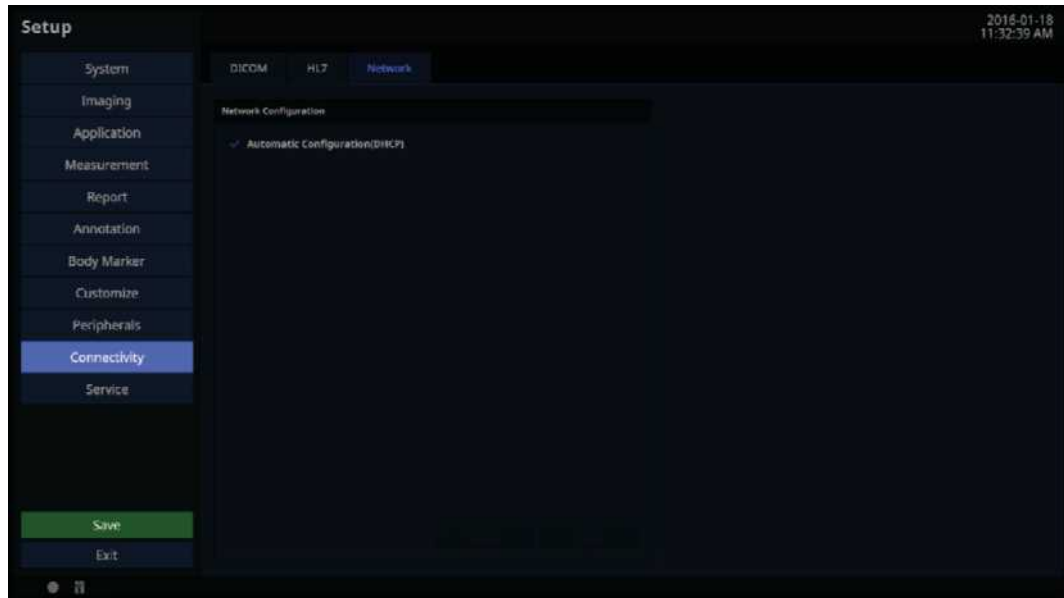

[Figure 3.50 Setup – Connectivity – Network]

3.6.16.7. Network Configuration

Set up the network information for the current equipment.

- **Automatic Configuration (DHCP)**

If the checkbox is selected, the IP information will be configured automatically.

- **Static Configuration**

If the checkbox is empty (Automatic Configuration), you can enter a static IP address. Specify the IP Address, Subnet Mask, Gateway, and DNS information.

- **Revert**


Clear the currently entered information and revert to the default settings.

- **Apply**

Use the information entered currently to set up the IP.

Profile Manager

This function allows you to back up and restore the Connectivity Setup data.

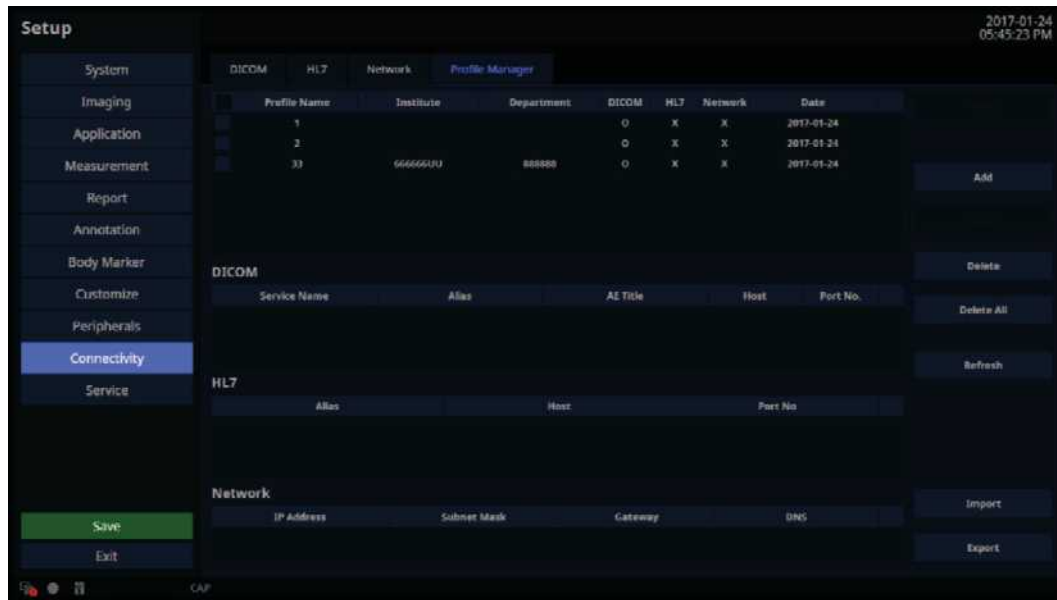

[Figure 3.51 Setup – Connectivity – Profile Manager]

■ Add

Save the current Dicom Service list, HL7 Repository list, and Local Network Setting information.

■ Modify

Edit the Institute and Department information of the saved Profile (other information cannot be edited).

■ Refresh

Update the saved Profile List and display it on the screen.

■ Import

Import Profile settings from an external storage device (USB drive). (You can only execute one import at a time; the target profile names are displayed in the Import UI.)

■ Export

Export the Profile settings to an external storage device (USB drive).

■ Delete/Delete All

Delete the selected Profile or all Profiles.


■ Apply

Restore the Profile settings to the selected values and then shut down the system.

**NOTE**


- A maximum of 30 Profiles can be registered.
- When adding a Profile, you can enter up to 30 English letters into the Profile Name, Institute, and Department fields (Profile Name is a mandatory field; Institution and Department are optional fields).
- If there is no User Data setting for DICOM Service and HL7 Repository, mark "X" (i.e., does not exist) on the Profile List.
- If there is no additional User Data setting for Local Network Setting, mark "X" (i.e., does not exist) on the Profile List.
- Other settings for DICOM and HL7 (e.g., System, and General Configuration) are excluded from Import, Export, and Apply actions.


3.6.17. Service

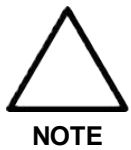

- Users should not attempt to perform anything on their own. They must contact the customer service department of Samsung Medison who can perform this service for them.
- Restore saved basic patient information and images or changes to the software.
- Enable or disable optional software or hardware.
 - Name: Show the types of optional software that can be installed on the product.
 - Status: Show the current status of optional software. Registered means that the software can be used until the date specified by the Expiration Date is reached. Unregistered means that the software cannot be used now.
- Displays the software version of the product.
- It provides the built-in self test function.

3.6.18. Help

On the touch screen, tap the  button, enter the Utility Menu, and tap the **Help** button. Tap the **Exit** button to exit it. If the Keyboard has been connected, you can open the Help menu by pressing the **Help** button on the Keyboard.

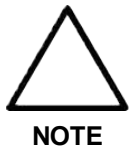

Help screen does not provide **Return** key.

Chapter 4

Product Inspection

4.1. Inspecting Functions	2
4.1.1. Basic Inspections	2
4.1.2. Detailed Inspections	3

4.1. Inspecting Functions

After installation, inspect the device and use the major functions to verify that the product works properly.

4.1.1. Basic Inspections

4.1.1.1. Monitor

Check the screen for color, focus, dots, afterimage, stain, and blurriness.

Apply shock to the monitor and check the screen; shake the cable horizontally and check the signal.

- **Control Panel and LED Status**

Press any keys on the control panel and see if text appears or breaks.

Verify that the Keyboard LEDs turn on.

- **Body Mark Key**

Check if the Body Marker image appears correctly and whether selection works properly.

- **Indicator Key**

Check that the trackball works properly by rolling it up, down, left, and right.

- **Clear Key**

Check that all text and measurements are cleared properly.

- **Check Zoom Functioning**

Check the zoom function for proper action and ensure that there are no errors.

- **Check SonoView**

Save Images and Cine Images in each mode.

Check for errors while saving images.

Check whether Backup & Restore functions properly.

- **Measure**

Check the operation of Distance, Caliper, Calc, etc.

■ Patient

Enter information in Patient and check that the same Patient information is displayed in the Report, SonoView, etc.

■ End Exam

Make an arbitrary measurement in New Patient and see whether the measurement is erased when you press End Exam.

■ Probe Key

Perform a Probe Change and check that it functions correctly.

4.1.2. Detailed Inspections**■ 2D Mode**

1. Perform a Knife Test to check that a part of image is not displayed.
2. Perform a Phantom test to check for errors in the image.
3. Check the Freeze Cine actions (broken image, Auto Run, Auto Run Speed, Trackball Cine).
4. Check for changes in the image brightness when you adjust the Gain.
5. Check that the TGC Gain operates correctly by adjusting it and checking for changes in the image brightness in accordance with depth.
6. Perform Left/Right Flip, Up/Down Direction, and Rotation to check whether the image changes its orientation correctly.
7. Check whether or not the Select Image menus (EE, DR, View Area, Tissue, Frame Rate) work.
8. Check for errors in frequency (Phantom, Res, Pen, Gen).
9. Check for changes in the image in accordance with changes in depth.
10. Check for changes in the image by depth when you change the focus.
11. Check whether or not the Image Compensation Mode works.

■ **Dual Mode**

1. Perform a Phantom test to check for errors in the image.
2. Perform Left/Right Flip, Up/Down Direction, and Rotation to check whether the image changes its orientation correctly.
3. Check the proper operation of Select Image menus (EE, DR, View Area, Tissue, Frame Rate, Power).
4. Check for errors in frequency (Phantom, Res, Pen, Gen).
5. Check for changes in the image in accordance with changes in depth.
6. Check for changes in the image by depth when you change the focus.
7. Check for errors in operations related to left and right Cine images (number of pages, Cine progression order, broken image, Auto Run, Auto Run Speed, Track Ball Cine).

■ **M Mode**

1. Perform a Phantom test to check for errors in the image.
2. Check whether the M-Line's information is displayed in the Image area.
3. Check for changes in the image brightness when you adjust the Gain.
4. Perform Left/Right Flip, Up/Down Direction, and Rotation to check whether the image changes its orientation correctly.
5. Check that the Select Image menus (EE, DR, View Area, Tissue, Frame Rate, Sane angle, Power) operate correctly.
6. Check for changes in the image in accordance with changes in depth.
7. Check for changes in the image by depth when you change the focus.
8. Check for changes in speed when you change Speed gradually and for errors in the information.
9. Check whether the image becomes inverted when Negative is performed.
10. Check for errors in Top Down Format and Side by Side Format images when Loop Format is selected.
11. Check for changes in the Format B-Mode and M Line area sizes.
12. Check the Freeze Cine actions (broken image, Auto Run, Auto Run Speed, Trackball Cine).

■ **Color Doppler Mode/Power Doppler Mode**

1. Perform a Phantom test to check for errors in the image.
2. Check the operations related to the Select Image menus (Balance, Sensitivity, Color Mode, Display, CFR).
3. Check for changes in the image in accordance with changes in depth.
4. Check the Freeze Cine actions (broken image, Auto Run, Auto Run Speed, Trackball Cine).
5. Check for changes in the image brightness when you adjust Color Gain.
6. Check for noises and breaks in the image (B or C Mode Noise) when you move the ROI Box.
7. Check for noises and breaks in the image (B or C Mode Noise) when you resize the ROI Box.
8. Adjust the Scale up and down to check whether or not the frequency changes and speed range of blood flow is adjusted. (Check by actually performing a scan.)
9. Operate Filter to check whether small signals are removed by stage.
10. Check whether or not the Color Bar is inverted when you operate the Invert key.
11. Move the Baseline up and down to check whether the speed range of blood flow moves to the “+” or “-” position.

■ **PW Spectral Doppler Mode**

1. Perform a Phantom test to check for errors in the image.
2. Check whether Doppler's PRF value changes when you set Simultaneous to on/off.
3. Check for errors in the Doppler spectrum.
4. Change the Scale to check the change in velocity range.
5. Move the Baseline up and down to check whether the spectrum range moves to the “+” or “-” position.
6. Check whether changing the Filter removes low signals from the Spectrum.
7. Check whether the Doppler wave form is inverted when you operate Invert.
8. Perform Angle action.
9. Change the position and size of SV and check for errors.
10. Check whether the Spectrum image changes when you change the Spectrum's Type.
11. Check for errors in Sound Volume.
12. Perform Auto Calc and check whether the line is displayed without breaks, and also whether the calculated results are automatically carried out.
13. Check for errors in Top Down Format and Side by Side Format images when Loop Format is selected.
14. Check the Cine/Loop (broken image, Auto run, Auto run speed, Trackball Cine) operations.

■ **3D/4D Mode**

1. Check whether loading is performed correctly when you proceed with Free Hand 3D SCAN and when you skip to Freeze; check for broken images and noise while you are proceeding.
2. Check whether loading is performed correctly when you proceed with Static 3D Scan and check for broken images and noise while you are proceeding. Check the probe for noise and check whether the probe's motor works normally.
3. Check whether loading is performed correctly when you proceed with Live 3D Scan and check for broken images and noise while you are proceeding. Check the probe for noise and check whether the motor works normally.
4. Check for errors in ROI 3D, ABC 3D, and Full images.
5. Check whether the 3D image changes to the selected angle.
6. Check whether the 3D image's contrast changes to the selected value.
7. Check for errors in the image when you change the size of the image.
8. Check the Display Format Image (ACB, Volume CT Image).
9. Step Angle, Rotation Angle, Rot. Select Axis and then proceed with Cine; check whether Cine Loading works in accordance with the set items and check for breaks and errors in the image.

Chapter 5

Product Structure

5.1. Overview.....	3
5.2. System Block Diagram	5
5.2.1. System Block Diagram	5
5.2.2. System Rack Design	6
5.3. Basic Structure of the Product.....	7
5.3.1. Electronic Structure	7
5.3.2. Ultrasound System Part.....	7
5.3.3. PC Part	8
5.3.4. User Interface Part	8
5.3.5. Power Part.....	8
5.4. Ultrasound System Part.....	9
5.4.1. Main Functions of PSA (Probe Select Assembly).....	9
5.4.2. Beam Former Board	11
5.4.3. Back End Board	15
5.5. PC Part.....	20
5.5.1. PC Module.....	20
5.5.2. Rear IO Board.....	21
5.5.3. Software DSC	23
5.6. User Interface Part.....	24
5.6.1. Control Panel	24
5.6.2. Main Monitor	26
5.6.3. Touch-Screen.....	27
5.6.4. Display Layout	28
5.7. Power Part	29

5.7.1.	ADM	29
5.7.2.	Power Block Diagram	30
5.7.3.	Specification	30
5.8.	Interconnect Diagram	31
5.8.1.	HS40 Interconnect Diagram	31
5.8.2.	Cable Description	32

5.1. Overview

This is an ultrasound diagnostic imaging system utilizing software DSC.

It features a 21.5" Full HD Wide LED monitor and a 10.1" LED touch screen monitor, provides high-resolution ultrasound images, and includes several premium-grade features. Samsung Medison's new proprietary technology is incorporated into the latest spec PC and ultrasound system interface to improve processing speed. The improved processor speed increases the processing speed of the product, which in turn reduces exam times for the user. The major specifications are as follows:


Monitor	<ul style="list-style-type: none"> • Main Monitor 21.5" LCD monitor (LED Backlight unit, hereafter referred to as "LCD monitor") • Touch Screen Monitor 10.1" LCD monitor (LED Backlight unit, hereafter referred to as "LCD monitor")
PC	Advantech, COM Express Module (SOM-5893)
CPU	AMD 2.7GHz, R-Series (Bald Eagle)
Memory	DDR3 8GB 1600MHz
OS	64bit Windows 7 Embedded Standard
Storage	HDD 500GB SATA-2 2.5" , 7200RPM
VGA	Internal Graphic Chip (Radeon HD9000)
Chanel	TX 128CH
Probe port	4 Probe Ports
3D Driver	BE B/D
Moving CP	Up/Down, Swivel CP using Handle and Gas Spring

The major structure of this product includes the following:

Ultrasound System Part	<ul style="list-style-type: none">• PSA (Probe Select Assembly) 4 Ports• BF (Beamformer Board) 1ea 128ch• BE (Back End Board)• USB ECG Module• USB Foot Switch• Gel Warmer• FAN Module
User Interface Part	<ul style="list-style-type: none">• 21.5" LCD main monitor• 10.1" LCD touch panel• Key Matrix Board• Up/Down, Swivel, CP• 1.2" Track Ball
PC Part	<ul style="list-style-type: none">• PC Module: Advantech , Com Express ModuleCPU: AMD 2.7GHz, R-Series• RAM: DDR3 SDRAM 8GB• Storage: HDD 500GB SATA-2 2.5" , 7200RPM• VGA: Internal Graphic Chip (Radeon HD9000)
Power Module	ADM


5.2. System Block Diagram

5.2.1. System Block Diagram

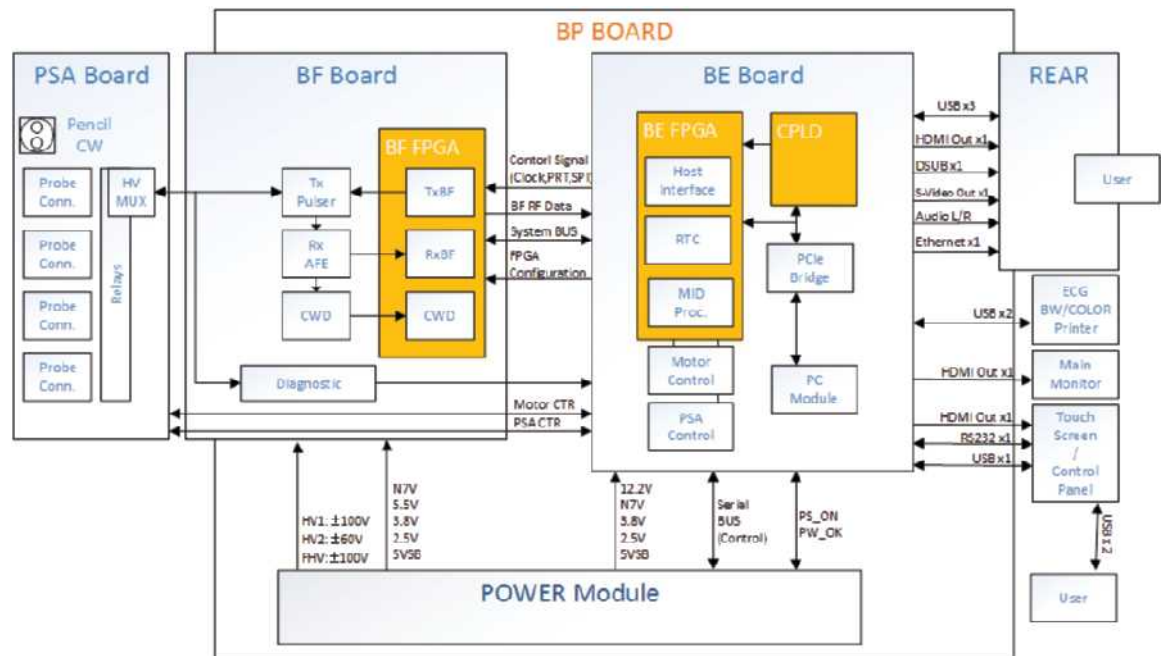

[Figure 5.1 System Block Diagram]

5.2.2. System Rack Design

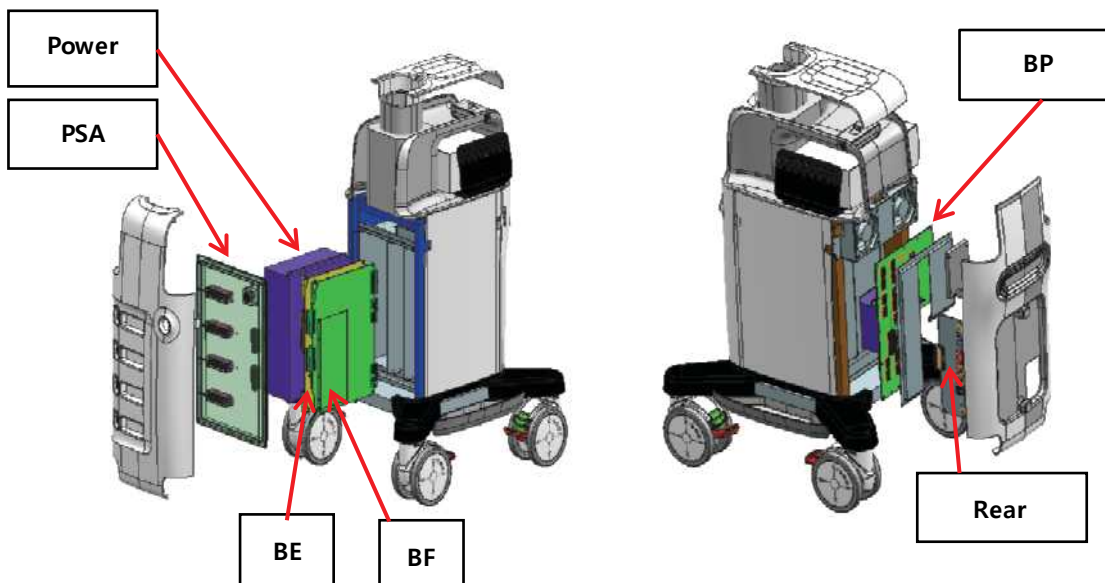

Name	Full Name
PSA	Probe Select Assembly
BF	Beamformer
BE	Back End
BP	Back Plane

[Figure 5.2 System Rack Design]

5.3. Basic Structure of the Product

This product consists of the Ultrasound System Part and the User Interface Part. In the aspect of electronic structure, it consists of a Front End Part, a Back End Part, a User Interface Part, and a Power Part. The electronic structure of HS40 can be explained as follows:

5.3.1. Electronic Structure

- Front End Part

It consists of the PSA (Probe Select Assembly) and the BF (Beamformer). The Front End Part delivers High Voltage Pulser to the probe to generate ultrasonic waves and amplifies the returning echo signal to process Digital Beamforming. The RF signal generated here is sent to the Back End Part.

- Back End Part

It consists of the BE (Back End) of the Ultrasound System Part as well as the PC Module. Raw data required to make diagnostic images (e.g. BW, Color Doppler, PW Doppler, and CW Doppler) from the RF signal generated by the BF (Beamformer) go through image processing in form of a DMA Packet by BE (Back End) and are transferred to the PC Module. Then, the data is displayed on-screen via several steps of post-processing conducted by the PC Module. Images can be more clearly shown through the use of new technologies such as MultiVision and ClearVision.

- User Interface Part

It consists of an LED monitor, control panel, and touch screen.

- Power Part

It takes AC voltage and supplies AC power to ADM and AUX Output via a circuit breaker. The ADM converts AC power to DC power and supplies voltage to the board of Ultrasound System as well as the PC Module.

5.3.2. Ultrasound System Part

It processes ultrasound data up to the stage before SW Post Image Processing. This detects probes and performs TX Focusing and RX Focusing based on the system and application information sent by the Host in accordance with the user environment. When a high voltage Pulser is sent to the probe according to TX Focusing, ultrasonic waves are generated. Echo signals returning from the body due to the ultrasonic waves go through amplification and the ADC as part of the Digital Beamforming process. The RF signal obtained here goes through various filtering and processing to generate I/Q signals such as BW, Color Doppler, PW Doppler, CW Doppler, and Power Doppler, which are sent to the PC Part to generate image signals via SW Post Image Processing.

The AC to DC Power Module supplies power to the Ultrasound System Part.

The Ultrasound System Part consists of the following:

- PSA (Probe Select Assembly) Board
- BF (Beamformer) Board
- BE (Back End) Board
- ADM (AC to DC Power Module)

5.3.3. PC Part

This displays ultrasound information generated by the Ultrasound System Part. It consists of the Scan Converter and image output circuits. It also performs control panel and interface functions.

ADM supplies power to the PC Part.

The PC Part consists of the following:

- PC Module: Advantech, COM Express Module (SOM-5893)
- CPU: AMD 2.7GHz, R-Series
- RAM: DDR3 SDRAM 8GB
- Storage: SSD 512GB
- VGA : Internal Graphic Chip (Radeon HD9000)

5.3.4. User Interface Part

It consists of LED monitor, control panel, and touch screen, so that users can view and control ultrasound images. Images are sent by the Ultrasound Part to the LED monitor and peripherals. Image output includes VHS, S-VHS, Composite, and HDMI. In addition, it provides a function for the user to customize the status via the control panel and touch screen.

The User Interface Part consists of the following:

- Monitor: 21.5" Full-HD Wide LED Backlight Panel (1920*1080)
- Touch Screen: 10.1" LED Backlight Panel (1280*800)
- Control Panel Board
- Trackball
- Key Matrix Board
- Alphanumeric K/B

5.3.5. Power Part

It converts external 110/230V AC voltage to the DC voltage which should be supplied to each part of Ultrasound System as required. The ADM also supplies power to the PC part. The ADM switch also works as a power circuit breaker and prevents any possible troubles due to overcurrent.

- ADM


5.4. Ultrasound System Part


5.4.1. Main Functions of PSA (Probe Select Assembly)

PSA connects the system to the probes. This product is equipped with four probe connectors (408-pin) and one CW-probe. It has a 3D Probe Drive Path, Probe Insert Path, Port Select Path, and CW Path, and a Relay circuit that allows the user to select one probe out of four probes.



[Figure 5.3 PSA Board Location Image]

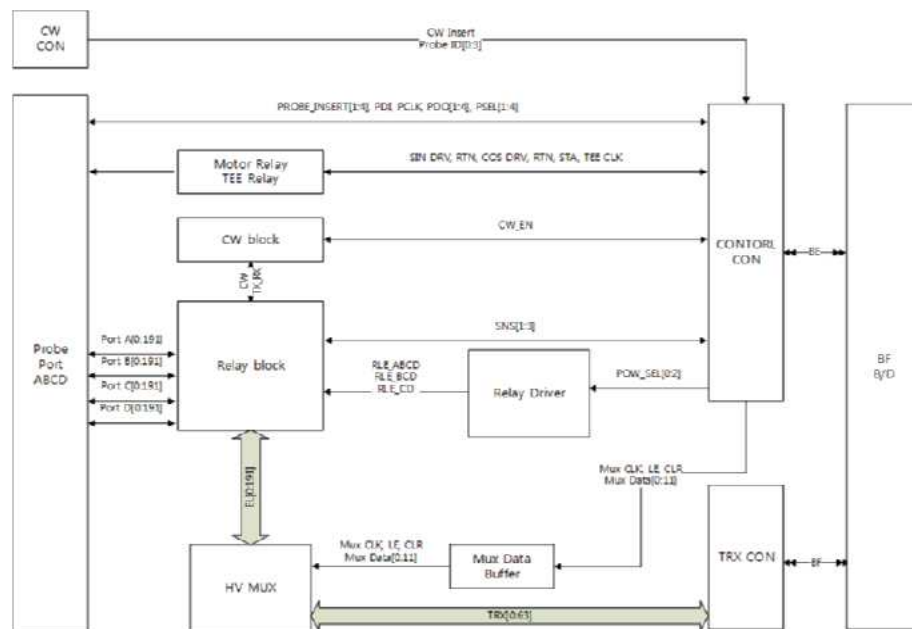

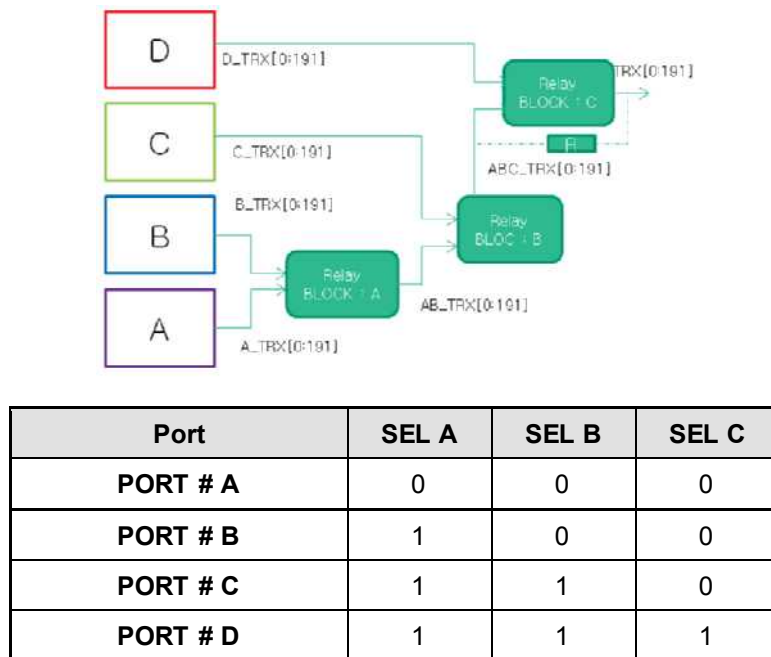

[Figure 5.4 PSA Board Block Diagram]

5.4.1.1. Specification

- 4 Probe Port Support
- CW Pencil Probe Port Support
- Probe Insert Check, ID read, Port selection
- Motor driving signal path for 3D probe

5.4.1.2. Description

■ Probe Selection

It consists of circuits to choose one of four probes. It can use the relay of the latched type to select a probe chosen by user.

The relay is operated by the probe select signal transmitted from the control logic (CPLD) of the CW (Continuous Wave Board). Probe Select signals are connected via the Back Plan Connector.

■ CW Pencil Probe Connection


The Static CW Probe uses a coax-pin LEMO Connector.

The LEMO Connector is located on a separate Connector Board and is connected to the PSA via cable.

This connector consists of two coax-pins and six pins. The two coax-pins are used for the TX/RX of the Static CW, while the six pins are used for the personality of Static Probe.


5.4.2. Beam Former Board

The Beamformer board is located between the PSA and the Back-end and it sends a ultrasound signal focused on a specific position of the body and amplifies the received signal to convert it into a Digital signal. Then, it beamforms the signal and relays the Focused data to the Back-end for Mid-processing. The BF Board consists of a Pulser, TR Switch, AFE, TX FPGA, ADC, and BF FPGA.

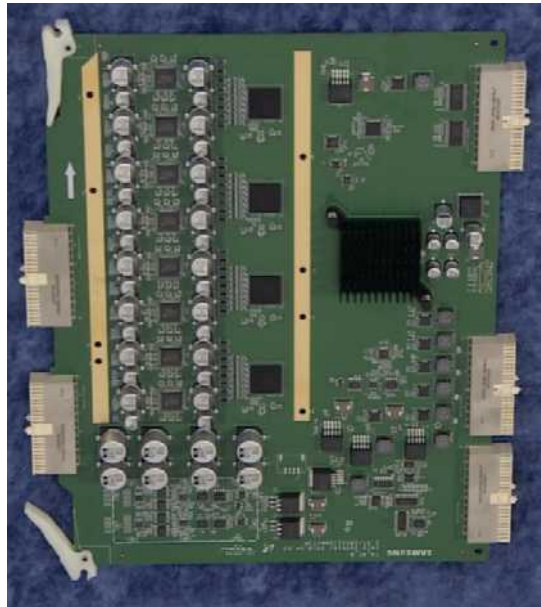


[Figure 5.5 BF Board Image]

- **Pulser:** It consists of one 64-channel board and operates 192 element probes. The Pulser amplifies the input firing signal to generate High Voltage Pulses.
- **TR Switch:** It adjusts the HV element from probes to prevent it flowing to the AFE.
- **AFE:** This amplifies the input echo signal to a sufficient level and then compensates for the signal change at a certain level. Finally, it converts the compensated signal into a digital signal for RX Focusing.
- **BF FPGA:** This covers the 64 TX Channels and the output TX-focused TX Wave Data. Moreover, it performs RX Focusing on RX echo signals for the 64 channels of the unit. Finally, it collects the 128 channels of RX Focusing Data and sends them to the BE Part.

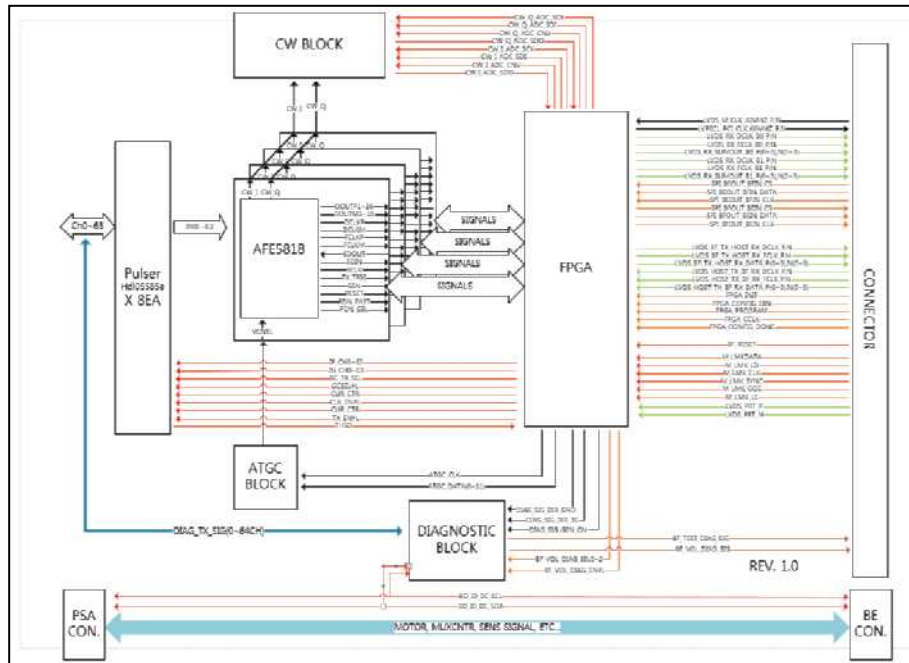

[Figure 5.6 BF Block Diagram]

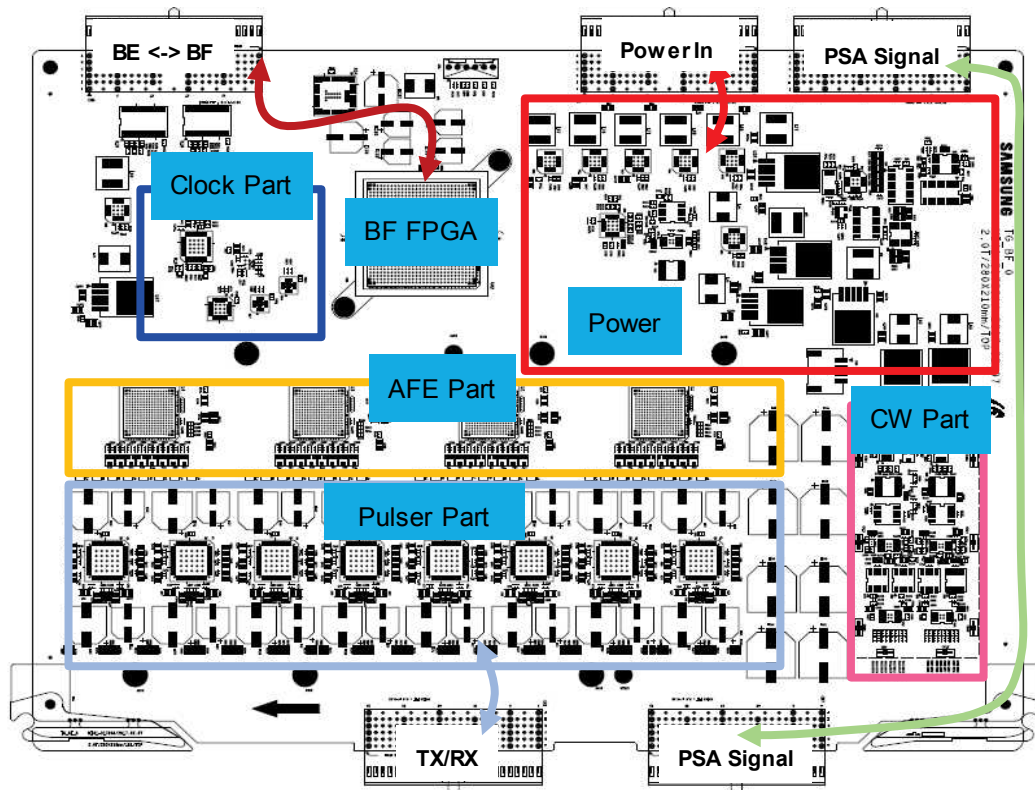

[Figure 5.7 BF Signal Flow]

5.4.2.1. Spectification

- TX Pulser + TR Switch 8 ea (HDL6M5585, 8CH)
 - Pulser applied with built-in Limiter
- ALL IN ONE AFE 4 ea (MAX2079, 16CH), LNA+VGA(TGC)+ADC +CW I,Q
- BF FPGA (XC7K325T-2FFG900, 1 ea)
 - RX Dynamic Aperture
 - RX Apodization
 - Synthetic Aperture
 - Trapezoidal imaging
 - Multi-line receiving
 - TX Focal point
- CWD processing

5.4.2.2. Description

■ Transmit Channel

The Transmit Channel function applies a high voltage signal to the probe element to generate ultrasound waves. It generates a high voltage pulse to transmit arbitrary waveforms from the BF FPGA.

The Transmit Part consists of the BF FPGA and the Pulser.

① BF FPGA

The BF FPGA uses a RTC signal to calculate a delay time for TX focusing and fires a pulse as an output to each TX channel.

② Pulser

The Pulser amplifies the Firing Pulse input signal into a high voltage output signal that is sent to each probe element. As a result, the probes vibrate and generate ultrasound.

■ Receive Channel

The Receive Channel amplifies the echoes reflected from the human body. This signal is converted from analog to digital for beamforming by the BF FPGA. The BF FPGA focuses the signals from each channel and sends them to the BE Board. The Receive Part consists of TR Switch, AFE, and BF FPGA.

① TR Switch

Each probe element is connected in parallel to the TX Channel and the RX Channel. Up to 180 Vpp Tx Pulse and mV-range Echo signals are mixed with each other. The RX data is required to be an echo signal in the mV range, which is very weak signal. The TR Switch prevents the high-voltage Tx Pulse from flowing into the AFE input, but permits low-level echo signals to pass.

② AFE

HS40 uses an all-in-one type AFE. One AFE performs the roles of LNA, TGC, and ADC for existing equipment. The AFE amplifies the mV-range echo input signal and performs gain compensation over time. It also transmits the digitized RX Data to the BF FPGA.

③ BFX FPGA

The BF FPGA performs RX focusing for each RX Channel data received from the AFE and combines the whole channel data. Then, it transmits the summed data to the BE Board.

5.4.3. Back End Board

The Back End Board (hereafter referred to as the BE Board) includes the following three key features:


- RTC (Real Time Controller) / Host Interface
- DMA (Direct Memory Access) Control
- IQ Digital Signal Processing

The RTC generates control signals for the system, performs Digital Signal Processing on RF data entered via the BF board, and then transfers the DMA to a PC via the Path.


Digital Signal Processing implements some functions of the Mid Processor in the existing system and transfers data to the SW DSC via the DMA. The FPGA only covers the steps leading up to the data reconfiguration, which is necessary for image implementations, while the SW DSC handles the actual image implementation process.




[Figure 5.8 Back End Board Top Side]

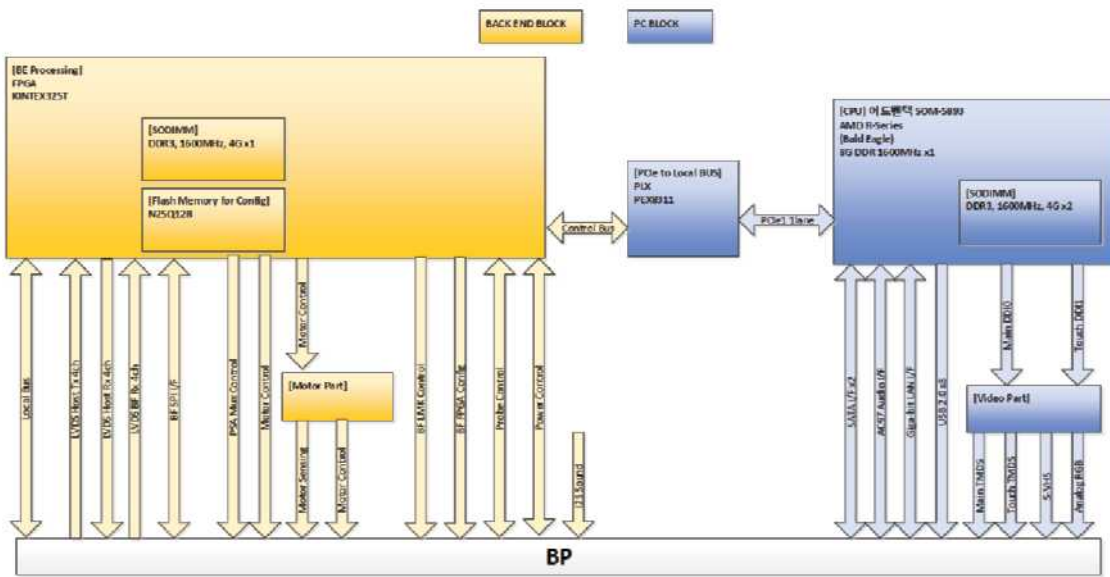


[Figure 5.9 Back End Board Block Diagram]

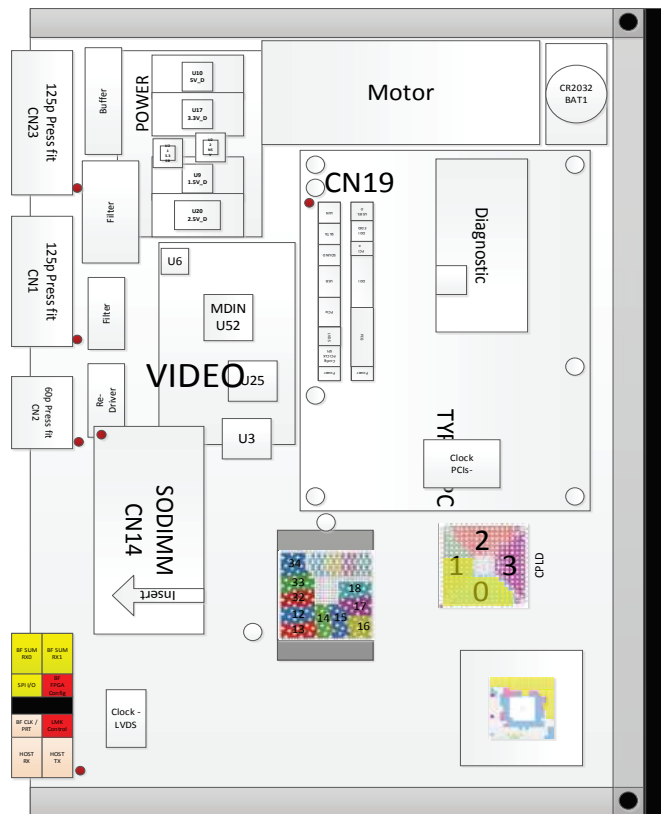

[Figure 5.10 Back End Layout]

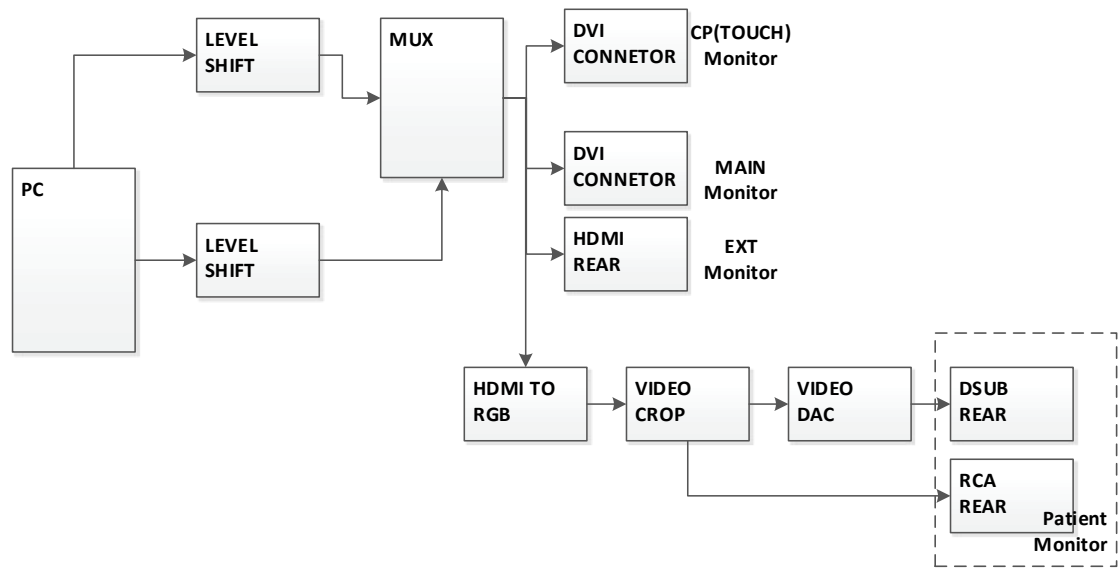

[Figure 5.11 HDMI and Image out Port Block]

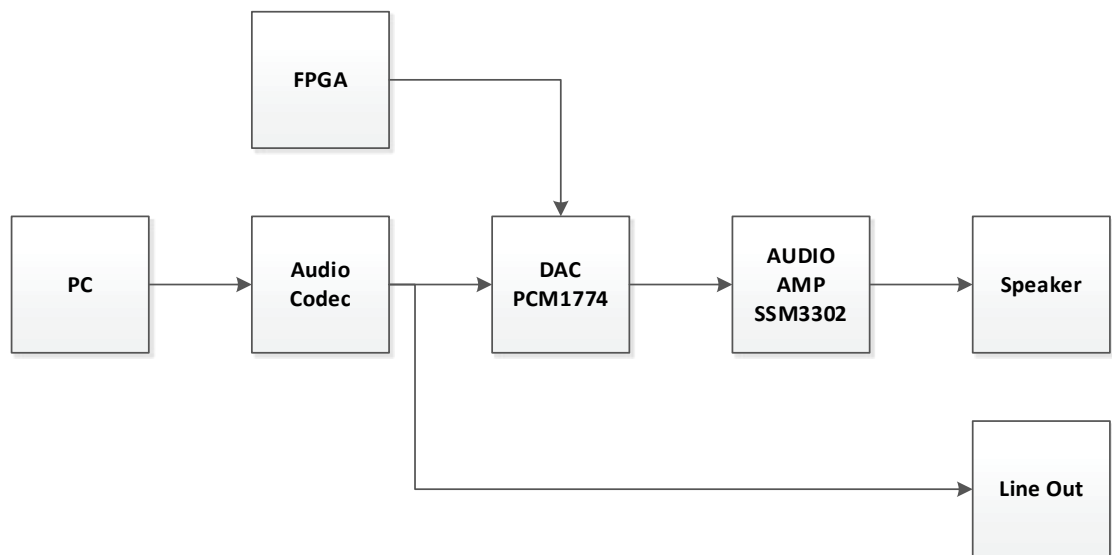

[Figure 5.12 Sound Block Diagram]

5.4.3.1. Specification

- Focused RF Data Interface
- BW Data Processing
- Spectral Doppler Data Processing
- Color Doppler Data Processing
- Digital Signal Processing (Pre Processing, Post Processing)
- CW IQ data Interface (CWD)
- Direct Memory Access
- 3D Probe Motor Driver
- Diagnostic Signal Processing
- RTC (Real Time Controller)
- PCI-express Interface

5.4.3.2. Digital Signal Processing (DSP) Part

The Back End Board's MID FPGA (KINTEX325T) consists of the Digital Signal Processing Part, which transforms the Focused RF Data input by the BF Board into Base-Band IQ Data.

The RF Data input goes through the Gain Control, High-Pass Filtering, Quadrature Demodulation, and Decimation processes and then is sent to the DMA FPGA so that the Base-Band IQ Data can be transmitted to the PC SW Module.

5.4.3.3. Host Interface & RTC Part

■ Host Interface

The Host Interface integrated into MID FPGA (KINTEX325T) is connected to the PC on PCI-Express 1 Lane through the PCI-Express Switch. The Host Interface converts Host Commands from the PC with the Local Bus and provides interfaces for each of the Ultrasound System's boards.

■ RTC Part

The RTC (Real Time Controller), which is integrated into the MID FPGA, controls the operation of the system by generating the standard signals that are needed for the operation of the entire system in real time. It generates PRF (Pulse Repeat Frequency), OF (One Frame), RP (Rate Pulse), Linotype, and Scan Line, which are required for the BF Board and the DSP Part of the BE Board.

5.4.3.4. DMA Part

The Direct Memory Access (DMA) Part, which is integrated into the Back End Board's MID FPGA (KINTEX325T), consists of the PCI-Express Gen1 1 Lane to transfer large amounts of Base-Band IQ Data at high speed, and functions as a PCI-Express Interface within the FPGA.

It has a DDR3 SODIMM (4Gbyte) external memory in order to save large capacity Base-Band IQ Data by frame.

5.5. PC Part

5.5.1. PC Module

Certain functions of Digital Signal Processing, previously handled by the hardware, are now implemented by the Software Program. This module provides various peripheral ports for connecting the PCI-Express 1 Lane and user interface for controlling the Ultrasound System and receiving Base-Band IQ Data. This module consists of a Dual Port VGA Card for the Main Monitor and Touch Panel outputs and a Rear Module for the exporting of various external images.

5.5.1.1. Specification


- PC Module: Advantech , Com Express Module (SOM-5893)
- CPU: AMD 2.7GHz, R-Series (Bald Eagle)
- RAM: DDR3 SDRAM 8GB
- Storage: HDD 500GB SATA-2 2.5", 7200RPM
- OS: Windows 7 64bit
- Monitor: 21.5" Full-HD (1920 X 1080) LED Display
- VGA: Internal Graphic Chip (Radeon HD9000)




[Figure 5.13 PC Module & Storage]

5.5.2. Rear IO Board

It serves as an In/Out Interface with external devices and also as a data interface with the control panel. This board handles the image output for both the screen display and the touch screen. It provides a VHS, S-VHS, and DVI Port to support various means of externally storing images.

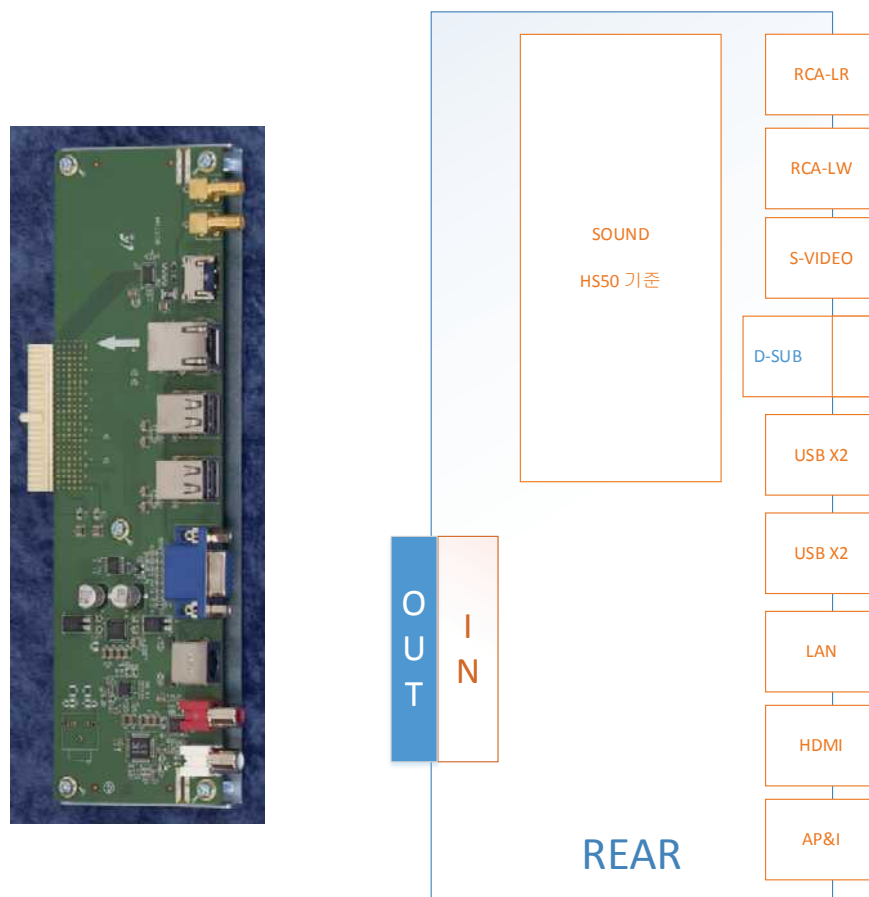

[Figure 5.14 Rear IO Board & Layout]

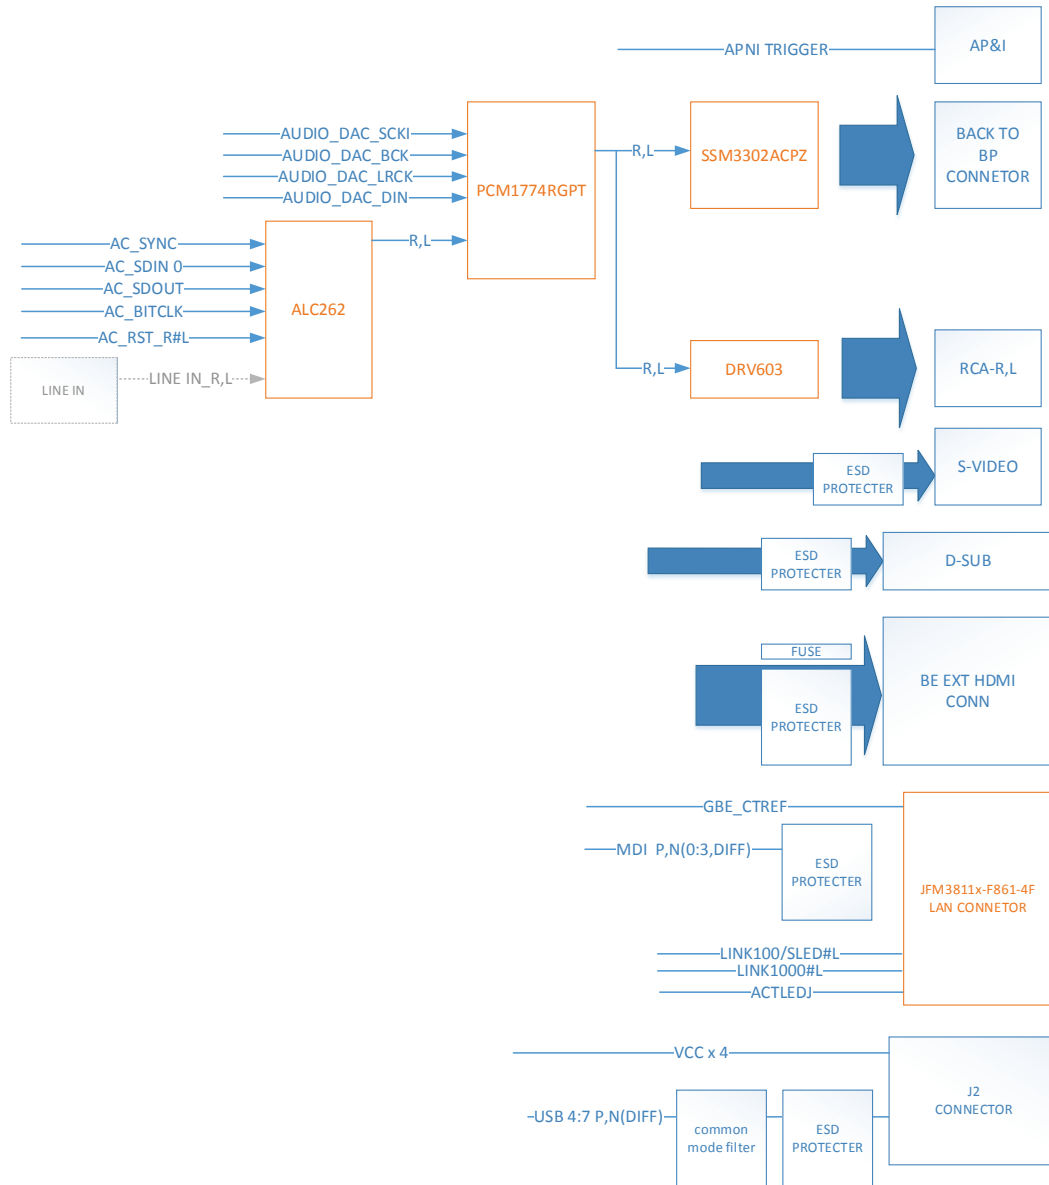


[Figure 5.15 Rear IO Block Diagram]

5.5.2.1. Specification

- S-Video OUT
- Speaker L/R
- LAN
- USB 4 Port
- HDMI OUT 1 Port
- D-SUB(RGB) 1 Port

5.5.3. Software DSC

The image data generated by the BE board is transferred to the PC Memory. The DSC processes image data input in various image forms and exports them to the VGA card.

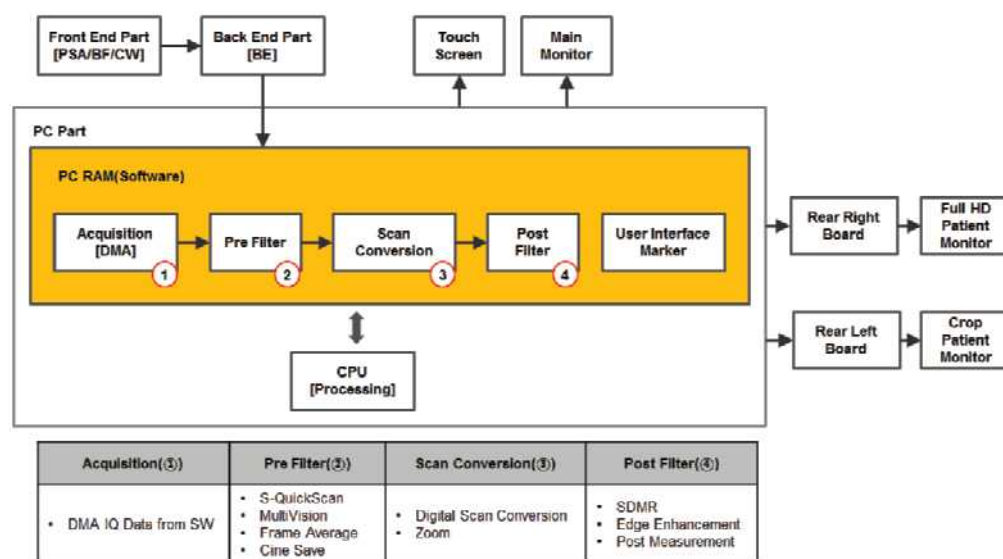

[Figure 5.16 DSC Block Diagram]

5.5.3.1. Specification


- Cine for 5,140 frame
- Loop Review for 8,192 lines
- Zoom
- Edge Enhancement
- Multi-Slice View
- Dynamic MR (Optional)
- Quick Scan
- Real-Time Auto Calculation time Doppler Auto Trace
- Free Angle M-Mode
- Post measurement
- Post image optimizing process Arbitrary M mode
- Help function

5.6. User Interface Part


5.6.1. Control Panel

It serves as the interface between the user and the system. It connects to the Key Matrix Board, Touch Screen, Trackball, and more via USB hub, and operates as commanded by user.

5.6.1.1. Control Panel Module

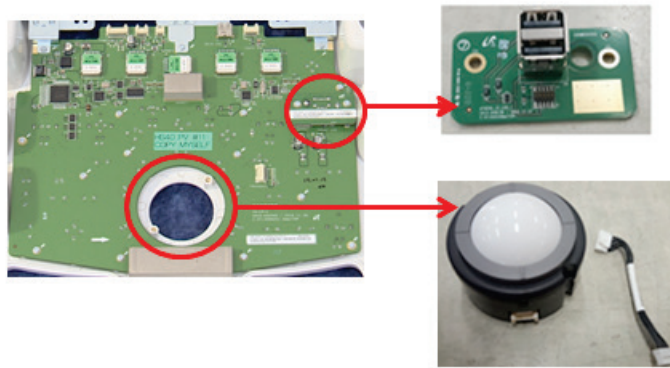

[Figure 5.17 Control Panel Module]

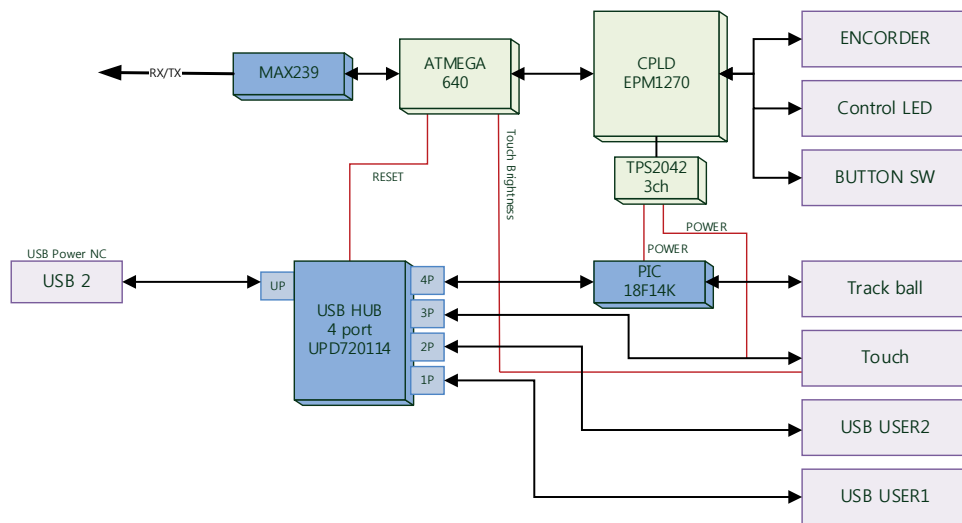

[Figure 5.18 Control Panel Block Diagram]

5.6.1.2. Specification

- Input part
Consists of Key Switch, Encoder, and Trackball
- Control part
 - ① ATMEGA640(8bit Microcontroller)
Processes input data and relays it to the CP_USB B/D.
 - ② MAX II EPM1270 (Altera CPLD)
 - Touch Panel power on/off Control
 - LED outputs / Knob control
 - Trackball power on/off control
 - ③ PIC18F14K50 (USB Mouse Controller)
Track ball interface
- CP_USB Part
User USB 2 Port

5.6.2. Main Monitor

A 21.5" Samsung Full-HD Wide LED Panel is used.



[Figure 5.19 Main Monitor]

5.6.2.1. Specification

ITEM	SPECIFICATION	UNIT
Display area	21.5" Samsung Display	Inch
Number of Pixels	1920 x 1080 RGB stripe arrangement	Pixels
Pixel Pitch	0.2475 (H) x 0.2475 (V)	mm
Electrical Interface	LCD Panel Input: HDMI	
Display colors	16.7M colors (Hi-FRC)	
Viewing angle	89°/89°/89°/89° (CR≥10)	
Display mode	Normally Black	

5.6.3. Touch-Screen

A 10.1" Samsung Panel is used.




[Figure 5.20 Touch Screen]

5.6.3.1. Specification

ITEM	SPECIFICATION	UNIT
Display Size	10.1" Samsung Panel	mm
Display colors	16.2M	colors
Number of pixel	1280 x 800 (16:9)	pixel
Pixel arrangements	RGB vertical stripe	
Pixel pitch	0.1695 (H) x 0.1695 (V)	mm
Display Mode	Normally Black	
Surface treatment	Hardness (3H)	


5.6.4. Display Layout

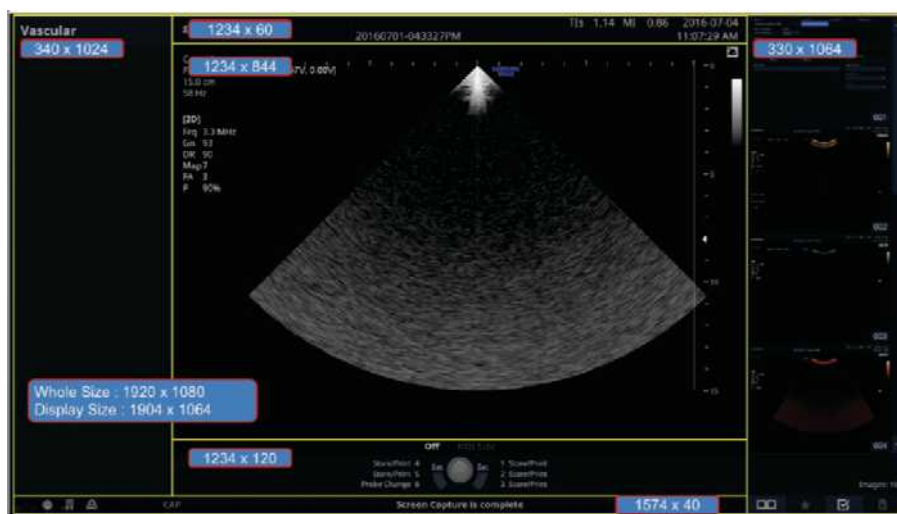

[Figure 5.21 Display Layout]

5.7. Power Part


5.7.1. ADM

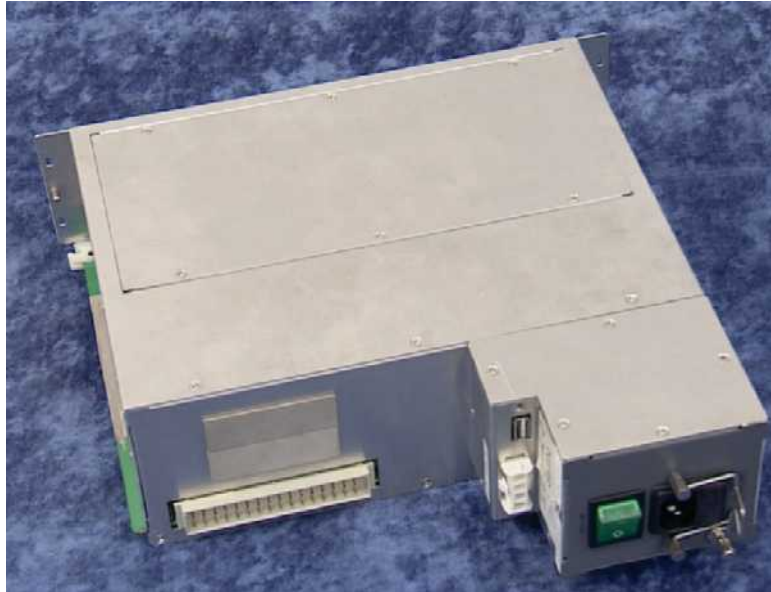

[Figure 5.22 ADM Image]

5.8. Interconnect Diagram

5.8.1. HS40 Interconnect Diagram

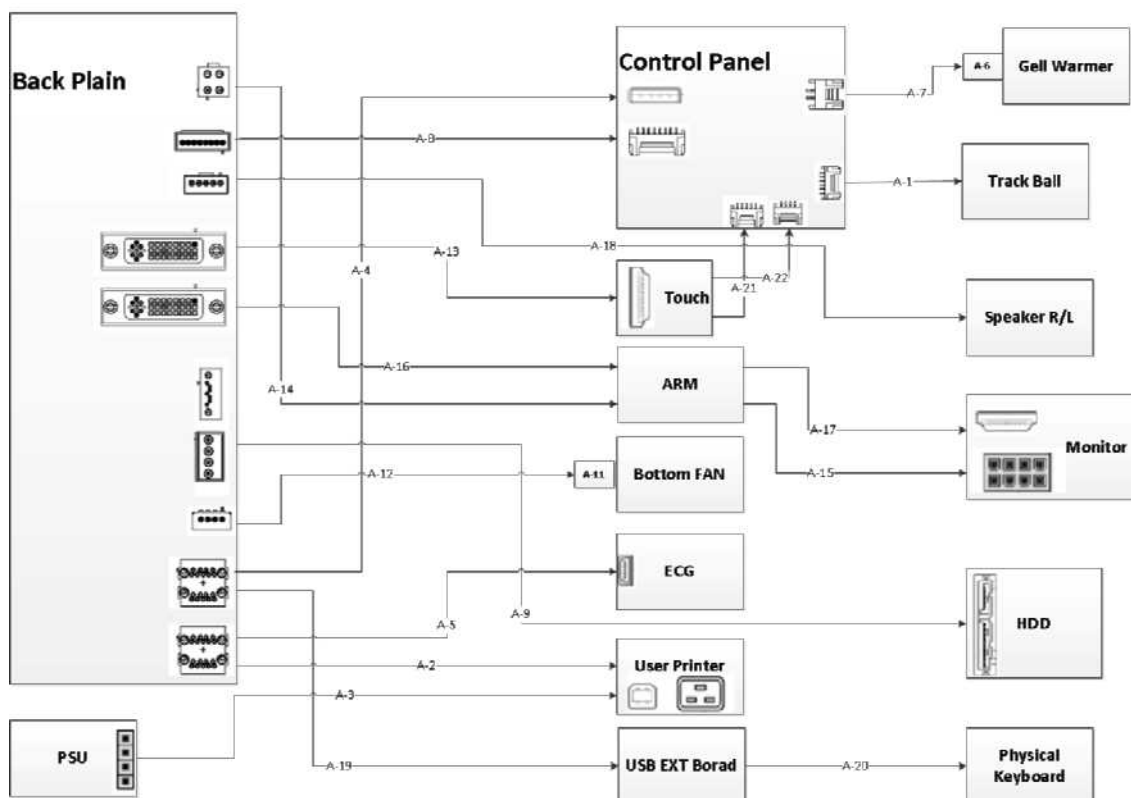

[Figure 5.24 Interconnect Diagram]

5.8.2. Cable Description

5.8.2.1. Cable

NO	CIS CODE	SPECIFICATION	Signal	Lock Type		Description
				A	B	
A-1	MI39-02065A	CBF CABLE- HS50_CP_TRACKBALL	USB2.0	Lock	Lock	TRACKBALL
A-2	MI39-02030A	CBF CABLE- HS50_BW_PRINTER_USB	USB2.0	Lock	unLock	USER PRINTER
A-3	MI39-02056A	CBF CABLE- HS50_PRINTER_POWER	POWER	Lock	unLock	AUX PRINTER
A-4	MI39-02173A	CBF-USB-BP-CP	USB2.0	Lock	Lock	CP USB
A-5	MI39-02025A	CBF CABLE- HS50_ECG_USB	USB2.0	Lock	unLock	ECG
A-6	MI39-02006A	CBF CABLE-GEL WARMER_LEFT	POWER	Bracket	unLock	GELWARMER(12V)-Ex
A-7	MI39-02174A	CBF-GEL WARMER-CP	POWER	Lock	Bracket	GELWARMER(12V)-In
A-8	MI39-02184A	CBF-TOTAL-BP-CP	POWER	Lock	Lock	CP Power (5V, 12V, SIGNAL)
A-9	MI39-02172A	CBF-SATA-HDD-BP	Signal	Lock	Lock	HDD(5V, 12V, SATA)
A-10	MI39-02171A	CBF-GND		NA	NA	GND CABLE
A-11	MI39-02176A	CBF-FAN-BP-BOTTOM	POWER	Lock	NA	FAN(12V)
A-12	MI39-02177A	CBF-FAN-BOTTOM-EXT	POWER	Lock	Lock	FAN(12V) Extension – Internal
A-13	MI39-02178A	CBF-HDMI-TOUCH-BP	HDMI	Lock	Lock	TOUCH HDMI
A-14	MI39-02181A	CBF-POWER-BP-ARM	POWER	Lock	Lock	Monitor Power ARM In 1
A-15	MI39-02182A	CBF-POWER-ARM	POWER	Lock	Lock	Monitor Power ARM In 2
A-16	MI39-02179A	CBF-HDMI-ARM-BP	HDMI	Lock	Bracket	Monitor HDMI In 1
A-17	MI39-02180A	CBF-HDMI-ARM- MONITOR	HDMI	Bracket	Bracket	Monitor HDMI In 2
A-18	MI39-02183A	CBF-SOUND-BP	Signal	Lock	Lock	SPEAKER
A-19	MI39-01647B	CBL-EVE-USB-HUB-DCK	USB2.0	Lock	Lock	ALPHAKEYBOARD EXT
A-20	MI39-02203A	CBF-USB- ALPHAKEYBOARD	USB2.0	Lock	unLock	KEYBOARD In
A-21	MI39-02061A	TOUCH USB CABLE	USB2.0	Lock	Lock	TOUCH USB
A-22	MI39-02202A	TOUCH POWER CABLE	POWER	Lock	Lock	TOUCH POWER
A-23	MI39-01378A	AC Cord	POWER			AC CORD

[Figure 5.25 Cable]

Chapter 6

Service Mode

6.1. Service Mode.....	3
6.1.1. How to Enter the Service Mode	3
6.2. Service Information	4
6.3. Configuration	5
6.3.1. Clock	5
6.3.2. Keyboard/Region	5
6.3.3. TCP/IP	6
6.3.4. Option	7
6.3.5. User Account and User Account Management.....	8
6.3.6. Printer	9
6.4. System	10
6.4.1. Upgrade Software	10
6.4.2. System Serial Number	11
6.4.3. Window Explorer	12
6.4.4. Install Recovery System	13
6.5. Diagnostics.....	14
6.5.1. Control Panel Test	14
6.5.2. Keyboard Test.....	14
6.5.3. Power On Self Test.....	14
6.5.4. Built in Self Test	14
6.5.5. Monitor Test	14
6.6. Backup and Restore.....	15
6.6.1. Backup	15

6.6.2. Restore	15
6.6.3. Log Backup	15
6.7. Report	16
6.7.1. Report	16
6.8. Demo Play.....	17
6.8.1. Demo Play.....	17
6.9. Enter Installation Key	18


6.1. Service Mode

Chapter 6 describes the Service Mode used for servicing HS40.

This chapter explains how to update the version, back up the system, and enter the Service Mode as well as how to add options and perform diagnostics.

6.1.1. How to Enter the Service Mode


1. Press **Setup** button on alphanumeric keyboard.
2. Click the Service Mode on the left bottom.
3. Make sure that the Select User Level option is set to Service Engineer.
4. Enter the password into the Password box.
5. If the password is correct, you can go to the Service Mode.

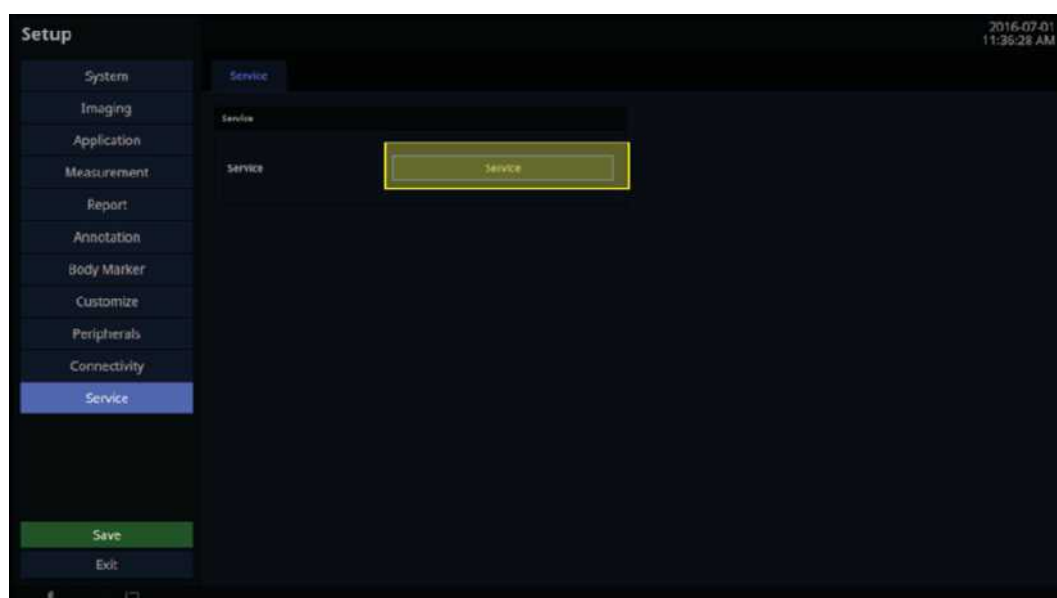

[Figure 6.1 Service Mode screen]

6.2. Service Information

Service Information shows details about the hardware and software version of the product as well as the version information of each board.

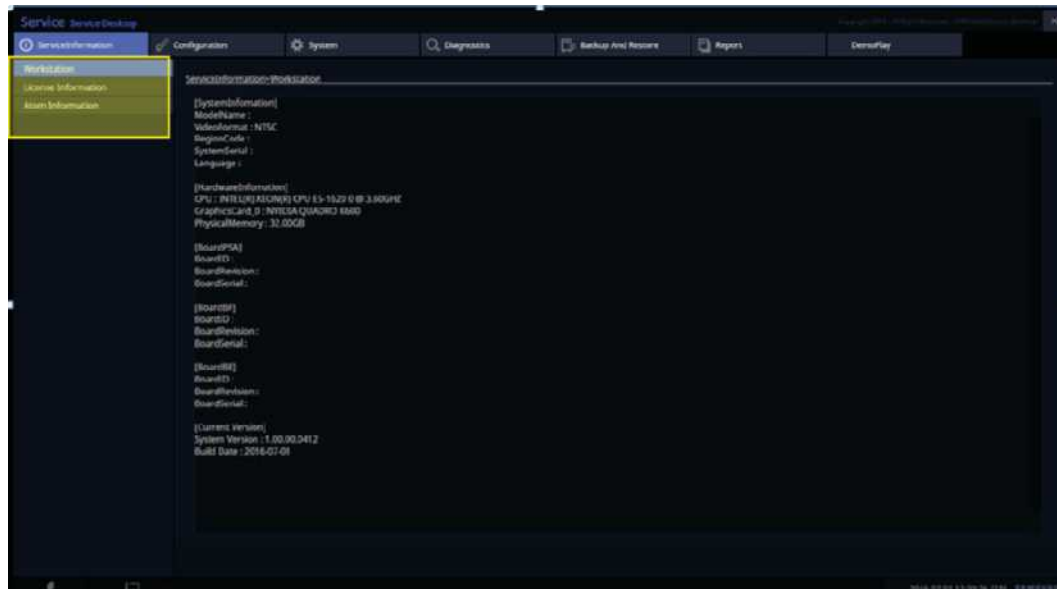


[Figure 6.2 Service Information screen]

- Workstation: Displays the information on the system, hardware, and software version of the workstation.
- License Information: Displays the information on the license used in software.
- Atom Information: Displays the information about Atom.

6.3. Configuration

6.3.1. Clock

Here, you can change the date, time, and time zone of the Windows System.

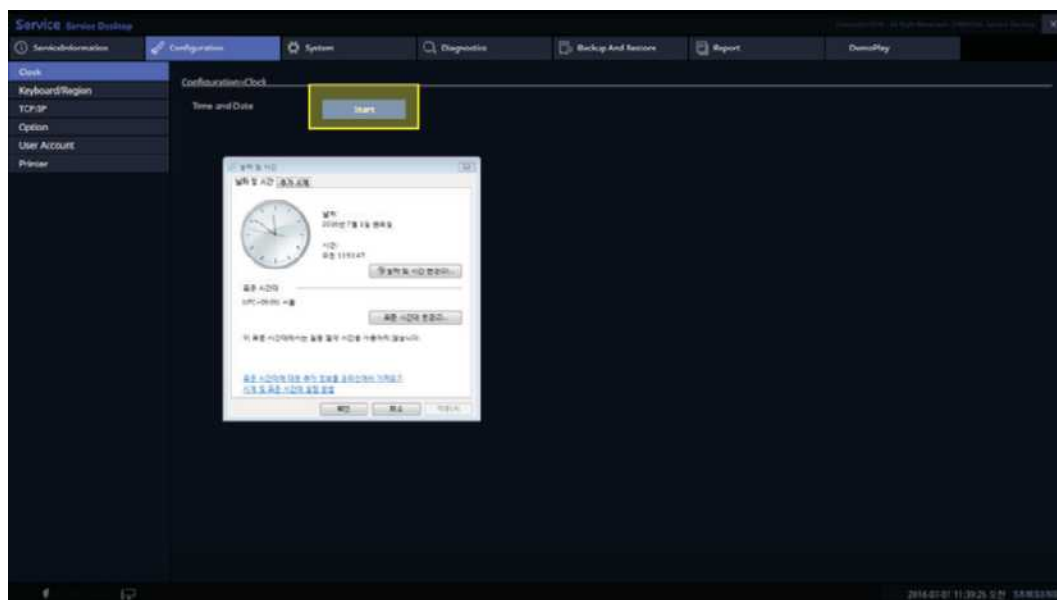


[Figure 6.3 Clock screen]

6.3.2. Keyboard/Region

- Keyboard Type: international, French, German...
- * Caution: The System needs to be restarted when the Type changes.
- Region: Select a region (WW, US, CN, RU...)
- **Apply** button: Apply the region you select.

6.3.3. TCP/IP


- Commands: Check PC's IP Config information on the right Result screen.
- LAN: Configure the wired connection properties.
- WLAN: Configure the wireless connection properties.
- Support: Add a new device, install drivers, and run Device Manager.

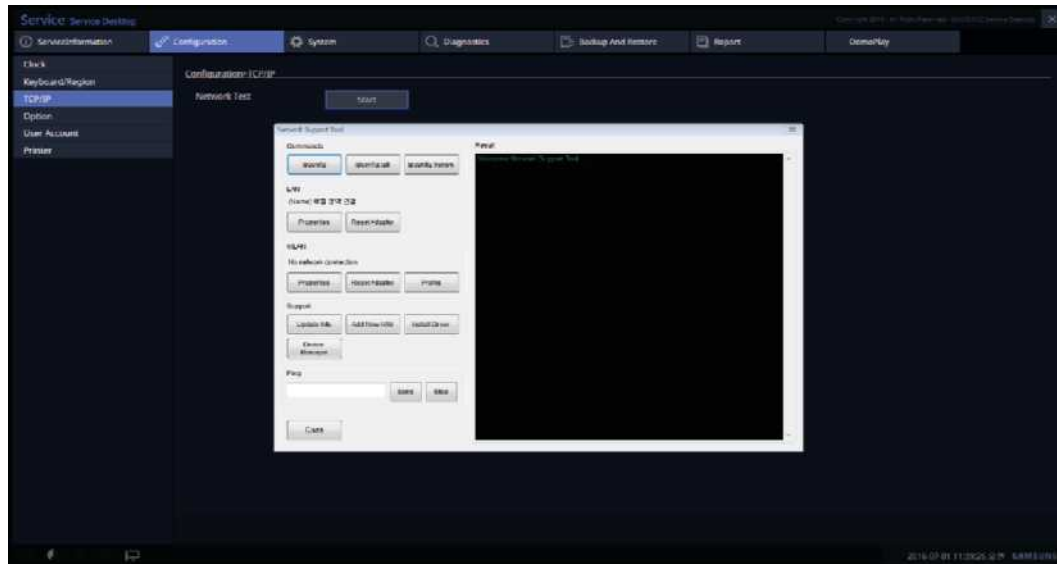

[Figure 6.4 TCP/IP screen]

6.3.5. User Account and User Account Management


- Reset: Reset all user accounts managed by User Account Manager.
- User Account Manager: Setup → System → Account
- If User Login status is enabled, the user is automatically logged out.

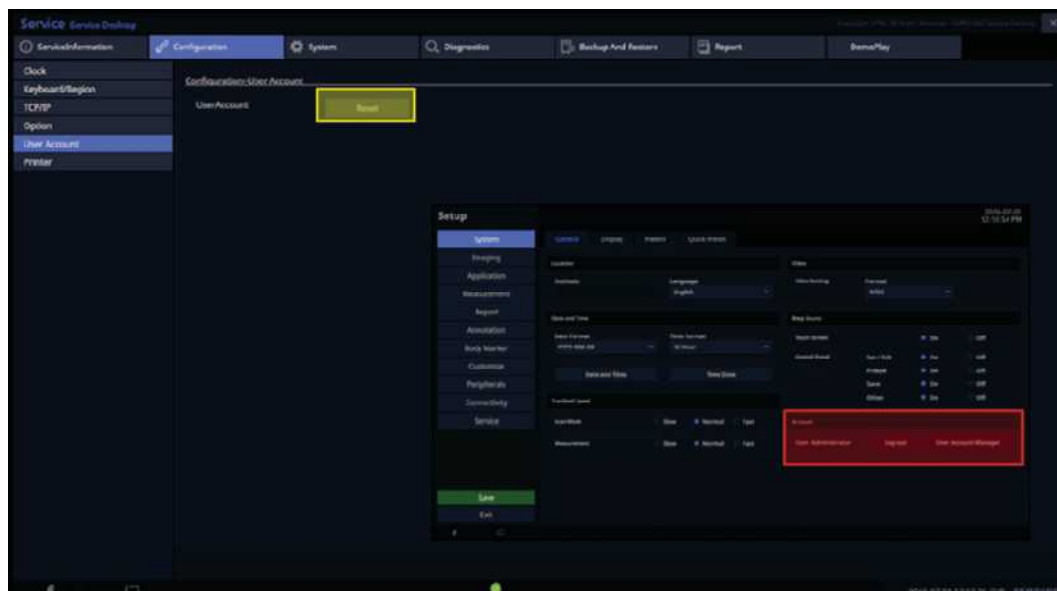

[Figure 6.6 User Account Screen]

6.3.6. Printer

- Printer: Apply default settings of printer.
- Properties: Apply the default printing settings of a printer you select.
- Add Printer: Install a new printer driver.
- System restart is required to install the new printer driver.

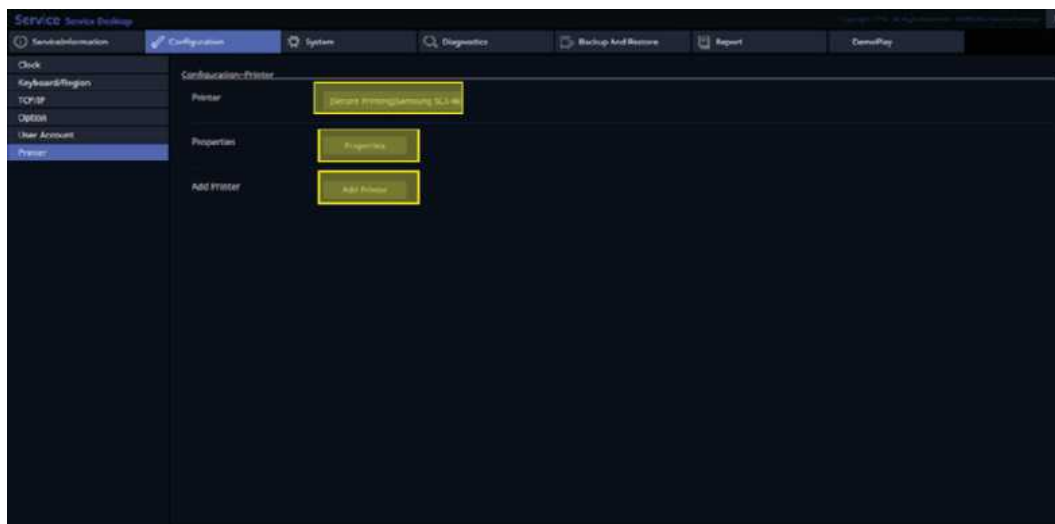


[Figure 6.7 Printer Screen]

6.4. System

6.4.1. Upgrade Software


Install ultrasound software and check its patch version.

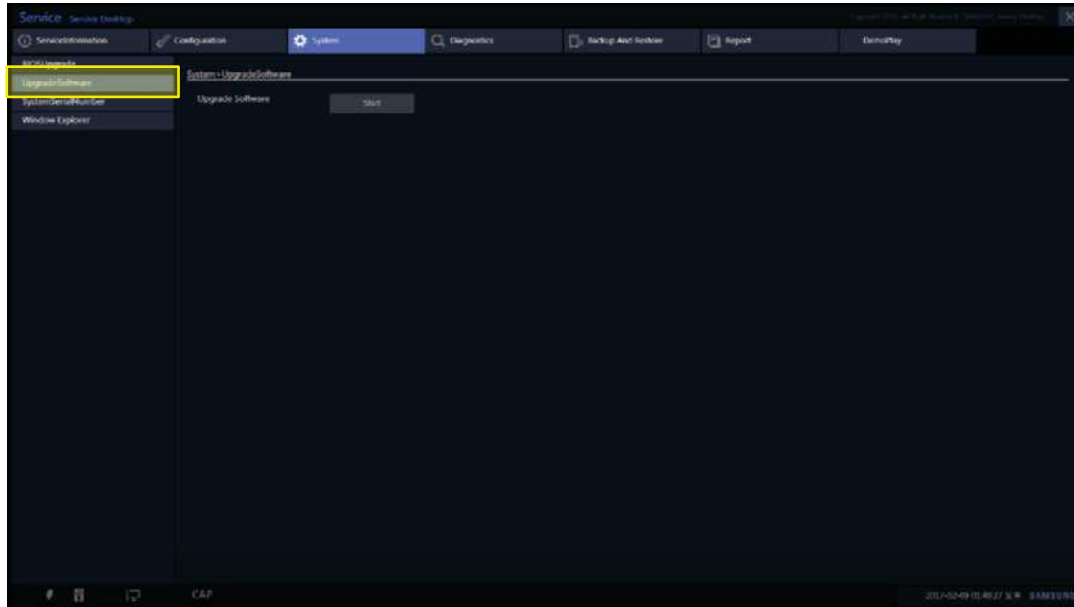

[Figure 6.8 Upgrade Software Screen]

6.4.2. System Serial Number


Change the System Serial Number of the ultrasound software.

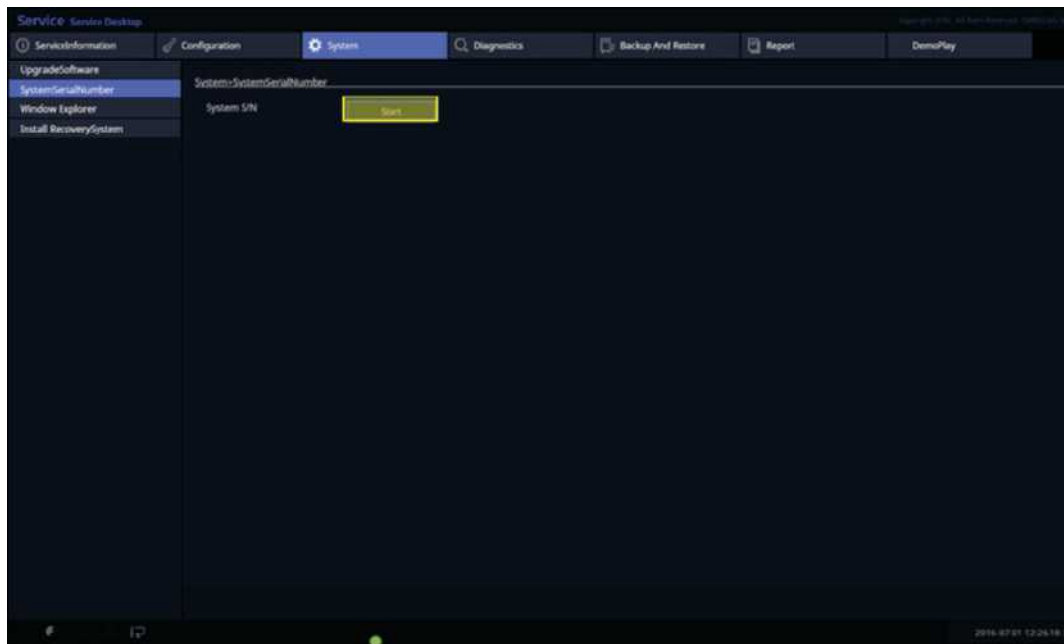

[Figure 6.9 System Serial Number Screen]

6.4.3. Window Explorer


- Displays the Windows Explorer, so you can check the information of the Windows Local Directory.
- In case of System, only E: (DATA) drive gets enabled.

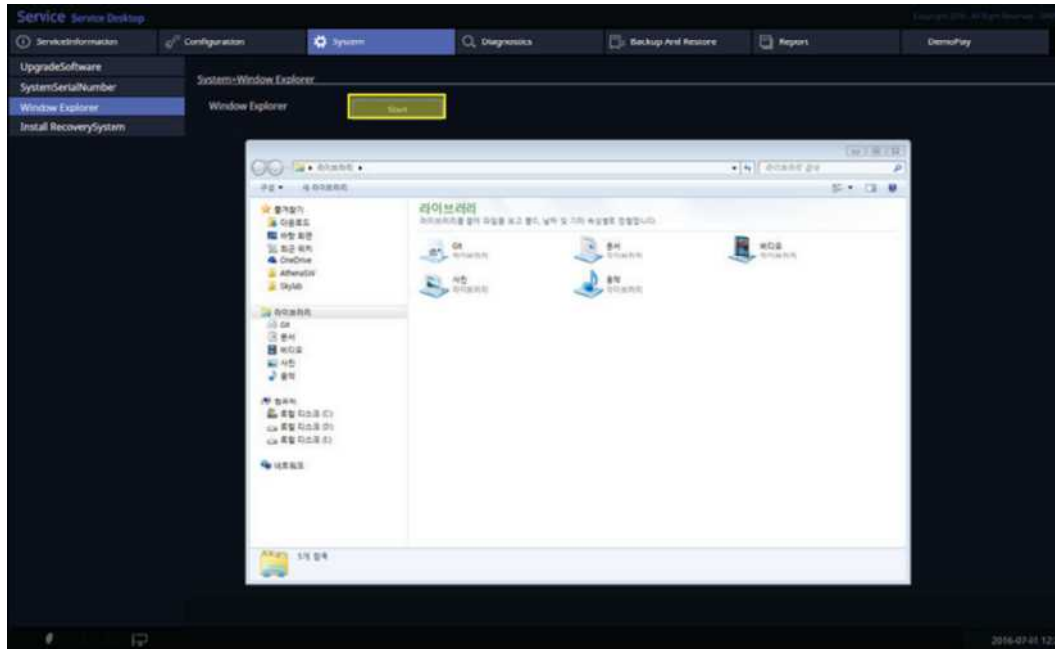

[Figure 6.10 Windows Explorer Screen]

6.4.4. Install Recovery System

- Reboot the system.
- Enter OS environment for software recovery.

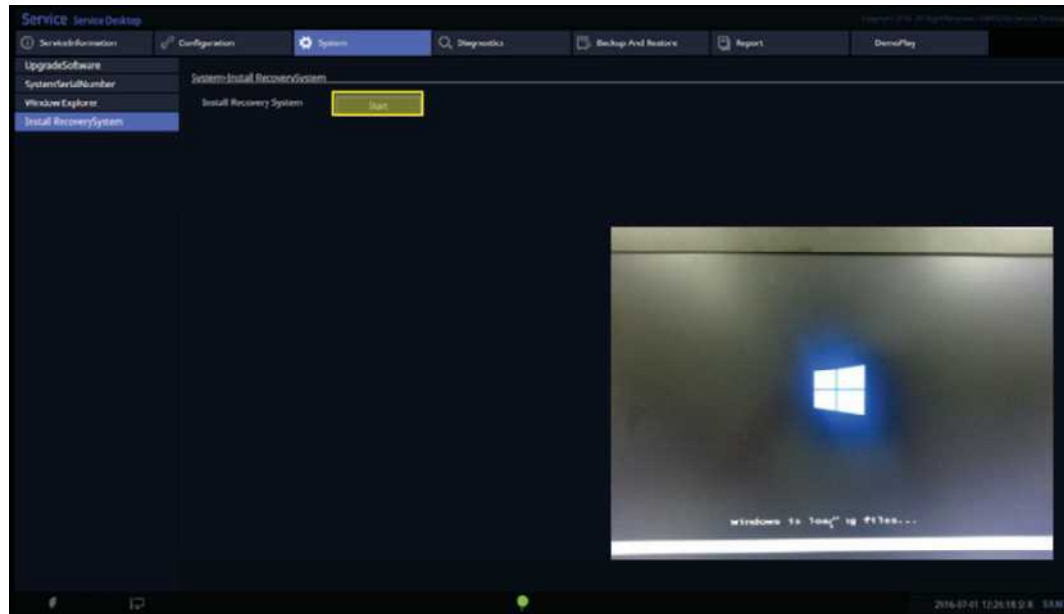

[Figure 6.11 Install Recovery System Screen]

6.5. Diagnostics

6.5.1. Control Panel Test

Test each button on the Control Panel.

6.5.2. Keyboard Test

Test each button on the Keyboard.

6.5.3. Power On Self Test


Perform a self-diagnosis of the PIST System.

6.5.4. Built in Self Test

Perform a self-diagnosis of the BIST System.

6.5.5. Monitor Test

Test the color sense and brightness of the monitor.

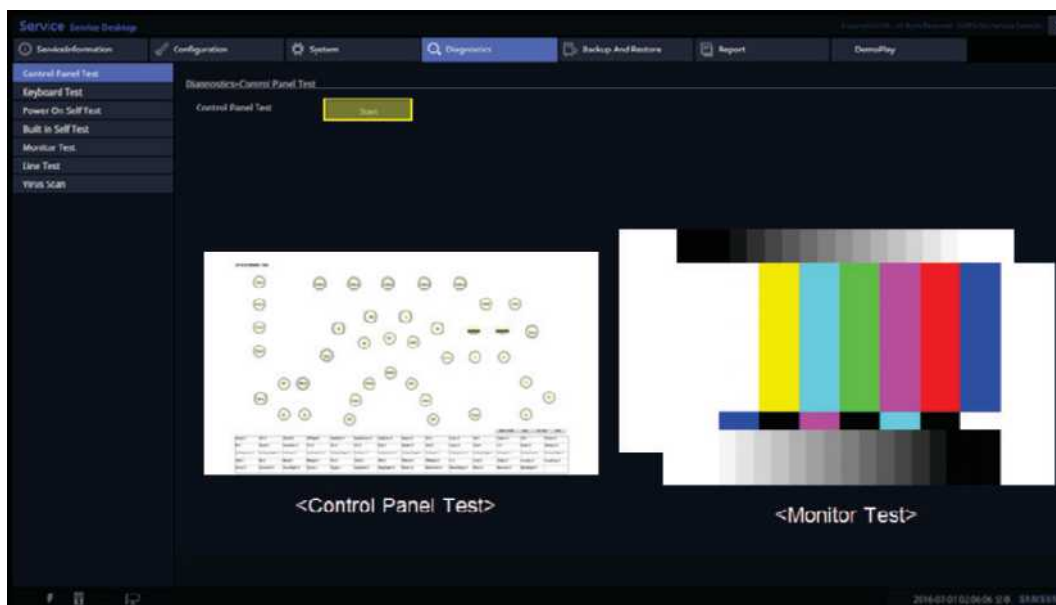

[Figure 6.12 Monitor screen]

6.6. Backup and Restore

6.6.1. Backup


- Backs up the user data files you select.
- External storage devices such as USB drive or CD drive are required.

6.6.2. Restore

- Restores a selected user data file.
- Previously stored backup data is required.

6.6.3. Log Backup

- All logs and DB files stored on the system can be copied to a storage device.
- You must have an external storage device (e.g., USB drive) ready before backing up logs.

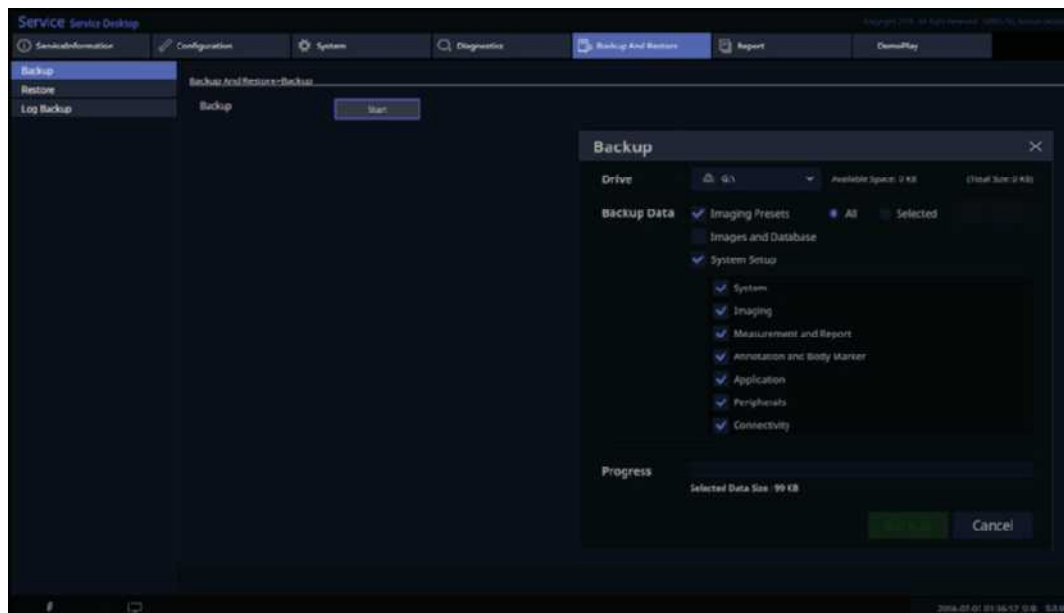


[Figure 6.13 Log Backup Screen]

6.7. Report

6.7.1. Report

Shows log information stored in the system regarding State, Temperature, Diagnostic SW, POST, BIST, and Connectivity.

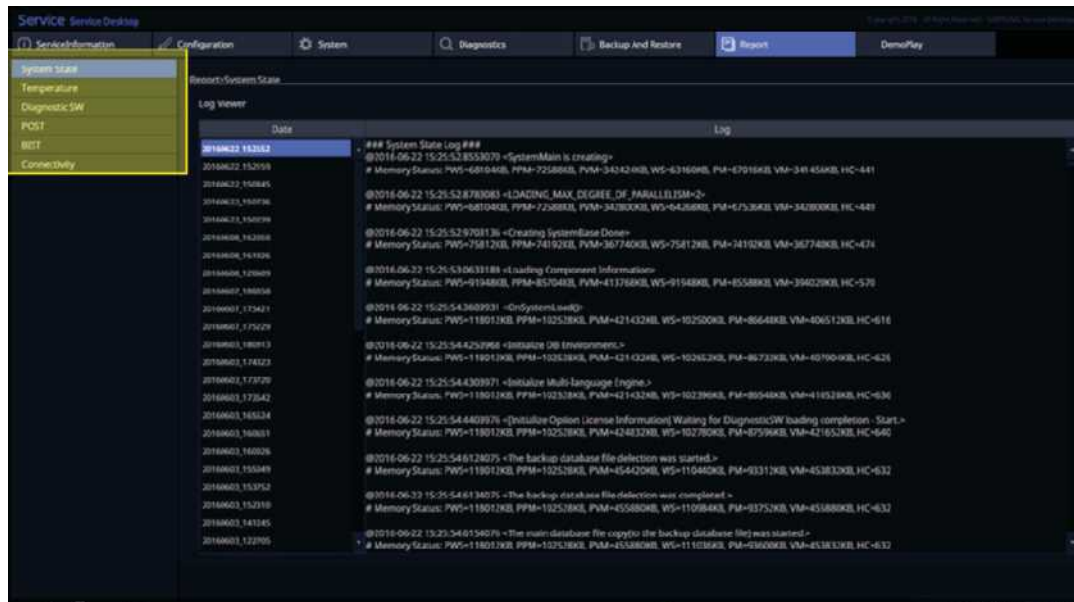


[Figure 6.14 Report screen]

6.8. Demo Play

6.8.1. Demo Play

- Play: Plays images previously stored on the system.
- Import: Imports images from a USB drive or CD and saves them in a specified location.
- Delete: Deletes all stored images.
- Interval: Adjusts time intervals between images being played.

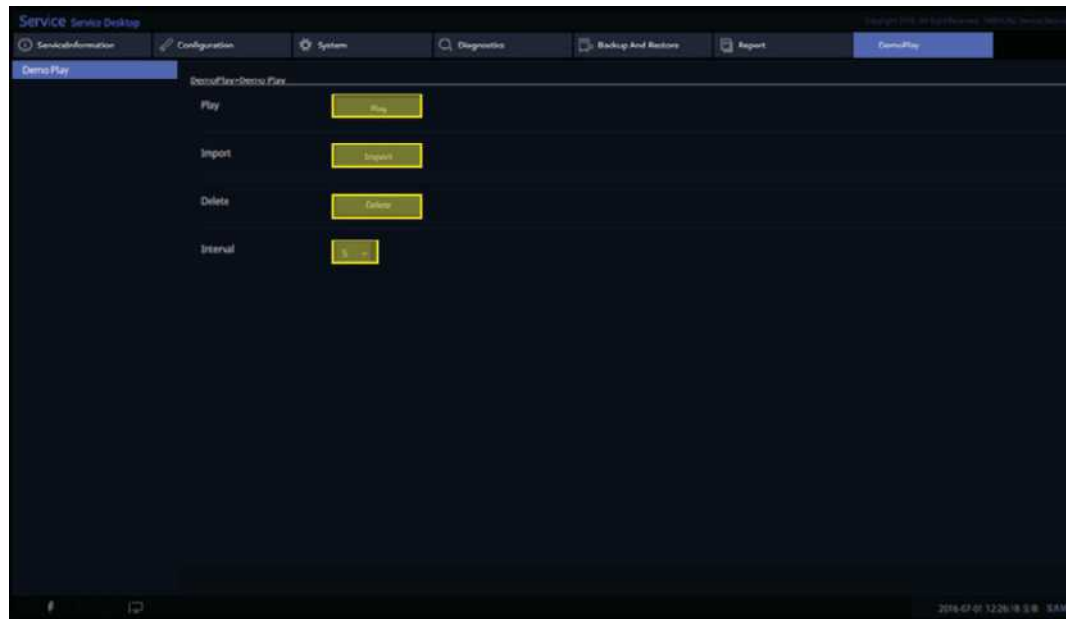

[Figure 6.15 Demo Play screen]

6.9. Enter Installation Key

Register the system after installing the software.

1. Once the system reboots after installation, the *System Installation* screen will be displayed.



[Figure 6.16 System Installation input window]

2. Enter the Installation Key.

The Installation Key can be acquired from Samsung Remote Service.

TIP Samsung Remote Service

Samsung Remote Service is used to issue the installation keys required for product authentication. Please enter the required information, such as the product name, user, and distributor.

URL: <http://www.samsungremoteservice.com/rm/identity/anonymous/ussInstKey.html>

1. Enter product name, user, and distributor information.
 - Serial No: Enter the product serial number. The serial number is located on a label on the exterior of the product.
 - Code: Enter the code shown on the System Installation screen.
 - Enter the name of the hospital and your vendor information in the Hospital Information and Distributor field.
2. Press **Install key Generate** to acquire your installation key.



[Figure 6.17 Samsung Remote Service]

3. Press **Authentication** to complete the authentication process.

Chapter 7

Troubleshooting

7.1. Power Issues.....	2
7.1.1. Power Does Not Turn On	2
7.1.2. Power Does Not Turn Off.....	2
7.1.3. Power Turns Off by Itself.....	2
7.2. Monitor.....	3
7.2.1. Nothing Is Displayed on the Screen	3
7.2.2. Screen is Discolored.....	3
7.3. Error Messages	4
7.3.1. Error Occurs During Booting	4
7.4. Image.....	4
7.4.1. 2D Mode: There is No IMAGE ECHO or IMAGE FORMAT	4
7.4.2. Lines (Noise) Appear in 2D Mode Image	4
7.4.3. M, C, PW, CW Mode Trouble	4
7.5. USB Drive Unrecognized.....	5
7.5.1. Failed to recognize the USB (Removable device) device	5
7.6. Trouble Shooting Tree	6

7.1. Power Issues

7.1.1. Power Does Not Turn On

The power cord may be unplugged, the PSU may have failed to output the necessary voltage, or the power socket may have failed.

1. Make sure the power cord is properly plugged in and the power switch is on.
2. Connect a different appliance to the power outlet to see whether it works.
 - If the appliance works, the power connection part has failed.
 - If the appliance doesn't work, the power outlet has failed.
3. Check if the system fan works.
 - If the fan works, the problem is likely to be caused by reasons other than the power connection part.
 - If the fan does not work, it is likely that the PC Power has failed.
4. Check the output voltage of the PSU.

7.1.2. Power Does Not Turn Off

The software is running or a software error may have occurred; alternatively, the PC Module and/or BE may have failed.

1. Press and hold the Power button for at least 3 seconds and the power will turn off automatically.

However, the power will not turn off if hardware such as the printer hasn't stopped working yet or if an OS error has occurred.
2. If the power doesn't turn off even after trying the method described in 1, it is possible that the PC Module and/or BE board may have failed.

7.1.3. Power Turns Off by Itself

It is likely that the Power Cord, PC Module, BE Board, Cable & Connector Pin (shorted), and/or PSU may be defective.

1. Make sure the power cord is properly plugged in and the power switch is on.
2. Connect a different appliance to the power outlet to see whether it works.
 - If the appliance works, the power connection part has failed.
 - If the appliance doesn't work, the power outlet has failed.
3. Check the LED status of the PSU.
4. If the power doesn't turn off even after trying the methods described in '1' and '2', it is possible that the PC Module, BE board, and/or PSU may have failed.

7.2. Monitor

7.2.1. Nothing Is Displayed on the Screen

The HDMI Cable, the monitor, or the PC Module may be defective.

1. Check the status of the product with the printer output.
2. Check the status of the monitor connection cable.
3. If the methods in '1' and '2' fails to solve the problem, it is possible that the monitor and/or PC Module may have failed.
Please inspect the PC Module, BE Board, or BP Board.

7.2.2. Screen is Discolored

The Monitor and HDMI cable may have failed or the Monitor and/or PC Module may have failed.

1. Check the status of the monitor connection cable.
2. If the method described in '1' fails to solve the problem, it is possible that the monitor and/or PC Module may have failed. Please inspect the PC Module, BE Board, or BP Board.

7.3. Error Messages

7.3.1. Error Occurs During Booting

This may be a temporary software error or it may indicate product failure.

1. Force shut down the system and turn it back on in 1 or 2 minutes.
2. If the problem is not solved even after trying the method described in 1, check when the error message appears. If it appears when initiating Windows, it is possible that the OS and/or PC parts may be defective. If it appears after displaying the product logo, it is possible that the System Software and/or Ultrasound System part may be defective.

7.4. Image

7.4.1. 2D Mode: There is No IMAGE ECHO or IMAGE FORMAT

Contact between the probe and the product may be poor or the BE Board or PSU may have failed.

1. Check whether the contact between the probe and the system is poor.
2. Check the probe for vibrating sound. If you can hear the sound, it is likely that the PSU has failed.
3. If the problem is not solved even after trying the methods described in '1' and '2', it is likely that the BE Board has failed.

7.4.2. Lines (Noise) Appear in 2D Mode Image

Power noise and/or PSU or BF Board failure may have occurred.

1. Check whether the product is sharing its power outlet with another appliance.
2. Sharing a power outlet with a motor or other appliance that consumes large amount of power may cause noise.
3. Check whether the symptom persists when you plug the system into an outlet in a different room.
4. If the noise occurs, it is caused by power noise.
5. If the problem is not solved even after trying the methods described in '1' and '2', it is likely that the PSU or BF Board has failed.

7.4.3. M, C, PW, CW Mode Trouble

The PSU, BF, and/or BE Board may be defective.

7.5. USB Drive Unrecognized

7.5.1. Failed to recognize the USB (Removable device) device


If you connect a removable device to the device for the first time in Windows 7 and it forces a shutdown, the storage volume of the removable device may not to be recognized.

This issue can be fixed by reinstalling the volume.

1. Launch Windows Explorer, enter “devmgmt.msc” into the address bar and then start Device Manager.




2. Choose “Storage Volumes” from the device list.
3. Choose “Unknown device” under “Storage Volumes” and uninstall it.

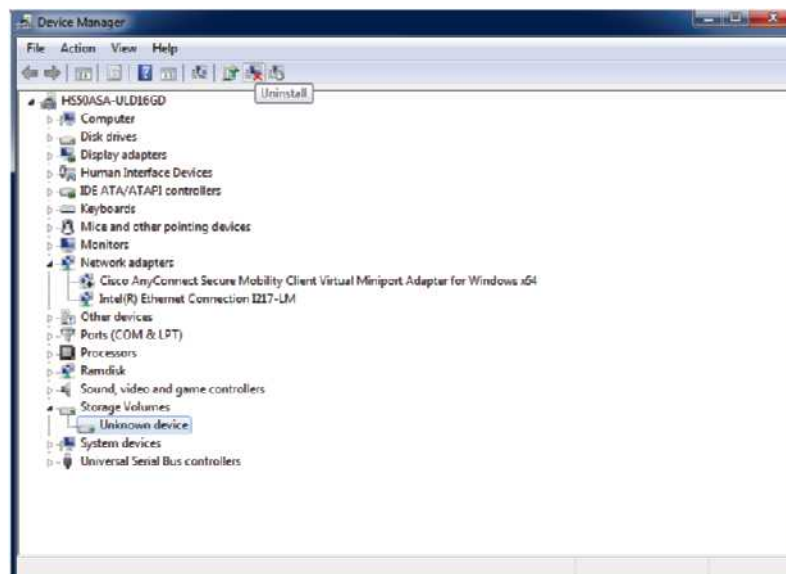


4. Run “Scan for hardware changes” from Device Manager.

7.6. Trouble Shooting Tree


- System power does not turn on.

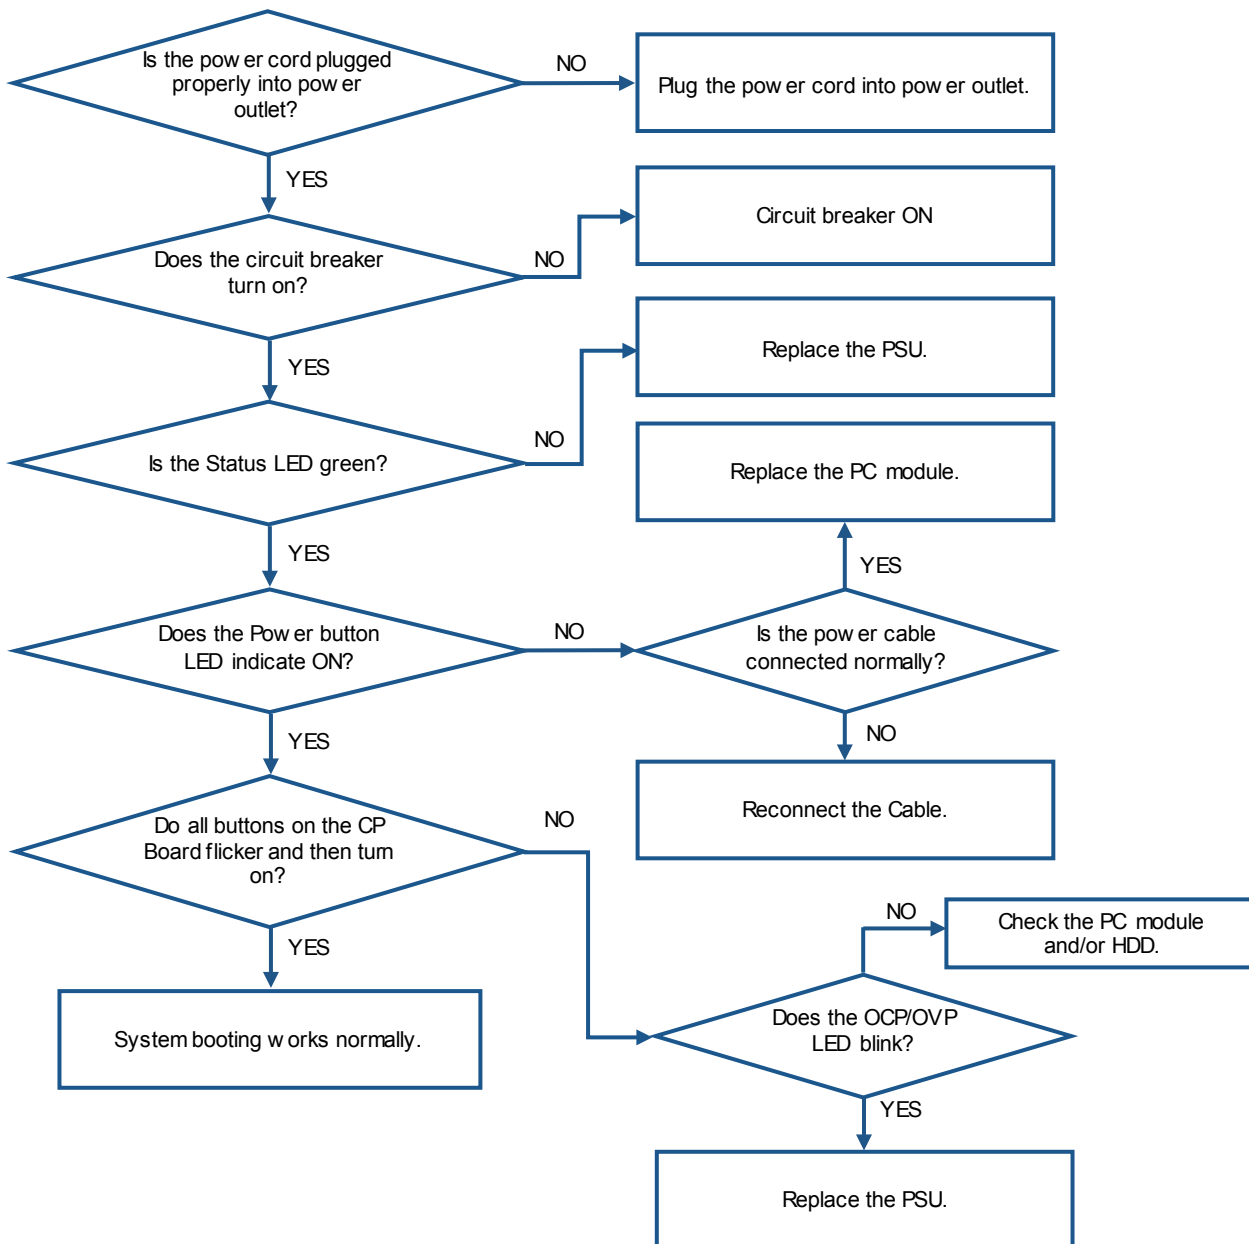


- No image appears in the monitor.

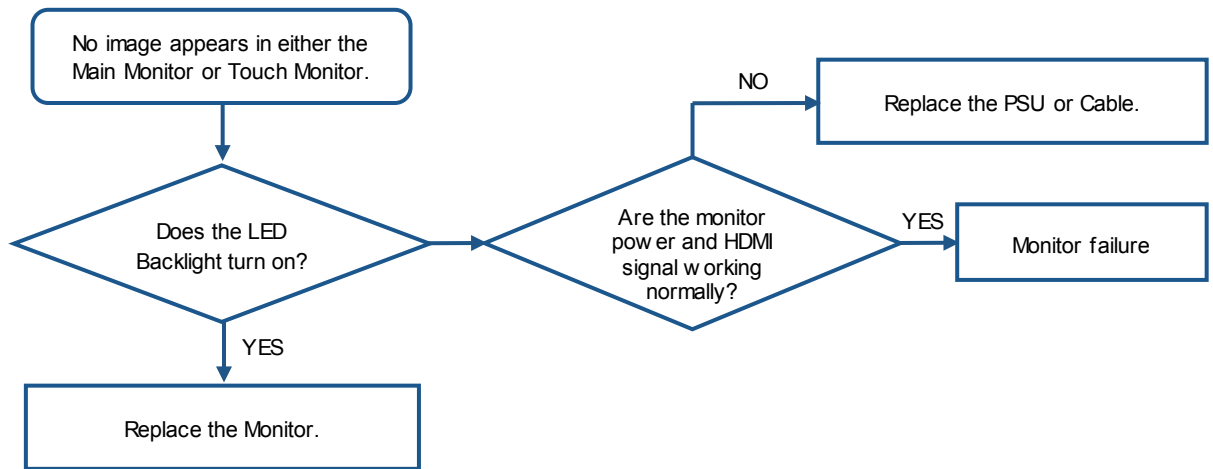


- Noise occurs in the image format.

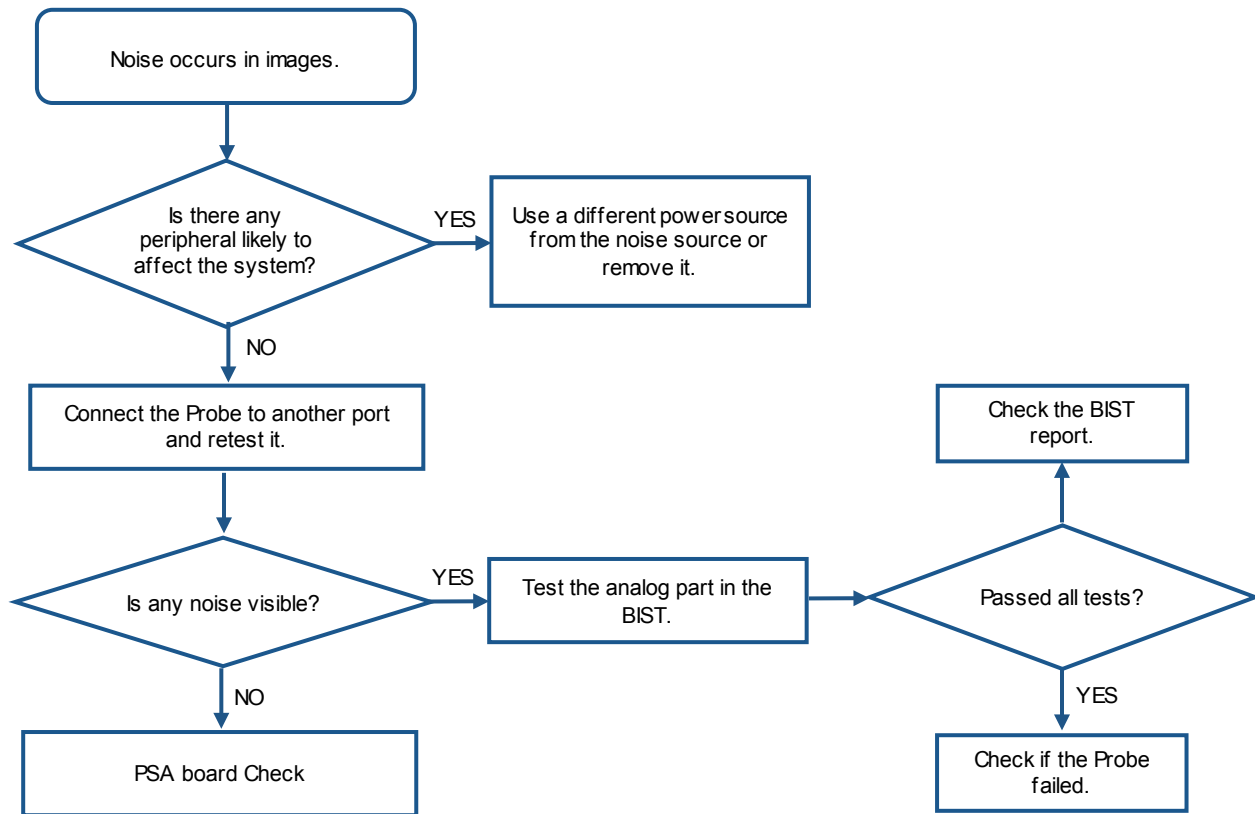

- The Trackball does not function properly.

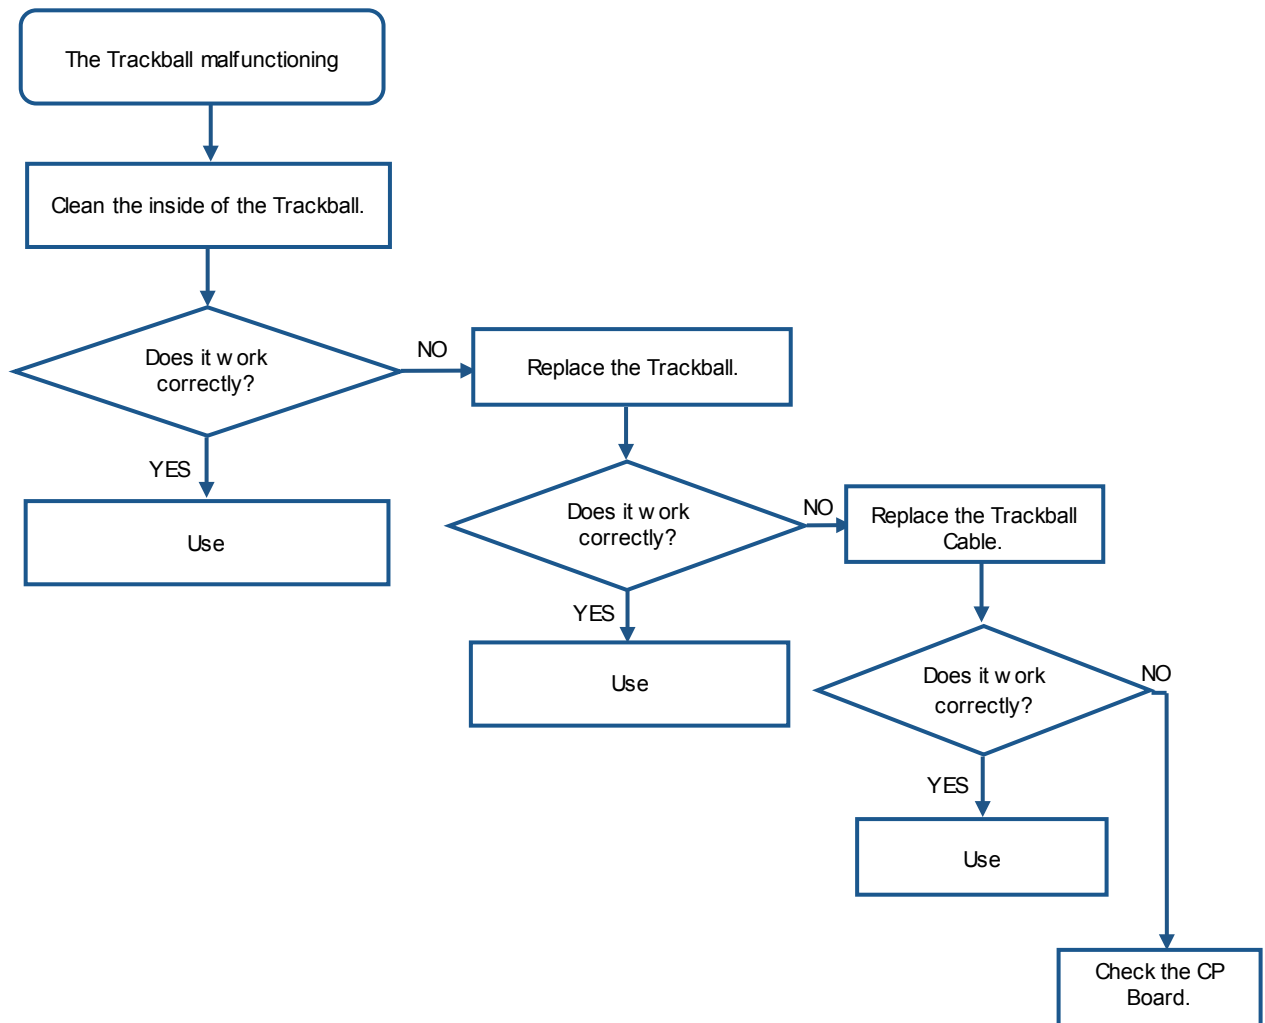

- System power does not turn off.

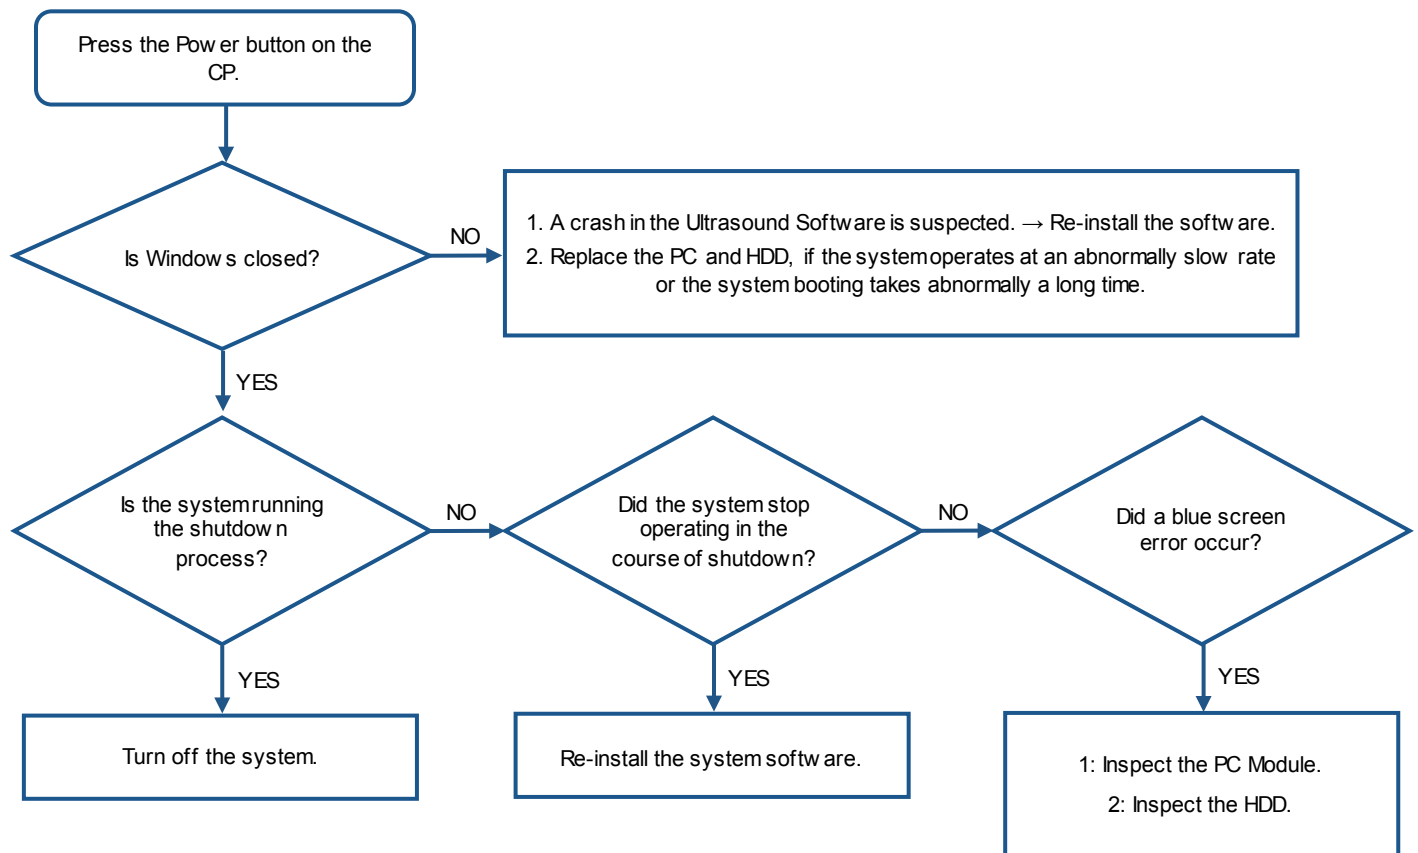

Chapter 8

Disassembly and Assembly

8.1. Preparation	2
8.1.1. Preparation	2
8.2. Product Disassembly.....	3
8.2.1. Front Side Disassembly	3
8.2.2. Rear Side Disassembly	6
8.2.3. Control Panel Disassembly	7
8.2.4. Touch Panel Disassembly	8
8.2.5. Track Ball	9
8.2.6. Speaker Disassembly	10
8.2.7. Monitor Disassembly	11
8.2.8. Monitor ARM Disassembly	12
8.3. Installation of Optional Parts	13
8.3.1. Overview of Optional Parts	13
8.3.2. Option Parts.....	14
8.3.3. Installation of External Physical Keyboard	16
8.3.4. Installation of Gel Warmer.....	16
8.3.5. Installation of Endo Cavity Holder	17
8.3.6. Installation of Holder Chart.....	18
8.3.7. Installation of Rear Tray	18
8.3.8. Installation of Printer Tray (1/2).....	19
8.3.9. Installation of Printer Tray (2/2).....	19

8.1. Preparation

This chapter describes the procedure for disassembling the HS40 system. Refer to this chapter when you are upgrading the system's hardware or providing repair services.



- Only Samsung Medison Co., Ltd's service department or its authorized engineers are allowed to repair or replace the parts of this product.
- The interior of this product contains dangerous high-voltage electricity. Do not disassemble the product. Otherwise, it may cause an electric shock
- Do not wear an antistatic wrist strap while you are working with the product powered on. Otherwise, you may sustain a physical injury from electric shock.

8.1.1. Preparation

You will need the following items: A Phillips (+) screwdriver, antistatic gloves, and an antistatic wrist strap.

Turn off the power of the product and disconnect the battery.



Wear antistatic gloves and an antistatic wrist strap when disassembling or reassembling the product. They help engineers avoid safety incidents and prevent product failures caused by static electricity.



[Figure 8.1 Antistatic Gloves and Wrist Strap]


8.2. Product Disassembly

8.2.1. Front Side Disassembly


1. First, remove 2 screws at the bottom and 2 screws in front of the Front Case, and detach the Front Case.



2. Remove 10 screws and detach the PSA Board.

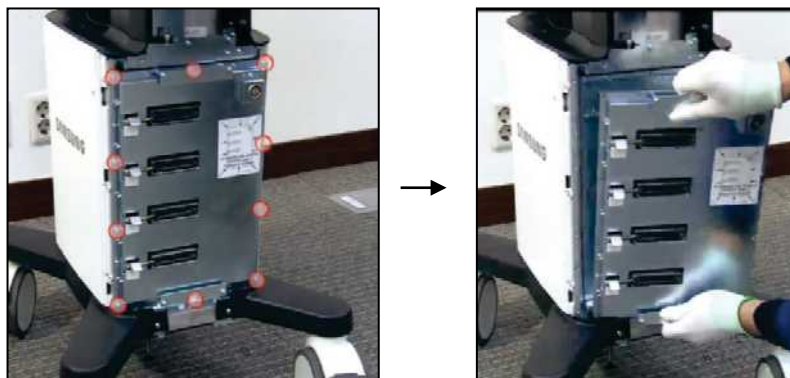

3. Detach the BF Board. Then, remove 8 screws and Cover, and detach the BE Module.

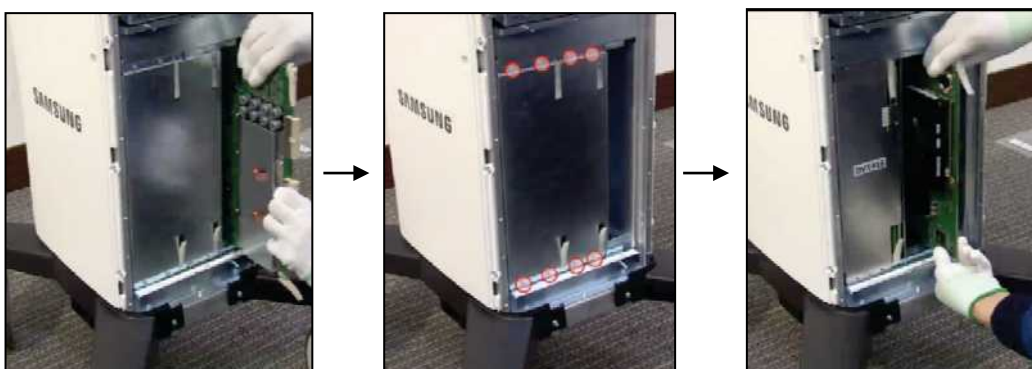

4. Remove 4 screws from the ADM Case and 6 screws from the Rear Case. Then, remove 1 Power Connector and 1 screw, and pull the ADM towards you to detach it.




5. Remove 2 screws at the bottom of the Front Side and pull the Fan Module towards you to detach it. After detaching it, remove 1 Power Cable Connector.




8.2.2. Rear Side Disassembly

1. Remove 8 screws and detach the Rear Cover. Then, remove 4 screws and detach the Rear Module.

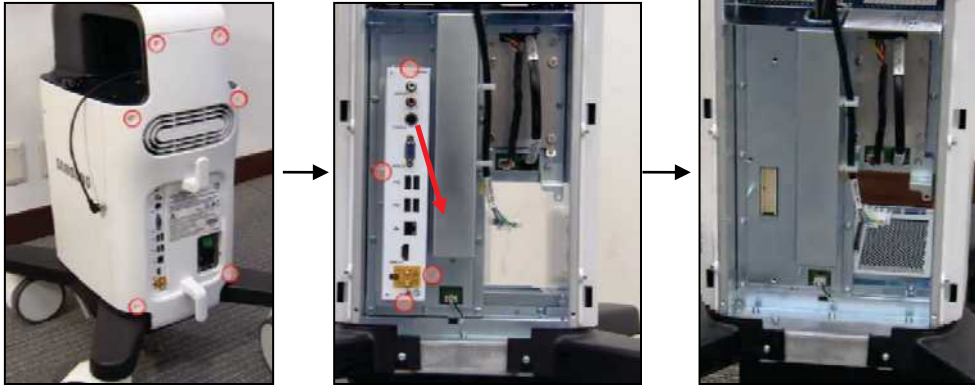


2. Remove 2 screws and 2 Connectors, and detach the HDD.

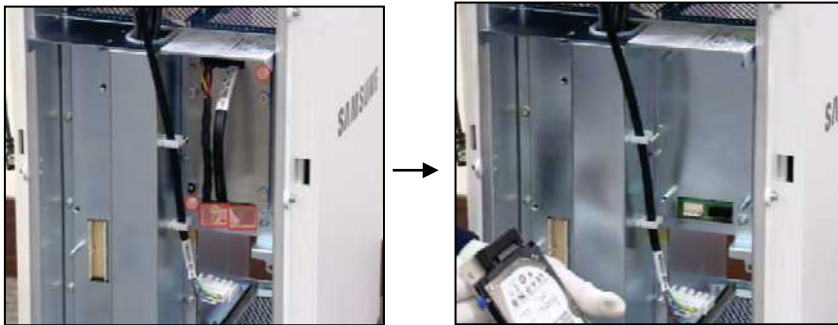


8.2.3. Control Panel Disassembly

Remove 4 screws and carefully detach 2 pieces of the top plate cover. Then, remove 7 screws at the bottom right side and 7 screws at the bottom left side, and lift up the top plate of the CP Panel. While lifting it up, remove 4 connectors and detach the top plate of the CP Panel.

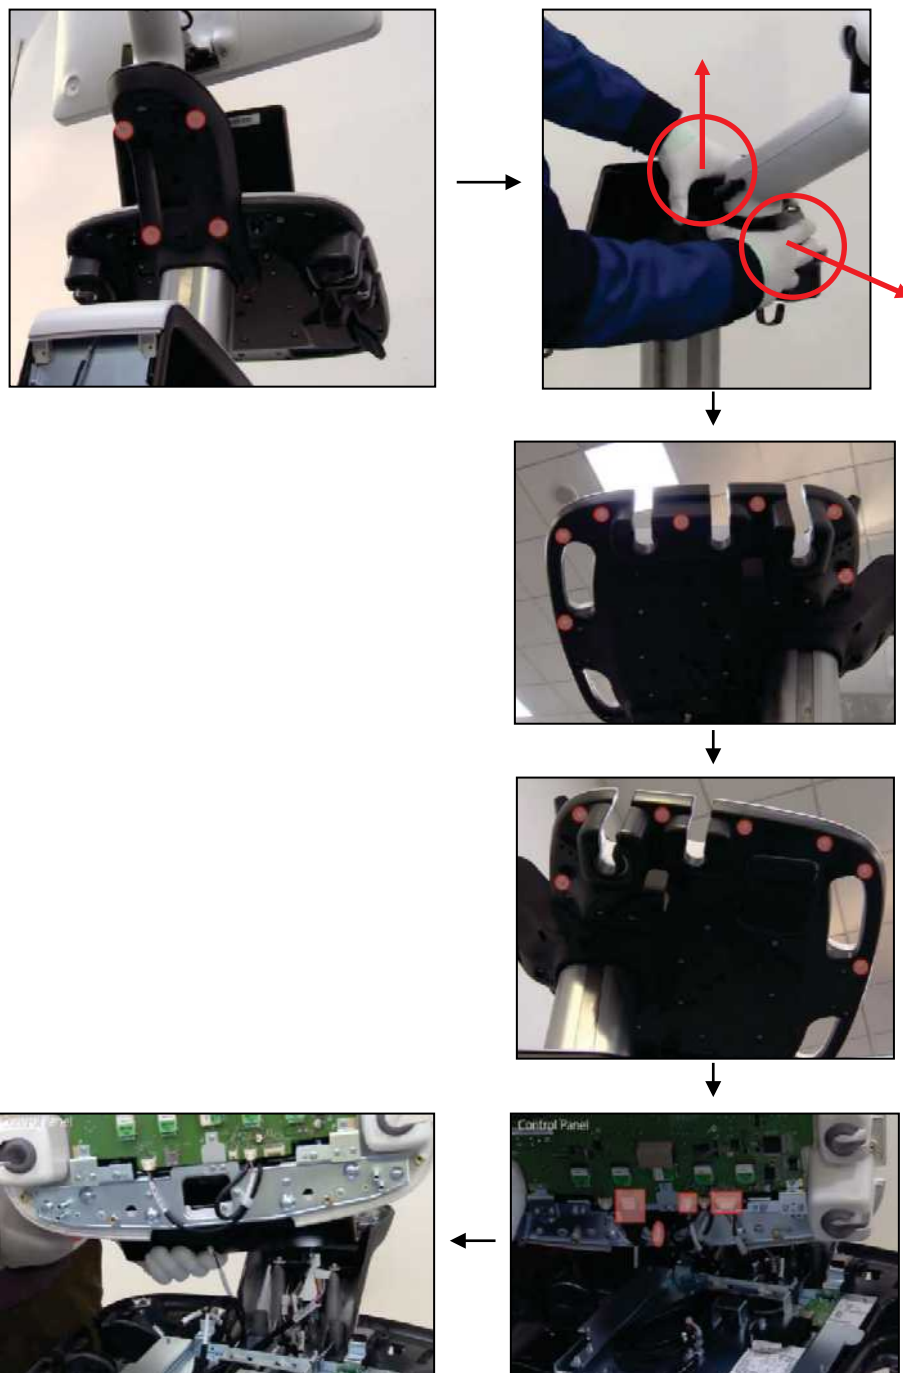


8.2.4. Touch Panel Disassembly

Remove 1 screw and 2 connectors at the bottom of the CP Panel, and disconnect the cable. Then, remove 2 more screws and carefully detach the Touch Panel from the CP Panel without scratching it.

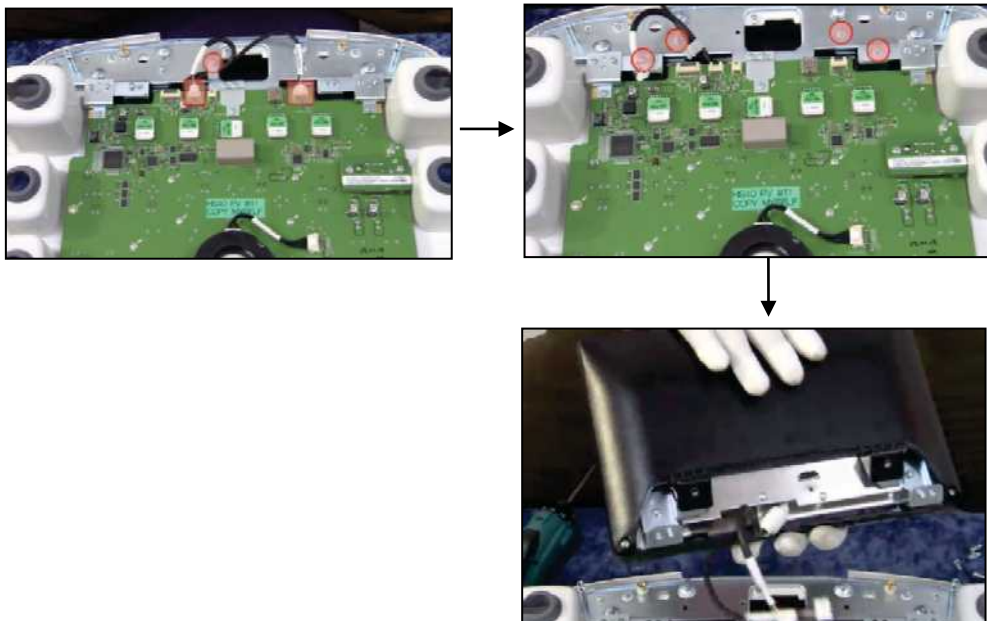


8.2.5. Track Ball

Remove 2 screws and 1 connector from the Track Ball, and detach the Track Ball.

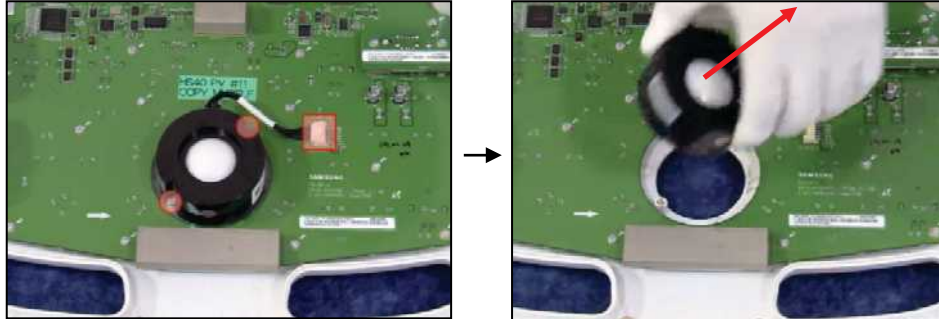


8.2.6. Speaker Disassembly

First, remove 4 screws fixing the speaker in place and detach the speaker module halfway. Then, remove 2 connectors and detach the speaker completely.

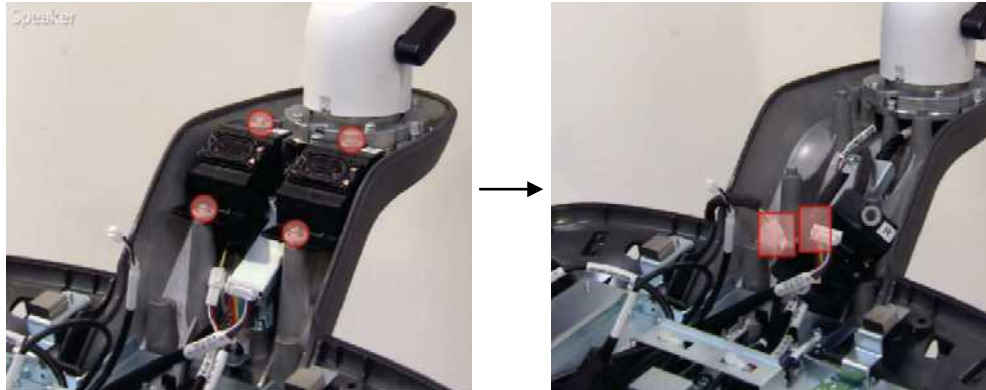


8.2.7. Monitor Disassembly

First, remove 2 screws and detach the Rear Cover. Then, remove 2 screws from the HDMI Connector Holder and 2 cable connectors. Lastly, remove 4 screws and detach the monitor by lifting it up from bottom to top.

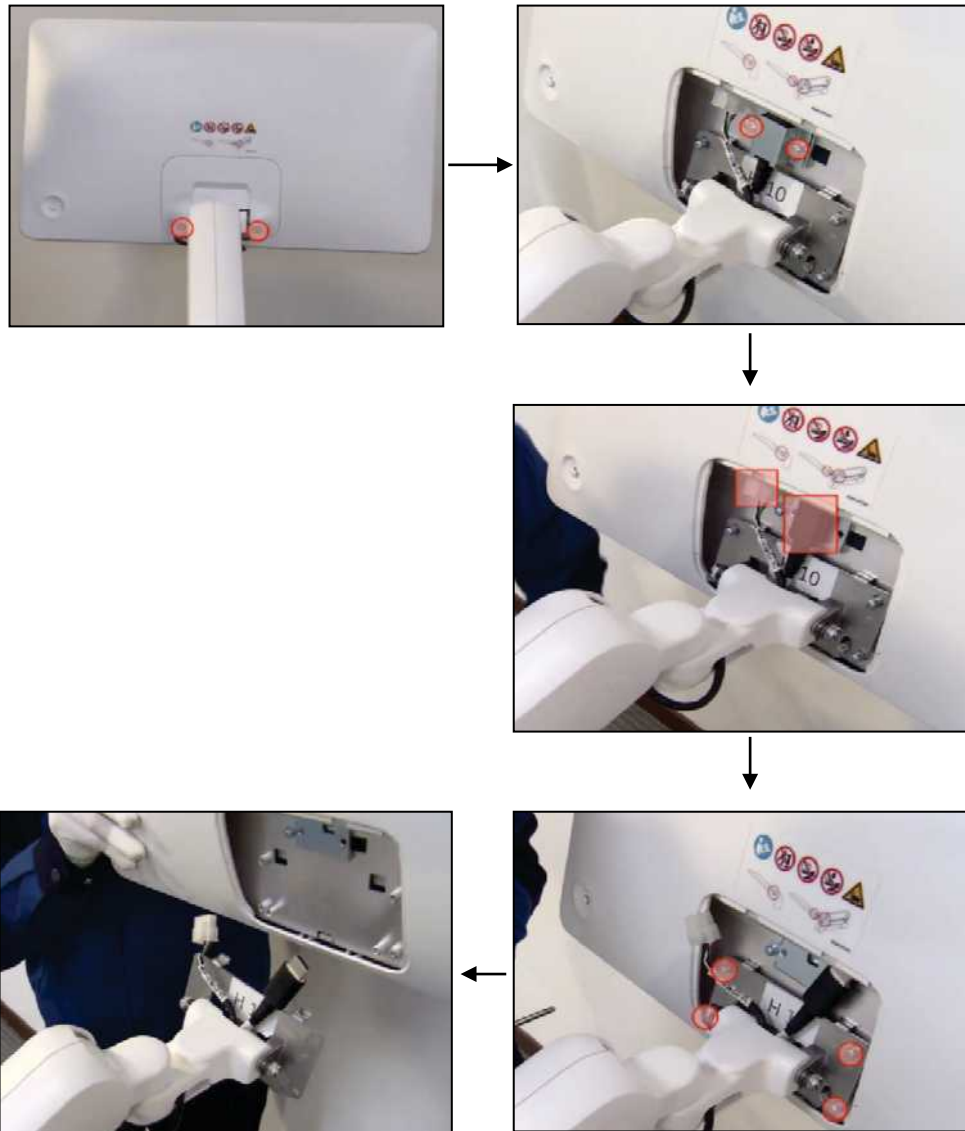


8.2.8. Monitor ARM Disassembly

Remove 1 screw and detach the HDMI Cable. Then, disconnect 1 Power Connector. Lastly, remove 4 heavy duty screws fixing the ARM in place and detach the Monitor Arm by lifting it up.

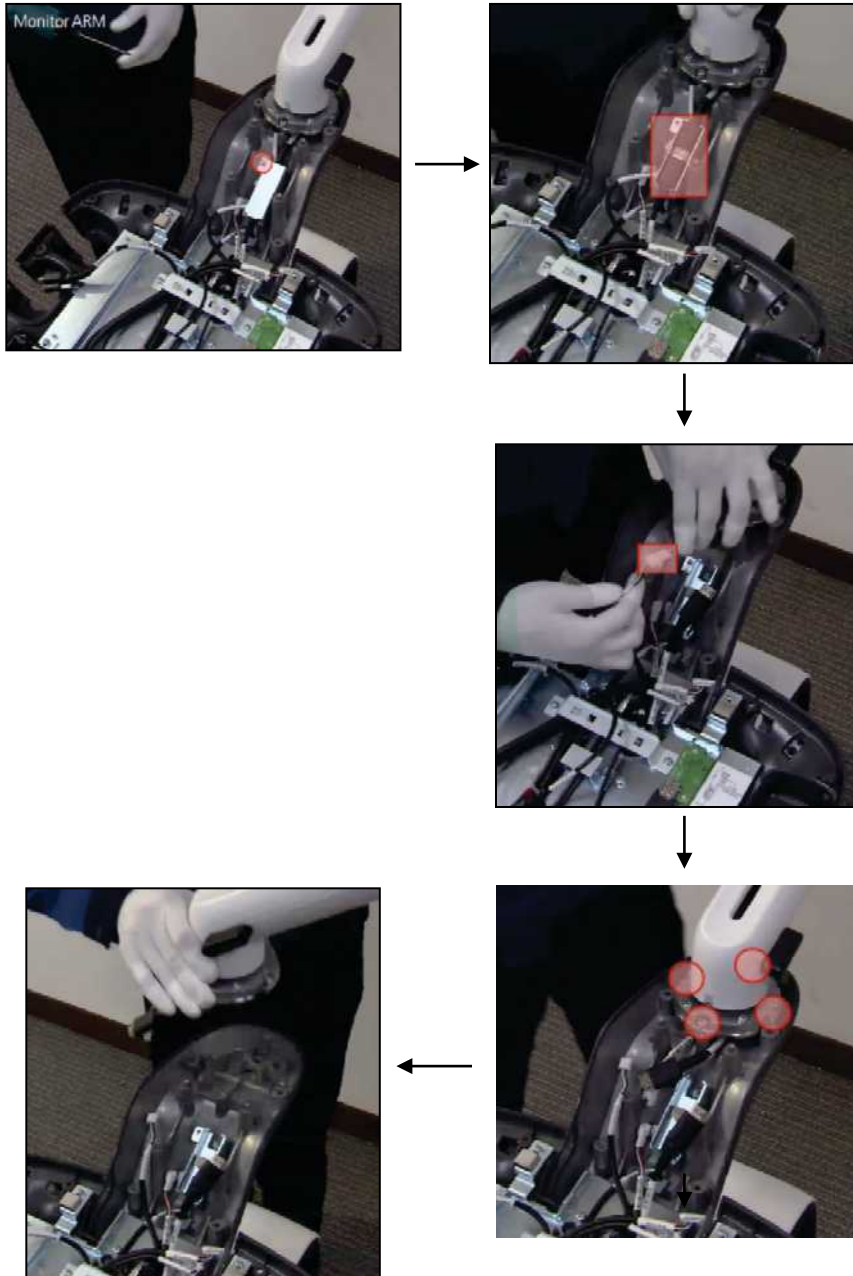



8.3. Installation of Optional Parts

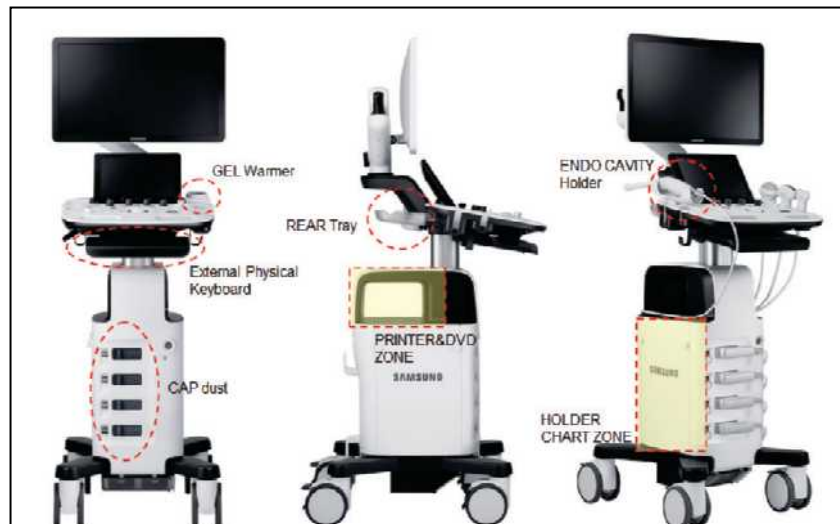8.3.1. Overview of Optional Parts



8.3.2. Option Parts


No.	Name	Parts Code	Figure
1	EXTERNAL PHYSICAL KEYBOARD	MI95-01574A [WR] MI95-01582A [DE] MI95-01580A [ND] MI95-01581A [RU]	
2	GEL WARMER	MI97-03626A	
3	ENDO CAVITY HOLDER	MI97-03783A	
5	HANGER SIDE	MI61-04335A	
6	CAP HANGER	MI67-01146A	
7	REAR TRAY	MI97-03808A	

No.	Name	Parts Code	Figure
8	COVER PRINTER	MI63-02576A	
9	BRACKET PRINTER	MI61-04625A	
10	BRACKET DVD	MI97-03784A	
11	CAP DUST	MI67-01143A	


8.3.3. Installation of External Physical Keyboard



8.3.4. Installation of Gel Warmer

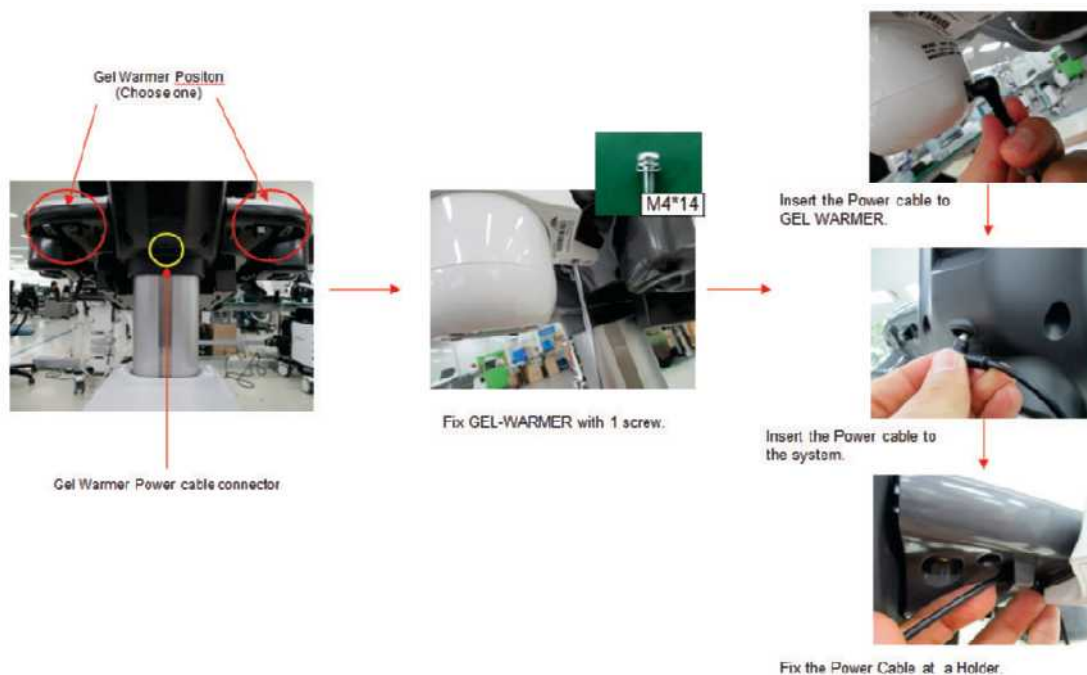

8.3.5. Installation of Endo Cavity Holder

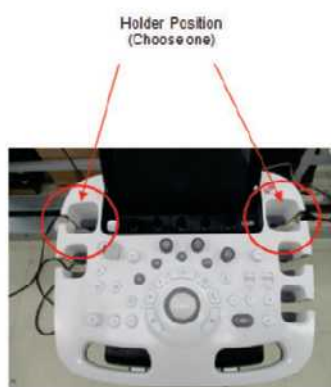

Insert the ENDO CAVITY HOLDER to the right or the left vertically.


***CAUTION : Do not install the ENDO CAVITY HOLDER horizontally.
It can cause scratches on the Touch Panel.**



8.3.6. Installation of Holder Chart



8.3.7. Installation of Rear Tray

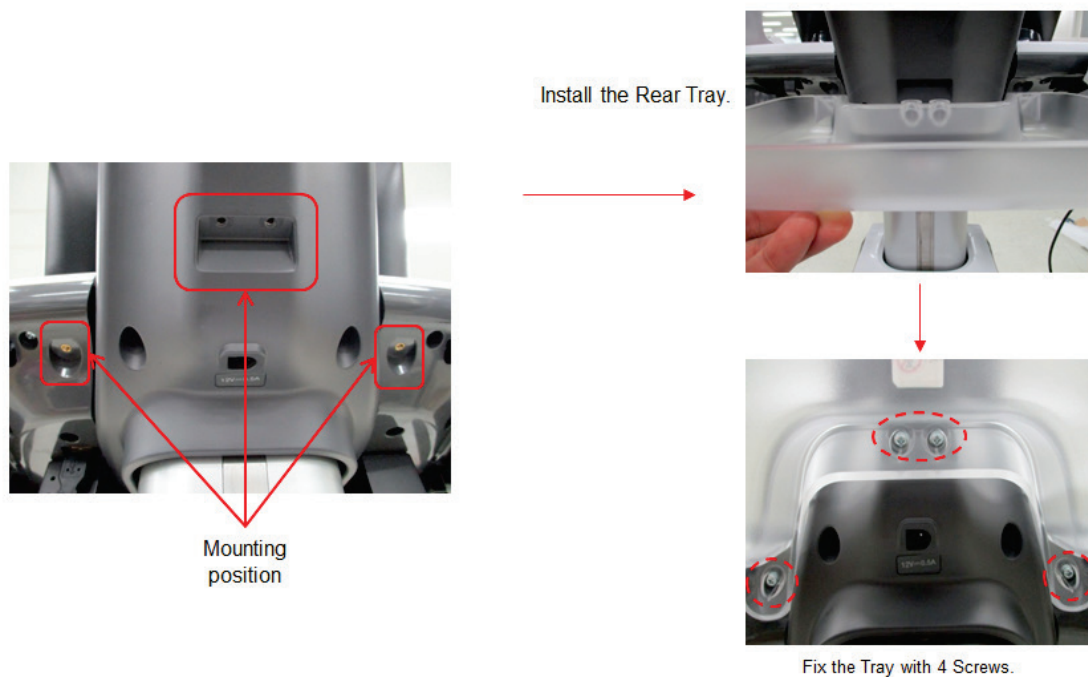


8.3.8. Installation of Printer Tray (1/2)



Install the DVD Bracket on the system and fix it with 4 screws.

Install the Printer cover and fix it with 2 screws.

8.3.9. Installation of Printer Tray (2/2)

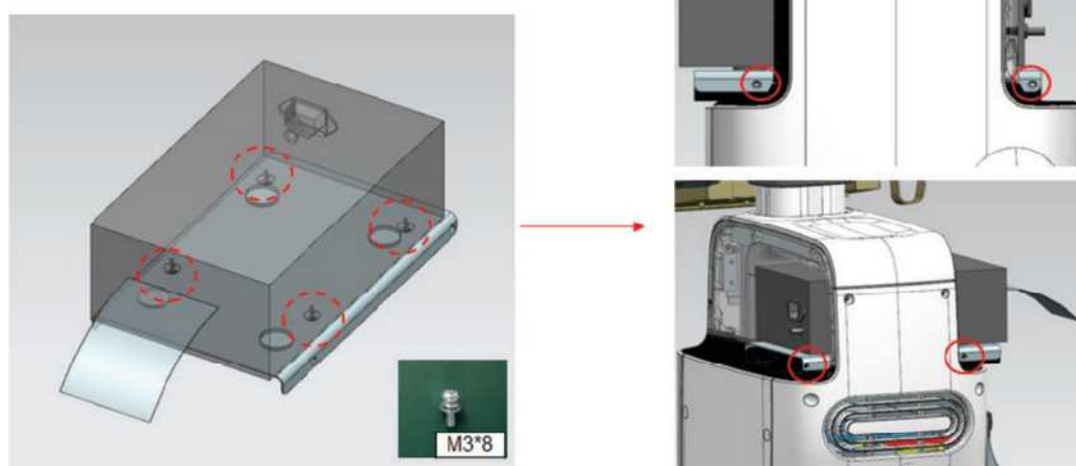

Install the BW Printer on the Printer bracket

Put the Printer on the DVD bracket and fix it with 4 screws.

Chapter 9

Probes

9.1. Probes	2
9.1.1. Probe List	2
9.1.2. Ultrasound Transmission Gel	9
9.1.3. Sheaths	10
9.1.4. Probe Safety Precautions	11
9.1.5. Cleaning and Disinfecting the Probe	13
9.2. Biopsy	22
9.2.1. Biopsy Kit Components.....	22
9.2.2. Using the Biopsy Kit	23
9.2.3. Assembling the Biopsy Kit.....	26
9.2.4. Cleaning and Disinfecting the Biopsy Kit.....	30

9.1. Probes

The probe is a device that sends and receives ultrasound for acquiring image data. It is also called a Transducer or Scanhead.

The system limits patient contact temperature to 43 degrees Celsius, and acoustic output values to their respective U.S. FDA limits. A power protection fuse circuit protects against over-current conditions. If the power monitor protection circuit senses an over-current condition, then the drive current to the probe is shut off immediately, preventing overheating of the probe surfaces and limiting acoustic output.

9.1.1. Probe List

The ultrasound image scanner uses probes to obtain graphic data of the human body and then displays it on the screen. Always use application-specific probes in order to obtain the best quality images. It is also important to configure the probe with the best settings for the particular organ being scanned.

9.1.1.1. Thermal Index (TI) Table

The Thermal Index (TI) is displayed in the Title area of the screen, and represents the probability of temperature rise in a particular area of the body. The thermal index consists of the following indices: Soft tissue (TIs), bone (Tlb), and cranial bone (Tlc). This product automatically displays an appropriate thermal index for the current probe and application.

Probe types, applications, presets and thermal index available for this product are as follows:

Probes	Application	Preset	Thermal Index
LA3-16AD	Abdomen	Abdomen, Renal, Bowel, Aorta	Tis
	MSK	General, Superficial, Deep	Tis
		Spine	Tlb
	Small Parts	Breast, Thyroid, Testicle	Tis
	Vascular	Carotid, Arterial, Venous	Tis
		TCD	Tlc
	OB	1st Trimester	Tis
		2nd Trimester, 3rd Trimester, Fetal Heart	Tlb
	GYN	Uterus, Adnexa	Tis
	Pediatric	Ped Abd	Tis
Neo Head		Tlc	
Ped Hip		Tlb	
CA2-8AD	Abdomen	Abdomen, Renal, Bowel, Aorta	Tis
	OB	1st Trimester	Tis
		2nd Trimester, 3rd Trimester, Fetal Heart	Tlb
		NT	Tis
	GYN	Uterus, Adnexa	Tis

Probes	Application	Preset	Thermal Index
	MSK	General, Superficial, Deep	TIs
		Spine	TIb
	Pediatric	Ped Abd	TIs
		Neo Head	TIc
		Ped Hip	TIb
	Vascular	Carotid, Arterial, Venous	TIs
		TCD	TIc
	Urology	Prostate, Bladder	TIs
CF4-9	Abdomen	Abdomen, Renal, Bowel, Aorta	TIs
	OB	1st Trimester	TIs
		2nd Trimester, 3rd Trimester, Fetal Heart	TIb
	GYN	Uterus, Adnexa	TIs
	MSK	General, Superficial, Deep	TIs
		Spine	TIb
	Pediatric	Ped Abd	TIs
		Neo Head	TIc
		Ped Hip	TIb
	Vascular	Carotid, Arterial, Venous	TIs
		TCD	TIc
	Urology	Prostate, Bladder	TIs
PN2-4	Abdomen	Abdomen, Renal, Bowel, Aorta	TIs
	Cardiac	Adult Echo, Ped Echo, Aortic Arch	TIs
	Vascular	Carotid, Arterial, Venous	TIs
		TCD	TIc
	Pediatric	Ped Abd	TIs
EVN4-9	OB	1st Trimester	TIs
		2nd Trimester, 3rd Trimester, Fetal Heart	TIb
	GYN	Uterus, Adnexa	TIs
	Urology	Prostate, Bladder	TIs
VN4-8	Abdomen	Abdomen, Renal, Bowel, Aorta	TIs
	OB	1st Trimester	TIs
		2nd Trimester, 3rd Trimester, Fetal Heart	TIb
		NT	TIs
	GYN	Uterus, Adnexa	TIs

Probes	Application	Preset	Thermal Index
	MSK	General, Superficial, Deep	TIs
		Spine	Tlb
	Pediatric	Ped Abd	TIs
		Neo Head	Tlc
		Ped Hip	Tlb
	Vascular	Carotid, Arterial, Venous	TIs
		TCD	Tlc
	Urology	Prostate, Bladder	TIs
V5-9	OB	1st Trimester	TIs
		2nd Trimester, 3rd Trimester, Fetal Heart	Tlb
	GYN	Uterus, Adnexa	TIs
	Urology	Prostate, Bladder	TIs
DP2B	Cardiac	Adult Echo, Ped Echo	TIs
	Vascular	Carotid, Arterial, Venous	TIs
		TCD	Tlc

**NOTE**

- In addition to the standard presets, users can also create up to five of their own, which can be accessed by selecting User Preset 1-8.
- For information on the selection and setting of probes, refer to 'Chapter 6. Starting Diagnosis'.
- The default thermal index may vary, corresponding to the presets.
- You can change the thermal index can in Setup > Imaging > Application/Preset > Preset Settings > Thermal Index Type.

9.1.1.2. Function List

The functions available in this product for various probes and applications are as follows:

Probe	Application	Panoramic	ECG	Elasto Scan	Q Scan	CM	TDI	PD	S-Flow
LA3-16AD	Abdomen	O	O	X	O	X	X	O	O
	MSK	O	O	X (General O)	O	X	X	O	O
	Small Parts	O	O	X (Breast, Thyroid O)	O	X	X	O	O
	Vascular	O	O	X	O	X	X	O	O
	OB	O	O	X	O	X	X	O	O
	GYN	O	O	X	O	X	X	O	O
	Pediatric	O	O	X	O	X	X	O	O
CA2-8AD	Abdomen	O	O	X	O	X	X	O	O
	OB	O	O	X	O	X	X	O	O
	GYN	O	O	X	O	X	X	O	O
	MSK	O	O	X	O	X	X	O	O
	Pediatric	O	O	X	O	X	X	O	O
	Vascular	O	O	X	O	X	X	O	O
	Urology	O	O	X	O	X	X	O	O
CF4-9	Abdomen	O	O	X	O	X	X	O	O
	OB	O	O	X	O	X	X	O	O
	GYN	O	O	X	O	X	X	O	O
	MSK	O	O	X	O	X	X	O	O
	Pediatric	O	O	X	O	X	X	O	O
	Vascular	O	O	X	O	X	X	O	O
	Urology	O	O	X	O	X	X	O	O
PN2-4	Abdomen	X	O	X	O	X	X	O	O
	Cardiac	X	O	X	O	O	O	X	X
	Vascular	X	O	X	O	X	X	O	O
	Pediatric	X	O	X	O	X	X	O	O

Probe	Application	Panoramic	ECG	Elasto Scan	Q Scan	CM	TDI	PD	S-Flow
EVN4-9	OB	X	O	X	O	X	X	O	O
	GYN	X	O	O	O	X	X	O	O
	Urology	X	O	Prostate(O), Bladder(X)	O	X	X	O	O
VN4-8	Abdomen	O	O	X	O	X	X	O	O
	OB	O	O	X	O	X	X	O	O
	GYN	O	O	X	O	X	X	O	O
	MSK	O	O	X	O	X	X	O	O
	Pediatric	O	O	X	O	X	X	O	O
	Vascular	O	O	X	O	X	X	O	O
	Urology	O	O	X	O	X	X	O	O
V5-9	OB	X	O	X	O	X	X	O	O
	GYN	X	O	O	O	X	X	O	O
	Urology	X	O	Prostate(O), Bladder(X)	O	X	X	O	O
DP2B	Cardiac	X	O	X	X	X	X	X	X
	Vascular	X	O	X	X	X	X	X	X

Probe	Application	Biopsy	TDW	CW	Multi Vision	Clear Vision	S-Har.	Har
LA3-16AD	Abdomen	O	X	X	O	O	O	O
	MSK	O	X	X	O	O	O	O
	Small Parts	O	X	X	O	O	O	O
	Vascular	O	X	X	O	O	O	O
	OB	O	X	X	O	O	O	O
	GYN	O	X	X	O	O	O	O
	Pediatric	O	X	X	O	O	O	O
CA2-8AD	Abdomen	O	X	X	O	O	O	O
	OB	O	X	X	O	O	O	O
	GYN	O	X	X	O	O	O	O
	MSK	O	X	X	O	O	O	O
	Pediatric	O	X	X	O	O	O	O
	Vascular	O	X	X	O	O	O	O
	Urology	O	X	X	O	O	O	O
CF4-9	Abdomen	X	X	X	O	O	X	X
	OB	X	X	X	O	O	O	O
	GYN	X	X	X	O	O	X	X
	MSK	X	X	X	O	O	X	X
	Pediatric	X	X	X	O	O	X	X
	Vascular	X	X	X	O	O	X	X
	Urology	X	X	X	O	O	X	X
PN2-4	Abdomen	X	X	O	X	O	O	O
	Cardiac	X	O	O	X	O	O	O
	Vascular	X	X	O	X	O	O	O
	Pediatric	X	X	O	X	O	O	O
EVN4-9	OB	O	X	X	O	O	O	O
	GYN	O	X	X	O	O	O	O
	Urology	O	X	X	O	O	O	O
VN4-8	Abdomen	O	X	X	O	O	O	O

Probe	Application	Biopsy	TDW	CW	Multi Vision	Clear Vision	S-Har.	Har
	OB	O	X	X	O	O	O	O
	GYN	O	X	X	O	O	O	O
	MSK	O	X	X	O	O	O	O
	Pediatric	O	X	X	O	O	O	O
	Vascular	O	X	X	O	O	O	O
	Urology	O	X	X	O	O	O	O
V5-9	OB	O	X	X	O	O	O	O
	GYN	O	X	X	O	O	O	O
	Urology	O	X	X	O	O	O	O
DP2B	Cardiac	X	X	O	X	X	X	X
	Vascular	X	X	O	X	X	X	X

**NOTE**

- The significance of each symbol is as follows:
 - Q Scan: Quick Scan
 - Har: Harmonic Imaging
 - S-Har: S-Harmonic Imaging
 - ECG: Electrocardiograph Imaging
 - CM: Color M
 - TDI: Tissue Doppler
 - PD: Power Doppler
 - S-Flow: Directional Power Doppler Imaging
 - TDW: Tissue Doppler Wave
 - CW: Continuous Wave
- MultiVision is only available in 2D/C Mode.

9.1.2. Ultrasound Transmission Gel

For proper transmission of the acoustic beam, only use ultrasound transmission gel approved by Samsung Medison.



WARNING

- The use of inappropriate ultrasound gels could result in damages in the probe. Using damaged probe could cause injuries such as electric shock in users or patients.
- Do not use ultrasound gels or contact media that contain the following contents.
 - Oils such as mineral oil, cooking oil, gasoline, solvents, rust inhibitors, lanolin, paraffin-based grease, ester and excessive silicon-based release agent.
 - Alcohols such as acetone, methanol, plasticizer (dioctylphtalate) or denatured alcohols.
 - Glacial acetic acid and iodine.
 - All types of lotions or gels that contain aromatic substances.

9.1.2.1. Gel Warmer (Optional)

The Gel Warmer keeps the ultrasound gel warm. Warming up ultrasound gel takes approximately 5 minutes.



WARNING

- Always turn the Gel Warmer off when it is not in use.
- Do not put your hands inside the Gel Warmer, as it may burn your skin.



CAUTION

- Do not use the Gel Warmer for purposes other than to control the temperature of ultrasound gel.
- Do not place the probe or any other equipment inside the Gel Warmer.
- Do not touch the power terminal of the Gel Warmer while you are examining a patient. There is a risk of electric shock from leakage current.
- Do not apply excessive force to the Gel Warmer, or you may damage its support parts.



[Figure 9.1 Gel Warmer Label – Example]

9.1.3. Sheaths

Sheaths are recommended for clinical applications of an invasive nature, including intraoperative, transrectal, transvaginal, and biopsy procedures. Using a sheath also prevents contamination from blood or other bodily fluids during operations or biopsy.

Samsung Medison does not supply sheaths, so appropriate sheaths should be purchased independently.



WARNING

- Always keep sheaths in a sterile state.
- Sheaths are disposable. Do not reuse them.
- If sheaths are torn or soiled after use, clean and disinfect the probe.
- In neurosurgical applications, a disinfected probe must be used with sterile gel and a sterile pyrogen-free sheath.
- If the sterile sheath becomes compromised during neurosurgical applications involving a patient with Creutzfeldt-Jakob disease, the probe cannot be successfully sterilized by any disinfection method.
- Some sheaths contain natural rubber latex and talc, which can cause allergic reactions in some individuals. Please refer to the FDA Medical Alert released on March 29, 1991.

9.1.3.1. Installing the Sheath

1. Remove the sheath from the packaging, and fill it with ultrasound gel. Be sure to put on sterilized surgical gloves.
2. Insert the probe into the sheath and pull the latex tip to cover the probe completely. If possible, cover the probe cable as well.
3. Ensure that there are no air bubbles trapped within the ultrasound gel. If necessary, secure the sheath to the probe and the probe cable.
4. Dispose of the sheath after use.

9.1.4. Probe Safety Precautions



CAUTION

- Do not apply mechanical shock to the probe.
- Do not place the probe cable on the floor where the cable can be run over by equipment wheels, etc. Do not apply excessive force to bend or pull the cable.
- Do not immerse the probe into any inappropriate substances such as alcohol, bleach, ammonium chloride, and hydrogen peroxide.
- Do not expose the probe to temperatures of +50°C or higher.

The probe can easily be damaged by improper use or by coming into contact with certain chemical substances. Always follow the instructions in the user manual to inspect the probe cable, case and lens before and after each use.

Check the probe for cracks, broken parts, leaks and sharp edges. If there is any damage, stop using the probe immediately and contact the Samsung Medison Customer Support Department. Using damaged probes may result in electric shocks and other hazards to the patients and/or users.

9.1.4.1. Use and Infection Control of the Probe



WARNING

No neurosurgical treatments or examinations should be carried out on a patient with Creutzfeldt-Jakob disease. If the probe has been used on such a patient, it cannot be sterilized by any method whatsoever.



CAUTION

Sufficient washing and disinfecting must be carried out to prevent infection. This is the responsibility of the user who manages and maintains the disinfection procedures for the equipment. Always use legally approved detergents.

The ultrasonographic image scanner uses ultrasound, and makes direct contact with the patient when in use. Depending on the types of examinations, such contact can be made to a wide variety of locations, including the ordinary skin or the location of blood transfusion during a surgical procedure.

The most effective method of preventing infection among patients is to use each probe only once. However, probes may need to be reused, as they are complex in design and expensive. Consequently, the safety instructions must be followed carefully in order to minimize the risk of infection among patients.

9.1.4.2. Electric Shocks

The probe uses electrical energy. If it touches conductive materials, there are risks of electric shocks to the patient or the user.



WARNING

- The product should regularly be checked for electrical leakage by the Samsung Medison Customer Support Department.
- Do not immerse the probe into liquid.
- Do not drop the probe or apply mechanical shocks.
- Inspect the housing, strain relief, lens, and seal for damage, and check for any functional problem before and after each use.
- Do not apply excessive force to twist, pull or bend the probe cable.
- The power protection fuse protects the probe and the product from excess current. If the power monitoring protection circuit detects excess current, it immediately shuts off the current to the probe in order to prevent the probe surface from overheating and to restrict the ultrasound power output.
- The temperature of the product for making contact with patients is limited under 43°C. The ultrasound power output (AP&I) is in compliance with US FDA standards.

9.1.5. Cleaning and Disinfecting the Probe

All probes must be cleaned and disinfected after each use. Cleaning is an important procedure that must be carried out before disinfecting the probe. For cleaning the probe please refer to the appropriate chapter. Using an inappropriate disinfectant may damage the probe.



WARNING

- Always use protective eyewear and gloves when cleaning and disinfecting probes.
- Inspect the housing, strain relief, lens and seal for damage, and check for any functional problem after cleaning and disinfecting the probe.

Using an inappropriate cleaning or sterilizing agent may damage the product.

9.1.5.1. Information of Detergent, Disinfectant, and Ultrasound Gel

■ Classification of Disinfectants

To maintain the performance of ultrasound probes, proper maintenance is required.

As ultrasound probes are classified into critical, semi-critical or non-critical devices based on the standards of FDA guidance* and the Hygiene Requirements for the Reprocessing of Medical Devices from Germany guideline of Robert Koch Institute(RKI), proper cleaning and disinfection or sterilization methods for that classification should be used.

Classification Criteria	Contact Area	Application Probe	Level Selection
Non-critical device	Intact skin	Convex, Linear array, and sector transducers	Low level disinfectant
Semi-critical device	Mucous membrane and damaged skin	Endocavity	High level disinfectant
Critical device	Blood, sterile tissue, etc.	Intraoperative, TEE	High level disinfectant or sterilization

* Guidance for Industry and FDA Staff - Information for Manufacturers Seeking Marketing Clearance of Diagnostic Ultrasound Systems and Transducers - Appendix D

* It is recommended that only high level disinfectants are used for Endocavity probes.

An appropriate detergent, disinfectant or ultrasound gel should be selected for all probes.

Please use an appropriate detergent, disinfectant or ultrasound gel by referring to Samsung Medison website and the user guide. All probes are tested under IPX 7 Criteria.

- User guide: provided as a booklet when the product is purchased.
- Website: <http://samsungmedicalsolution.com>

The following is information about the manufacturers (or Distributors) of detergents, disinfectants, and ultrasound gels.

Product	Manufacturer
Alkazyme	Alkapharm UK Ltd.
Anioxyde 1000	Laboratoires Anios
Aquasonics 100	Parker laboratories, Inc.
Asepti-Wipes	Ecolab
Asepti-Wipes II	Ecolab
Bleach 5.25%	-
CaviWipes	Metrex
Cidex	Advanced Sterilization Products
Cidex 2%	Advanced Sterilization Products
Cidex OPA	Advanced Sterilization Products
Cidex Plus	Advanced Sterilization Products
Cidezyme	Johnson&Johnson
Cleanisept Wipes	Dr.Schumacher GmbH
Clear Image	NEXT Medical Products
Enzol	Johnson&Johnson
Ethanol 75%	-
GE Ultrasound Contact Gel	GE Accessories
Gigasept	Schulke & Mayr GmbH
Gigasept AF	Schulke & Mayr GmbH
Gigasept FF	Schulke & Mayr GmbH
Hibitane	Regent Medical
Incidin Foam	Ecolab
Isopropyl alcohol (70%)	-
Isopropyl alcohol (80%)	-
Kendall	Tyco/Healthcare
Klenzyme	Steris
McKesson	McKesson Medical-Surgical Inc.
Metricide 14	Metrex
Metricide 28	Metrex
Metricide 30	Metrex
Metricide OPA Plus	Metrex
Metricide	Metrex
MetriWipes	Metrex

Product	Manufacturer
Metrizyme	Metrex
Milton	Procter & Gamble
Natural Image	Sonotech Inc.
Nuclear	Alkapharm
Omnicide - FG2	Coventry Chemicals Limited
Omnicide 14NS	Coventry Chemicals Limited
Omnicide 28	Coventry Chemicals Limited
PeraSafe	ANTEC International Limited
Salvanios pH 7	Laboratoires Anios
Salvanios pH 10	Laboratoires Anios
Sani-Cloth Active	PDI
Sani-Cloth AF Germicidal	PDI
Sani-Cloth AF3 Germicidal	PDI
Sani-Cloth Bleach Germicidal	PDI
Sani-Cloth Germicidal	PDI
Sani-Cloth HB	PDI
Sani-Cloth Plus	PDI
Scan	Parker laboratories, Inc.
Sekusept Extra	Ecolab
Sekusept Plus	Ecolab
Septiwipes	Dr. Schumacher GmbH
Sonogel	Sonogel Vertriebs GmbH
Sporox	DSHealthcare Inc.
Sporox II	DSHealthcare Inc.
Steranios 2%	Laboratoires Anios
Ster-Bac Blu	Ecolab
Super Sani-cloth	PDI
Surfaces Hautes	Laboratoires Anios
Transeptic spray	Parker laboratories, inc.
Tristel Duo	Tristel Solutions Limited
Tristel Sporicidal Wipe	Tristel Solutions Limited
Trophon	Nanosonics Limited
T-Spray	Pharmaceutical Innovations, Inc.
T-Spray II	Pharmaceutical Innovations, Inc.
Virkon	DuPont

Product	Manufacturer
Wavelength	National Therapy Products Inc.
Wavicide-01	National Therapy Products Inc.

9.1.5.2. Cleaning the probe

The probe must be cleaned and disinfected after each use. Cleaning is an important procedure that must be carried out before disinfecting the probe.



- Do not use brushes when cleaning probes. Even the use of soft brushes can damage the probe.
- During cleaning and disinfection, keep the parts of the probe that must remain dry higher than the other parts, until all parts are dry.

1. Disconnect the probe from the system.
2. Remove the biopsy adapter or needle guide. Collect the reusable parts, reusable biopsy adapter or needle guide for disinfection or sterilization and discard the disposable parts in the clinical waste bin (For cleaning and disinfection/sterilization of the reusable parts please refer to the appropriate chapter).
3. Remove and properly dispose the medical sheath in the clinical waste bin (Medical sheaths are disposables).
4. Use a soft cloth, lightly dampened with mild soap or compatible cleaning solution or compatible cleaning sheet, to remove any particulate matter and bodily fluids that remained on the probe, edges and ridges on the probe and cable.
5. Rinse with water to remove any loose particles, soap- and cleaning residue (up to the immersion point).
6. Wipe with a clean, dry soft cloth.
7. If still necessary, wipe with a clean, water-dampened cloth to remove soap residue, and wipe with a clean, dry soft cloth again.
8. Dispose the used soft cloth in the clinical waste bin.

9.1.5.3. Disinfecting the probe

The probe must be cleaned and disinfected after each use. Cleaning is an important procedure that must be carried out before disinfecting the probe. For cleaning the probe please refer to the appropriate chapter. Disinfect the probe to reduce pathogens to the level of 10^{-6} .

■ Disinfecting the probe with a fluid disinfectant

Using an inappropriate disinfectant may damage the probe.



WARNING

- Always use protective eyewear and gloves when disinfecting probes.
- Inspect the housing, strain relief, lens and seal for damage, and check for any functional problem after disinfecting the probe.
- Never use disinfectants after the expiration date.
- The type of tissue it will contact during use dictates the level of disinfection required for a device. Ensure that the solution strength and duration of contact are appropriate for disinfection.



CAUTION

- Using a non-recommended disinfectant or not following the recommended disinfection method can damage and/or discolor the probe, and will void the probe warranty.
- Do not immerse probes for longer than one hour, unless they are sterilizable.
- Only sterilize probes by using liquid solutions. Avoid using autoclave, gas (EtO), or other non-Samsung Medison-approved methods.

1. Follow the instructions on the disinfectant label for storage, use and disposal of the disinfectant.
2. Mix the disinfectant compatible with your probe according to the instructions for solution strength provided on the disinfectant's label.
3. Immerse the probe into the disinfectant as shown in the illustration below.



[Figure 9.2 Disinfection]

4. Follow the instructions on the disinfectant to complete the immersion procedure of the probe, never leave the transducer longer than the maximum immersion duration in the fluid. Rinse the probe with sterile water afterwards.
5. Air dry the probe and store it properly (e.g. in a sterile bag), so that no new contamination may appear.

■ Disinfecting the probe with a disinfection wipe

Using an inappropriate disinfection wipe may damage the probe.



WARNING

- Always use protective eyewear and gloves when disinfecting probes.
- Inspect the housing, strain relief, lens and seal for damage, and check for any functional problem after disinfecting the probe.
- Never use disinfection wipes after the expiration date.
- Ensure that the contact duration is appropriate for disinfection.



CAUTION

Using a non-recommended disinfection wipe or not following the recommended disinfection method can damage and/or discolor the probe. This could also void the probe warranty.

1. Refer to the user instructions of the disinfection wipe for details of proper use, storage and disposal of the holder.
2. Dependent on the type of wipe the active disinfectant needs to be applied to a dry wipe or has already been applied to the wipe.
3. Use the disinfection wipe to spread the active disinfectant over the full surface of the probe and ensure all areas are covered.
4. Discard the disinfection wipe to clinical waste. Do not re-use the disinfection wipe.
5. Air dry the probe as described in the user instructions of the disinfection wipe for the described time and store the probe properly (e.g. in a sterile bag), so that no new contamination may appear.

■ **Disinfecting the probe with a disinfection system**

Using a non-approved probe/disinfection system combination may damage the probe.



WARNING

- Always use protective eyewear and gloves when disinfecting probes.
- Inspect the housing, strain relief, lens and seal for damage, and check for any functional problem after disinfecting the probe.
- Ensure that the cycle duration is appropriate for the desired disinfection level.



CAUTION

Using a non-approved probe/disinfection system combination or not following the recommended disinfection method can damage the probe. This could also void the probe warranty.

1. Refer to the user instructions of the disinfection device for details of proper use, storage and disposal of waste.
2. Place the probe head, a part of the cable and possible marker in the disinfection device, following the user instructions of the disinfection device.
3. Start the desired disinfection process and wait until the end of the cycle.
4. Remove the probe and possible marker at the end of the cycle from the disinfection device and store the probe properly (e.g. in a sterile bag), so that no new contamination may appear.
5. Register the disinfection data for traceability according to local regulations.


9.2. Biopsy

A biopsy is an examination method that surgically extracts tissue from the patient for examination. The probe and the biopsy kit are used together when conducting a biopsy with the ultrasonographic image scanner.

The ultrasound system shows the needle, which penetrates through the skin surface and veins, along with the examination location, minimizing the risk to the patient.

9.2.1. Biopsy Kit Components

The biopsy kit consists of the adapter, needle guide and needle. The components vary depending on the probe type.

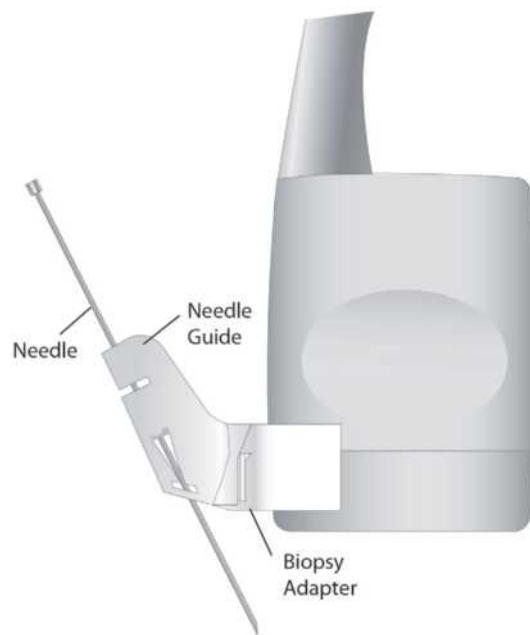

[Figure 9.3 Biopsy Kit Components]

Adapter: Secures the needle guide to the probe tightly.

Needle Guide: Guides the angle (direction) of the needle so that it can reach the examination location accurately. It also secures the needle so that the needle is not loose.

Needle: This is the needle that is inserted into the patient's body. The biopsy kit supplied by Samsung Medison does not contain a needle.

Sheath: Prevents the probe and adapter from getting soiled by any unwanted substances during the examination (blood and other bodily fluids).

Ultrasound Gel: The space between the probe and the sheath is filled with the ultrasound gel to obtain images of the best quality.

9.2.2. Using the Biopsy Kit



WARNING

- Only use the needles approved by the country's government.
- Verify the condition of the biopsy needle before use. Do not use a bent biopsy needle.
- The biopsy needle may bend during tissue penetration. The precise location of the needle must be checked by monitoring the echo generated from the needle.
- Never use the biopsy kit to biopsy prostate tissue.

9.2.2.1. Before Using Biopsy Kit



WARNING

- Do not attempt to use the biopsy kit until you have read the instructions for installing the sheath and verifying alignment of the needle guide.
- Always ensure that the probe and the needle guide are secured on both the left and the right.
- Do not use in IVF, CVS, or PUBS procedures.

Ultrasonographic scanning using the biopsy kit must be conducted by medical doctors or experienced medical staff with appropriate qualifications. Always, without fail, verify all safety procedures and disinfection.

Biopsy kits not supplied by Samsung Medison may fail to fit the probe properly. Always use biopsy kits supplied by Samsung Medison, since improper setup may adversely affect the patient.

Inspect all components. Ensure that the biopsy kit you are using is the correct one for the probe, the system, and system software.

9.2.2.2. Biopsy Procedure

The system generates a needle guideline through the displayed real-time ultrasound images to indicate the anticipated path of the needle. You can use this guideline to ensure that the needle or instrument is following the correct path.

1. Ready the patient according to the procedure appropriate for the examination objectives.
2. Install the sheath and the biopsy kit.
3. Set the system controls for the biopsy procedure. If necessary, apply acoustic gel to the patient.
4. Scan the patient. Adjust the patient so that the location for examination fits into the needle guideline on the screen.
5. Insert the needle into the needle guide for use. Perform the puncture by sliding the needle through the groove in the guide until the needle intercepts the target.

To keep the needle securely in the needle guide, press down on the top of the biopsy adapter with your index finger.

6. When the examination location is reached, take the needle out of the needle guide.
7. Detach the needle guide, adapter and sheath from the probe.
8. Discard all disposable items following use.

9.2.2.3. Needle Guide Alignment

**WARNING**

- The needle used for this alignment verification must not be used for the actual procedure. Always use a new, sterile needle for each biopsy procedure.
- To assist in accurate projection of the needle, use a straight, new needle for each alignment procedure.

Alignment of the needle guide displayed on the system is for the purpose of verifying whether the needle and the needle guide are properly installed. This must be done prior to the biopsy examination. If the needle fails to follow the accurate path while verifying the alignment of needle guide, stop using the product and contact Samsung Medison Customer Support Department.


Reverberation or other tissue artifacts may produce false needle images, which can cause confusion. Ensure the needle path is along the guideline, and that you are not using a false needle image to locate the needle.

1. Attach the biopsy kit.
2. Set the system depth for the procedure to be performed and select the Biopsy menu.
3. Immerse the probe into the water bath, and insert the needle into the needle guide.
4. Confirm that the needle image is on the needle guidelines. If it is, then the needle guide is properly aligned.
5. If the needle image is out of the needle guideline, check the needle guide or the probe adapter.

9.2.3. Assembling the Biopsy Kit

9.2.3.1. Stainless Steel Biopsy Kit

1. Place a Sheath up to the top of the probe's handle.

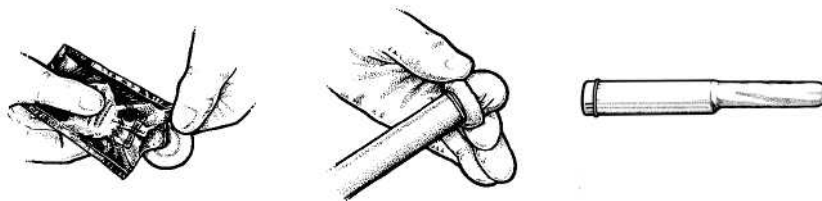

2. Mount the biopsy adapter onto the probe. If the surface of probe is fluted, mount the adapter in accordance with it.



3. Install the needle into the needle guide and start the exam.

9.2.3.2. Plastic Biopsy Kit

1. Mount the biopsy adapter onto the probe.



2. Insert gel into the sheath. And cover the probe completely.



3. Install the needle guide onto the adapter.



4. Installing the Needle Guide Clip if it is included in the components.



5. Install the needle into the needle guide and start the exam.



TIP **Using Multi Angle**
Use the angle adjuster.



9.2.3.3. Biopsy Specifications

Probe	Biopsy					
	Model Name	Components	Adapter Material	Reusable/ Disposable	Needle Gauge	Multi Depth
LA3-16AD	BP-KIT-068	BiopsyAdapter	Acetal Copolymer	Reusable	16, 18, 20, 22	0.591, 0.984, 1.575 (in)
	[BP-KIT-068-NG] BP-KIT-055 [BP-KIT-055-NG]	Needle Guide & Probe Cover		Disposable		
CA2-8AD	BP-KIT-054	BiopsyAdapter	Acetal Copolymer	Reusable	16, 18, 22, 25	2.362, 3.150, 3.937 (in)
	[BP-KIT-054-NG]	Needle Guide & Probe Cover		Disposable		
VN4-8	BP-KIT-049	BiopsyAdapter	Acetal Copolymer	Reusable	20, 21, 22, 25	1.181, 1.969, 3.150, 3.937, 4.724 (in)
	[BP-KIT-049-NG]	Needle Guide & Probe Cover		Disposable		
EVN4-9	BP-KIT-061	Needle Guide	ABS	Disposable	16–18	Single Angle 1°
	BP-KIT-024	Needle Guide	Stainless	Disposable	16	Single Angle 1°
V5-9	BP-KIT-029	Needle Guide	Stainless	Reusable	18	–
	BP-KIT-060	Needle Guide	ABS	Disposable	16–18	Single Angle 1.8°

9.2.4. Cleaning and Disinfecting the Biopsy Kit



Always use protective eyewear and gloves when cleaning and disinfecting the biopsy kit.

WARNING

Wash and disinfect the biopsy kit to reduce pathogens to the level of 10^{-6} .

Reusable Biopsy adapters must be cleaned and disinfected after each use. Disposable Biopsy adapters and disposable Biopsy kit parts need to be disposed as medical waste after each use. Cleaning is an important procedure that must be carried out before disinfecting or sterilizing reusable Biopsy adapters. Read the biopsy kit user manual carefully before cleaning and disinfecting.

9.2.4.1. Cleaning Biopsy Kit

1. After use, the biopsy kit is removed from the probe.
2. Disassemble the biopsy kit into its component parts and discard the disposable parts in the clinical waste bin.
3. Rinse with water to remove excess soil from device.
4. Prepare an enzymatic solution (e.g. Enzol), following manufacturer instructions for proper dilution and immersion time. Immerse the parts in the detergent and allow soaking for the prescribed time.
5. Brush the parts thoroughly using a soft bristle brush. Clean the lumen using an appropriate sized brush. If any visible parts remain, continue brushing until clean.
6. Thoroughly rinse the device with water and dry the parts. Discard the used soft cloth to clinical waste.

9.2.4.2. Disinfecting the Biopsy Kit



CAUTION

- Always refer to the biopsy kit user manual for the latest information on the supported methods and disinfectants.
- A stainless steel biopsy adapter is reusable; a plastic biopsy adapter may be reusable. A plastic biopsy needle guide is in general disposable.
- Plastic biopsy kits can only be disinfected by using a chemically compatible cold-disinfectant, either manual or with a medical washer-disinfector. Do not use an autoclave or sterilize using gas.

Please refer to the user manual of the disinfectant for storage, use, and disposal of the disinfectant.

1. Re-assemble the reusable parts of the biopsy adapter, if applicable.
2. Disinfect the biopsy adapter for the duration and temperature as specified in the user instructions of the adapter.
3. After disinfection, follow the proper post-disinfection procedure for the disinfection method used. (Refer to the instructions for the disinfectant, disinfecting equipment, etc.)
4. Inspect the components for damage such as cracks, rust or breakage and if damage is discovered stop using the device and contact the Samsung Medison Customer Support Department.
5. Properly pack the disinfected adapter and label it according to local regulations.

9.2.4.3. Sterilizing the Stainless Steel Biopsy Kit

1. Re-assemble the reusable parts of the stainless steel biopsy adapter, if applicable.
2. Sterilize the stainless steel adapter by autoclaving (Steam) or using gas (Ethylene Oxide).
3. After sterilization, follow the proper post-sterilization procedure for the sterilization method used. (Refer to the instruction of the sterilization equipment.)
4. Inspect the components for damage such as cracks, rust or breakage and if damage is discovered stop using the device and contact the Samsung Medison Customer Support Department.
5. Properly pack the sterilized adapter and label it according to local regulations.

Chapter 10

Maintenance

10.1. Operational Environment.....	2
10.2. Product Maintenance.....	3
10.2.1. Cleaning and Disinfecting	3
10.2.2. Cleaning	3
10.2.3. Cleaning Air Filters	5
10.2.4. Accuracy Checks	6
10.3. Data Maintenance	7
10.3.1. User Settings Backup	7
10.3.2. Backing Up Patient Information	7
10.3.3. Software	7

10.1. Operational Environment

When installing the product, please pay attention to the following:



CAUTION

Placing the system near generators, X-ray machines or broadcast cables may result in screen noise and abnormal visual images. Sharing the power source with other electrical devices may also induce noise.

- Optimal conditions for the system are temperatures of 10–35°C and humidity of 30–75%.
- Avoid excess humidity.
- Avoid direct sunlight.
- Avoid places with extreme temperature variations.
- Avoid heat sources.
- Avoid dusty and unventilated areas.
- Avoid places where the system is likely to be exposed to vibration or impacts.
- Avoid places where the system is likely to be exposed to chemical substances or gases.

10.2. Product Maintenance

10.2.1. Cleaning and Disinfecting

Using an inappropriate cleaning or sterilizing agent may damage the product. Pay attention to the following:



WARNING

- Turn off the system and disconnect the power cord from the wall outlet before cleaning and disinfecting, otherwise, there is a risk of electric shock or fire.
- Always use protective eyewear and gloves when cleaning and disinfecting the product.

10.2.2. Cleaning



CAUTION

- Do not spray detergent directly onto the product's exterior. Doing so may discolor or crack the surface.
- Do not use chemical substances such as wax, benzene, alcohol, paint thinner, insecticide, aerosol deodorant, lubricant.

10.2.2.1. Console

Use a soft cloth lightly dampened with a mild soap to clean the exterior surfaces of the system.

10.2.2.2. Cleaning Monitor

Gently wipe the LCD surface with a soft, dry cloth.



NOTE

For information on cleaning and disinfecting the probe, please refer to 'Chapter 5. Probes'.

10.2.2.3. Touch Screen

Wipe the LCD surface with a soft dry cloth.



NOTE

Make sure that the touch screen is not contaminated by an electrically conductive substance. Contamination of the LCD screen by ultrasound gel or other substances may degrade the sensitivity of the touch screen and cause malfunctions. This phenomenon is caused by the contact between the capacitive touch screen and the conductive substance. If the screen is contaminated, clean it with a dry cloth and then reboot the system.

10.2.2.4. Trackball



CAUTION

While cleaning the trackball, make sure that liquid and other substances do not enter the product.

1. Turn the trackball rim counterclockwise to remove it from the control panel.
2. Wipe the trackball with a soft cloth and turn the trackball rim clockwise to reattach.



[Figure 10.1 Removing the Trackball]



NOTE

- For information on cleaning and disinfecting the probes, please refer to 'Chapter 5. Probes' in this user manual.
- This image may differ from the actual system.

10.2.2.5. Disinfection



CAUTION

Use only disinfectants recommended by Samsung Medison on system surfaces.

A disinfectant certified by the FDA 510(k) process is recommended. For more information, please refer to the information about detergents, disinfectants, and ultrasound gels in 'Chapter 5. Probes'.

1. Turn off the system and disconnect the power cord from the wall outlet.
2. Mix the disinfectant solution that is compatible with your system to the solution strength specified on the instruction label.
3. Clean the exterior surface of the product in compliance with the instructions provided with the disinfectant.
4. Air dry or towel dry the surface with a sterile cloth according to the instructions on the disinfectant label.


10.2.3. Cleaning Air Filters


The air filters minimize the intake of dust. When the air filter is clogged with dust, it may cause the product to overheat and generate noise; it may also reduce the reliability and the system performance.



CAUTION

- Be sure to lock the brakes on the front wheels before cleaning the air filters to avoid injury by any unexpected movement of the product.
- Clean the filter once every three months to maintain the system in optimal condition.

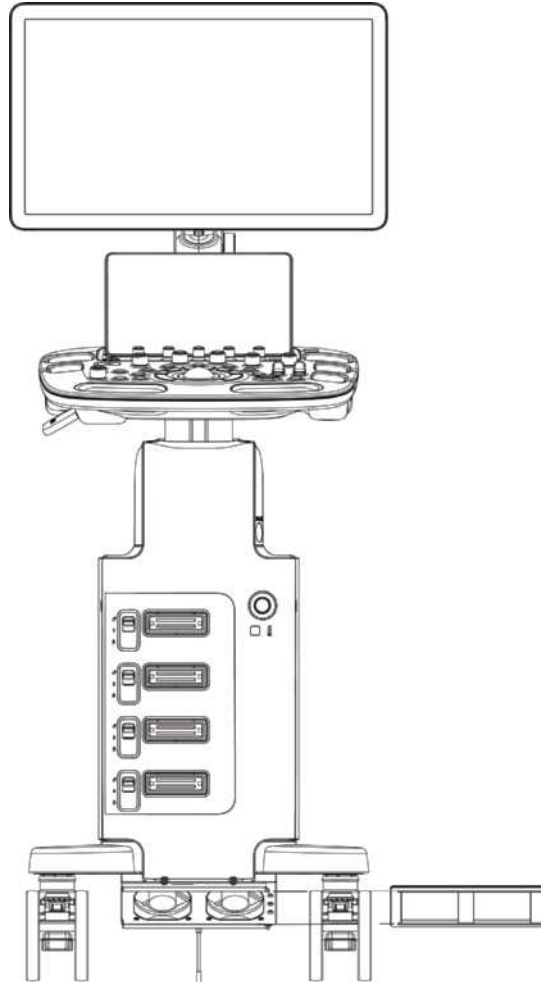

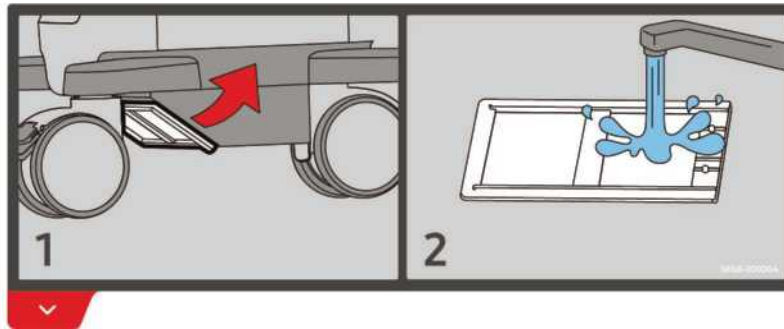

[Figure 10.2 Air Filter Location and Label]

1. Pull out the filter under the front of the console and take it away from the product.
2. Shake the filter to remove the dust and wash it in a mild, soapy solution.
3. Afterwards, dry the filter with a cloth, then air dry it in the shade.
4. Slide the filter back into the product.



NOTE

Allow the wet filter to dry thoroughly before reinstalling it. A wet filter can cause the system to malfunction.

10.2.4. Accuracy Checks



NOTE

Users may request safety inspections as required, but only trained persons are allowed to perform the safety inspection.

The product's maintenance status may affect the measurements obtained when using the product. The product should be maintained in an optimal state to ensure reliable measurements.

To ensure optimal operation of the product, perform an accuracy check every year. The equations and table related to measurement accuracy are included in 'Chapter 8. Measurements and Calculations' in this manual.

10.3. Data Maintenance



CAUTION

You may lose information files on user settings or patients, because of physical shocks to the product or internal errors. Therefore, you should back-up on a regular basis.

10.3.1. User Settings Backup

Always keep a backup copy of all information related to the user settings in case of data loss. Clients cannot back-up the user settings of the product. Please contact the servicing department to attain support for back-up.

10.3.2. Backing Up Patient Information

The SonoView program can be used to backup patients' basic information and scanned images. The data is saved in the system by default, and the user can also choose to save the data to a specific location. If the system needs to be reinstalled because of product failure, etc., Samsung Medison customer support staff will restore the patients' basic information and scanned images that are saved in the system. For a more detailed description, see 'Chapter 9. Image Managements'.

10.3.3. Software

The software may be changed to improve the product's performance. Software may not be altered by the user; any alterations to the software must be made with the help of a representative of Samsung Medison customer support department.



CAUTION

Minor software updates may be carried out without prior notice from the manufacturer.

If errors occur in the operating system (Windows 7), or you desire to upgrade the operating system, please follow the instructions of the operating system manufacturer.



NOTE

This product uses the Windows firewall to prevent any hacker or malicious software from accessing the system through the internet or network.




Chapter 11

Service Part List

11.1. Body Cover Parts	2
11.2. Control Panel Parts	5

11.1. Body Cover Parts

Part Category	Part Code	Part Information	Images of Parts
Body Cover Parts	MI61-01658C	HANGER-REAR CABLE	
Body Cover Parts	MI63-02568A	COVER-FRONT	
Body Cover Parts	MI63-02569A	COVER-SIDE L	
Body Cover Parts	MI63-02570A	COVER-SIDE R	
Body Cover Parts	MI63-02572A	COVER-REAR	

Part Category	Part Code	Part Information	Images of Parts
Body Cover Parts	MI61-01658C	HANGER-REAR CABLE	
Body Cover Parts	MI63-02581A	COVER-SPEAKER TOP	
Body Cover Parts	MI63-02590A	COVER-CABLE DUCT	
Body Cover Parts	MI67-01056A	BRUSH	
Body Cover Parts	MI68-03208A	LABEL-PSA	






Part Category	Part Code	Part Information	Images of Parts
Body Cover Parts	MI68-03541A	LABEL-MANUAL ICON	
Body Cover Parts	MI97-02373A	ASSY ETC	
Body Cover Parts	MI97-03388A	ASSY CASTER	
Body Cover Parts	MI97-03751A	ASSY COVER-ARCH	
Body Cover Parts	MI97-03752A	ASSY COVER-SPEAKER FRONT	






11.2. Control Panel Parts

Part Category	Part Code	Part Information	Images of Parts
Control Panel Parts	MI59-01133A	TRACK BALL	
Control Panel Parts	MI61-04333A	HOLDER-3D PROBE	
Control Panel Parts	MI61-04334A	HOLDER-2D PROBE	
Control Panel Parts	MI63-02454A	COVER-TOUCH REAR	
Control Panel Parts	MI63-02459A	COVER-USB RUBBER	






Part Category	Part Code	Part Information	Images of Parts
Control Panel Parts	MI63-02493A	COVER-LIGHT DEPTH	
Control Panel Parts	MI63-02494A	COVER-LIGHT FOCUS	
Control Panel Parts	MI63-02577A	COVER-CP TOP	
Control Panel Parts	MI63-02579A	COVER-CP DECO	
Control Panel Parts	MI64-01911B	KNOB-ENCORDER	






Part Category	Part Code	Part Information	Images of Parts
Control Panel Parts	MI64-01911C	KNOB-ENCORDER	
Control Panel Parts	MI64-02015A	BUTTON-ENCORDER PW	
Control Panel Parts	MI64-02016A	BUTTON-ENCORDER COLOR	
Control Panel Parts	MI64-02017A	BUTTON-ENCORDER 2D	
Control Panel Parts	MI64-02029A	BUTTON-CAP KEY FREEZE	

Part Category	Part Code	Part Information	Images of Parts
Control Panel Parts	MI64-02051A	BUTTON-TRACKBALL SET L	
Control Panel Parts	MI64-02052A	BUTTON-TRACKBALL SET R	
Control Panel Parts	MI64-02053A	BUTTON-TRACKBALL POINTER	
Control Panel Parts	MI64-02054A	BUTTON-TRACKBALL TEXT	
Control Panel Parts	MI64-02055A	BUTTON-TRACKBALL CHANGE	

Part Category	Part Code	Part Information	Images of Parts
Control Panel Parts	MI64-02056A	BUTTON-TRACKBALL MEASURE	
Control Panel Parts	MI64-02057A	BUTTON-TRACKBALL ERASER	
Control Panel Parts	MI64-02106A	BUTTON-END EXAM	
Control Panel Parts	MI64-02107A	BUTTON-SONOVUE	
Control Panel Parts	MI64-02108A	BUTTON-REPORT	

Part Category	Part Code	Part Information	Images of Parts
Control Panel Parts	MI64-02109A	BUTTON-U1	
Control Panel Parts	MI64-02110A	BUTTON-U2	
Control Panel Parts	MI64-02111A	BUTTON-U3	
Control Panel Parts	MI64-02112A	BUTTON-U4	
Control Panel Parts	MI64-02113A	BUTTON-BODYMARKER	



Part Category	Part Code	Part Information	Images of Parts
Control Panel Parts	MI64-02114A	BUTTON-QSCAN	
Control Panel Parts	MI64-02115A	BUTTON-L	
Control Panel Parts	MI64-02116A	BUTTON-R	
Control Panel Parts	MI64-02117A	BUTTON-M	
Control Panel Parts	MI64-02118A	BUTTON-CW	

Part Category	Part Code	Part Information	Images of Parts
Control Panel Parts	MI64-02119A	BUTTON-PD	
Control Panel Parts	MI64-02120A	BUTTON-3D/4D	
Control Panel Parts	MI64-02121A	BUTTON-ENCODER ANGLE(X)	
Control Panel Parts	MI64-02122A	BUTTON-ENCODER ZOOM	
Control Panel Parts	MI64-02123A	BUTTON-ENCODER EZ EXAM	

Part Category	Part Code	Part Information	Images of Parts
Control Panel Parts	MI67-01109A	RUBBER-CAP KEY	
Control Panel Parts	MI67-01144A	CAP RUBBER-CP KEY	
Control Panel Parts	MI68-03534A	LABEL-DO NOT SIT,PUSH	
Control Panel Parts	MI68-03535A	LABEL-NAME	
Control Panel Parts	MI92-02438A	ASSY BOARD-CP USB	




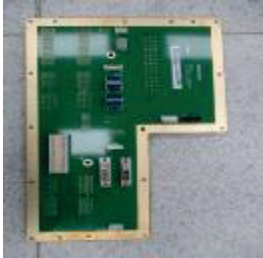
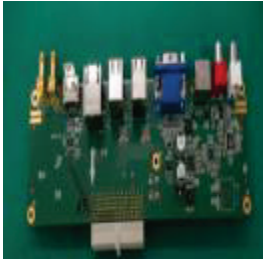
Part Category	Part Code	Part Information	Images of Parts
Control Panel Parts	MI92-02544A	ASSY BOARD-CP	
Control Panel Parts	MI95-01304A	ASSY CAP KEY-POWER	
Control Panel Parts	MI95-01310C	ASSY CAP KEY-TOGGLE	
Control Panel Parts	MI95-01311D	ASSY CAP KEY-KNOB	
Control Panel Parts	MI96-01413A	ASSY TOUCH PANEL	






Part Category	Part Code	Part Information	Images of Parts
Monitor&Arm Parts	MI63-02446A	COVER-MONITOR CABLE	
Monitor&Arm Parts	MI68-03537A	LABEL-CAUTION ARM	
Monitor&Arm Parts	MI96-01408A	ASSY MONITOR UNIT	
Monitor&Arm Parts	MI97-03753A	ASSY ARM- ARTICULATED	
System Cable Parts	MI39-01020B	CBF CABLE	



Part Category	Part Code	Part Information	Images of Parts
System Cable Parts	MI39-01647B	CBF CABLE-USB HUB DOCKING	
System Cable Parts	MI39-02025A	CBF CABLE-ECG_USB	
System Cable Parts	MI39-02030A	CBF CABLE-BW_PRINTER_USB	
System Cable Parts	MI39-02056A	CBF CABLE-PRINTER_POWER	
System Cable Parts	MI39-02171A	CBF-GND	

Part Category	Part Code	Part Information	Images of Parts
System Cable Parts	MI39-02172A	CBF-SATA-HDD-BP	
System Cable Parts	MI39-02173A	CBF-USB-BP-CP	
System Cable Parts	MI39-02174A	CBF-GEL WARMER-CP	
System Cable Parts	MI39-02177A	CBF-FAN-BOTTOM-EXT	
System Cable Parts	MI39-02178A	CBF-HDMI-TOUCH-BP	

Part Category	Part Code	Part Information	Images of Parts
System Cable Parts	MI39-02179A	CBF-HDMI-ARM-BP	 A black HDMI cable with a standard 19-pin connector on one end and a custom connector on the other, coiled on a green surface.
System Cable Parts	MI39-02181A	CBF-POWER-BP-ARM	 A black power cable with a standard 3-pin connector on one end and a custom connector on the other, coiled on a green surface.
System Cable Parts	MI39-02183A	CBF-SOUND-BP	 A black sound cable with a standard 3-pin connector on one end and a custom connector on the other, coiled on a green surface.
System Cable Parts	MI39-02184A	CBF-TOTAL-BP-CP	 A black cable with multiple connectors, including a standard 19-pin connector and a custom connector, coiled on a green surface.
System Parts	MI59-01204A	HDD-MODULE	 A silver-colored rectangular HDD module with four mounting holes, shown against a green background.

Part Category	Part Code	Part Information	Images of Parts
System Parts	MI82-02370A	ASSY BOARD BE (WITHOUT PC MODULE)	
System Parts	MI92-02525A	ASSY BOARD-BF	
System Parts	MI92-02631A	ASSY BOARD-BF-CW	
System Parts	MI92-02531A	ASSY BOARD-BP	
System Parts	MI92-02539A	ASSY BOARD-REAR	

Part Category	Part Code	Part Information	Images of Parts
System Parts	MI92-02611A	ASSY BOARD- USB_EXT	
System Parts	MI92-02561A	ASSY BOARD-PSA 3P	
System Parts	MI92-02528A	ASSY BOARD-PSA 4P	
System Parts	MI92-02636A	ASSY BOARD-PSA3P- CW	
System Parts	MI92-02637A	ASSY BOARD-PSA4P- CW	

Part Category	Part Code	Part Information	Images of Parts
System Parts	MI96-01411A	ASSY SPEAKER-L	
System Parts	MI96-01412A	ASSY SPEAKER-R	
System Parts	MI96-01414A	ASSY PC-MODULE	
System Parts	MI96-01417A	ASSY FAN-BOTTOM	
System Parts	MI96-01418A	ASSY POWER	

Part Category	Part Code	Part Information	Images of Parts
System Parts	MI97-03756A	ASSY LIFT	