


DIRECT FEED LOOP DISINFECTION <u>TANK AND HEADER</u> INSTALLATION & OPERATION MANUAL

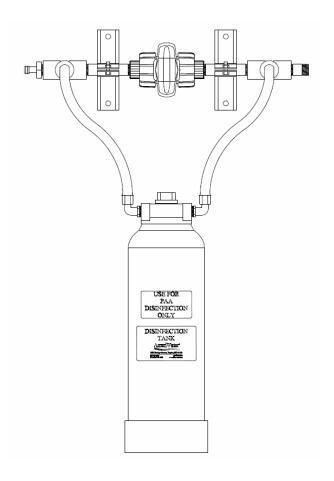

Manufactured With Pride In The USA www.ameriwater.com • 800-535-5585

AmeriWater • 3345 Stop 8 Rd • Dayton, OH 45414

TABLE OF CONTENTS

SECTION 1, USING MRO DIRECT FEED LOOP DISINFECTION

INSTRUCTIONS	2
SECTION 2, REPLACEMENT PARTS	
LIST	3
SECTION 3, DRAWINGS	
MRO2/03 DIRECT FEED LOOP DISINFECTION, .50" HEADER W/TANK	5
DIRECT FEED LOOP DISINFECTION HEADER, .50"	5

SECTION 1, USING MRO DIRECT FEED LOOP DISINFECTION

WARNING: DISINFECTION NOT TO BE USED WHILE PATIENTS ARE BEING TREATED!

INSTRUCTIONS

- 1. REMOVE THE FILL PLUG FROM THE TANK HEAD; DRAIN TANK, AND ADD 150cc OF PERACIDIN (OR MINNCARE).
- 2. SECURE THE FILL PLUG BACK ONTO THE TANK.
- 3. CONNECT INLET & OUTLET HOSES TO DISINFECTION HEADER.
- 4. COMPLETELY CLOSE THE DISINFECTION HEADER VALVE.
- 5. TURN ON THE RO.
- 6. VERIFY THE CONCENTRATION OF THE DISINFECTANT AT ALL POINTS OF USE IN THE LOOP IS ≥ 250ppm.
- 7. COMPLETELY SHUT OFF THE LOOP; AND ALLOW TO DWELL FOR A MINIMUM OF 60 MINUTES.
- 8. DISCONNECT THE INLET AND OUTLET HOSES FROM THE DISINFECTION HEADER.
- 9. COMPLETELY OPEN THE HEADER VALVE, AND RUN IN THE RO MODE TO THOROUGHLY RINSE-OUT DISINFECTANT AT ALL POINTS OF USE. (THIS SHOULD BE PERFORMED FOR A MINIMUM OF 60 MINUTES; TO ACHIEVE A TEST READING ≤ 3ppm OF THE RESIDULE DISINFECTANT).

WARNING: DO NOT TREAT PATIENTS UNTIL THE RESIDUAL DISINFECTANT IS ≤ 3ppm! WARNING: THESE DIRECT FEED LOOP SYSTEMS SHOULD BE USED FOR DISINFECTION ONLY!

SECTION 2, REPLACEMENT PARTS LIST

Description	Part Number
Q-CON,CPC,FEMALE COUP ,W/SHUT OFFx.5MPT	16-0034
Q-CON,CPC,MALE COUP INSERT,WITH SHUT OFFx.5 MPT	16-0063
TANK,POLYGLASS 6x18,2.5"T/OP	26550622
TANK HEAD, 2.5"OP, 3/4"I/O, FILL PLUG	27-0016

SECTION 4, DRAWINGS

