

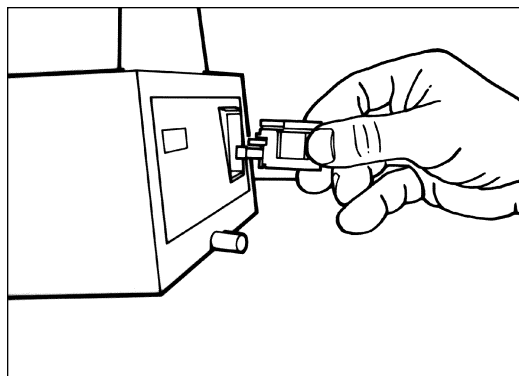


Changing the Fuse


1. Removing the fuse drawer.

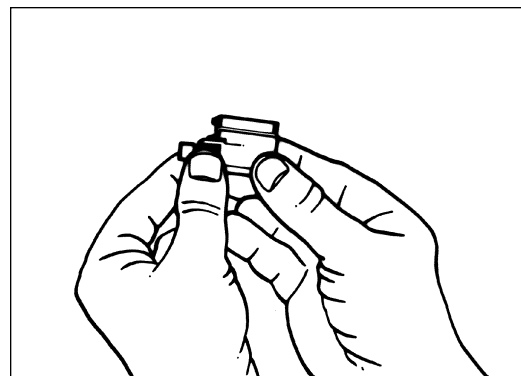


2. Removing the fuse holder.

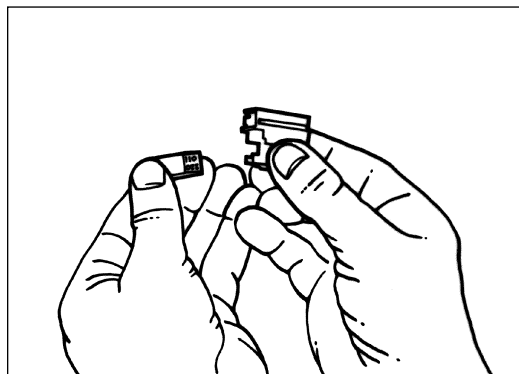


3. Replacing the fuse holder with the correct voltage visible.

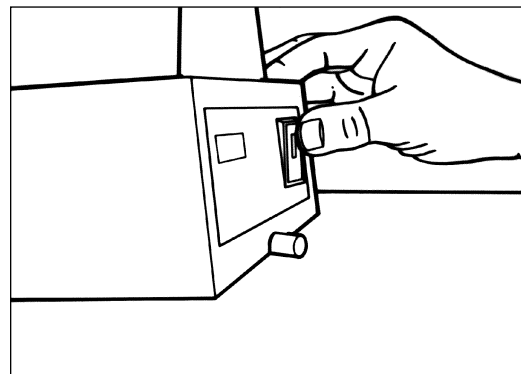


4. Reinserting the fuse drawer.

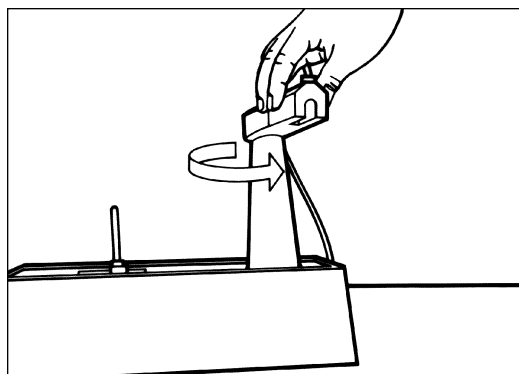Start-up Procedure


1. Rotate the drop arm to the waste (rear) position.

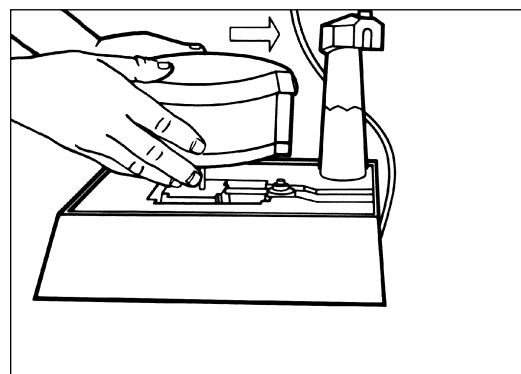


2. Place the carousel on the pivot-shaft, pushing it back over the gear drive.

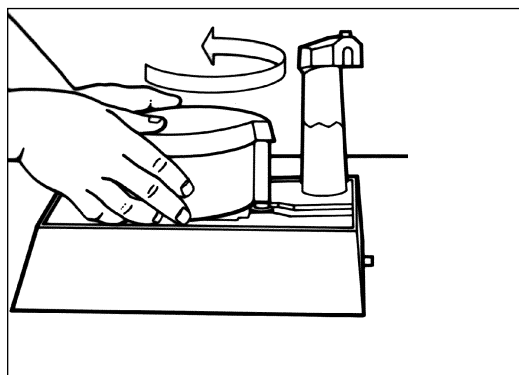


3. Holding the gear teeth free from engagement, turn the carousel counterclockwise until it stops against the gear.

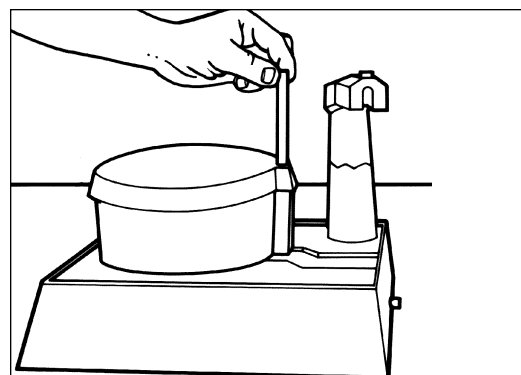


4. Load the carousel with 13 x 100 mm test tubes or using the optional adaptor, 1.5 ml microtubes.

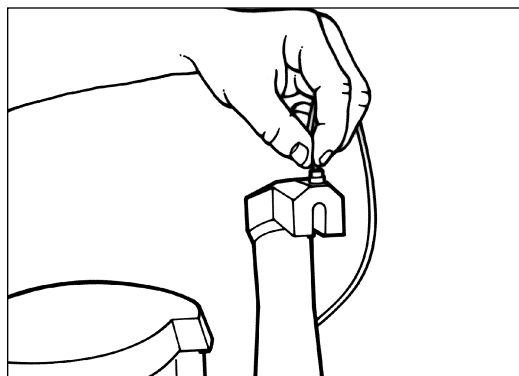


5. Install the inlet tubing using the drop former and arm cap.

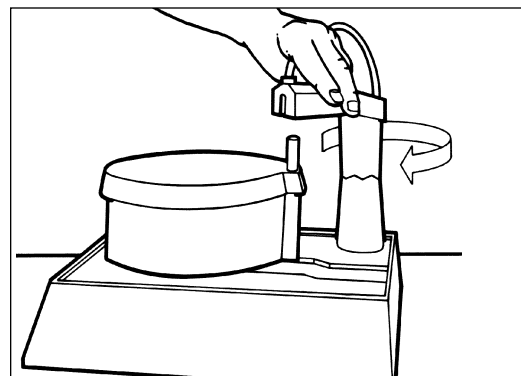


6. Rotate the drop arm into the collect position.

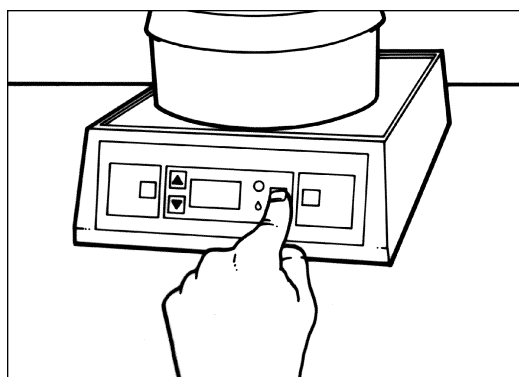

7. Set the collection mode (Time or Drop).

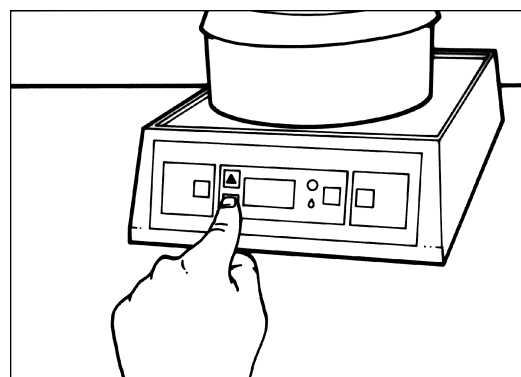

8. Set the collection interval.

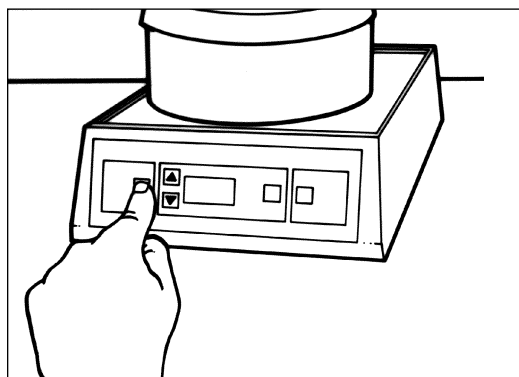

9. Push RUN to start.

***For more detailed instructions and descriptions, refer to the instruction manual.**