Voluson[™] P8 / Voluson[™] P6

Basic Service Manual

- Voluson™ P8 systems
- Voluson™ P6 systems

Document Number: 5723243 Revision: 6

Important Precautions

WARNING (EN)	 THIS SERVICE MANUAL IS AVAILABLE IN ENGLISH ONLY. IF A CUSTOMER'S SERVICE PROVIDER REQUIRES A LANGUAGE OTHER THAN ENGLISH, IT IS THE CUSTOMER'S RESPONSIBILITY TO PROVIDE TRANSLATION SERVICES. DO NOT ATTEMPT TO SERVICE THE EQUIPMENT UNLESS THIS SERVICE MANUAL HAS BEEN CONSULTED AND IS UNDERSTOOD. FAILURE TO HEED THIS WARNING MAY RESULT IN INJURY TO THE SERVICE PROVIDER, OPERATOR OR PATIENT FROM ELECTRIC SHOCK, MECHANICAL OR OTHER HAZARDS.
AVERTISSEMENT (FR)	 CE MANUEL DE MAINTENANCE N'EST DISPONIBLE QU'EN ANGLAIS. SI LE TECHNICIEN DU CLIENT A BESOIN DE CE MANUEL DANS UNE AUTRE LANGUE QUE L'ANGLAIS, C'EST AU CLIENT QU'IL INCOMBE DE LE FAIRE TRADUIRE. NE PAS TENTER D'INTERVENTION SUR LES ÉQUIPEMENTS TANT QUE LE MANUEL SERVICE N'A PAS ÉTÉ CONSULTÉ ET COMPRIS. LE NON-RESPECT DE CET AVERTISSEMENT PEUT ENTRAÎNER CHEZ LE TECHNICIEN, L'OPÉRATEUR OU LE PATIENT DES BLESSURES DUES À DES DANGERS ÉLECTRIQUES, MÉCANIQUES OU AUTRES.
WARNUNG (DE)	 DIESES KUNDENDIENST-HANDBUCH EXISTIERT NUR IN ENGLISCHER SPRACHE. FALLS EIN FREMDER KUNDENDIENST EINE ANDERE SPRACHE BENÖTIGT, IST ES AUFGABE DES KUNDEN FÜR EINE ENTSPRECHENDE ÜBERSETZUNG ZU SORGEN. WARTEN SIE DIESES GERÄT NUR, WENN SIE DIE ENTSPRECHENDEN ANWWEISUNGEN IM KUNDENDIENST-HANDBUCH GELESEN HABEN UND NACHVOLLZIEHEN KÖNNEN. WIRD DIESE WARNUNG NICHT BEACHTET, SO KANN ES ZU VERLETZUNGEN DES KUNDENDIENSTTECHNIKERS, DES BEDIENERS ODER DES PATIENTEN DURCH ELEKTRISCHE SCHLÄGE, MECHANISCHE ODER SONSTIGE GEFAHREN KOMMEN.

AVISO (ES)	 ESTE MANUAL DE SERVICIO SÓLO EXISTE EN INGLÉS. SI ALGÚN PROVEEDOR DE SERVICIOS AJENO A GEHC SOLICITA UN IDIOMA QUE NO SEA EL INGLÉS, LA TRADUCCIÓN ES RESPONSABILIDAD DEL CLIENTE. NO SE DEBERÁ DAR SERVICIO TÉCNICO AL EQUIPO, SIN HABER CONSULTADO Y COMPRENDIDO ESTE MANUAL DE SERVICIO. LA NO OBSERVANCIA DEL PRESENTE AVISO PUEDE DAR LUGAR A QUE EL PROVEEDOR DE SERVICIOS, EL OPERADOR O EL PACIENTE SUFRAN LESIONES PROVOCADAS POR CAUSAS ELÉCTRICAS, MECÁNICAS O DE OTRA NATURALEZA.
ATENÇÃO (PT)	 ESTE MANUAL DE ASSISTÊNCIA TÉCNICA SÓ SE ENCONTRA DISPONÍVEL EM INGLÊS. SE QUALQUER OUTRO SERVIÇO DE ASSISTÊNCIA TÉCNICA, QUE NÃO A GEHC, SOLICITAR ESTES MANUAIS NOUTRO IDIOMA, É DA RESPONSABILIDADE DO CLIENTE FORNECER OS SERVIÇOS DE TRADUÇÃO. NÃO TENTE REPARAR O EQUIPAMENTO SEM TER CONSULTADO E COMPREENDIDO ESTE MANUAL DE ASSISTÊNCIA TÉCNICA. O NÃO CUMPRIMENTO DESTE AVISO PODE POR EM PERIGO A SEGURANÇA DO TÉCNICO, OPERADOR OU PACIENTE DEVIDO A' CHOQUES ELÉTRICOS, MECÂNICOS OU OUTROS.
AVVERTENZA (IT)	 IL PRESENTE MANUALE DI MANUTENZIONE È DISPONIBILE SOLTANTO IN INGLESE. SE UN ADDETTO ALLA MANUTENZIONE ESTERNO ALLA GEHC RICHIEDE IL MANUALE IN UNA LINGUA DIVERSA, IL CLIENTE È TENUTO A PROVVEDERE DIRETTAMENTE ALLA TRADUZIONE. SI PROCEDA ALLA MANUTENZIONE DELL'APPARECCHIATURA SOLO DOPO AVER CONSULTATO IL PRESENTE MANUALE ED AVERNE COMPRESO IL CONTENUTO. NON TENERE CONTO DELLA PRESENTE AVVERTENZA POTREBBE FAR COMPIERE OPERAZIONI DA CUI DERIVINO LESIONI ALL'ADDETTO ALLA MANUTENZIONE, ALL'UTILIZZATORE ED AL PAZIENTE PER FOLGORAZIONE ELETTRICA, PER URTI MECCANICI OD ALTRI RISCHI.
HOIATUS (ET)	 KÄESOLEV TEENINDUSJUHEND ON SAADAVAL AINULT INGLISE KEELES. KUI KLIENDITEENINDUSE OSUTAJA NÕUAB JUHENDIT INGLISE KEELEST ERINEVAS KEELES, VASTUTAB KLIENT TÕLKETEENUSE OSUTAMISE EEST. ÄRGE ÜRITAGE SEADMEID TEENINDADA ENNE EELNEVALT KÄESOLEVA TEENINDUSJUHENDIGA TUTVUMIST JA SELLEST ARU SAAMIST. KÄESOLEVA HOIATUSE EIRAMINE VÕIB PÕHJUSTADA TEENUSEOSUTAJA, OPERAATORI VÕI PATSIENDI VIGASTAMIST ELEKTRILÖÖGI, MEHAANILISE VÕI MUU OHU TAGAJÄRJEL.

VAROITUS (FI)	 TÄMÄ HUOLTO-OHJE ON SAATAVILLA VAIN ENGLANNIKSI. JOS ASIAKKAAN PALVELUNTARJOAJA VAATII MUUTA KUIN ENGLANNINKIELISTÄ MATERIAALIA, TARVITTAVAN KÄÄNNÖKSEN HANKKIMINEN ON ASIAKKAAN VASTUULLA. ÄLÄ YRITÄ KORJATA LAITTEISTOA ENNEN KUIN OLET VARMASTI LUKENUT JA YMMÄRTÄNYT TÄMÄN HUOLTO-OHJEEN. MIKÄLI TÄTÄ VAROITUSTA EI NOUDATETA, SEURAUKSENA VOI OLLA PALVELUNTARJOAJAN, LAITTEISTON KÄYTTÄJÄN TAI POTILAAN VAHINGOITTUMINEN SÄHKÖISKUN, MEKAANISEN VIAN TAI MUUN VAARATILANTEEN VUOKSI.
ΠΡΟΕΙΔΟΠΟΙΗΣΗ (EL)	 ΤΟ ΠΑΡΟΝ ΕΓΧΕΙΡΙΔΙΟ ΣΕΡΒΙΣ ΔΙΑΤΙΘΕΤΑΙ ΣΤΑ ΑΓΓΛΙΚΑ ΜΟΝΟ. ΕΑΝ ΤΟ ΑΤΟΜΟ ΠΑΡΟΧΗΣ ΣΕΡΒΙΣ ΕΝΟΣ ΠΕΛΑΤΗ ΑΠΑΙΤΕΙ ΤΟ ΠΑΡΟΝ ΕΓΧΕΙΡΙΔΙΟ ΣΕ ΓΛΩΣΣΑ ΕΚΤΟΣ ΤΩΝ ΑΓΓΛΙΚΩΝ, ΑΠΟΤΕΛΕΙ ΕΥΘΥΝΗ ΤΟΥ ΠΕΛΑΤΗ ΝΑ ΠΑΡΕΧΕΙ ΥΠΗΡΕΣΙΕΣ ΜΕΤΑΦΡΑΣΗΣ. ΜΗΝ ΕΠΙΧΕΙΡΗΣΕΤΕ ΤΗΝ ΕΚΤΕΛΕΣΗ ΕΡΓΑΣΙΩΝ ΣΕΡΒΙΣ ΣΤΟΝ ΕΞΟΠΛΙΣΜΟ ΕΚΤΟΣ ΕΑΝ ΕΧΕΤΕ ΣΥΜΒΟΥΛΕΥΤΕΙ ΚΑΙ ΕΧΕΤΕ ΚΑΤΑΝΟΗΣΕΙ ΤΟ ΠΑΡΟΝ ΕΓΧΕΙΡΙΔΙΟ ΣΕΡΒΙΣ. ΕΑΝ ΔΕ ΛΑΒΕΤΕ ΥΠΟΨΗ ΤΗΝ ΠΡΟΕΙΔΟΠΟΙΗΣΗ ΑΥΤΗ, ΕΝΔΕΧΕΤΑΙ ΝΑ ΠΡΟΚΛΗΘΕΙ ΤΡΑΥΜΑΤΙΣΜΟΣ ΣΤΟ ΑΤΟΜΟ ΠΑΡΟΧΗΣ ΣΕΡΒΙΣ, ΣΤΟ ΧΕΙΡΙΣΤΗ Ή ΣΤΟΝ ΑΣΘΕΝΗ ΑΠΟ ΗΛΕΚΤΡΟΠΛΗΞΙΑ, ΜΗΧΑΝΙΚΟΥΣ Ή ΑΛΛΟΥΣ ΚΙΝΔΥΝΟΥΣ.
FIGYELMEZTETÉS (HU)	 EZEN KARBANTARTÁSI KÉZIKÖNYV KIZÁRÓLAG ANGOL NYELVEN ÉRHETŐ EL. HA A VEVŐ SZOLGÁLTATÓJA ANGOLTÓL ELTÉRŐ NYELVRE TART IGÉNYT, AKKOR A VEVŐ FELELŐSSÉGE A FORDÍTÁS ELKÉSZÍTTETÉSE. NE PRÓBÁLJA ELKEZDENI HASZNÁLNI A BERENDEZÉST, AMÍG A KARBANTARTÁSI KÉZIKÖNYVBEN LEÍRTAKAT NEM ÉRTELMEZTÉK. EZEN FIGYELMEZTETÉS FIGYELMEN KÍVÜL HAGYÁSA A SZOLGÁLTATÓ, MŰKÖDTETŐ VAGY A BETEG ÁRAMÜTÉS, MECHANIKAI VAGY EGYÉB VESZÉLYHELYZET MIATTI SÉRÜLÉSÉT EREDMÉNYEZHETI.
VIÐVÖRUN (IS)	 ÞESSI ÞJÓNUSTUHANDBÓK ER EINGÖNGU FÁANLEG Á ENSKU. EF ÞJÓNUSTUAÐILI VIÐSKIPTAMANNS ÞARFNAST ANNARS TUNGUMÁLS EN ENSKU, ER ÞAÐ Á ÁBYRGÐ VIÐSKIPTAMANNS AÐ ÚTVEGA ÞÝÐINGU. REYNIÐ EKKI AÐ ÞJÓNUSTA TÆKIÐ NEMA EFTIR AÐ HAFA SKOÐAÐ OG SKILIÐ ÞESSA ÞJÓNUSTUHANDBÓK. EF EKKI ER FARIÐ AÐ ÞESSARI VIÐVÖRUN GETUR ÞAÐ VALDIÐ MEIÐSLUM ÞJÓNUSTUVEITANDA, STJÓRNANDA EÐA SJÚKLINGS VEGNA RAFLOSTS, VÉLRÆNNAR EÐA ANNARRAR HÆTTU.

VÝSTRAHA (CS)	 TENTO SERVISNÍ NÁVOD EXISTUJE POUZE V ANGLICKÉM JAZYCE. V PŘÍPADĚ, ŽE POSKYTOVATEL SLUŽEB ZÁKAZNÍKŮM POTŘEBUJE NÁVOD V JINÉM JAZYCE, JE ZAJIŠTĚNÍ PŘEKLADU DO ODPOVÍDAJÍCÍHO JAZYKA ÚKOLEM ZÁKAZNÍKA. NEPROVÁDĚJTE ÚDRŽBU TOHOTO ZAŘÍZENÍ, ANIŽ BYSTE SI PŘEČETLI TENTO SERVISNÍ NÁVOD A POCHOPILI JEHO OBSAH. V PŘÍPADĚ NEDODRŽOVÁNÍ TÉTO VÝSTRAHY MŮŽE DOJÍT ÚRAZU ELEKTRICKÁM PROUDEM PRACOVNÍKA POSKYTOVATELE SLUŽEB, OBSLUŽNÉHO PERSONÁLU NEBO PACIENTŮ VLIVEM ELEKTRICKÉHOP PROUDU, RESPEKTIVE VLIVEM K RIZIKU MECHANICKÉHO POŠKOZENÍ NEBO JINÉMU RIZIKU.
ADVARSEL (DA)	 DENNE SERVICEMANUAL FINDES KUN PÅ ENGELSK. HVIS EN KUNDES TEKNIKER HAR BRUG FOR ET ANDET SPROG END ENGELSK, ER DET KUNDENS ANSVAR AT SØRGE FOR OVERSÆTTELSE. FORSØG IKKE AT SERVICERE UDSTYRET MEDMINDRE DENNE SERVICEMANUAL ER BLEVET LÆST OG FORSTÅET. MANGLENDE OVERHOLDELSE AF DENNE ADVARSEL KAN MEDFØRE SKADE PÅ GRUND AF ELEKTRISK, MEKANISK ELLER ANDEN FARE FOR TEKNIKEREN, OPERATØREN ELLER PATIENTEN.
WAARSCHUWING (NL)	 DEZE ONDERHOUDSHANDLEIDING IS ENKEL IN HET ENGELS VERKRIJGBAAR. ALS HET ONDERHOUDSPERSONEEL EEN ANDERE TAAL VEREIST, DAN IS DE KLANT VERANTWOORDELIJK VOOR DE VERTALING ERVAN. PROBEER DE APPARATUUR NIET TE ONDERHOUDEN VOORDAT DEZE ONDERHOUDSHANDLEIDING WERD GERAADPLEEGD EN BEGREPEN IS. INDIEN DEZE WAARSCHUWING NIET WORDT OPGEVOLGD, ZOU HET ONDERHOUDSPERSONEEL, DE OPERATOR OF EEN PATIËNT GEWOND KUNNEN RAKEN ALS GEVOLG VAN EEN ELEKTRISCHE SCHOK, MECHANISCHE OF ANDERE GEVAREN.
BRÎDINÂJUMS (LV)	 ŠĪ APKALPES ROKASGRĀMATA IR PIEEJAMA TIKAI ANGĻU VALODĀ. JA KLIENTA APKALPES SNIEDZĒJAM NEPIECIEŠAMA INFORMĀCIJA CITĀ VALODĀ, NEVIS ANGĻU, KLIENTA PIENĀKUMS IR NODROŠINĀT TULKOŠANU. NEVEICIET APRĪKOJUMA APKALPI BEZ APKALPES ROKASGRĀMATAS IZLASĪŠANAS UN SAPRAŠANAS. ŠĪ BRĪDINĀJUMA NEIEVĒROŠANA VAR RADĪT ELEKTRISKĀS STRĀVAS TRIECIENA, MEHĀNISKU VAI CITU RISKU IZRAISĪTU TRAUMU APKALPES SNIEDZĒJAM, OPERATORAM VAI PACIENTAM.

ĮSPĖJIMAS (LT)	 ŠIS EKSPLOATAVIMO VADOVAS YRA IŠLEISTAS TIK ANGLŲ KALBA. JEI KLIENTO PASLAUGŲ TEIKĖJUI REIKIA VADOVO KITA KALBA – NE ANGLŲ, VERTIMU PASIRŪPINTI TURI KLIENTAS. NEMĖGINKITE ATLIKTI ĮRANGOS TECHNINĖS PRIEŽIŪROS DARBŲ, NEBENT VADOVAUTUMĖTĖS ŠIUO EKSPLOATAVIMO VADOVU IR JĮ SUPRASTUMĖTE NEPAISANT ŠIO PERSPĖJIMO, PASLAUGŲ TEIKĖJAS, OPERATORIUS AR PACIENTAS GALI BŪTI SUŽEISTAS DĖL ELEKTROS SMŪGIO, MECHANINIŲ AR KITŲ PAVOJŲ.
ADVARSEL (NO)	 DENNE SERVICEHÅNDBOKEN FINNES BARE PÅ ENGELSK. HVIS KUNDENS SERVICELEVERANDØR TRENGER ET ANNET SPRÅK, ER DET KUNDENS ANSVAR Å SØRGE FOR OVERSETTELSE. IKKE FORSØK Å REPARERE UTSTYRET UTEN AT DENNE SERVICEHÅNDBOKEN ER LEST OG FORSTÅTT. MANGLENDE HENSYN TIL DENNE ADVARSELEN KAN FØRE TIL AT SERVICELEVERANDØREN, OPERATØREN ELLER PASIENTEN SKADES PÅ GRUNN AV ELEKTRISK STØT, MEKANISKE ELLER ANDRE FARER.
OSTRZEŻENIE (PL)	 NINIEJSZY PODRĘCZNIK SERWISOWY DOSTĘPNY JEST JEDYNIE W JĘZYKU ANGIELSKIM. JEŚLI FIRMA ŚWIADCZĄCA KLIENTOWI USłUGI SERWISOWE WYMAGA UDOSTĘPNIENIA PODRĘCZNIKA W JĘZYKU INNYM NIŻ ANGIELSKI, OBOWIĄZEK ZAPEWNIENIA STOSOWNEGO TŁUMACZENIA SPOCZYWA NA KLIENCIE. NIE PRÓBOWAĆ SERWISOWAĆ NINIEJSZEGO SPRZĘTU BEZ UPRZEDNIEGO ZAPOZNANIA SIĘ Z PODRĘCZNIKIEM SERWISOWYM. NIEZASTOSOWANIE SIĘ DO TEGO OSTRZEŻENIA MOŻE GROZIĆ OBRAŻENIAMI CIAŁA SERWISANTA, OPERATORA LUB PACJENTA W WYNIKU PORAŻENIA PRĄDEM, URAZU MECHANICZNEGO LUB INNEGO RODZAJU ZAGROŻEŃ.
ATENŢIE (RO)	 ACEST MANUAL DE SERVICE ESTE DISPONIBIL NUMAI ÎN LIMBA ENGLEZĂ. DACĂ UN FURNIZOR DE SERVICII PENTRU CLIENȚI NECESITĂ O ALTĂ LIMBĂ DECÂT CEA ENGLEZĂ, ESTE DE DATORIA CLIENTULUI SĂ FURNIZEZE O TRADUCERE. NU ÎNCERCAȚI SĂ REPARAȚI ECHIPAMENTUL DECÂT ULTERIOR CONSULTĂRII ŞI ÎNȚELEGERII ACESTUI MANUAL DE SERVICE. IGNORAREA ACESTUI AVERTISMENT AR PUTEA DUCE LA RĂNIREA DEPANATORULUI, OPERATORULUI SAU PACIENTULUI ÎN URMA PERICOLELOR DE ELECTROCUTARE, MECANICE SAU DE ALTĂ NATURĂ.

ОСТОРОЖНО! (RU)	 ДАННОЕ РУКОВОДСТВО ПО ОБСЛУЖИВАНИЮ ПРЕДОСТАВЛЯЕТСЯ ТОЛЬКО НА АНГЛИЙСКОМ ЯЗЫКЕ. ЕСЛИ СЕРВИСНОМУ ПЕРСОНАЛУ КЛИЕНТА НЕОБХОДИМО РУКОВОДСТВО НЕ НА АНГЛИЙСКОМ ЯЗЫКЕ, КЛИЕНТУ СЛЕДУЕТ САМОСТОЯТЕЛЬНО ОБЕСПЕЧИТЬ ПЕРЕВОД. ПЕРЕД ОБСЛУЖИВАНИЕМ ОБОРУДОВАНИЯ ОБЯЗАТЕЛЬНО ОБРАТИТЕСЬ К ДАННОМУ РУКОВОДСТВУ И ПОЙМИТЕ ИЗЛОЖЕННЫЕ В НЕМ СВЕДЕНИЯ. НЕСОБЛЮДЕНИЕ УКАЗАННЫХ ТРЕБОВАНИЙ МОЖЕТ ПРИВЕСТИ К ТОМУ, ЧТО СПЕЦИАЛИСТ ПО ТЕХОБСЛУЖИВАНИЮ, ОПЕРАТОР ИЛИ ПАЦИЕНТ ПОЛУЧАТ УДАР ЗЛЕКТРИЧЕСКИМ ТОКОМ, МЕХАНИЧЕСКУЮ ТРАВМУ ИЛИ ДРУГОЕ ПОВРЕЖДЕНИЕ.
UPOZORNENIE (SK)	 TÁTO SERVISNÁ PRÍRUČKA JE K DISPOZÍCII LEN V ANGLIČTINE. AK ZÁKAZNÍKOV POSKYTOVATEĽ SLUŽIEB VYŽADUJE INÝ JAZYK AKO ANGLIČTINU, POSKYTNUTIE PREKLADATEĽSKÝCH SLUŽIEB JE ZODPOVEDNOSŤOU ZÁKAZNÍKA. NEPOKÚŠAJTE SA VYKONÁVAŤ SERVIS ZARIADENIA SKÔR, AKO SI NEPREČÍTATE SERVISNÚ PRÍRUČKU A NEPOROZUMIETE JEJ. ZANEDBANIE TOHTO UPOZORNENIA MÔŽE VYÚSTIŤ DO ZRANENIA POSKYTOVATEĽA SLUŽIEB, OBSLUHUJÚCEJ OSOBY ALEBO PACIENTA ELEKTRICKÝM PRÚDOM, PRÍPADNE DO MECHANICKÉHO ALEBO INÉHO NEBEZPEČENSTVA.
VARNING (SV)	 DEN HÄR SERVICEHANDBOKEN FINNS BARA TILLGÄNGLIG PÅ ENGELSKA. OM EN KUNDS SERVICETEKNIKER HAR BEHOV AV ETT ANNAT SPRÅK ÄN ENGELSKA ANSVARAR KUNDEN FÖR ATT TILLHANDAHÅLLA ÖVERSÄTTNINGSTJÄNSTER. FÖRSÖK INTE UTFÖRA SERVICE PÅ UTRUSTNINGEN OM DU INTE HAR LÄST OCH FÖRSTÅR DEN HÄR SERVICEHANDBOKEN. OM DU INTE TAR HÄNSYN TILL DEN HÄR VARNINGEN KAN DET RESULTERA I SKADOR PÅ SERVICETEKNIKERN, OPERATÖREN ELLER PATIENTEN TILL FÖLJD AV ELEKTRISKA STÖTAR, MEKANISKA FAROR ELLER ANDRA FAROR.
DİKKAT (TR)	 BU SERVİS KILAVUZU YALNIZCA İNGİLİZCE OLARAK SAĞLANMIŞTIR. EĞER MÜŞTERİ TEKNİSYENİ KILAVUZUN İNGİLİZCE DIŞINDAKİ BİR DİLDE OLMASINI İSTERSE, KILAVUZU TERCÜME ETTİRMEK MÜŞTERİNİN SORUMLULUĞUNDADIR. SERVİS KILAVUZUNU OKUYUP ANLAMADAN EKİPMANLARA MÜDAHALE ETMEYİNİZ. BU UYARININ GÖZ ARDI EDİLMESİ, ELEKTRİK ÇARPMASI YA DA MEKANİK VEYA DİĞER TÜRDEN KAZALAR SONUCUNDA TEKNİSYENİN, OPERATÖRÜN YA DA HASTANIN YARALANMASINA YOL AÇABİLİR.

このサービスマニュアルには英語版しかありません。

GEHC 以外でサービスを担当される業者が英語以外の言語を要求される場合、翻訳作業はその業者の責任で行うものとさせていただきます。

- このサービスマニュアルを熟読し理解せずに、装置のサービスを行わ ないで下さい。
- この警告に従わない場合、サービスを担当される方、操作員あるいは 患者さんが、感電や機械的又はその他の危険により負傷する可能性が あります。

本维修手册仅存有英文本・

非 GEHC 公司的维修员要求非英文本的维修手册时, 客户需自行负责翻译。

未详细阅读和完全了解本手册之前,不得进行维修。 忽略本注意事项会对维修员,操作员或病人造成触 电,机械伤害或其他伤害。

본 서비스 지침서는 영어로만 이용하실 수 있습니다.

- 고객의 서비스 제공자가 영어이와 언어를 요구할 경우, 번역 서비스 지침서를 제공하는 것은 고객의 책임입니다.
- · 본 서비스 지침서를 지참했고 이해하지 않는 한은 해당 장비를 수리를 시도하지 마십시오.

-

 · 이 경우에 유해하지 않은 전기쇼크, 기계상의 혹은 다른 위험으로부터 서비스 제공자, 운영자 혹은 환자에게 위험을 가할 수 있습니다.

警告 (JA)



注意:

(ZH-CN)

DAMAGE IN TRANSPORTATION

All packages should be closely examined at time of delivery. If damage is apparent write "Damage In Shipment" on ALL copies of the freight or express bill BEFORE delivery is accepted or "signed for" by a GE representative or hospital receiving agent. Whether noted or concealed, damage MUST be reported to the carrier immediately upon discovery, or in any event, within 14 days after receipt, and the contents and containers held for inspection by the carrier. A transportation company will not pay a claim for damage if an inspection is not requested within this 14 day period.

CERTIFIED ELECTRICAL CONTRACTOR STATEMENT - FOR USA ONLY

All electrical Installations that are preliminary to positioning of the equipment at the site prepared for the equipment shall be performed by licensed electrical contractors. Other connections between pieces of electrical equipment, calibrations and testing shall be performed by qualified GE Healthcare personnel. In performing all electrical work on these products, GE will use its own specially trained field engineers. All of GE's electrical work on these products will comply with the requirements of the applicable electrical codes.

The purchaser of GE equipment shall only utilize qualified personnel (i.e., GE's field engineers, personnel of third-party service companies with equivalent training, or licensed electricians) to perform electrical servicing on the equipment.

OMISSIONS & ERRORS

If there are any omissions, errors or suggestions for improving this documentation, please contact the Voluson[™]P8 / Voluson[™]P6 Service Documentation Group with specific information listing the system type, manual title, part number, revision number, page number and suggestion details. Mail the information to:Service Documentation, 9, Sunhwan-ro, 214beon-gil, Jungwon-gu, Seongnamsi, Gyeonggi-do, Korea.

GE Healthcare employees should use TrackWise to report service documentation issues. These issues will then be in the internal problem reporting tool and communicated to the writer.

SERVICE SAFETY CONSIDERATIONS

ANGER DANGEROUS VOLTAGES, CAPABLE OF CAUSING DEATH, ARE PRESENT IN THIS EQUIPMENT. USE EXTREME CAUTION WHEN HANDLING, TESTING AND ADJUSTING. TO PREVENT ELECTRIC SHOCK, SERVICE PERSONNEL TO AVOID CONTACT WITH HV AND MV CIRCUIT PARTS DURING SYSTEM ON CONDITION

WARNING Use all Personal Protection Equipment (PPE) such as gloves, safety shoes, safety glasses, and kneeling pad, to reduce the risk of injury.

The contents of this publication may not be copied or duplicated in any form, in whole or in part, without prior written permission of Voluson[™]P8 / Voluson[™]P6.

Voluson[™]P8 / Voluson[™]P6 may revise this publication from time to time without written notice.

TRADEMARKS

All products and their name brands are trademarks of their respective holders.

COPYRIGHTS

All Material Copyright© 2016-18 by General Electric Inc. All Rights Reserved.

_

Revision History

Revision	Date	Reason for change
1	August 2015	Initial release
2	February 2016	Update Replacement procedures and SW Images
3	July 2016	Enhancement feedback
4	May 2017	Update chapter 8 to add new figures
5	August 2017	Add contents : Mode Transition , Software DVD storage, Software Upgrade Checklist
6	May 2018	Update contents

List of Effected Pages

Pages	Revision	Pages	Revision	Pages	Revision
Title	6	Chapter 3 - Setup Instructions pages 1-72	6	Chapter 8 - Replacement Procedures pages 1-214	6
Important Precautions pages i-x	6	Chapter 4 - Functional Checks pages 1-68	6	Chapter 9 - Renewal Parts pages 1-26	6
Table of Contents pages i-xxvi	6	Chapter 5 - Components and Functions (Theory) pages 1-78	6	Chapter 10 - Care & Maintenance pages 1-36	6
Chapter 1 - Introduction pages 1-16	6	Chapter 6 - Service Adjustments pages 1-4	6	Index pages I-IV	6
Chapter 2 - Site Preparation pages1-10	6	Chapter 7 - Diagnostics/ Truobleshooting pages 1-78	6	Rear Cover pages 1-2	6

CHAPTER 1 Introduction

Overview		
Purpose of Chapter 1	1 - 1	
Purpose of Service Manual	1 - 1	
Typical Users of the Basic Service Manual	1 - 2	
Models Covered by this Manual	1 - 2	
Purpose of Operator Manual(s)	1 - 3	
Important Conventions	1 - 3	
Conventions Used in this Manual	1 - 3	
Standard Hazard Icons	1 - 4	
Product Icons	1 - 5	
Safety Considerations	1 - 7	
	1 - 7	
Human Safety	1 - 7	
Mechanical Safety	1 - 7	
Electrical Safety	1 - 8	
Safe Practices	1 - 8	
Probes	1 - 8	
Auxiliary Devices Safety	1 - 8	
Labels Locations	1 - 10	
	1 - 11	
IUV mark	1 - 12	
Dangorous Proceduro Warnings	1 - 13	
Lockout/Tagout Paguiromonts (For USA Only)	1 - 14	
Returning/Shinning System Probes and Repair Parts	1 - 14	
Returning/Onipping Oystern, Trobes and Repair Farts	1 - 14	
	1-15	
Electromagnetic Compatibility (EMC)	1 - 16	
What is EMC?	1 - 16	
Compliance	1 - 16	
Electrostatic Discharge (ESD) Prevention	1 - 16	
Customer Assistance	1 - 17	
Contact Information	1 - 17	
System Manufacturer	1 - 18	

CHAPTER 2 Site Preparation

Overview	2 - 1
Purpose of Chapter 2	2 - 1
General Console Requirements	2 - 2
Environmental Requirements	2 - 2
Cooling	2 - 2
Lighting	2 - 2
Electrical Requirements	2 - 2
Voluson [™] P8 / Voluson [™] P6 Power Requirements	2 - 3
Inrush Current	2 - 3
Site Circuit Breaker	2 - 3
Site Power Outlets	2 - 3
Main Power Plug	2 - 3
EMI Limitations	2 - 4
Probe Environmental Requirements	2 - 5
Time and Manpower Requirements	2 - 5
System Specifications	2 - 5
Physical Dimensions of Voluson [™] P8 / Voluson [™] P6	2 - 5
Acoustic Noise Output	2 - 5
Electrical Specifications	2 - 5
Facility Needs	2 - 6
Purchaser Responsibilities	2 - 6
Mandatory Site Requirements	2 - 7
Site Recommendations	2 - 7
Recommended Ultrasound Room Layout	2 - 8
Networking Setup Requirements	2 - 9
Stand-alone Unit (without Network Connection)	2 - 9
Unit Connected to Hospital's Network	2 - 9
Purpose of the DICOM Network Function	2 - 9
DICOM Option Pre-installation Requirements	2 - 9

CHAPTER 3 Setup Instructions

Overview	
The Purpose of Chapter 3 3 - 1	
Set Up Reminders	
Average Installation Time 3 - 2	
Installation Warnings 3 - 3	,
Moving/Lifting the System	,
System Acclimation Time 3 - 3	'
Brake Pedal Operation 3 - 4	
Safety Reminders 3 - 5	
Receiving and Unpacking the Equipment 3 - 6	i
Preparing for Set Up	0
Verify Customer Order 3 - 1	0
EMI Protection	0
Connection of Auxiliary Devices	2
Connecting the LCD Monitor	3
Connecting the Black & White Printer	4
Connection Scheme: B&W Printer	5
Connecting the Color Printer 3 - 1	6
Connection Scheme: Color Printer	7
Connecting the DeskJet Color Printer	8
Connection via Bluetooth Adapter	8
Connecting the Wireless Network Adapter	0
Connecting the Footswitch 3 - 2	1
Connecting the USB Flash Memory Stick	2
Connecting the external USB Hard disk (Handydrive)	2
General Remarks and Hints when using external USB-Devices 3 - 2	3
External USB-Devices - Connection	3
External USB-Devices - Disconnection	3
Completing the Set Up 3 - 2	5
Connecting the Unit to a Power Source	5
Power On / Boot Up 3 - 2	5
Ultrasound unit Power On 3 - 2	5
Back End Processor Boot Up 3 - 2	7
During a normal boot, you may observe	8
Power Off / Shutdown 3 - 2	9
Ultrasound unit Snutdown 3-2	9

Transducer Connection	
Printer Installation	
Installing the Digital Black & White Printer	
Installing the Digital Color Printer	
Installing the Network Color laser Printer	
Installing the Deskjet Color Printer directly via an USB-cable	
Installing the DeskJet Color Printer via Bluetooth connection	
Installing the Bluetooth Adapter and Software	
Prepare the DeskJet Color Printer	
Installing the printer software/driver	
HP Officejet 100 turns off unexpectedly (after being idle for a period of times))t
time)	
Printer Installation manually	
Adjustment of Printer Settings	
$UP-D097 / UP-D090ND - Printer Settings \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots$	
Remote Control Selection 3 - 52	
Report Printer Selection 3 - 53	
Cellular Modem Installation	
Overview	
Tools Required	
Parts Required	
Removal procedure	
Removal procedure for Cellular Modem installation	
Installation procedure	
System Configuration	
System Setup	
I o invoke the Setup procedure:	
How to enter Date and Time	
How to change Language and/or FUM Language 3 - 65	
How to activate System Login	
How to change Ext. Monitor Output Settings	
How to adjust function of the Footswitch (Left/Middle/Right)	
How to change the Keyboard Layout	
How to configure Service Platform	
How to install SW Option	
On-Board Optional Peripherals	
External I/O Connectors	
External I/O Pin Outs 3 - 69	
Available Probes	

Software/Option Configuration	. 3-71
Connectivity Setup	. 3 - 72 . 3 - 72
The Dataflow Concept Dataflow Examples Stand-alone Voluson™ P8 / Voluson™ P6 Voluson™ P8 / Voluson™ P6 + PC (with 4D View Software) within a	. 3 - 72 . 3 - 73 . 3 - 74 "Speaker
Net"	. 3 - 74 er 3 - 74 . 3 - 75 3 - 75
Wireless Network Configuration	. 3 - 76 . 3 - 76 . 3 - 77
Adding a WLAN Profile	. 3 - 77 . 3 - 78 . 3 - 78 . 3 - 79
Available WLAN Channels Monitoring the WLAN WLAN Diagnostic WLAN	. 3 - 79 . 3 - 80 . 3 - 80 . 3 - 81
How to Setup E-mail	. 3 - 83 . 3 - 85
How to setup E-mail to MNS Service	. 3 - 60 en 3 - 87 . 3 - 88 3 - 89
How to create an InSite Permanent User	. 3 - 91 . 3 - 93
Paperwork Product Locator Installation User Manual(s)	. 3 - 95 . 3 - 95 . 3 - 95

CHAPTER 4 Functional Checks

	Overview
	Required Equipment
	General Procedure.4 - 2Power On / Boot Up4 - 2System Power On4 - 2Power Off / Shutdown4 - 4System Shutdown4 - 4System Features4 - 6Control Panel4 - 6Monitor Display4 - 7
	Functional Checks4 - 8Patient Archive (Image Management)4 - 9Erasing DVD/CD4 - 10
	Backup and Restore Database, Preset Configurations and Images4 - 11Save Small Backup (Scan Settings)4 - 12Load Small Backup (Scan Settings)4 - 13Preparations4 - 13Load "Complete Backup"4 - 14Load only parts of the "Complete Backup"4 - 15Save Full System Configuration (Full Backup)4 - 16Load Full System Configuration (Full Backup)4 - 18Delete Full System Configuration (Full Backup)4 - 20Archiving Images4 - 21Save Image Archive4 - 21Load Image Archive4 - 23
	Software Configuration Checks4 - 24System Setup4 - 24Measure Setup4 - 25
	Peripheral Checks 4 - 26 ECG Check Out 4 - 26 Control Console Positioning 4 - 27 Assembly procedure for converting Voluson™ P8 / Voluson™ P6 from Low Ver-
to	o High Version

sion

Mode Transition	4 - 42
B Mode	4 - 42
M Mode	4 - 42
B/CF Mode	4 - 42
PW Mode	4 - 42
CW (Optional)	4 - 42
3D/4D (Optional)	4 - 42
Site Log	4 - 43

CHAPTER 5 Components and Functions (Theory)

Overview
Purpose of Chapter 5
General Information
Description of Voluson [™] P8 / Voluson [™] P6 Operating Modes 5 - 6
B-Mode or 2D-Mode
Harmonic Imaging (HI)
XTD-View
M-Mode
MCFM Mode (M Mode + Color Flow Mode)
Color Doppler Modes
Color Flow Mode
Power Doppler
Bi-Directional Angio (HD-Flow Mode)
Pulsed (PW) Doppler
3D Imaging
3D Data Collection and Reconstruction
3D Image Presentation
3D Rendering
Block diagram Voluson [™] P8 / Voluson [™] P6
Front End Block diagram
Back End Block diagram
Data Flow Control Description
M-Mode
D-Wode (Pulsed Wave- and Continuous Wave Doppier)
CEM-Mode (Color Flow Mode)
3D-Mode (Freezes after 1 volume sween) 5 - 15
Real Time 4D-Mode (nonston volume rendering) 5 - 15
XBeam CRI-Mode (CrossBeam Compound Resolution Imaging)
Archive write mode (store Image to Archive)
Description of Software Options 5 - 16
3D/4D Activation 5 - 17
4D Real Time
Static 3D
SonoRenderlive
Advanced 3D/4D Package
3D/4D Activation
TUI
SingleView

HDLive(3D)	5 - 17 5 - 17
Advanced VCI	5 - 17
SingleView	5 - 18
SonoAVC follicle Pro	5 - 18
SonoL&D	5 - 18
TUI	5 - 18
CFM/M-CFM	5 - 18
	5 - 18
	5 - 18
	5 - 19
DICOM	5 - 19
Recording Module SW-DVR	5 - 19
IEC62359 Ed.2	5 - 19
Description of Hardware Options	5 - 20
CW - Continuous Wave Doppler	5 - 20
ECG Module	5 - 20
Wireless Network Adapter (WLAN - Wireless Local Area Network)	5 - 20
DPS2 Battery Assy	5 - 20
Data Location	5 - 21
FrontEnd Processor	5 - 22
T-DPI - Probe Interface board	5 - 23
DBM64- Beam former board	5 - 24
DRFM- Radio Frequency interface and System controller	5 - 25
DRFM - FPGA	5 - 26
BackEnd Processor	5 - 27
Hard Disk Drive	5 - 28
SOM (System On Module)	5 - 28
Congatec	5 - 28
Internal I/O	5 - 30
OPIO (User Interface).	5 - 31
OPIO Block Diagram	5 - 31
OPIO layout	5 - 32
Button Description	5 - 32
Monitor	5 27
	5-31
Monitor setup	5 - 37
External I/O	5 - 38

Peripherals	39
Printers	39
Black & White Digital Printer 5 -	39
Color Digital Printer	39
Color Deskjet Printer5 -	39
DVD+R/RW Drive (Writer)	39
ECG Module	39
Wireless Network Adapter 5 -	39
DPS2 Battery Assy 5-	30
DI 52 Dallery Assy	55
Power Distribution	40
ACFE - Primary Power Module	40
DPS Block Diagram	41
Power Distribution Block Diagram	42
Power Up Sequence Description	43
Power Up Sequence Description	43
Power Down Sequence Description	44
Mechanical Concept and Overview	44
Functions of ACFE	44
ACDC - primary DC Power Supply	45
Function of ACDC	45
DCDC - main DC Power Supply	45
4D Module 5-	45
	10
Service Platform (InSite Exc)	46
Introduction	46
Access / Security 5 -	46
Local Access 5-	47
Remote Access	48
	-
Common Service Desktop (CSD)5 -	49
Internationalization	49
Service Page	50
Introduction	50
Access / Security	50
Service Login	50
Auto Tester	51
Update	51
FMI from DVD	51
ASI - Additional Software Installation	52
Restore Software5 -	52
TCP/IP Buffersize	52
Show Factory Presets	52
Common Service Desktop (CSD)5 -	52

Request for Service(DRFM) Delete all Patients Export System Data Console Test Keyboard Layout Monitor Test Connected Probes Load Application Settings Probe EEPROM	5 - 52 5 - 52 5 - 53 5 - 53 5 - 53 5 - 53 5 - 53 5 - 53 5 - 54 5 - 55
Boot Screen Functions	5 - 56
Overview	5 - 56
	5 - 56
GE-Service	5 - 56
Rollback	5 - 57
Memtest/Memory Check)	5 - 58
Windows Start Menu	5 - 50
I INI IX - Voluson Maintenance System	5 - 61
	5 61
General Operation and Selection in LINUX (and BIOS) menu	5 - 61
Access/Security	5 - 61
Before Recovering or Initializing the Hard disk	5 - 62
Volucon Maintonance System - Main Manu	5 61
	5 64
	5 64
	5 64
Evit/Pabaat	5 - 64
	5 64
	5-04
	5 - 65
	5 - 65
	5 - 65
	5-69
BIOS Bool Phoney Order Setting	5-70
	5-72
	5 - 75
	5 - 75
	5 - 75
	5 - 75
Restore C : from recovery partition(R:)	5 - 75
	5 - 76
	5 - 77
	5 - / / 5 - 77
	0-// 5 70
UODITEE	5-/8 5-70
	0-/0 5 70
עטאטעט אוואנעט אוואנעט אוואנעט אוואנעט אוואנעט אוואנעט אוואנעט אוואנעט אוואנעט אוואנעט אוואנעט אוואנעט אוואנעט א	0 - 70

CollectLogs	5 - 79
CheckLnkSpeed	5 - 79
After Recovering or Initializing the Hard disk	5 - 80

CHAPTER 6 Service Adjustments

Overview Purpose of Chapter 6	6 - 1 6 - 1
Regulatory	6 - 1
LCD Monitor Adjustment	6 - 2
Modification of Keyboard Layout Setup the Voluson [™] P8 / Voluson [™] P6 Keyboard Language Layout	6 - 3 6 - 3

CHAPTER 7 Diagnostics/Troubleshooting

Overview
Purpose of Chapter Voluson [™] P8 / Voluson [™] P6
Overview
Collect Vital System Information
Request for Service (DRFM)
Shortcuts List
Check Points Voltages
How to check power
Screen Captures and Logs
Capturing a screen
Capturing Network Logs with Network Sniffer
How to use a Capture Filter
How to use a Screen Filter
Export Log's and System Data
Export Log's and System Data (via Service Page)
Dump-file
Remote Access to Service Platform
General
How the Customer enables/disables Disruptive Mode and VCO
How the FE remotely enables/disables Disruptive Mode and VCO
How the FE remotely Connect to Device (Total Access Session via RSvP) 7 - 22
Virtual Network Computing (VNC) $\dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots \dots$
How to use the Auto Tester program
Limitation of the Auto Tester
Hardware Lests
Audio(System) Interface Test
Apertur Lateral IVIIn
$\Delta utomatic Diagnostic Test = 7 - 36$
System Overall Test 7 - 36
VPD
DRFM

DBM 7	' - 37
DPI	' - 37
DPS	′ - 37
DC4D	' - 37
	- 37
	- 31
	- 31 7 - 38
Voltage DRFM	- 30
Temperature DRFM	7 - <u>38</u>
IIC DRFM Interface	′ - 38
HW ID Config	′ - 38
FPGA DRFM Interface	′ - 38
DBM	' - 39
Voltage DBM 7	' - 39
Temperature DBM 7	' - 39
SCI(Scan Control Interface)	' - 39
MLA(Multi-Line Acquisition)	' - 39
ADC(Analog Digital Converter)	′ - 39
SignalGen 7	′ - 39
	′ - 39
	- 40 - 40
	- 40
	- 40
Voltage DPS	- 40 7 - 40
ADM Interface 7	7 - 40
HV Linearity 7	7 - 40
HV Stop	′ - 40
DC4D Interface	′ - 41
15W protection	' - 41
OPIO Overall Test 7	′ - 41
VPD(OPIO) Test	' - 41
Battery	' - 41
Battery Interface7	' - 41
Battery Status 7	′ - 41
Battery Discharging to Shipment Level	' - 41
HW Test Dialog	′ - 42
Aperture Lateral std	′ - 42
	- 42
	- 42
	- 42
Minimum Configuration to Boot/Scan	7 - 43
Booting without using the Elltresound Hardware	טד גע_ז
	- 40
User Interface Troubleshooting	' - 47

Console Test
Troubleshooting Trees, Instructions and Tech Tips
System does not boot up7 - 50
Noise disturbs the Image
Trackball - Impaired Sensitivity
Printer Malfunction
Monitor Troubleshooting
DVD/CD+R/RW Drive Test
Network Troubleshooting
No Connection to the Network at All
GE remote service connection
Tech Tips
Storing SonoView images to Voluson [™] P8 / Voluson [™] P6
Error Messages

CHAPTER 8 Replacement Procedures

Overview	8 - 1
Purpose of Chapter 8	8 - 1
Returning/Shipping System, Probes and Repair Parts	8 - 3
System Software - Installation/Upgrade Procedure	8 - 4 8 - 5 8 - 6 8 - 8 8 - 12 8 - 13 8 - 13 8 - 13
Software and Functional Checks after Installation/Upgrade Procedure	8 - 20
Image Settings Only - Loading Procedure	8 - 22
Introduction	8 - 22
Loading Procedure	8 - 22
Full Backup (Full System Configuration) - Loading Procedure	8 - 22
Introduction	8 - 22
Loading Procedure	8 - 22
Image Archive - Loading Procedure	8 - 22
Introduction	8 - 22
Loading Procedure	8 - 22
Replacement or Activation of Options	8 - 23
Operation for activating Options	8 - 24
Operation for installing a "Demo Key" or a "Permanent Key":	8 - 24
Replacement of FRONT CABINET BEZEL ASSY BT16	8 - 25
Manpower	8 - 25
l ools	8 - 25
	8 - 25
	0 20
Replacement of ASSY BEZEL FRONT DVD PLASTIC BT16	8 - 26
	8 - 26
	0 - 20

Disassembly Procedure
Replacement of FRONT PRINTER BEZEL ASSY BT16.8 - 27Manpower8 - 27Tools8 - 27Disassembly Procedure8 - 27Installation Procedure8 - 27
Replacement of Cover Top Cabinet Plastic8 - 28Manpower8 - 28Tools8 - 28Disassembly Procedure8 - 28Installation Procedure8 - 29
Replacement of Front PEDESTAL COVER BT168 - 30Manpower8 - 30Tools8 - 30Disassembly Procedure8 - 30Installation Procedure8 - 31
Replacement of TRAY PEDESTAL CABINET PLASTIC BT168 - 32Manpower8 - 32Tools8 - 32Disassembly Procedure8 - 32
Replacement of REAR CABINET BEZEL ASSY BT168 - 34Manpower8 - 34Tools8 - 34Disassembly Procedure8 - 34Installation Procedure8 - 34
Replacement of ENCODER set8 - 35Manpower8 - 35Tools8 - 35Removal procedure8 - 35Installation Procedure8 - 39
Replacement of Power ON/OFF key PCB Assembly8 - 40Manpower8 - 40Tools8 - 40Disassembly procedure8 - 40Installation procedure8 - 45

Replacement of Keyboard Assembly-TOP. Manpower Tools Disassembly procedure Installation procedure	8 - 46 8 - 46 8 - 46 8 - 46 8 - 50
Replacement of OPIO BUTTON SET. Manpower Tools Removal Procedure Installation Procedure	8 - 51 8 - 51 8 - 51 8 - 51 8 - 51 8 - 55
Replacement of OPIO Plastic lower cover assy Manpower Tools Disassembly procedure Installation procedure	8 - 56 8 - 56 8 - 56 8 - 56 8 - 61
Replacement of OPIO Plastic upper cover assy	8 - 62 8 - 62 8 - 62 8 - 62 8 - 66
Replacement of Monitor Manpower Manpower Tools Tools Removal Procedure Installation Procedure Installation Procedure	8 - 67 8 - 67 8 - 67 8 - 67 8 - 67 8 - 68
Replacement of the MONITOR ARM Manpower Tools Removal Procedure Installation Procedure	8 - 69 8 - 69 8 - 69 8 - 69 8 - 69 8 - 71
Replacement of LCD Cable Manpower Manpower Tools Tools Disassembly Procedure Assembly Procedure Manpower	8 - 72 8 - 72 8 - 72 8 - 72 8 - 80

Replacement of ASSY Bumper Base Rubber8 - 81Manpower8 - 81Tools8 - 81Disassembly Procedure8 - 81Installation Procedure8 - 86
Replacement of OPIO8 - 87Manpower8 - 87Tools8 - 87Preparations8 - 87Removal Procedure8 - 87Installation Procedure8 - 90
Replacement of the SPEAKER8 - 91Manpower8 - 91Tools8 - 91Preparations8 - 91Removal Procedure8 - 91Installation Procedure8 - 91
Remove the PEDESTAL BOTTOM COVER BT168 - 92Manpower8 - 92Tools8 - 92Preparations8 - 92Removal Procedure8 - 92Installation Procedure8 - 92
Replacement of the NEST8 - 93Manpower8 - 93Tools8 - 93Preparations8 - 93Removal Procedure8 - 93Installation Procedure8 - 97
Replacement of the AIR FILTER8 - 98Manpower8 - 98Tools8 - 98Preparations8 - 98Removal Procedure8 - 98Installation Procedure8 - 99
Replacement of the Probe Holder(KIT)8 - 100

Manpower	8 - 100
Tools	8 - 100
Removal Procedure	8 - 100
Installation Procedure	8 - 100
Replacement of SIDE COVER L ASSY BT16	8 - 101
Manpower	8 - 101
	8 - 101
Preparations	8 - 101
Removal Procedure	8 - 101
Installation Procedure	8 - 102
Poplacement of SIDE COVER BASSY	9 102
	0 - 103
	0 - 103 9 - 103
	0 - 103
	0 - 103
	0 - 103 9 - 105
	0 - 105
Replacement of the Trackball	8 - 106
Manpower	8 - 106
Tools	8 - 106
Removal procedure	8 - 106
Installation Procedure	8 - 109
Replacement of the TGC BOARD	8 - 111
Manpower	8 - 111
	8 - 111
Preparations	8 - 111
Removal Procedure	8 - 111
Installation Procedure	8 - 112
Poplacement of ANIKEVROARD ASSY	0 112
	0 112
	0 - 113
	0 - 113
	0 - 113
	0 - 113
	0 - 114
Replacement of the Caster Cap BT16	8 - 115
Manpower	8 - 115
Tools	8 - 115
Preparations	8 - 115

Removal Procedure	8 - 115
Installation Procedure	8 - 120
Replacement of the CASTER	8 - 121
. Manpower	8 - 121
Tools	8 - 121
Preparations	8 - 121
Removal Procedure	8 - 121
Installation Procedure	8 - 122
Replacement of the SIDE CABINET TRAY BT16	8 - 123
Manpower	8 - 123
Tools	8 - 123
Preparations	8 - 123
Removal Procedure	8 - 123
Installation Procedure	8 - 123
Replacement of the REAR HANDLE	8 - 124
Manpower	8 - 124
Tools	8 - 124
Preparations	8 - 124
Removal Procedure	8 - 124
Installation Procedure	8 - 126
Poplessment of the SPEAKER COVER LEET/RICHT	0 107
	0 107
	0-127
	······································
	0 107
	0 107
	0-127
Replacement of the DPS/DPS with Battery	8 - 128
Manpower	8 - 128
Tools	8 - 128
Preparations	8 - 128
Removal Procedure	8 - 129
Installation Procedure	8 - 129
Replacement of the DRFM	8 - 130
Manpower	8 - 130
Tools	8 - 130
Preparations	8 - 130
Removal Procedure	8 - 131

Installation Procedure DRFM (5497712) Installation Procedure DRFM-2 (S5497712-2) Installation Procedure Serial Number - Reprogamming Procedure Installation of software patch CD	8 - 132 8 - 132 8 - 132 8 - 133 8 - 133 8 - 136
Replacement of the SOM in DRFM	8 - 139 8 - 139 8 - 139 8 - 139 8 - 139 8 - 139 8 - 140
Replacement of the HDD in DRFM Manpower Tools Preparations Removal Procedure Installation Procedure	8 - 141 8 - 141 8 - 141 8 - 141 8 - 141 8 - 141 8 - 141
Replacement of the DBM64 Manpower Manpower Tools Tools Preparations Preparations Removal Procedure Installation Procedure Installation Procedure	8 - 142 8 - 142 8 - 142 8 - 142 8 - 142 8 - 142 8 - 143
Replacement of the T-DPI Manpower Manpower Tools Tools Preparations Removal Procedure Installation Procedure	8 - 144 8 - 144 8 - 144 8 - 144 8 - 145 8 - 146
Replacement of the CSI Manpower Manpower Tools Tools Preparations Removal Procedure Installation Procedure	8 - 147 8 - 147 8 - 147 8 - 147 8 - 147 8 - 148
Replacement of the CBP Manpower	8 - 149 8 - 149

Tools 8 - 149 Preparations 8 - 149 Removal Procedure 8 - 149 Installation Procedure 8 - 150
Replacement of the DVD8 - 151Manpower8 - 151Tools8 - 151Preparations8 - 151Removal Procedure8 - 151Installation Procedure8 - 152
Replacement of the OPIO USB Sub PWA.8 - 153Manpower8 - 153Tools8 - 153Preparations8 - 153Removal Procedure8 - 153Installation Procedure8 - 154
Replacement of AN KEY TOP 8 - 155 Manpower 8 - 155 Tools 8 - 155 Preparations 8 - 155 Key Caps - Removal Procedure 8 - 155
Replacing optional Peripherals8 - 156Manpower8 - 156Tools8 - 156Printer Installation (BW and Color)8 - 157BW Printer: SONY UP-D898, Color Printer: SONY UP-D25MD8 - 157Color Printer Assembly8 - 163HORIZONTAL TV PROBE HOLDER Installation8 - 170VERTICAL TV PROBE HOLDER Installation8 - 171
Replacement of FAN with Cable ASSY II8 - 172Manpower8 - 172Tools8 - 172Preparations8 - 172Removal Procedure8 - 172Installation Procedure8 - 172
Functional Checks after FRU replacement (Debrief Guidelines) 8 - 173
Replacement of UVC
Repla

Repla
tion Procedu
Dud
Repla
Repla
ropi

CHAPTER 9 Renewal Parts

Overview
List of Abbreviations
Parts List Groups
Plastics Covers (Front/Sides/Rear) 9 - 4
LCD Monitor
OPIO
Mechanical Parts
Optional Peripherals and Accessories
System Manuals
Probes9 - 192D-Probes - Curved Array Transducers9 - 192D-Probes - Linear Array Transducer9 - 20Real-Time 4D Volume Probes9 - 212D-Probes - Phased Array Transducers9 - 22Probe-Compatibility9 - 23
Power Cord
Biopsy Needle Guide

CHAPTER 10 Care & Maintenance

Overview	10 - 1
Periodic Maintenance Inspections	10 - 1
Purpose of Chapter 10	10 - 1
Why do Maintenance	10 - 2
Keeping Records	10 - 2
Quality Assurance	10 - 2
	40.0
	10 - 2
How often should care & maintenance tasks be performed?	10 - 2
Tools Required	10 - 5
Tools Required	10 - 7
Special Tools, Supplies and Equipment	10 - 7
Specific Requirements for Care & Maintenance	10 - 7
System Maintenance	10 - 8
Preliminary Checks	10 - 8
Functional Checks	10 - 9
System Checks	10 - 9
Peripheral/Option Checks	10 - 10
Input Power	10 - 10
Mains Cable Inspection	10 - 10
Cleaning	10 - 10
General Cleaning	10 - 10
Physical Inspection	10 - 11
Optional Diagnostic Checks	10 - 11
Probe Maintenance	10 - 12
Probe Related Checks	10 - 12
Basic Probe Care	10 - 12
Disinfection by means of the RIC-Holder	10 - 12
	10 10
Using a Phantom (Optional)	10 - 14
Electrical Safety Tests	10 - 14
Safety Test Overview	10 - 14
GEHC Leakage Current Limits for Voluson™ P8 / Voluson™ P6	10 - 15
Outlet Test - Wiring Arrangement - USA & Canada	10 - 19
Grounding Continuity	10 - 20

0
1
1
1
3
3
3
4
5
5
5
6
6
7
7
8
8
9
9
9
0
1
1
1
1
1
1
1

Chapter 1 Introduction

Section 1-1 Overview

1-1-1 Purpose of Chapter 1

This chapter describes important issues related to safely servicing the **Voluson™ P8 / Voluson™ P6** and/or **Voluson™ P8 / Voluson™ P6** ultrasound system. The service provider must read and understand all the information presented in this manual before installing or servicing a unit.

Section	Description	Page Number
1-1	Overview	1-1
1-2	Important Conventions	1-3
1-3	Safety Considerations	1-7
1-4	Electromagnetic Compatibility (EMC)	1-16
1-5	Customer Assistance	1-17

 Table 1-1
 Contents in Chapter Voluson™ P8 / Voluson™ P6

1-1-2 Purpose of Service Manual

NOTICE This Service Manual is valid for Voluson[™] P8 / Voluson[™] P6 and Voluson[™] P8 / Voluson[™] P6 ultrasound systems.

This Service Manual provides installation and service information for Voluson[™] P8 / Voluson[™] P6 Ultrasound Scanning System and contains the following chapters:

- 1.) Chapter 1 Introduction: Contains a content summary and warnings.
- 2.) Chapter 2 Site Preparation: Contains pre-installation requirements.
- 3.) Chapter 3 Setup Instructions: Contains setup and installation procedures.
- 4.) Chapter 4 Functional Checks: Contains functional checks that are recommended as part of the installation, or as required during servicing and periodic maintenance.
- 5.) Chapter 5 Components and Functions (Theory): Contains block diagrams and functional explanations of the electronics.
- 6.) Chapter 6 Service Adjustments: Contains instructions on how to make available adjustments.
- 7.) Chapter 7 Diagnostics/Troubleshooting: Provides procedures for running diagnostic or related routines.
- 8.) Chapter 8 Replacement Procedures: Provides disassembly procedures and reassembly procedures for all changeable Field Replaceable Units (FRU).
- 9.) Chapter 9 Renewal Parts: Contains a complete list of field replaceable parts.
- 10.) Chapter 10 Care & Maintenance: Provides periodic maintenance procedures.

1-1-3 Typical Users of the Basic Service Manual

- GE Service Personnel (installation, maintenance, etc.).
- Hospital's Service Personnel
- Contractors (Some parts of Chapter 2 Pre-Installation)

1-1-4 Models Covered by this Manual

Table 1-2 Voluson™ P8 / Voluson™ P6 - Model Designations

	Description	Part Number
BT16	Voluson TM P6 BT16 Console	5670023
	Voluson [™] P6 BT16 Console, High	5670024
	Voluson TM P8 BT16 Console	5669999
	Voluson TM P8 BT16 Console, High	5670021

1-1-5 Purpose of Operator Manual(s)

The Operator Manual(s) should be fully read and understood before operating the Voluson[™] P8 / Voluson[™] P6 and also kept near the unit for quick reference.

Section 1-2 Important Conventions

1-2-1 Conventions Used in this Manual

Model Designations

This manual covers the Voluson[™] P8 / Voluson[™] P6 ultrasound units listed on page 1-2.

lcons

Pictures, or icons, are used wherever they reinforce the printed message. The icons, labels and conventions used on the product and in the service information are described in this chapter.

Safety Precaution Messages

Various levels of safety precaution messages may be found on the equipment and in the service information. The different levels of concern are identified by a flag word that precedes the precautionary message. Known or potential hazards are labeled in one of following ways:



Information contained in a NOTE can often save you time or effort.

1-2-2 Standard Hazard Icons

Important information will always be preceded by the exclamation point contained within a triangle, as seen throughout this chapter. In addition to text, several different graphical icons (symbols) may be used to make you aware of specific types of hazards that could cause harm. Even if a symbol isn't used in this manual, it is included for your reference.



Table 1-3 Standard Hazard Icons

ELECTRICAL	MECHANICAL	RADIATION
4		
LASER	HEAT	PINCH
LASER LIGHT		

Other hazard icons make you aware of specific procedures that should be followed.

Table 1-4	Standard Icons Indicating a Special Procedure be Used
	etaliaala leelle litaleating a epecial i leecaale se eeca

AVOID STATIC ELECTRICITY	TAG AND LOCK OUT	WEAR EYE PROTECTION
		EYE PROTECTION Or
WEAR HAND PROTECTION	WEAR FOOT PROTECTION	

1-2-3 Product Icons

The following table describes the purpose and location of safety labels and other important information provided on the equipment.

Table 1-5	Product Icons	SVoluson™	P8 /	Voluson™	P6
				10100011	•••

LABEL/SYMBOL PURPOSE/MEANING		LOCATION
Identification and Rating Plate	Manufacturer's name and address Model and serial numbers Electrical ratings	Rear side of the unit On each probe
Device Listing/Certification Labels	Laboratory logo or labels denoting conformance with industry safety standards such as UL or IEC.	Rear side of the unit
CE 0459	Council Directive 93/42/EEC concerning medical devices: The CE mark affixed to the equipment testifies compliance to the directive.	Rear side of the unit On each probe
IP Code (IPX7) (IPX8)	Indicates the degree of protection provided by the enclosure per IEC 60529. IPX 7 - protected against the effects of immersion IPX8 - The degree of protection against harmful ingress of water for foot switch.	Probes and Footswitch
"CAUTION This unit weighs Special care must be used to avoid"	This precaution is intended to prevent injury that may result if one person attempt to move the unit considerable distances or on an incline due to the weight of the unit.	Used in the Service and User Manual which should be adjacent to equipment at all times for quick reference.
"DANGER - Risk of explosion used in"	The system is not designed for use with flammable anesthetic gases.	Indicated in the Service Manual.
*	Equipment Type BF indicates B Type equipment having even more electrical isolation than standard Type B equipment because it is intended for intimate patient contact.	Patient probe
-I 🍽 ŀ	Defibrillator-proof Type CF equipment identifies a defibrillation-proof type CF applied part complying with IEC 60601-1.	front side of the ECG Module
Ŵ	ATTENTION - Consult accompanying documents " is intended to alert the user to refer to the operator manual or other instructions when complete information cannot be provided on the label.	Rear side of Power Supply
\bigwedge	"CAUTION - Dangerous voltage" (the lightning flash with arrowhead in equilateral triangle) is used to indicate electric shock hazards.	various

Table 1-5Product Icons Voluson™ P8 / Voluson™ P6

LABEL/SYMBOL	PURPOSE/MEANING	LOCATION
0	"Mains OFF" Indicates the power off position of the mains power switch.	Rear of system at mains switch
Ð	"OFF/Standby" Indicates the power off/standby position of the power switch. CAUTION This Power Switch DOES NOT ISOLATE Mains Supply	Adjacent to On-Off/Standby switch left below the Control panel.
	"Mains ON" Indicates the power on position of the mains power switch.	Rear of system at mains switch
	"Protective Earth" Indicates the protective earth (grounding) terminal.	Rear of system at mains switch (on primary power supply)
\downarrow	"Equipotentiality" Indicates the terminal to be used for connecting equipotential conductors when interconnecting (grounding) with other equipment.	Rear of system at mains switch (on primary power supply)
	Waste Electrical and Electronic Equipment (WEEE) Disposal. This symbol indicates that waste electrical and electronic equipment must not be disposed as unsorted municipal waste and must be collected separately. Please contact an authorized representative of the manufacturer for information concerning the decommissioning of your equipment.	Rear side of the unit On the plug of each probe
	These symbols indicate that at least one of the six hazardous substances of the China RoHS Labelling Standard is above the RoHS limitation. The number inside the circle is referred to as the Environmental Friendly Use Period (EFUP). It indicates the number of years that the product, under normal use, will remain harmless to health of humans or the environment. EFUP = 10 for Short Use Products EFUP = 20 for Medium Use Products	Rear side of the unit On the plug of each probe
LAMP CONTAINS MERCURY, DISPOSE ACCORDING TO STATE/LOCAL LAW.	This product consists of devices that may contain mercury, which must be recycled or disposed of in accordance with local, state, or country laws. (Within this system, the backlight lamps in the monitor, contain mercury.)	Rear side of the unit not visible: - below the cover on read side of Monitor
	Loading prohibited	at top cover of the system
UDI	Every system has a unique marking for identification. The UDI which is located on the top of the CPU. Scan or enter the inform health record as required by the governing laws.	marking appears on the product labels nation from these labels into the patient

Section 1-3 Safety Considerations

1-3-1 Introduction

The following safety precautions must be observed during all phases of operation, service and repair of this equipment. Failure to comply with these precautions or with specific warnings elsewhere in this manual, violates safety standards of design, manufacture and intended use of the equipment.

1-3-2 Human Safety

Operating personnel must not remove the system covers. Servicing should be performed by authorized personnel only. Only personnel who have participated in a Voluson[™] P8 / Voluson[™] P6 Training are authorized to service the equipment.

1-3-3 Mechanical Safety

CAUTION The Voluson™ P8 / Voluson™ P6 weighs approximately 70 kg, depending on installed peripherals, (154 lbs., or more) when ready for use.



Care must be used when moving it or replacing its parts. Failure to follow the precautions listed could result in injury, uncontrolled motion and costly damage. ALWAYS:

Use the handle to move the system.
Be sure the pathway is clear.
Use slow, careful motions.
Do not let the system strike walls or door frames.

Two people are required when moving on inclines or lifting more than 16 kg (35 lbs).

N WARNING USE EXTREME CAUTION WHEN ELEVATING THE UNIT, OR IF IT IS RAISED FOR A REPAIR OR MOVED ALONG ANY INCLINE. THE Voluson™ P8 / Voluson™ P6 SYSTEM MAY BECOME UNSTABLE WHICH COULD CAUSE A TIP OVER.

WARNING ULTRASOUND PROBES ARE HIGHLY SENSITIVE MEDICAL INSTRUMENTS THAT CAN EASILY BE DAMAGED BY IMPROPER HANDLING. USE CARE WHEN HANDLING AND PROTECT FROM DAMAGE WHEN NOT IN USE. DO NOT USE A DAMAGED OR DEFECTIVE PROBE. FAILURE TO FOLLOW THESE PRECAUTIONS CAN RESULT IN SERIOUS INJURY AND EQUIPMENT DAMAGE.

WARNING NEVER USE A PROBE THAT HAS FALLEN TO THE FLOOR. EVEN IF IT LOOKS OK, IT MAY BE DAMAGED.

CAUTION Before you move or transport the system, tilt the LCD monitor towards the user interface to its minimal height prevent damage to the system.

NOTE: Special care should be taken when transporting the unit in a vehicle:

- Eject any DVD/CD from the drive.
- Place the probes in their carrying cases.
- DO NOT use the Control Panel as an anchor point.
- Secure the systems with straps in an upright position and lock the caster wheels (brake).
- Ensure that the Voluson[™] P8 / Voluson[™] P6 system is firmly secured while inside the vehicle.
- Prevent vibration damage by driving cautiously. Avoid unpaved roads, excessive speeds, and erratic stops or starts.

1-3-4 Electrical Safety

1-3-4-1 Safe Practices

To minimize shock hazard, the equipment chassis must be connected to an electrical ground. The system is equipped with a three-conductor AC power cable. This must be plugged into an approved electrical outlet with safety ground. If an extension cord is used with the system, make sure that the total current rating of the system does not exceed the extension cord rating.

The power outlet used for this equipment should not be shared with other types of equipment. Both the system power cable and the power connector meet international electrical standards.

NOTE: This product is classified as Class I and INTERNALLY POWERED ME QUIPMENT according to the IEC/EN 60601-1

1-3-4-2 Probes

All the probes for the Voluson[™] P8 / Voluson[™] P6 are designed and manufactured to provide troublefree, reliable service. To ensure this, correct handling of probes is important and the following points should be noted:

- Do not drop a probe or strike it against a hard surface, as this may damage the transducer elements, acoustic lens, or housing.
- Inspect the probe prior to each use for damage or degradation to the Housing, Cable strain relief, Lens and Seal.
- Do not use a cracked or damaged probe. In this event, call your field service representative immediately to obtain a replacement.
- Avoid pulling, pinching or kinking the probe cable, since a damaged cable may compromise the electrical safety of the probe.
- To avoid the risk of a probe accidentally falling, do not allow the probe cables to become entangled, or to be caught in the machine's wheels.
- Never immerse the probe connector or adapter into any liquid.
- NOTE: For detailed information on handling probes, refer to the Voluson[™] P8 / Voluson[™] P6 Basic User Manual and the care card supplied with the probe.

1-3-5 Auxiliary Devices Safety

WARNING Power Supplies for additional equipment MUST comply with IEC 60601-1.

WARNING DO NOT attempt to use different peripherals and accessories (brand and model; connected via USB ports) other than approved and provided by Voluson[™] P8 / Voluson[™] P6!

> The ultrasound system is an extremely sensitive and complex medical system. Any unauthorized peripherals may cause system failure or damage!

The Voluson[™] P8 / Voluson[™] P6 is externally connected to an isolation transformer to provide the required separation from AC mains between the system and auxiliary devices. Additional power cable provided is connected between input of country specific external isolation transformer & System outlet. The mains output of that isolation transformer is connected for auxiliary devices (Printer DVR etc.)

The IEC 60601-1-1 standard provides a guideline for safely interconnecting medical devices in systems. "Equipment connected to the analog or digital interface must comply with the respective IEC/UL standards (e.g. IEC 60950 / UL 60950 for data processing equipment and IEC 60601-1 / UL 60601-1 for medical equipment).

1-3-5 Auxiliary Devices Safety (cont?)

Everybody who connects additional equipment to the signal input portion or signal output portion configures a medical system, and is therefore responsible that the system complies with the requirements of the system standard IEC 60601-1-1.

Special care has to be taken, if the device is connected to computer network (e.g., Ethernet), because other devices could be connected without any control. There could be a potential difference between the protective earth and any line of the computer network including the shield.

In this case the only way to operate the system safely is to use an isolated signal link with minimum 4mm creepage distance, 2.5mm air clearance of the isolation device. For computer networks there are media converters available which convert the electrical to optical signals. Please consider that this converter has to comply with IEC xxx standards* and is battery operated or connected to the isolation mains output of the Voluson[™] P8 / Voluson[™] P6.

- * IEC xxx stands for standards such as:
 - IEC 60601 for medical devices
 - IEC 60950 for information technology equipment etc.

NOTICE The system integrator (any person connecting the medical device to other devices) is responsible that the connections are safe.

If in doubt, consult the technical service department or your local representative.

CAUTION The leakage current of the entire system including any / all auxiliary equipment must not exceed the limit values as per EN 60601-1-1:1990 (IEC 60601-1-1) respectively other valid national or international standards. All equipment must comply with UL, CSA and IEC requirements.

CAUTION Please observe that some printers may not be medical devices! If the Bluetooth Printer and/or Line Printers are no medical devices, they have to be located outside of the patient environment and use separation device such as LAN/USB isolator or isolation transformer (according to IEC 60601-1 / UL 60601-1).



CAUTION Auxiliary equipment must only be connected to the main console with the special main outlet provided for the electrical safety of the system.

CAUTION Auxiliary equipment with direct main connection requires galvanic separation of the signal and/ or control leads.

For hardware installation procedures see: Chapter 3 - Connection of Auxiliary Devices, on page 3-12.

WARNING After each installation, the leakage currents have to be measured according to IEC 60601-1 respectively UL 60601-1.

NOTICE All peripherals mounted on the Voluson[™] P8 / Voluson[™] P6 system chassis must be firmly secured in position.

1-3-6 Labels Locations

The Voluson[™] P8 / Voluson[™] P6 comes equipped with product labels and icons. These labels and icons represent pertinent information regarding the operation of the unit.



Figure 1-1 Monitor caution label(on rear of the Voluson[™] P8 / Voluson[™] P6 system)

1-3-6-1 Main Label

The Main Label is located on the rear of the Voluson[™] P8 / Voluson[™] P6 system.





1	Manufacturer	7	Product name
2	Weight	8	Console Part No.
3	Classification	9	Brand and model name
4	System Voltage Setting	10	Manufacturing date
5	Frequency	11	System Serial Number
6	Power Consumption nominal	12	Bar Code

1-3-6-2 TUV mark

TUV mark is located on the rear of the system.



Figure 1-3 TUV mark

1-3-6-3 Multi Caution Label

The Multi caution label is located on the rear of the Voluson[™] P8 / Voluson[™] P6 System



Figure 1-4 Multi Caution Label

- 1 Symbol "Caution"
- 2 Symbol "Follow instructions for use"
- 3 Symbol "Do not use the following devices near this system"
- 4 Symbol "Pushing prohibited"
- 5 China RoHS mark
- 6 e-IFU label
- 7 CE mark
- 8 Rx Only mark
- 9 WEEE mark

1-3-7 Dangerous Procedure Warnings

Warnings, such as the examples below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

DANGER DANGEROUS VOLTAGES, CAPABLE OF CAUSING DEATH, ARE PRESENT _____ IN THIS EQUIPMENT.

USE EXTREME CAUTION WHEN HANDLING, TESTING AND ADJUSTING.

WARNING EXPLOSION WARNING

DO NOT OPERATE THE EQUIPMENT IN AN EXPLOSIVE ATMOSPHERE. OPERATION OF ANY ELECTRICAL EQUIPMENT IN SUCH AN ENVIRONMENT CONSTITUTES A DEFINITE SAFETY HAZARD.

WARNING DO NOT SUBSTITUTE PARTS OR MODIFY EQUIPMENT BECAUSE OF THE DANGER OF INTRODUCING ADDITIONAL HAZARDS, DO NOT INSTALL SUBSTITUTE PARTS OR PERFORM ANY UNAUTHORIZED MODIFICATION OF THE EQUIPMENT.

1-3-8 Lockout/Tagout Requirements (For USA Only)

Follow OSHA Lockout/Tagout requirements to protect service personnel from injuries caused by unexpected energizing or start-up of equipment during service, repair, or maintenance.

When servicing parts of the system where there is exposure to voltage greater than 30 Volts:

NOTICE Energy Control and Power Lockout for Voluson[™] P8 / Voluson[™] P6.



Maintain control of the system power plug.

Unplug the system.

There are no test points to verify isolation, you must wait for at least 20 seconds for capacitors to discharge.

Beware that the Power Supply, Front End Processor and Back End Processor may be energized even if the power is turned off when the cord is still plugged into the AC Outlet.

1-3-9 Returning/Shipping System, Probes and Repair Parts

When returning or shipping the Voluson[™] P8 / Voluson[™] P6 system in the original packaging:

Equipment being returned must be clean and free of blood and other infectious substances.

GEHC policy states that body fluids must be properly removed from any part or equipment prior to shipment. GEHC employees, as well as customers, are responsible for ensuring that parts/equipment have been properly decontaminated prior to shipment. Under no circumstance should a part or equipment with visible body fluids be taken or shipped from a clinic or site (for example, body coils or and ultrasound probe).

The purpose of the regulation is to protect employees in the transportation industry, as well as the people who will receive or open this package.

1-3-9 Returning/Shipping System, Probes and Repair Parts (cont?)

NOTE: The US Department of Transportation (DOT) has ruled that "items what were saturated and/or dripping with human blood that are now caked with dried blood; or which were used or intended for use in patient care" are "regulated medical waste" for transportation purpose and must be transported as a hazardous material.

1-3-10 Battery Safety

NOTE: The Voluson[™] P8 / Voluson[™] P6 ultrasound system is supplied with a lithium ion battery in the power supply module, as option.

The lithium ion technology used in the system's battery is significantly less hazardous to the environment than the lithium metal technology used in some other batteries (such as watch batteries). Used batteries should not be placed with common household waste products. Contact local authorities for the location of a chemical waste collection program nearest you.

NOTE: Regulations vary for different countries. Dispose of a used battery in accordance with local regulations.

CAUTION USE ONLY BATTERIES APPROVED BY GE HEALTHCARE AS SUITABLE FOR USE WITH THE Voluson™ P8 / Voluson™ P6 ULTRASOUND SYSTEM.

WARNING Voluson™ P8 / Voluson™ P6 HAS A SAFETY DEVICE. DO NOT ATTEMPT TO DIS-ASSEMBLE OR ALTER THE BATTERY! ALWAYS OBSERVE THE FOLLOWING PRECAUTIONS:

- DO NOT short-circuit the battery bt directly connecting the negative terminals with metal objects.
- DO NOT hear the battery or discard it in a fire.
- DO NOT expose the battery to temperatures over 50 °C. Keep the battery away from fire and other heat sources.
- DO NOT charge the battery near a heat source, such as, a fire or heater.
- DO NOT leave the battery in direct sunlight.
- DO NOT pierce the battery with a sharp object, hit it, or step on it.
- DO NOT use a damaged battery.
- DO NOT apply solder to a battery.
- DO NOT connect the battery to an electrical power outlet.

CAUTION TO PREVENT THE BATTERY BURSTING, IGNITING, OR FUMES FROM THE BATTERY CAUSING EQUIPMENT DAGAGE, ALWAYS OBSERVE THE FOLLOWING PRECAUSTIONS:

- DO NOT immerse the battery in water or allow it to get wet.
- DO NOT place the battery into a microwave oven or pressurized container.
- If the battery leaks or emits an oder, remove it from all possible flammable soures.
- If the battery emits an odor or heat, is deformed or discolored, or in a way appears abnormal during use, recharging or storage, immediately remove it and stop using it.

NOTE: If you have any questions about the battery, consult your local GE representative.

- Storage of the battery pack: Short-term(less than 1 month): between 0 °C(32 °F) and 50 °C(122 °F)
- Long-term(more than 3 months): between 10 °C(50 °F) and 35 °C(95 °F)
 When charging the battery for the first time after long-term storage, recover the battery pack to original performance through repeating several cycles of full charging and discharging.

Section 1-4 Electromagnetic Compatibility (EMC)

1-4-1 What is EMC?

Electromagnetic compatibility describes a level of performance of a device within its electromagnetic environment. This environment consists of the device itself and its surroundings including other equipment, power sources and persons with which the device must interface. Inadequate compatibility results when a susceptible device fails to perform as intended due interference from its environment or when the device produces unacceptable levels of emission to its environment. This interference is often referred to as radio–frequency or electromagnetic interference (RFI/EMI) and can be radiated through space or conducted over interconnecting power of signal cables. In addition to electromagnetic energy, EMC also includes possible effects from electrical fields, magnetic fields, electrostatic discharge and disturbances in the electrical power supply.

For applicable standards please refer to Chapter 2 in the Basic User Manual of the Voluson[™] P8 / Voluson[™] P6.

1-4-2 Compliance

The Voluson[™] P8 / Voluson[™] P6 unit conforms to all applicable conducted and radiated emission limits and to immunity from electrostatic discharge, radiated and conducted RF fields, magnetic fields and power line transient requirements as mentioned in IEC 60601-1-2.

NOTE: For CE Compliance, it is critical that all covers, screws, shielding, gaskets, mesh, clamps, are in good condition, installed tightly without skew or stress. Proper installation following all comments noted in this service manual is required in order to achieve full EMC performance.

1-4-3 Electrostatic Discharge (ESD) Prevention

WARNING DO NOT touch any boards with integrated circuits prior to taking the necessary ESD precautions:



1.) When installing boards, ESD may cause damage to a board. ALWAYS connect yourself, via an arm-wrist strap, to the advised ESD connection point located on the rear of the system (to the right of the power connector).

2.) Follow general guidelines for handling of electrostatic sensitive equipment.

N WARNING Risk of electrical shock: System must be turned off.

Avoid all contact with electrical contacts, conductors and components. Always use non-conductive handles designed for the removal and replacement of ESD sensitive parts. All parts that have the potential for storing energy must be discharged or isolated before making contact.

Section 1-5 Customer Assistance

1-5-1 Contact Information

If this equipment does not work as indicated in this service manual or in the Basic User Manual, or if you require additional assistance, please contact the local distributor or appropriate support resource, as listed below.

NOTE: Prepare vital system information (see: Section 7-2 on page 7-2) before you call:

- System Type
- System Serial number (also visible on label on back of the system)
- Application Software version
- Backup version

additional information about installed software Figure 1-5 Phone Number for Customer Assistance

LOCATION	NUMBER	
	Service	TEL: 1-800-437-1171
USA GE Healthcare	Service Parts	TEL: 1-800-558-2040
Ultrasound Service Engineering	Online Center	TEL: 1-800-321-7937
9900 Innovation Drive (RP-2123)		TEL: 1-800-682-5327
Wadwalosa, W1 33220, 00A	Application Support	TEL: 1-262-524-5698
	Service	TEL: 1-800-668-0732
Canada	Application Support	TEL: 1-262-524-5698
	Service	TEL: +1-262-524-5300
Latin America	Application Support	TEL: +1-262-524-5698
EUROPE Ultrasound Europe GE Ultraschall Deutschland GmbH	Support	TEL: +49 (0) 212 2802 652
Postfach 11 05 60, D-42655 Solingen Germany		FAX: +49 (0) 212 2802 431
FOM	Saudi Arabia Service Center	TEL: (+966) 800 429 2222
EGM	UAE Service Center	TEL: +971 800 3646
Asia (Singapore) GE Ultrasound Asia Service Department - Ultrasound	Service Department	TEL: +65 6291-8528
Central Placa Singapore 168730		FAX: +65 6291-7006
lanan	O-line Conter	TEL: +81 42-846-9011
Japan	Online Center	FAX: +81 42-648-2905
China	Technical Support	TEL: +(86) 800-810 8188 TEL: +(86) 400-812 8188
ANZ	Service Support	TEL: +61 1800 659 465
Australia	Service Support	TEL: +(61) 1-800-659-465
India	Technical Support	TEL: 1800-425-8025 TEL: 1800-425-7255 TEL: 1800-102-7750
Korea	Technical Support	TEL: +(82) 1544-6119
Africa	Algeria Service Center	TEL: +213 2179 1212

1-5-2 System Manufacturer

Table 1-6 System Manufacturer

Manufacturer	FAX Number
GE Ultrasound Korea, Ltd. 9, Sunhwan-ro 214beon-gil, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea	+82 (0) 31-740-6436

Chapter 2 Site Preparation

Section 2-1 Overview

2-1-1 Purpose of Chapter 2

This chapter provides the information required to plan and prepare for the installation of a Voluson[™] P8 / Voluson[™] P6 ultrasound unit. Included are descriptions of the facility and electrical needs to be met by the purchaser.

Table 2-1	Contents in C	hapter Voluson™	P8 / Voluson™ P6

Section	Description	Page Number
2-1	Overview	2-1
2-2	General Console Requirements	2-2
2-3	Facility Needs	2-6

Section 2-2 General Console Requirements

2-2-1 Environmental Requirements

Table 2-2 Environmental Requirements

Operating Temperature	Operating Humidity	Heat Dissipation	Storage Temperature	Storage Humidity
18 to 30 ^o C (64 to 86 ^o F)	30 to 80% rH non-condensing	1200BTU/h without on-board peripherals	-10 to 50 ^o C (14 to 122 ^o F)	10 to 90% rH non-condensing

CAUTION If the system has been in storage or has been transported, please see the acclimation requirements before powering ON and/or using the system (see: Section 3-2-2 "Installation Warnings" on page 3-3).

2-2-1-1 Cooling

The cooling requirement for the Voluson[™] P8 / Voluson[™] P6 is 1200BTU/hr. This figure does not include cooling needed for lights, people, or other equipment in the room.

NOTE: Each person in the room places an additional 300 BTU/hr. demand on the cooling system.

2-2-1-2 Lighting

Bright light is needed for system installation, updates and repairs. However, operator and patient comfort may be optimized if the room light is subdued and indirect. Therefore a combination lighting system (dim/bright) is recommended. Keep in mind that lighting controls and dimmers can be a source of EMI which could degrade image quality. These controls should be selected to minimize possible interference.

2-2-2 Electrical Requirements

NOTE: Voluson[™] P8 / Voluson[™] P6 requires a dedicated power and ground for the proper operation of its Ultrasound equipment. This dedicated power shall originate at the last distribution panel before the system.

The dedicated line shall consist of one phase, a neutral (not shared with any other circuit), and a full size Ground wire from the distribution panel to the Ultrasound outlet.

NOTE: Please note that image artifacts can occur, if at any time within the facility, the Ground from the main facility's incoming power source to the Ultrasound unit is only a conduit.

2-2-2-1 Voluson[™] P8 / Voluson[™] P6 Power Requirements

Table 2-3 Electrical Specifications for Voluson™ P8 / Voluson™ P6

Voltage	Tolerances	Current	Frequency
100 - 120 VAC	±10%	9.0 7.0 A	50, 60 Hz (±2%)
220 - 240 VAC	±10%	4.0 3.7 A	50, 60 Hz (±2%)

Power Consumption nominal 900 VA including all on-board peripherals.

2-2-2-2 Inrush Current

Inrush current is not a factor to consider due to the inrush current limiting properties of the power supplies.

2-2-2-3 Site Circuit Breaker

It is recommended that the branch circuit breaker for the machine be readily accessible.

CAUTION POWER OUTAGE MAY OCCUR.

The Voluson[™] P8 / Voluson[™] P6 requires a dedicated single branch circuit. To avoid circuit overload and possible loss of critical care equipment, make sure you DO NOT have any other equipment operating on the same circuit.

2-2-2-4 Site Power Outlets

A dedicated AC power outlet must be within reach of the unit without extension cords. Other adequate outlets for the external peripherals, medical and test equipment needed to support this unit must also be present within 1 m (3.2 ft.) of the unit. Electrical installation must meet all current local, state, and national electrical codes.

2-2-2-5 Main Power Plug

The Voluson[™] P8 / Voluson[™] P6 is supplied with a main power plug, as standard. In the event that the unit arrives without a power plug, or with the wrong plug, contact your GE dealer. When necessary, the installation engineer will supply the appropriate power plug to meet the applicable local regulations.

2-2-3 EMI Limitations

Ultrasound systems are susceptible to Electromagnetic Interference (EMI) from radio frequencies, magnetic fields, and transients in the air or wiring. Ultrasound machines also generate EMI. The Voluson[™] P8 / Voluson[™] P6 complies with limits as stated on the EMC label. However, there is no guarantee that interference will not occur in a particular installation.

NOTICE Possible EMI sources should be identified before the unit is installed. EMI/EMC radiation check of the from other devices or from power line of hospital at the installation site must be done and rectified before the Sytem is installed

Electrical and electronic equipment may produce EMI unintentionally as the result of a defect. Sources of EMI include the following:

- medical lasers
- System s
- cauterizing guns
- computers
- monitors
- fans
- gel warmers
- microwave oven
- light dimmers
- portable phones
- broadcast stations and mobile broadcasting machines

EMI Rule	Details
Be aware of RF sources.	Keep the unit at least 5 meters (16.4 feet) away from other EMI sources. Special shielding may be required to eliminate interference problems caused by high frequency, high powered radio or video broadcast signals.
Ground the unit.	Poor grounding is the most likely reason a unit will have noisy images. Check grounding of the power cord and power outlet.
Replace and/or reassemble all screws, RF gaskets, covers and cores.	After you finish repairing or updating the system, replace all covers and tighten all screws. Any cable with an external connection requires a magnet wrap at each end. Install the shield over the front of card cage. Loose or missing covers or RF gaskets allow radio frequencies to interfere with the ultrasound signals.
Replace broken RF gaskets.	If more than 20% or a pair of the fingers on an RF gasket are broken, replace the gasket. Do not turn ON the unit until any loose metallic part is removed and replaced, if required.
Do not place labels where RF gaskets touch metal.	Never place a label where RF gaskets meet the unit. Otherwise, the gap created will permit RF leakage. In case a label has been found in such a location, move the label to a different, appropriate location.
Use GE- specified harnesses and peripherals.	The interconnect cables are grounded and require ferrite beads and other shielding. Cable length, material, and routing are all important; do not make any changes that do not meet all specifications.
Take care with cellular phones.	Cellular phones may transmit a 5 V/m signal that causes image artifacts.
Properly dress peripheral cables.	Do not allow cables to lie across the top of the card cage or hang out of the peripheral bays. Loop the excess length for peripheral cables inside the peripheral bays. Attach the monitor cables to the frame.

2-2-4 Probe Environmental Requirements

Operation: Ambient temperature 18° to 30° C

Storage: -10° to 50° C

- NOTE: Temperature in degrees C. Conversion to degrees $F = {}^{\circ}C (9/5) + 32$.
 - NOTICE SYSTEMS AND ELECTRONIC PROBES ARE DESIGNED FOR STORAGE TEMPERATURES OF -10 TO + 50 °C. WHEN EXPOSED TO LARGE TEMPERATURE VARIATIONS, THE PRODUCT SHOULD BE KEPT IN ROOM TEMPERATURE FOR 10 HOURS BEFORE USE.

2-2-5 Time and Manpower Requirements

Site preparation takes time. Begin Pre-installation checks as soon as possible. If possible, allow six weeks before delivery, for enough time to make necessary changes.



Have two people available to deliver and unpack the Voluson[™] P8 / Voluson[™] P6. Attempts to move the unit considerable distances (or on an incline) by one person alone, could result in personal injury and/or damage to the system.

2-2-6 System Specifications

- 2-2-6-1 Physical Dimensions of Voluson[™] P8 / Voluson[™] P6 The physical dimensions and weight (without Peripherals) of the Voluson[™] P8 / Voluson[™] P6 unit are summarized in Table 2-5.
- NOTE: Physical dimensions (especially height and depth) depend on control console and monitor positioning. For more details refer to Chapter 2 - System Specifications, on page 2-5.

 Table 2-5
 Physical Dimensions and Weight (without Peripherals)

Version	Height	Width	Depth	Weight
Low	1385 mm	420 mm	670 mm	Approximately 68 kg (without peripherals)
High	1485 mm	420 mm	670 mm	Approximately 69 kg (without peripherals)

2-2-6-2 Acoustic Noise Output

max. 55 dB(A)

2-2-6-3 Electrical Specifications

Please refer to Section 2-2-2-1 "Voluson™ P8 / Voluson™ P6 Power Requirements" on page 2-3.

Section 2-3 Facility Needs

2-3-1 Purchaser Responsibilities

The work and materials needed to prepare the site is the responsibility of the purchaser. Delay, confusion, and waste of manpower can be avoided by completing pre installation work before delivery.

Use the Pre-installation checklist (provided in Table 2-6) to verify that all needed steps have been taken.

Table 2-6 Voluson ^{***} Po / Voluson ^{***} Po Pre-Installation Check Li

Action	Yes	No
Schedule at least 3 hours for installation of the system.		
Notify installation team of the existence of any variances from the basic installation.		
Make sure system and probes have been subject to acclimation period.		
Environmental cooling is sufficient.		
Lighting is adjustable to adapt to varying operational conditions of the System .		
Electrical facilities meet system requirements.		
EMI precautions have been taken and all possible sources of interference have been removed.		
Mandatory site requirements have been met.		
If a network is used, IP address has been set for the system and a dedicated network outlet is available.		

Purchaser responsibility includes:

- Procuring the materials required.
- Completing the preparations before delivery of the ultrasound system.
- Paying the costs for any alterations and modifications not specifically provided in the sales contract.
- NOTE: All electrical installations that are preliminary to the positioning of the equipment at the site prepared for the equipment must be performed by licensed electrical contractors. Other connections between pieces of electrical equipment, calibrations, and testing must also be performed by qualified personnel. The products involved (and the accompanying electrical installations) are highly sophisticated and special engineering competence is required. All electrical work on these products must comply with the requirements of applicable electrical codes. The purchaser of GE equipment must only utilize qualified personnel to perform electrical servicing on the equipment.

The desire to use a non–listed or customer provided product or to place an approved product further from the system than the interface kit allows presents challenges to the installation team. To avoid delays during installation, such variances should be made known to the individuals or group performing the installation at the earliest possible date (preferably prior to the purchase).

The ultrasound suite must be clean prior to delivery of the machine. Carpet is not recommended because it collects dust and creates static. Potential sources of EMI (electromagnetic interference) should also be investigated before delivery. Dirt, static, and EMI can negatively impact system reliability.

2-3-2 Mandatory Site Requirements

The following are mandatory site requirements. Additional (optional) recommendations, as well as a recommended ultrasound room layout, are provided in Section 2-3-3 "Site Recommendations".

- A dedicated single branch power outlet of adequate amperage (see Table 2-3 on page 2-3) that meets all local and national codes and is located less than 2.5 m (8.2 ft) from the unit's proposed location. Refer to: Section 2-2-2 "Electrical Requirements" on page 2-2.
- A door opening of at least 76 cm (2.5 ft) in width.
- The proposed location for the unit is at least 0.2 m (0.67 ft) from the walls, to enable cooling.
- Clean and protected space for storage of probes (either in their case or on a rack).
- Material to safely clean probes (performed using a plastic container, never metal).
- Power outlet and place for any external peripheral are within 2 m (6.5 ft.) of each other with peripheral within 1 m of the unit to connect cables.
- NOTE: The Voluson[™] P8 / Voluson[™] P6 has four outlets inside the unit. One is for the monitor and three for on board peripherals.

In case of network option:

- An active network outlet in the vicinity of the ultrasound unit.
- A network cable of appropriate length (regular Pin-to-Pin network cable).
- An IT administrator who will assist in configuring the unit to work with your local network. A fixed IP address is required. Refer to the form provided in Figure 3-96 on page 3-94 for network details that are required.
- NOTE: All relevant preliminary network port installations at the prepared site must be performed by authorized contractors. The purchaser of GE equipment must utilize only qualified personnel to perform servicing of the equipment.

2-3-3 Site Recommendations

The following are (optional) site recommendations. Mandatory site requirements are provided in the *Mandatory Site Requirements* section, above.

- Door opening of 90 cm (3 ft) in width.
- Accessible circuit breaker for a dedicated power outlet.
- Sink with hot and cold running water.
- Receptacle for bio-hazardous waste, for example, used probe sheaths.
- Emergency oxygen supply.
- Storage area for linens and equipment.
- Nearby waiting room, lavatory, and dressing room.
- Dual level lighting (bright and dim).
- Lockable cabinet for software and manuals.

2-3-3-1 Recommended Ultrasound Room Layout

Figure 2-1 below shows a floor plan illustrating the recommended layout of the Ultrasound Room and depicting the minimal room layout requirements.



Figure 2-1 Recommended Floor Plan 4.3m x 5.2m (14ft x 17ft)

2-3-4 Networking Setup Requirements

- 2-3-4-1 Stand-alone Unit (without Network Connection)
 None
- 2-3-4-2 Unit Connected to Hospital's Network

Supported networks:

- Ethernet
- Wireless LAN

2-3-4-3 Purpose of the DICOM Network Function

DICOM (**D**igital Imaging and **Co**mmunications in **M**edicine) services provide the operator with clinically useful features for moving images and patient information over a hospital network. Examples of DICOM services include the transfer of images to workstations for viewing or transferring images to remote printers. As an added benefit, transferring images in this manner frees up the onboard monitor and peripherals, enabling viewing to be done while scanning continues. With DICOM, images can be archived, stored, and retrieved faster, easier, and at a lower cost.

2-3-4-4 DICOM Option Pre-installation Requirements

To configure the Voluson[™] P8 / Voluson[™] P6 ultrasound unit to work with other network connections, the network administrator must provide some necessary information.

Use the Connectivity Setup Worksheet on page 3-93 to record required information that must include:

• Voluson™ P8 / Voluson™ P6 Details:	DICOM network details for the Voluson [™] P8 / Voluson [™] P6 unit including the host name, local port, IP address, AE title and net mask.							
Routing Information:	IP addresses for default gateway and other routers in use at site.							
DICOM Application Information:	Details of DICOM devices in use at the site, including the DICOM host name, AE title, DICOM port number and IP addresses.							

Installation see : Figure 3-13-2 on page 3-76

This page was intentionally left blank.

Chapter 3 Setup Instructions

Section 3-1 Overview

3-1-1 The Purpose of Chapter 3

This chapter contains information needed to setup the Voluson[™] P8 / Voluson[™] P6. Included are procedures to receive, unpack and configure the equipment. A worksheet is provided (see: page 3-93 to page 3-94) to help ensure that all the required information is available, prior to setup the system.

Section	Description	Page Number		
3-1	Overview	3-1		
3-2	Set Up Reminders	3-2		
3-3	Receiving and Unpacking the Equipment	3-6		
3-4	Preparing for Set Up	3-10		
3-5	Connection of Auxiliary Devices	3-12		
3-6	Completing the Set Up	3-25		
3-7	Printer Installation	3-32		
3-8	Cellular Modem Installation	3-54		
3-9	System Configuration	3-62		
3-10	Available Probes	3-71		
3-11	Software/Option Configuration	3-71		
3-12	Connectivity Setup	3-72		
3-13	Network Configuration	3-75		
3-14	Connectivity Setup Worksheet	3-93		
3-15	Paperwork	3-95		

Table 3-1 Contents in Chapter Voluson™ P8 / Voluson™ P6

Section 3-2 Set Up Reminders

3-2-1 Average Installation Time

Once the site has been prepared, the average installation time required is shown in Table 3-2 below.

Table 3-2 Average Installation Time

Description	Average Installation Time	Comments				
Unpacking the ultrasound unit	0.5 hours					
Installing the ultrasound unit / options / printers	0.5 to 1.5 hours	depends on required configuration				
DICOM Option (connectivity)	0.5 to 1.5 hours	depends on configuration amount				

3-2-2 Installation Warnings

- 1.) Since the Voluson[™] P8 / Voluson[™] P6 weighs approximately 70 kg (154.3 lbs.) without peripherals, two people are required to unpack it.
- There are no operator serviceable components. To prevent shock, do not remove any covers or panels. Should problems or malfunctions occur, unplug the power cord.
 Only qualified service personnel should carry out servicing and troubleshooting.

3-2-2-1 Moving/Lifting the System



Figure 3-1 moving or lifting the system

3-2-2-2 System Acclimation Time

After being transported, the Voluson[™] P8 / Voluson[™] P6 system may be very cold or hot. It requires one hour for each 2.5°C increment if it's temperature is below 10°C or above 40°C.

CAUTION Equipment damage possibility. Turning the system on without acclimation after arriving at site may cause the system to be damaged.

Fable 3-3	Acclimation	Time

°c	60	55	50	45	40	35	30	25	20	15	10	5	0	-5	-10	-15	-20	-25	-30	-35	-40
°F	140	131	122	113	104	96	86	77	68	59	50	41	32	23	14	5	-4	-13	-22	-31	-40
hrs	10	8	6	4	2	0	0	0	0	0	0	2	4	6	8	10	12	14	16	18	20



WARNING Monitor mounting mechanism may break if not properly supported (e.g., with packing foam) during transportation.

3-2-2-3 Brake Pedal Operation

WARNING REMEMBER: If the front wheel brakes are engaged for transportation, release brake pedals (brakes on front wheels under the foot rest) to disengage the lock.
3-2-3	Safety Reminders
DANGER	WHEN USING ANY TEST INSTRUMENT THAT IS CAPABLE OF OPENING THE AC GROUND LINE (I.E., METER'S GROUND SWITCH IS OPEN), DO NOT TOUCH THE UNIT!
	Two people should unpack the unit because of its weight. Two people are required whenever a part weighing 16kg (35 lb.) or more must be lifted.
	If the unit is very cold or hot, do NOT turn on its power until it has had sufficient time to acclimate to its operating environment.
	To prevent electrical shock, connect the unit to a properly grounded power outlet. DO NOT use a three to two prong adapter. This defeats safety grounding.
	DO NOT wear the ESD wrist strap when you work on live circuits and more than 30 V peak is present.
	DO NOT use a 20 Amp to 15 Amp adapter on the 120 Vac unit's power cord. This unit requires a dedicated 16 A circuit.
	DO NOT operate this unit unless all board covers and frame panels are securely in place, to ensure optimal system performance and cooling. (When covers are removed, EMI may be present).
	OPERATOR MANUAL(S) The User Manual(s) should be fully read and understood before operating the Voluson™ P8 / Voluson™ P6. Keep manuals near the unit for reference.
	ACOUSTIC OUTPUT HAZARD Although the ultrasound energy transmitted from the Voluson™ P8 / Voluson™ P6 is within FDA limitations, avoid unnecessary exposure. Ultrasound energy can produce heat and mechanical damage.



Section 3-3 Receiving and Unpacking the Equipment



CAUTION Please read this section carefully before unpacking the Voluson™ P8 / Voluson™ P6 and its (optional) peripherals.

The Voluson[™] P8 / Voluson[™] P6 ultrasound system and accessories are shipped from the factory in a single durable shipping carton which is mounted on a raised wooden platform base.

CAUTION Transport only with forklift or stacker truck. During transport pay attention to the point of gravity ("tilt and drop" indicator)! Have two people available to unpack the Voluson™ P8 / Voluson™ P6. Attempts to move the unit considerable distances (or on an incline) by one person alone, could result in personal injury, and/or damage to the system.

Table 3-4 Shipping Carton - Dimensions and Weight

Description	Height	Width	Depth	Weight*
Voluson™ P8 / Voluson™ P6 incl. accessories	1490 mm	870 mm	650 mm	100kg (including the system)

* Weight is approximate and will vary depending upon the supplied peripherals

Before unpacking the unit:

- Inspect the carton package for visible damage.
- Inspect the Shock for evidence of accidental shock during transit, see: Figure 3-3 below).



Figure 3-3 Shock Indicator

NOTICE The device must only be transported in the original packaging!

Each shipping crate is sealed. It is recommended to keep and store the shipping crate and all other packing materials (including the support foams, anti-static plastic cover, etc.), in case the unit has to be moved to a different location. Unpack the devices such a way that packaging can be reused. For warranty purposes, storage of the above is required for one year from date of purchase..

For warranty purposes, storage of the above is required for one year from date of purchase..

NOTICE The device must only be transported in the original packaging!

If the shipping crate is damaged, please inform the Voluson[™] P8 / Voluson[™] P6 sales representative immediately.

Section 3-3 Receiving and Unpacking the Equipment (cont?)



The envelope with delivery address, packing list and invoice is located on the front panel of the crate.

Check whether delivery is complete (according to packing list) and check visual damage!

Figure 3-4 envelope at front panel of the crate

Table 3-5	Unnacking	Procedure
	onpuoking	rioccaure

Step	Task
1.	Unbend the Packing box by cutting



Step	Task
2.	Remove the top cover and top plate.
3.	Remove the three Plastic Joints from the outer sleeve
4.	Remove the outer sleeve and the monitor pad.

Step	Task
5.	<image/>
6.	Disengage the brakes, grasp the system at the handle, then slowly move unit down the ramp.

Table 3-5 Unpacking Procedure

Section 3-4 Preparing for Set Up

3-4-1 Verify Customer Order

- 1.) After unpacking the equipment, it is important to verify that all items ordered by the customer have been received. Compare all items listed on the packing slip (delivery note) with those received.
- **NOTICE** It is recommended to keep and store the shipping carton and all other packing materials (including the support foams, anti-static plastic cover, etc.), in case the unit has to be moved to a different location. Unpack the devices such a way that packaging can be reused. For warranty purposes, storage of the above is required for one year from date of purchase.
 - 2.) Visually inspect the system components using the following checklist.

•	Step	Item	Recommended Procedure				
	1	Main label	Enter Serial Number: (printed on main label, see: Figure 1-2 on page 1-11)				
	2	Console	Verify that the system is switched OFF and unplugged. Clean the console and control panel.				
	3	Control Console	Physically inspect the control console for missing or damaged items. After switching on the system, verify the proper illumination of all the control panel buttons.				
	4	Probes	Check all probes for wear and tear on the lens, cable, and connector. Look for bent or damaged pins on the connector and in the connector socket on the unit. Verify that the EMI fingers around the probe connector socket housing are intact. Check the probe locking mechanism and probe switch.				
	5	LCD Display	Clean the LCD display by gently wiping with a dry, soft, lint-free non-abrasive folded cloth. Inspect the monitor for scratches and raster burn.				
	6	Fans	Verify that the system's cooling fans and peripheral fans are operating.				
	7	Rear Panel	Check the rear panel connectors for bent pins, loose connections and loose or missing hardware. Screw all the cable connectors tightly to the connector sockets on the panel. Verify that the labeling is in good condition.				
	8	Covers	Check that all screws are tightly secured in place, that there are no dents or scratches and that no internal parts are exposed.				
	9	Peripherals	Check and clean the peripherals in accordance with the manufacturer's directions. To prevent EMI or system overheating, dress the peripheral cables inside the peripheral cover.				
	10	Power Cord	Check the power cord for cuts, loose hardware, tire marks, exposed insulation, or any deterioration. Verify continuity. Replace the power cord, as required.				

Table 3-6 Damage Inspection Checklist - Voluson[™] P8 / Voluson[™] P6 System

NOTE: Report any items that are missing, back-ordered, or damaged, to your Voluson® P8 / Voluson® P6 sales representative. The contact address is shown in Contact Information on page 1-17.

▲ WARNING CONNECTING A Voluson[™] P8 / Voluson[™] P6 ULTRASOUND UNIT TO THE WRONG VOLTAGE LEVEL WILL MOST LIKELY DESTROY THE ULTRASOUND UNIT.

3-4-2 EMI Protection

This unit has been designed to minimize the effects of Electo-Magnetic Interference (EMI). Many of the covers, shields, and screws are provided primarily to protect the system from image artifacts caused by

this interference. For this reason, it is imperative that all covers and hardware are installed and secured before the unit is put into operation.

Ensure that the system is protected from electromagnetic interference (EMI), as follows:

- Operate the system at least 15 feet away from equipment that emits strong electromagnetic radiation.
- Operate the system in an area enclosed by walls, floors and ceilings comprised of wood, plaster or concrete, which help prevent EMI.
- Shield the system when operating it in the vicinity of radio broadcast equipment, if necessary.
- Do not operate mobile phones or other EMI emitting devices in the ultrasound room.
- Verify that all EMI rules listed in the following table are followed:

The Voluson[™] P8 / Voluson[™] P6 ultrasound unit is approved for use in hospitals, clinics and other environmentally qualified facilities, in terms of the prevention of radio wave interference. Operation of the ultrasound unit in an inappropriate environment can cause electronic interference to radios and television sets situated near the medical equipment.

For further details and EMI Prevention/Abatement refer to Section 2-2-3 "EMI Limitations" on page 2-4.

Section 3-5 Connection of Auxiliary Devices

NOTE: Normally auxiliary devices and peripherals come pre-installed with the system.

Table 3-7 below outlines hardware installation procedures described in the sub-sections.

Sub-section	Description	Page Number
3-5-1	Connecting the LCD Monitor	3-13
3-5-2	Connecting the Black & White Printer	3-14
3-5-3	Connecting the Color Printer	3-16
3-5-4	Connecting the DeskJet Color Printer	3-18
3-5-5	Connecting the Wireless Network Adapter	3-20
3-5-6	Connecting the Footswitch	3-21
3-5-7	Connecting the USB Flash Memory Stick	3-22
3-5-8	Connecting the external USB Hard disk (Handydrive)	3-22
3-5-9	General Remarks and Hints when using external USB-Devices	3-23

Table 3-7 Connection Procedures

WARNING After each installation, the leakage currents have to be measured according to IEC 60601-1 respectively UL 60601-1.

CAUTION Please observe that some printers may not be medical devices! If the Bluetooth Printer and/or Line Printers are not medical devices, they have to be located outside of the patient environment and use separation device such as LAN/USB isolator or isolation transformer (according to IEC 60601-1 / UL 60601-1).



NOTE: For more detailed Safety Considerations when connecting auxiliary devices to the Voluson[™] P8 / Voluson[™] P6 system, please review: Chapter 1 - Auxiliary Devices Safety, on page 1-8.

3-5-1 Connecting the LCD Monitor

NOTE: The LCD monitor comes pre-installed with the system.



Figure 3-5 Connection Scheme - LCD Monitor

3-5-2 Connecting the Black & White Printer

- 1.) Power OFF/Shutdown the system as described in: Section 3-6-3 on page 3-29.
- 2.) Connect the Black & White printer according to correct connection scheme as described in Figure 3-6 on page 3-15

- 3.) When all the cables are connected, press the Power ON switch on the Black & White printer.
- Power ON/Boot up the Voluson[™] P8 / Voluson[™] P6 system as described in Section 3-6-2 on page 3-25. All software drivers are pre-installed for the designated Black & White printer only.
- 5.) After <u>physical connection</u> to the Voluson[™] P8 / Voluson[™] P6 system, assign the printer to a remote key (**P1**, **P2**, and **P3**) as described in Section 3-7-8 "Remote Control Selection" on page 3-52.
- 6.) Verify the correct settings in the printer "Properties", see: Section 3-7-7 "Adjustment of Printer Settings" on page 3-48.

WARNING After each installation, the leakage currents have to be measured according to IEC 60601-1 respectively UL 60601-1.

NOTE: The Black & White printer should be connected to the **USB2** port of the Voluson[™] P8 / Voluson[™] P6's PC-part.

3-5-2-1 Connection Scheme: B&W Printer



Figure 3-6 B&W Printer connection

3-5-3 Connecting the Color Printer

- 1.) Power OFF/Shutdown the system as described in: Section 3-6-3 on page 3-29.
- 2.) Connect the Color printer according to correct connection scheme as described in Figure 3-7 on page 3-17.
- NOTE: The Color printer should be connected to the **USB1** port of the Voluson[™] P8 / Voluson[™] P6's PC-part.
 - 3.) When all the cables are connected, press the Power ON switch on the Color printer.
 - 4.) Power ON/Boot up the Voluson[™] P8 / Voluson[™] P6 system as described in Section 3-6-2 on page 3-25. All software drivers are pre-installed for the designated Color printer only.
 - 5.) After <u>physical connection</u> to the Voluson[™] P8 / Voluson[™] P6 system, assign the printer to a remote key (**P1**, **P2**, and **P3**) as described in Section 3-7-8 "Remote Control Selection" on page 3-52.
 - 6.) Verify the correct settings in the printer "Properties", see: Section 3-7-7 "Adjustment of Printer Settings" on page 3-48.

WARNING After each installation, the leakage currents have to be measured according to IEC 60601-1 respectively UL 60601-1.

3-5-3-1 Connection Scheme: Color Printer



Figure 3-7 Color Printer connection

3-5-4 Connecting the DeskJet Color Printer

3-5-4-1 Connection via Bluetooth Adapter

The DeskJet Color Printer can be connected to an external, non-isolated power source. The bluetooth adapter should be directly connected to the indicated USB 3 on rear panel



Figure 3-8 HP Officejet H470 DeskJet Printer connection (via Bluetooth Adapter)

3-5-4-1 Connection via Bluetooth Adapter (cont?)

CAUTION Please observe that the complete Bluetooth Printer Assembly has to be located outside of the patient environment (according to IEC 60601-1 / UL 60601-1).

CAUTION The printer being used may not be a medical device. The Bluetooth Printer Set and the Power Supply of the Bluetooth Printer Adapter is also not a medical device. The equipment meets the requirements of the EN 60950 Standard.



3-5-5 Connecting the Wireless Network Adapter

The Wireless Network Adapter can be connected to any accessible USB port of the Voluson[™] P8 / Voluson[™] P6.

NOTE: Connection of the WLAN Adapter is always the same.



Figure 3-9 Connection Scheme - Wireless (USB) Network Adapter

- 1.) Turn ON the power of the system and wait till the system has booted.
- Plug the Wireless Network adapter into an accessible USB port of the Voluson[™] P8 / Voluson[™] P6.

All software drivers are pre-installed for the designated Wireless Network adapter only.

NOTE: After physical connection of the WLAN adapter to the Voluson[™] P8 / Voluson[™] P6 system, follow the procedure described in Section 3-13-2 "Wireless Network Configuration" on page 3-76.

3-5-6 Connecting the Footswitch

The footswitch should be directly connected to any accessible USB-port on the Voluson[™] P8 / Voluson[™] P6 (e.g., on rear of the system).

NOTE: Connection of the Footswitch is always the same.

After physical connection, adjust the Footswitch (Left/Right) as described in Section 3-9-1-7 "How to adjust function of the Footswitch (Left/Middle/Right)" on page 3-67.



Figure 3-10 Footswitch connection scheme

3-5-7 Connecting the USB Flash Memory Stick

NOTICE Before connecting an USB device, please read General Remarks and Hints when using external USB-Devices on page 3-23.

The USB Flash Memory Stick may be connected to an accessible USB port of the Voluson[™] P8 / Voluson[™] P6 system (e.g., on back of control console).

An external USB Flash Memory Stick can be connected once the system is powered ON, or after shutdown. The Voluson[™] P8 / Voluson[™] P6, Windows detects the device and automatically installs a driver. During this process several dialogs may pop up, starting with the "Found New Hardware" dialog.

NOTE: Memory drives or sticks may be sensitive to EMC interference. This may affect system performance and/or image quality.

NOTICE Before disconnecting an external USB-device (e.g., USB Stick), the system has to be informed about the removal of the device! For this purpose press the **F3** button on the keyboard. For further details refer to: Section 3-5-9-2 "External USB-Devices - Disconnection" on page 3-23.

3-5-8 Connecting the external USB Hard disk (Handydrive)

NOTICE Before connecting an USB device, please read General Remarks and Hints when using external USB-Devices on page 3-23.

The external "Handydrive" HDD may be connected to an accessible USB port of the Voluson[™] P8 / Voluson[™] P6 system (e.g., on back of control console).

An external USB Hard Disk Drive can be connected once the system is powered ON, or after shutdown. The Voluson[™] P8 / Voluson[™] P6, Windows detects the device and automatically installs a driver. During this process several dialogs may pop up, starting with the "Found New Hardware" dialog.

NOTE: Memory drives or sticks may be sensitive to EMC interference. This may affect system performance and/or image quality.

NOTICE Before disconnecting an external USB-device (e.g., USB Hard disk), the system has to be informed about the removal of the device! For this purpose press the **F3** button on the keyboard. For further details refer to: Section 3-5-9-2 "External USB-Devices - Disconnection" on page 3-23.

3-5-9 General Remarks and Hints when using external USB-Devices

WARNING Do not connect or disconnect any external USB-devices to or from the system while scanning a patient! The appearing dialogs could distract you from the scan!

3-5-9-1 External USB-Devices - Connection

When an external USB-storage device (such as a USB-memory stick or an external hard disk) is connected to the Voluson[™] P8 / Voluson[™] P6, Windows detects the device and automatically installs a driver. During this process, several dialogs may pop up, starting with the "Found New Hardware" dialog.

NOTE: If an external drive was not recognized automatically after connecting it, click RESCAN DRIVE.

The device is then accessible using the drive letter the system assigned to it.

NOTICE When connecting external USB devices, be sure to execute Safety Directions found in the Voluson[™] P8 / Voluson[™] P6 Basic User Manual.

3-5-9-2 External USB-Devices - Disconnection



Before an external USB-device (e.g., USB-memory stick) can be disconnected, the system has to be informed about the removal of the device!

CAUTION Unplugging or ejecting USB devices without first stopping them can often cause the system to crash and possibly result in loss of valuable data.

By pressing the **DRIVES** in the Sytem Setup, a dialog window (see: Figure 3-11 below) is displayed. The "Connect USB and Network Drives" window shows all USB and Network drives connected to the system. Using this dialog, the USB-devices can be stopped before they are physically disconnected.

eripherals	Device Setup	Button Configurati	on	Drives	<u> </u>	
onnect USB and	Network Drives					
	Туре	Label	Size	Free Connect to		
Intel Raid 1 Vol MagicISO Virtua hp CDDVDW Sł	ume SCSI Di HDD al DVD-ROM DVD wr I-216DB SC DVD wr	SourceCode - -	1863G - -	1700G EXT 1 - EXT 2 - DVD/CD		
Eject CD/D						
Erase CI						

Figure 3-11 Connecting USB and Network Drives

To stop the external device, select it and then click the $\overline{\text{STOP DEVICE}}$ button.

Peripherals	Device Setup	Button Configuration	on	Drives		
Connect USB and Ne	twork Drives					
	Туре	Label	Size	Free Connect to		
ELECOM MF-AU3 Intel Raid 1 Volum MagicISO Virtual I hp CDDVDW SH-2	USB Device Stick ne SCSI Di HDD DVD-ROM DVD wr 216DB SC DVD wr	SourceCode - -	7.3G 1863G -	90M EXT 3 1700G EXT 1 - EXT 2 - DVD/CD		
	Unsafe Removal of De	evice		×		
	A USB-drive has I Unplugging or ej can often cause o	been removed without stop ecting devices without first crashes and lose valuable d	oping it. t stopping the ata.	m K		
		install All Devices				
Eject CD/DVD		ap Network Drive				
Erase CD						

Figure 3-12 Device can now be safely removed

Confirm the 'Stop Device' dialog with \overline{OK} the "Connect USB and Network Drives" window.

Section 3-6 Completing the Set Up

3-6-1 Connecting the Unit to a Power Source

The connection of the Voluson[™] P8 / Voluson[™] P6 ultrasound unit to a power source should be performed by a qualified person who has completed basic Voluson[™] P8 / Voluson[™] P6 System User Training. Use only the power cords, cables and plugs provided by or designated by Voluson[™] P8 / Voluson[™] P6 to connect the unit to the power source.

CAUTION Prior to connect the Voluson[™] P8 / Voluson[™] P6 unit to a power source, verify compliance with all electrical and safety requirements. Check the power cord to verify that it is intact and of hospital-grade. Products equipped with a power source (wall outlet) plug should be connected to the fixed power socket that has a protective grounding conductor. Never use an adapter or converter to connect with a power source plug (for example, a three-prong to two-prong converter).

▲ WARNING The unit's power must be supplied from a separate, properly rated outlet to avoid risk of fire. Refer to Section 2-2-2-1 "Voluson™ P8 / Voluson™ P6 Power Requirements" on page 2-3 for rating information. The power cord should not, under any circumstances, be altered to a configuration rated less than that specified for the current.

- CAUTION Whenever disconnecting the Voluson[™] P8 / Voluson[™] P6 system from the electrical outlet, always observe the safety precautions. First unplug the main power cable from the wall outlet socket, then from the unit itself. Remove by pulling on the cable connector DO NOT pull on the cable.
- CAUTION The Voluson[™] P8 / Voluson[™] P6 requires all covers! Operate this system only when all board covers and frame panels are securely in place. The covers are required for safe operation, good system performance and cooling purposes.

3-6-2 Power On / Boot Up

3-6-2-1 Ultrasound unit Power On

- 1.) Connect the Main Power Cable to the back of the system.
- 2.) Connect the Main Power Cable to a hospital grade power outlet with the proper rated voltage. Never use an adapter that would defeat the safety ground.

3.) Switch ON the Circuit at the rear of the system.



Figure 3-13 Circuit and main power cable at rear of system

3-6-2-2 Back End Processor Boot Up

NOTICE When AC power is applied to the Ultrasound unit, the **ON/OFF** button on the control panel illuminates amber, indicating that the System (including the Back-end Processor) is in *Standby* mode.

4.) Hold down the **On/Off** button (see: Figure 3-14) on the control panel for ~3 seconds.

NOTE: The mains outlet of the system for peripheral auxiliary equipment are commonly switched with the **ON/OFF** button. The power switch of any attached printer(s) needs to be in ON position before starting the system. However, be aware some auxiliary equipment may switch itself to standby mode (e.g., Color video printer) and must therefore be switched on separately.

When the **ON/OFF** button on the control panel is pressed, the System (including the Back-end Processor) starts and the operating system is loaded which then leads the application software to activate the Ultrasound unit.

The system automatically performs an initialization sequence which includes the following:

- Loading the operating system.
- Running a quick diagnostic check of the system.
- On/Off Button
- Detecting connected probes

Figure 3-14 On/Off Button on Control Panel

As soon as the software has been loaded, the system enters 2D-Mode with the probe and application that were used before the system was shut down.

NOTE: Total time used for start-up is about 2 minutes.

3-6-2-3 During a normal boot, you may observe

- A.) Power is distributed to Peripherals, Operator Panel (control panel), Monitor, Front-End and Back-End Processor.
- B.) The Back-End Processor and rest of the System starts with the sequence listed in following steps:
 - 1.) First of all, the BIOS version is shown on the monitor.
 - 2.) Afterwards the "Boot Screen" is displayed. (Voluson is highlighted, Figure 3-15 below).



Figure 3-15 Boot screen

- 3.) Back-End Processor is turned ON and starts to load the software.
- 4.) The Start Screen (Voluson[™] P8 / Voluson[™] P6) is displayed on the monitor.
- 5.) Start-up progress bars indicating software loading procedures, are displayed on the monitor, as shown in Figure 3-16 below.



Figure 3-16 GE Healthcare wallpaper with progress bar

- 6.) The software initiates and sets up the Front-End electronics and the rest of the Ultrasound unit.
- 7.) The Keyboard backlight is lit.
- 8.) As soon as the software has been loaded, the 2D screen is displayed on the monitor.

3-6-3 Power Off / Shutdown

NOTICE After turning off a system, wait at least 10 seconds before turning it on again. The system may not be able to boot if power is recycled too quickly.

3-6-3-1 Ultrasound unit Shutdown

- 1.) If not already in read mode, freeze the image.
- 2.) Press the **ON/OFF** button (see: Figure 3-14) on the control panel. Following dialog appears.

Shut Down		×
Do you wa	nt the system to shut do	wn or restart?
Shut down	Restart	Cancel

Figure 3-17 Shutdown, Restart or Cancel

- 3.) Select the SHUTDOWN button. The system performs an automatic full shutdown sequence.
- NOTE: Full shut down is also performed when pressing the ON/OFF button on the control panel twice.
 - 4.) Switch OFF the Circuit at the rear of the system.

NOTE: The mains outlet of the system for peripheral auxiliary equipment are commonly switched with the **ON/OFF** button. So the auxiliary equipment need not to be switched ON/OFF separately.

WARNING Disconnection of the Main Power Cable is necessary! For Example: When repairing the system.

5.) After complete power down, disconnect the main power cable from the system or unplug it from the AC wall outlet socket.



Figure 3-18 Circuit and main power at rear of system

- 6.) Press on the brakes to block the front caster wheels.
- 7.) Disconnect probes. (Turn the probe locking handle counterclockwise and then pull the connector straight out of the probe port.)

CAUTION DO NOT disconnect a probe while running (Live Scan "Write" mode)! A software error may occur. In this case switch the unit OFF (perform a reset).

3-6-4 Transducer Connection

NOTE: When the probe is connected, it is automatically activated. Once connected, the probes can be selected for different applications.

Connect a transducer to one of the three rightmost transducer receptacle as follows:

- 1.) Inspect the probe and probe socket to verify that it is free of debris.
- 2.) Ensure that the probe locking lever is at left position, as shown Figure 3-19.
- 3.) Insert the connector on the receptacle, and move lever to the right position to lock probe.



Figure 3-19 Transducer Connection

4.) Carefully position the probe cord so that it is free to move and is not resting on the floor.

CAUTION Do not bend the probe cable acutely. Fault conditions can result in electric shock hazard. Do not touch the surface of probe connectors which are exposed when the probe is removed. Do not touch the patient when connecting or disconnecting a probe.

NOTE: Prior to connecting or disconnecting a probe, freeze the image. It is not necessary to turn OFF power to connect or disconnect a transducer.

Section 3-7 Printer Installation

NOTE: For Connection schemes refer to Section 3-5 "Connection of Auxiliary Devices" on page 3-12.

For further installation instructions see:

- Section 3-7-1 "Installing the Digital Black & White Printer" on page 3-32
- Section 3-7-2 "Installing the Digital Color Printer" on page 3-32
- Section 3-7-3 "Installing the Network Color laser Printer" on page 3-33
- Section 3-7-6 "Printer Installation manually" on page 3-47
- Section 3-7-7 "Adjustment of Printer Settings" on page 3-48
- NOTE: The Bluetooth Printer Connection set MUST NOT be installed by the user! Bluetooth installation please contact your local distributor or GE service representative.

If a a Desk Jet printer(e.g., HP Officejet 100) is connected directly via an USB-cable, use the AC mains power outlet privided by the Voluson P-series system (auxiliary output). This ensures medical grade separation from AC mains.

WARNING After each installation, the leakage currents have to be measured according to IEC 60601-1, UL 60601-1, IEC 62353 or other relevant standard.

3-7-1 Installing the Digital Black & White Printer

- 1.) Power off/Shutdown the system as described in: Section 3-6-3 on page 3-29.
- 2.) Connect the printer as described on page 3-14.
- 3.) Verify correct printer settings; Section 3-7-7 "Adjustment of Printer Settings" on page 3-48
- 4.) Assign the printer to the remote keys P1, P2, P3; see Section 3-7-8 "Remote Control Selection" on page 3-52

3-7-2 Installing the Digital Color Printer

- 1.) Power off/Shutdown the system as described in: Section 3-6-3 on page 3-29.
- 2.) Connect the printer as described on page 3-16
- 3.) Verify correct printer settings; Section 3-7-7 "Adjustment of Printer Settings" on page 3-48
- 4.) Assign the printer to the remote keys P1, P2, P3; see Section 3-7-8 "Remote Control Selection" on page 3-52.

3-7-3 Installing the Network Color laser Printer

- 1.) Power off/Shutdown the system as described in Section 3-6-3 on page 3-29
- 2.) Connect the printer as described in page 3-16
- 3.) Power On/Boot Up the system as described in Section 3-6-2 on page 3-25
- 4.) Press the **Power On** button on the printer.
- 5.) Install ink tanks and load paper.
- 6.) Wait until the printer displays *Ready*.



Figure 3-20 printer controls

1. Power ON	5. Right >
2. Display	6. OK
3. Status Indicators	7. Left <
4. Cancel	8. Back

7.) By means of the Printer Controls Left<, Right> and OK set the TCP/IP address to Automatic.



Figure 3-21 TCP/IP Config - Automatic

- 8.) Press the Back button until the Printer displays *Ready* again.
- 9.) By means of the Printer Controls Left<, Right> and OK print out the Config Report.



Figure 3-22 Reports -> Config Report



Figure 3-23 Config Report -> IPv4 Address

10.)Below *Product Settings* you can find the printers IP Address (e.g., IPv4 Address: 3.249.68.25).

NOTE: Keep in mind this unique printer IP Address (IPv4 Address). It has to be entered during Printer Installation Procedure.

- 11.)Download the appropreate printer driver from GE folders http://libraries.ge.com/foldersIndex.do? entity_id=52794606101&sid=101&SF=1 and extract files to CD or USB disk.
- 12.)Connect the USB stick to the Voluson P-series system or insert the CD into the drive.
- 13.) Press the Utilities key on the control console.
- 14.) In the "Utilities" menu press the Setup button to invoke the setup desktop on the screen.

- 15.)On the right side of the screen select Connectivity and then click the Peripherals tab.
- 16.)Click the Add Printer button.
 - Please read the displayed message carefully and click **Yes** if you have skills to do this.
- 17.) In the displayed window click on *Add a network, wireless or Bluetooth printer*.

What type of printer do you want to inst	tall?
 Add a local printer Use this option only if you don't have a USB pr when you plug them in.) 	rinter. (Windows automatically installs USB printer
 Add a network, wireless or Bluetoot Make sure that your computer is connected to printer is turned on. 	th printer othe network, or that your Bluetooth or wireless

Figure 3-24 add printer

18.) In the displayed window click on The printer that I want isn't listed and then clik Next.

Printer Name	Address	
		10.02

Figure 3-25 the printer isn't listed

- 19.) Check mark Connect to this printer.
- 20.)Enter http://.....flowed by the previously print out printer IPv4 Address(e.g., 3.429.68.25, see: Section Figure 3-23 on page 3-34) and then click *Next*.

NOTE: This example show fictional numbers!

🕒 🖶 Add Printer	
Find a printer by name or TCP,1P address	
Onnect to this printer:	
http://3.249.68.25	
Examples \\computername\printername or http://computername/printers/printername/printer	
Add a printer using a TCP/IP address or hostname	
	Next Cancel

Figure 3-26 enter printers IP Address

21.)Click on *Have Disk* and browse for E:\ (where E : stands for the USB stick resp. the CD drive), search for the printer driver folder and open the file hpcu175u.inf. Finally click *OK*.

Select the m an installatio printer docu	ianufactur n disk., clii mentation	er and model of your printer. If your printer came with sk Have Disk. If your printer is not listed, consult your for a compatible printer.			
Manufacturer		Printers			
Canon	-	Carron MP600 Printer	Install Fre	om Disk	E
HP Mcrosoft		Canon MP510 series Printer	_6	Insert the manufacturer's installation disk, and then make a up that the correct drive is selected below.	OK
MITSUBISHI	+	Canon SELPHY CP820	-		Cancel
This driver is digit	ally signed	Have Disk}			
Tel me why drive	r algrand la	Inconstr.		Copy manufacturer's files from:	
		and the second sec			-

Figure 3-27 search for printer driver

22.) Select HP Universal Printing PCL6 and then Click OK to start the installtion.

Select the manufacturer and model of your prin	ter. F your printer came with
an installation disk, click Have Disk. If your print printer documentation for a compatible printer.	iter is not listed, consult your
hinters	
HP Universal Printing PCL 6 HP Universal Printing PCL 6 (v6.0.0)	
] This driver is digitally signed.	Have Diek
This driver is digitally signed. Tell me why driver signing is important	Have Disk
This driver is digitally signed. Tell me why driver signing is important	Have Dsk

Figure 3-28

23.)Confirm the following screeen with Next.

24.)Remove the check mark at Set as the default printer and then click on Print a test page.

NOTE: Please, **DO NOT yet** click on Finish!!!

🖉 🖨 Add Printer	L
You've successfully added HP Universal Printing	g PCL 6x
Set as the default printer	
To check if your printer is working properly, or to see troublest test page.	hooting information for the printer, print a
Print a test page	
	(

Figure 3-29 installation succesful

25.)In the following window check mark No, do not send this info to HP and do not ask me again and then click OK.

HP Printer Driver - Privacy Settings	X
Get more value from this HP Printer Driver	
This HP Printer Driver can provide valuable information about your HP device for things supplies, warranty, and support, as well as attractive offers. This information will not a normal interaction with your computer or printer, nor will it result in your receiving any emails from HP.	like affect your additional
To take advantage of this feature we need your permission to transmit your printing an system configuration to HP over the Internet. All information will be handled in according the HP Privacy Statement.	nd imaging ance with
Is it OK to send printing and imaging system configuration to HP?	
C Yes, allow this info to be sent to HP and allow messages to be displayed	
Do not notify me each time my info is sent to HP	
No, do not send this info to HP and do not ask me again	
(hp)	OK

Figure 3-30 No do not send info the HP

26.) In the following screen click on Settings.



Figure 3-31 click Settings

27.) Remove all check marks to avoid further setup notifications and then click OK.



Figure 3-32 remove all check marks

28.) Finally click on Finish

- 29.) Assign the printer to the remote keys P1, P2 and/or P3
- 30.) Assign the printer as Report Printer
- 31.) Close app open windows, select Save & Exit and restart the system (turn off and on the system).

3-7-4 Installing the Deskjet Color Printer directly via an USB-cable

- 1.) Power off/Shutdown the system as described in: Section 3-6-3 on page 3-29.
- 2.) Connect the printer according to connection scheme:
- 3.) Power On/Boot Up the system as described in Section 3-6-2 on page 3-25 All software drivers are pre-installed for the designated printer only.
- 4.) Verify correct printer settings; Section 3-7-7 "Adjustment of Printer Settings" on page 3-48
- 5.) Assign the printer to the remote keys P1, P2, P3; see Section 3-7-8 "Remote Control Selection" on page 3-52
- 6.) Assign the printer as Report Printer, see

3-7-5 Installing the DeskJet Color Printer via Bluetooth connection

NOTE: Installation of the DeskJet Color Printer has to be performed in sequential order!

Content in this section

3-7-5-1 Installing the Bluetooth Adapter and Software

- 1.) Turn **ON** the system and wait till the system has booted.
- 2.) Connect the Bluetooth Adapter according to connection scheme, see
- 3.) Connect the USB "standard GE" service dongle to the USB connector(s) on the rear of the system. As soon as the dongle is detected the login window pops up. Remove the dongle.
- 4.) Enter the "Standard GE Revolving" password (changes every six months) and then click ENABLE.
- 5.) Press the <u>ALT</u> + <u>F4</u> key again to close the Ultrasound Application.
- 6.) Press CTRL + ESC key simultaneously and open the Windows start menu.
- 7.) Using the "Arrow" keys on the keyboard, select *All Programs Administrative Tools- Computer Management*.





- NOTE: All software drivers are pre-installed for the designated printer only, see . If the Bluetooth device is already up and running, you can see it in the Device Manager, see . In this case, skip installation of the Bluetooth Adapter, close all open windows and proceed with Section 3-7-5-2 on page 3-43.
 - 8.) Using the "Arrow" keys on the keyboard, select *System Tools Device Manager-Other Devices*. Select the designated Bluetooth device, click the *upper trackball key and select Properties*.

🕼 Gunjister Management		
File Action View Help		
Computer Management (Local System Tools Construction Color System Viewer Sale Colliders Colliders Solution Device Manager Storage	Nove Computer Dick chices Dick chices Dick driv Dick drives Dick drives Dick	Actions Device Menager A More Actions
<[] >		
pens property cheet for the current se	lection.	

Figure 3-34 select Bluetooth "Properties"

9.) In the displayed window click on Update Driver.

eneral	Driver	Details				
1	BCM2	0702A0				
	Device	type:	Other de	vices		
	Manufa	scturer:	Unknow	m		
	Locatio	n:	Port_#0	006 Hub_#	0006	
Ther clow	e is no di ent. nd a drive	iver select ar for this c	ted for the o	levice infor (Update D	nation set of niver.	
					Update D	tver

Figure 3-35 Welcome to Install... and License Agreement
10.) Select Browse my computer for driver software.



Figure 3-36 Browse for driver

11.) Click on Browse and navigate to F:\(where F: stands for the DVD drive), select Win7 and click OK.



Figure 3-37 Win7

12.) Verify the path and click *Next* to start installation.



Figure 3-38 verify path

13.) When installation is finished click on Close.



Figure 3-39 installation finished

14.)Now you should see the installed Bluetooth device in the Device Manager. Click the *upper trackball key* and verify its device status: "*This device is working properly*"



Figure 3-40 Bluetooth device is up and running

3-7-5-2 Prepare the DeskJet Color Printer

NOTE: Preparations depend on the used Bluetooth Printer.

HP Officejet 100

- 1.) Connect the power cord to a wall outlet socket.
- 2.) Turn on the printer.
- 3.) Install ink tanks in the correct order.
- 4.) Load paper in the auto sheet feeder.
- 5.) Turn on Bluetooth radio.



Figure 3-41 Prepare the printer

3-7-5-3 Installing the printer software/driver

- 1.) Close all open windows.
- 2.) Press CTRL+ ESC keys simultaneously and open the Windows Start menu.
- 3.) Using the "Arrow" keys on the keyboard, select *Voluson Application(2)* to start the Ultrasound Application.



Figure 3-42 Start Ultrasound Application

- 4.) Press the Utilities key on the control console.
- 5.) In the "Utilities" menu press the Setup button to invoke the setup desktop on the screen.
- 6.) On the right side of the screen select *Connectivity* and then click the *Peripherals* tab.
- 7.) Click the *Add Printer* button. Please read the displayed message carefully and click Yes if you have skills to do this.

8.) Select Add a network, wireless or Bluetooth printer.

•	Add a local printer
	Use this option only if you don't have a USB printer. [Windows automatically installs USB printer when you plug them in.]
1	Add a network, wheless or Bluetooth printer Make sure that your computer is connected to the network, or that your Bluetooth or wireless printer is turned on.

Figure 3-43 add Bluetooth printer

9.) Select your printer and click on Next.

Printer Neme	Address	
OJ411M9336813+P	#0363546	

Figure 3-44 select printer

10.) You have successfully added the printer. Click **Next**.

🔵 😭 Add Printer			- 23
You've succes	sfully added HP Officejet 100 Mobile L411 BT		
<u>Printer name</u>	HP Officajiet 100 Medice LALL 87		
This printer has be	en installed with the HP Officejet 100 Mobile L411 BT driver.		
		Nest Cenc	el

Figure 3-45 successfully added printer

11.) Check box desired printer sharing option and then click Next.

Printer Sharing	
If you want to share t type a new one. The	his printer, you must provide a share name. You can use the suggested name or share name will be visible to other network users.
Do not share this part of the state of th	printer
C Share this printers	so that others on your network can find and use it
Shars name:	HP Officejet 100 Mobile L411 BT
Location:	
Comment	

Figure 3-46 printer sharing

12.) Check box "Set as the default printer" and click Print a test page.

) 🖶 Add Printer	
You've successfully added HP 100	
Set as the default printer	
To check it your printer is working properly, or to see	troubleshooting information for the printer, print e
Print a test page	(Enith) Court

Figure 3-47 print test page

13.) When test page is printed, click on *Close and Finish*.

You've suo	HT Official States (2013)
	A test page has been sent to your printer
IZ Sat as the	This test page briefly demonstrates the printer's ability to print graphics and test, and it provides technical information about the printer. Use the printer troublembooter if the test page does not print correctly. Set help with printing
To check if your	printer is working properly, or to see troubleshooting information for the printer, prin
test page.	

Figure 3-48 finish installation Chapter 3 - Setup Instructions

- 14.) Verify correct printer settings; see
- 15.) Assign the printer as Report Printer, see
- 3-7-5-3-1 HP Officejet 100 turns off unexpectedly (after being idle for a period of time)

Issue

A print, copy or scan job fails becuase the printer is turned off. You might have completed a job a few hours ago, and you are sure that no one turned off the printer.

Solution

Disable Auto-off when Bluetooth is turned on.

Procedure:

- 1. Press the **Power (3)** button to turn on the printer.
- 2. Simultaneously press and bold the Bluetooth(1) and Cancel(2) buttons for 5 seconds.



Bluetooth
 Cancel
 Power

3-7-6 Printer Installation manually

- 1.) Press the UTILITIES key on the control console.
- 2.) In the "Utilities" menu select $\overline{\text{SETUP}}$ button to invoke the setup desktop on the screen.
- 3.) On the right side of the screen select $\overline{\text{CONNECTIVITY}}$ and then click on the **PERIPHERALS** tab.

Add Printer	Foot Switch	1		
Add notwork gradostials	Left:	P1		
	Middle:	Update 2D		
Printer Settings	Right:	Freeze		
Brother QL-550				
Edit Default	Ext. Monito	or Output		
	S-Video / Co	omposite		
Report Printer	Ultras	een ound area		
none	<u> </u>			
Print Queue				
Brother QL-550 -				
Select All Printers				
Clean Print Queue	USB record	ling		
Voice Recording				

Figure 3-49 System Setup - Connectivity - PERIPHERALS page

- 1. Add Printer button 3. External Monitor Output selection
- 2. Footswitch Remote Control 4. Report Printer selection
- 4.) Click the ADD PRINTER button.

Please read the displayed message carefully and click $\overline{\text{YES}}$ if you have skills to do this.

- 5.) Click the $\overline{\text{NEXT}}$ button to start the Add Printer Wizard.
- 6.) After installation, close all open windows, select Save & Exit and restart the system(turn off and on the system).
- 7.) Verify correct printer settings; see
- 8.) Assign the printer to the remote keys P1,P2 and/or P3; see Section 3-7-8-1 on page 3-53.

3-7-7 Adjustment of Printer Settings

- 1.) After system restart, press the **UTILITIES** key on the control console.
- 2.) In the "Utilities" menu select $\overline{\text{SETUP}}$ button to invoke the setup desktop on the screen.
- 3.) On the right side of the screen select $\overline{\text{CONNECTIVITY}}$ and then click on the **PERIPHERALS** tab.
- 4.) Select the desired printer from the Printer Settings pull-down menu and click the EDIT button.



Figure 3-50 Select the desired printer

To adjust the UP-D898 printer see: Section 3-7-7-1 "UP-D897 / UP-D898MD - Printer Settings" .

To adjust the UP-D25MD Printer see: Section 3-7-7-2 "UP-D25MD - Printer Settings" .

WARNING After each printer installation, the leakage currents have to be measured acc. IEC 60601-1 resp. UL 60601-1.

3-7-7-1 UP-D897 / UP-D898MD - Printer Settings

- 1.) Call up the 'Printer Preferences'; operation see: Section 3-7-7 "Adjustment of Printer Settings" .
- 2.) Select the **LAYOUT** page and select:
 - Paper: 960x1280
 - Orientation: Portrait
 - Interpolation Method: Bilinear

💩 Sony UP-D897 Printing Preferences	? 🛛	💩 Sony UP-D8	97 Printing Preferences		? 🔀
Layout Density Adjust Settings Message		Layout Density	Adjust Settings Message		
Paper: 960x1280 💌	-	GAMMA:	TONE2		
Copies:		Advanced:		0	
Scaling: 100 🗘 %	tion	Dark:		0	
Enlarge to Paper O Por	trait	Light		0	_
Interpolation Method:	dscape	Sharpness		2	
Read Write About	Restore Defaults				Restore Defaults
ОК	Cancel Apply			ОК	Cancel Apply

Figure 3-51 Layout + Density Adjust page

- 3.) Select the **DENSITY ADJUST** page and select:
 - Gamma: TONE2
 - Advanced = 0; Dark = 0; Light = 0; Sharpness = 2
- 4.) Save the adjusted printer settings click <u>APPLY</u> and then <u>OK</u>. Close window and exit System Setup with <u>SAVE&EXIT</u>.
- 5.) Assign the Printer to the remote keys **P1**, **P2**, and/or **P3** with the save button; see: Section 3-7-8 "Remote Control Selection" on page 3-52.

3-7-7-2 UP-D25MD - Printer Settings

NOTICE The appropriate printer settings can be automatically loaded by means of a "Registry file". Therefore:

- Download the SonyUp-D25MD.reg from GE folders
 <u>http://libraries.ge.com/foldersIndex.do?entity_id=15869258101&sid=101&SF=1</u>
 and extract files to CD or USB disk.
- Connect the USB "standard GE" service dongle and enter the "Standard GE Revolving" password.
- Open the Windows Start menu by pressing CTRL +ESC on the keyboard, click on "WinExplorer" and navigate to F:(where F stnads for CD/DVD Drive).
- Double click the registry file.
- Click **YES** to cinfirm.

To adjust the printer settings manually perform the following procedure:

- 1.) Call up the 'Printer Preferences'; operation see: Section 3-7-7 "Adjustment of Printer Settings" .
- 2.) Select the **PAPER** page and select:
 - Paper Size: UPC-...L (large) / UPC-...S (small)
 - Orientation: Landscape (recommended when using large paper size)
 - High Speed (check mark on)
- NOTE: Settings for paper size must match with the used paper(large/small) and also the right color ink cartfridge has to be used. Otherwise you will get an error message at printing.
 - 3.) Select the Graphics page. From the "Color Adjust" pull-down menu selet:
 - 4.) *Color Balance*. Cyan=0, Magenta=0, Yellow=0

Sony UP-025M0 Printing Proformation	Sony UP-D25MD Printing Preferences
Paper Layout Graphics Message	Paper Layout Graphics Message
Paper 5/28 UPC-21L/24LA (2100x1600pixel)	Color Adust: Color Belance
A A	Color Balance
UPC-215/UPC-245A UPC-211/UPC-24LA	Color Correction Gray Balance
	Adjustment by color
	Display the printed image
A C Portrait A C Landscepe	Color Balance
t t	<u>Cyan</u> Red 0
Does 1 🗇	
<u>\$cale</u> 100 <u>+</u> %	Magenta Green 0 4
Thigh Speed Print Made	
	yellow Blue 0 -
Printer Info	
Agout Save Settings Loed Settings Restore Defaults	Restore Defaults
	OK Cancel Boply

Figure 3-52 Paper/Graphics page

5.) Lightness. Sharpness = 7, Dark = 0, Gamma = -6, Gamma Curve = Curve 1

Sony UP-D25MD Printing Preferences Sony UP-D25MD Printing Preferences ? X Paper Layout Graphics Message Paper Layout Graphics Message Color Adjust: Color Correction Oglor Adjust: Lightness Color Balance Color Balan Lightness Color Corre olor Con Color Correction Gray Balance adjustment by color djustment by colo Display the printed image Display the printed image Ealor Correction Lightness 7 · Eninter Hardware Color Correction Sharpness TYPEI -Color Table: . 0 Dark , Custom Color Table: • • Gemma 2 4 Light C None Curve 1 Gamma Curve -Restore Defaults Restore Defaults OK Cancel Apply Cencel Apply 11

6.) Color Correction. check mark Printer Hardware Color Correction

Figure 3-53 Graphic page (lightness /Color Correction)

- 7.) *Gray Balance*. X = 50, Y = 50
- 8.) Adjustment by Color. Color(region) = Magenta Red

per Layout Graphics Messog	c	Paper Layout Graphics Message
Color Adjust: Gray Balance Color Balance Lightness Color Carrection Gray Balance Adjustment by co	elor	Calor Adjust: Adjustment by color
Gray Balance	X: 50 ±	Adjusted value (* Normal
•	2: 50	
	Restore Defaults	
	OK Cancel Apply	OK Cancel Apply

Figure 3-54 Graphic page (Gray Balance/ Adjustment by Color)

- 9.) Save the adjusted printer settings with *Apply* and *OK*. Close window and exit System Setup.
- 10.) Assign the printer to the remote keys P1, P2 and/or P3 ; see Section 3-7-8-1 on page 3-53

3-7-8 Remote Control Selection

To assign an auxiliary device (e.g., printer) to the remote keys **P1**, **P2**, and/or **P3**

- 1.) Press the **UTILITIES** key on the control console.
- 2.) In the "Utilities" menu select SETUP button to invoke the setup desktop on the screen.
- 3.) On the right side of the screen select <u>CONNECTIVITY</u> and then click the **BUTTON CONFIGURATION** tab.

	Peripherals Device Setup	Button Configuration	Drives			
\bigcirc	● P1 ● P2 ● P3	Start Exam	End Exam			
$\begin{pmatrix} 1 \\ \end{pmatrix}$	Overview Detailed Setup	Dicom		Print		
	Seve to Clipboard with P1	Send to Destination 1 with P	1	Print to Printer 1 with P1		
	Save to Worksheet with P1			Brother QL-550		(1b)
	Export	Send to Destination 2 with P	1	Print to Printer 2 with P1 Brother QL-550	•	
				_		
	Recorder	Send to Destination 3 with P	1	Print to Printer 3 with P1 Brother QL-550		\bigcirc
	Send Email	j .				
	Use P1 to send Email					(1d)
	Settings					

Figure 3-55 System Setup - Connectivity - BUTTON CONFIGURATION page (Overview)

1 Overview

2 Detailed Setup

- 1a Configure buttons
- 1b Selected Printer
- 1c Recorder Control

1d Select P1 to send Email

- **Overview** tab:
 - A.) Configure "Remote" Buttons: Select the desired remote control button.
 - B.) Select Printer: Check mark and select the desired Printer for the remote control button.
 - C.) Recorder Control: Check mark this item to use the selected P? key for Recorder Control.
 - D.) Check mark "Use P? key to send Email", and adjust Settings.

NOTE: Optionally the Printer Remote Control can be done by the Foot switch. (refer to: Figure 3-49: System Setup - Connectivity - PERIPHERALS page on page 3-47)

- Detailed Setup tab:
 - If it is desired, check mark "Use Report Printer for Reports"

3-7-8-1 Report Printer Selection

- 1.) Click on the <u>PERIPHERALS</u> tab. (refer to: *Figure 3-49: System Setup - Connectivity - PERIPHERALS page on page 3-47*)
- 2.) Select the desired Report Printer from the pull-down menu.
- **NOTICE** The selected Report Printer is usually used for printing reports and images from the Archive.

Section 3-8 Cellular Modem Installation

3-8-1 Overview

This section describes the installation procedure of Cellular Modem Kit.

3-8-2 Tools Required

Standard Field Service Tool Kit.

3-8-3 Parts Required

Table 3-1 H48	691WL Cellular	Modem option kit
---------------	----------------	------------------

No	Part No.	Part Name	Q'ty
1	KTZ304025	Cellular Modem	1



Figure 3-56 Cellular Modem option kit

3-8-4 Removal procedure

3-8-4-1 Removal procedure for Cellular Modem installation

1.) Remove the power cord and REAR CABINET BEXEL ASSY BT16.



POWER CORD FIX Bracket



REAR CABINET BEZEL ASSY BT16

Figure 3-57 Removing the POWER CORD and REAR CABINET BEZEL ASSY BT16

2.) Unscrew 7 screws and disassemble REAR EMI COVER.



Figure 3-58 Unscrewing 7 screws

3-8-5 Installation procedure

1.) To refer to below picture, Unplug power cable for cellular modem and cut cable tie.



Figure 3-59 Unpluging power cable

2.) Slide up the upper cover of the Cellular Modem(**Pos.1**) to get access to the SIM card holder.



Figure 3-60 Sliding up the upper cover

3.) Put in the SIM card like it is shown in the picture below, fix the SIM card with the mouted clips and put back on the upper cover.



Figure 3-61 Putting in the SIM card like figure above

4.) Combine loop fastener and hook fastener, and detach sticker from hook fastener like ebelow picture(make two pair).







Figure 3-62 Combining loop fastener and hook fastener

5.) Attach fastener pair to cellular modem like below picture.



Figure 3-63 Attaching fastener pair

6.) Refer to cellular modem guide and attach Cellular modem to REAR CABINET BEZEL ASSY BT16 like below.



Figure 3-64 attaching Cellur modem to REAR CABINET BEZEL ASSY BT16

7.) Plug power cable and USB cable(to port 3) for cellular modem like below picture.



Figure 3-65 Pluging Power Cable and USB

8.) Refer to below picture, insert two cables(USB and power for cellular modem) through hole of REAR EMI COVER.



Figure 3-66 Inserting two cables through hole of REAR EMI COVER

9.) Assemble REAR EMI COVER and screw 7 screws.



Figure 3-67 Assembling REAR EMI COVER

10.)Pull out two cables from REAR EMI COVER First, pull out power cable within the limits of the possible. Therefore, pull out USB cable like below picture. To align cable edge, pull out USB cable as much as power cable.



Figure 3-68 Pulling out 2 cabels from REAR EMI COVER

11.)Connect Power Cable and USB Cable to Cellular modem.



Figure 3-69 Connecting Power Cable and USB Cable to Celular modem

12.) Close REAR CABINET BEZEL ASSY BT16 and connect POWER COARD FIX BRACKET.



POWER CORD FIX BRACKET



REAR CABINET BEZEL ASSY BT16

Figure 3-70 Closing REAR CORD FIX BRACKET

Section 3-9System Configuration

3-9-1 System Setup

Modifications of system parameters and settings are supported by 7 major groups. Each maj group contains diverse dialog pages and sub windows.

	General Settings: Date, Time, Clinic Name, (EUM) Language, Screen saver, etc.
General Settings	Details: Doppler 2D Refresh, Zoom options, Menu Brghtness, Trackball Speed, etc.
	Annotation: adjustment of different Annotation presets(e.g. Home position, etc.)
Administration Connectivity	 Clipboard: adjustment of Clipboard display and functions Service tab: conncet the USB "standard GE" dongle and enter the "standard GE revolving" password (change every six months_ to get access to the Service Tools functions. System Info: shows which Software/Hardware version is installed in the system Options: shows which options are installed in the system For information on configuring Software Options refer to Section 8-7 on page 8-23 Peripherals: Video Norm selection, Foot switch assignment, Add Printer, Edit Printer settings, etc. Device Setup: to set up all DICOM, Archive and Network configuration nodes Button Configuration: to adjust assignment of Remote keys P1, P2 and P3 (e.g, Printer selection)
	Drives: USB and Network drives: stop devices, map network drive, Erase CD
Backup	 System Configuration: Save/Load Settings only, Save/Load/Delete Full System Configuration Image Archive: to save or load Image Archive
	- • Presets: to save User Folder/Presets and 3D/4D Presets. Logo display. etc.
Imaging Presets	Global Parameters: adjustment of different parameters for specific or all applications
Biopsy Setup	• Menu to program Biopsy Lines
Meacure Satun	 Measure & Calc: Shows all settings, which are used for generic measurements as well as calculations in different applications
measure setup	• Application Parameters: to adjust Status on Freeze for different modes, Manual Trace method, Calculation Ratio, etc.
	• Global Parameters: to select cursor type and size, font size and color of measure results position of results for different modes, etc.
	Report: adjustment and setup of Report display
	 Result Windor: adjustment of Result and OB Graph display
	 Measure Button: adjust assignment of Measure buttons
NOTICE Mo	re detailed information pertaining System Setup adjustments is found in the Basic User Manual; see: ole 9-10, ?System Manuals - Voluson™ P8 / Voluson™ P6,? on page 9-18.

3-9-1-1 To invoke the Setup procedure:

Trackball (mouse position):



- 1.) Press the $\overline{\mathbf{F2}}$ key on the control panel.
- 2.) In the "Utilities" menu select SYSTEM SETUP to activate the setup desktop screen.
- 3.) Select the corresponding major group from the left side of the screen and then click the desired tab.

In general operations are done with the trackball and the trackball keys (mouse emulation).



positions the pointing device (arrow) on the desktop

left trackball key (left mouse button): sets, fixates markers and activates pages/buttons etc. marked by the pointing device



upper trackball key (right mouse button): no function in system desktop

right trackball key (left mouse button): sets, fixates markers and activates pages/buttons etc. marked by the pointing device

3-9-1-2 How to enter Date and Time

- 1.) Invoke System Setup as described in Section 3-9-1-1 on page 3-63.
- On the left side of the screen select <u>GENERAL SETTINGS</u> and then click on the <u>GENERALSETTINGS</u> tab..



Figure 3-71 System Setup - General Settings - GENERALSETTINGS page

1. Date and Time	6. Display options
2. Change date and time	7. Diverse options
3. Date Format	8. Change System Language
4.Time Format	9. Change EUM Language
5. Clinic Name	10. Screensaver Text

- 3.) Click the "CHANGE DATE AND TIME" button to activate a sub dialog window to enter date, time and time zone.
- 4.) Select the "DATE FORMAT" button (only one can be active).
- 5.) Select the "Time Format" (only one can be active).
- 6.) Close the Service page with Save&Exit.

3-9-1-3 How to enter Clinic Name

- 1.) Invoke System Setup as described in Section 3-9-1-1 on page 3-63.
- 2.) On the left side of the screen select <u>GENERAL SETTINGS</u> and then click on the <u>GENERALSETTINGS</u> tab.
- 3.) Select the text box to enter a new "Clinic Name" with the keyboard.
- 4.) Close the Service page with Save&Exit.

The clinic name will be copied into the Hospital ID in the information header.

3-9-1-4 How to change Language and/or EUM Language

- 1.) Invoke System Setup as described in Section 3-9-1-1 on page 3-63.
- 2.) On the left side of the screen select <u>GENERAL SETTINGS</u> and then click on the <u>GENERAL SETTINGS</u> tab.
- 3.) Select the desired language from the pull-down menu.
- 4.) Close the Service page with Save&Exit.

NOTE: After changing the language the system has to reboot.

3-9-1-5 How to activate System Login

- 1.) Invoke System Setup as described in Section 3-9-1-1 on page 3-63.
- 2.) On the left side of the screen select GENERAL SETTINGS and then click on the GENERAL SETTINGS tab.
- 3.) Check mark "System Login".
 - a.) If no password previously entered, the following dialog appears.

Cł	nange System Login Password	×
	Current Password:	
	New Password:	
	Retype new password:	E
	Exit Save and Exit	

Figure 3-72 System Login Password

- b.) Enter "New Password".
- NOTE: A new System Login password must be at least 6 characters long and has a maximum length of 80 characters. The password must contain at least 2 non-letter characters, 0...9 or !@#\$%^*().
 - c.) "Retype new Password" and then click <u>SAVE&EXIT</u> to save new screen lock password.
 - 4.) Click SAVE&EXIT to save Settings and exit System Setup.
- NOTE: If screen is locked you have to enter the password to get full system control.

If password is unknown click EMERGENCY. This enables standard - but limited - operation.

NOTICE The System Login password cannot be reset by the user! Please contact your GE service representative.

5.) Click <u>SAVE&EXIT</u> to save Settings and exit System Setup.

A Service Dongle and the "Standard GE Revolving" password (password changes every six months) is necessary for resetting the Screen Lock password.

Therefore select the Lock Screen button in the "Utilities" menu and then click the Clear PWD button in the displayed dialog window.

3-9-1-6 How to change Ext. Monitor Output Settings

- 1.) Invoke system Setup as described in Section 3-9-1-1 on page 3-63
- 2.) On the right side ofr the screen select Connectivity and then click the Peripherals tab.
- 3.) If not currently selected, click the proper field.
- 4.) Close the Service page with Save&Exit and restart the system.

3-9-1-7 How to adjust function of the Footswitch (Left/Middle/Right)

- 1.) Invoke System Setup as described in Section 3-8-1-1 on page 3-55.
- 2.) On the left side of the screen select CONNECTIVITY and then click on the PERIPHERALS tab.
- 3.) Select desired function of the Footswitch Left, Middle and Right.
- 4.) Click SAVE&EXIT to save Settings and exit System Setup.

	Foot Switch		
Add network oredentials Printer Settings FX ApeosPort-V C2275 PCL 6	Left: P1 Middle: Update 2D Right: Freeze		-> Footsv
Edit Default Report Printer	Ext. Monitor Output S-Video / Fullscreen Ultrasound area		
FX ApeosPort-V C2275 PCL 6 Select All Printers Clean Print Queue	USIII recording		

Figure 3-73 System setup -Connectivity - Peripherals page

3-9-1-8 How to change the Keyboard Layout

see: Chapter 6 - Modification of Keyboard Layout, on page 6-3.

3-9-1-9 How to configure Service Platform

see: Chapter 3 - How to configure Service Platform, on page 3-67.

3-9-1-10 How to install SW Option

For instruction, refer to Voluson S10/S8/S6 and P6/P8 Software Option installation manual, 5724006 in CDL and CDS.

3-9-2 On-Board Optional Peripherals

Mains outlet: AC outlet for on-board peripherals

Output voltage : 100~120/220-240VAC.

CAUTION Modification of voltage setting <u>only</u> by an authorized service person! The maximum power consumption of equipment (inclusive of the color LCD monitor) connected to these outlets must not exceed 400VA!

Device	Manufacturer	Model	Connection	Comment
Digital B/W printer	SONY	UP-D898	USB-Port	
Digital Color Printer	SONY	UP-D25MD	USB-Port	
UVC-S200	Kretz			
Cellular Modem	Kretz			
Isolation Transformer	GEUK			
Isolation USB connector	GEUK			
Isolation 1Gb Ethernet connection	GEUK			
ECG Module	Norav	Marlin/ECGUSB1D	USB-Port	
Footswitch	Whanam Elec.		USB-Port	
WI AN	Netgear	WG111	USB-Port	
	Neigeal	A26210	USB-Port	
Connection Module Report Data	GEUK		Dedicated Connector	
Network Color Laser Printer	HP	HP Laser Jet M452	LAN Port	
US 32 inch Monitor	Kretz			
40in PATIENT MONITOR EU	Kretz			

Table 3-2 Approved Peripherals

3-9-3 External I/O Connectors





Table 3-3	External I	O Connecto	r - Descripti	on
				~

Item	Connector Name	Table Number	Description
1	HDMI Out	Table 3-4	HDMI Connector for external Monitor
2	NETWORK	Table 3-6	DICOM input/output, twisted pair RJ-45 10/100 megabit/s
3	USB	Table 3-7	USB-2.0 port
4	RGB Out	Table 3-5	RGB Connector for external Monitor
5	Audio Out	Table 3-8	Audio out for external speaker

3-9-3-1 External I/O Pin Outs

Table 3-4 HDMI out Connector, 23 Pin

Pin No	Output Signal	Description
1 ~ 12	TMDS clock/data/Shield	TMDS clock/data/Shield
13	CEC	Not used
14	N/C	Reserved
14, 15	SCL/SDA	I2C Line
17,20,21,22,23	GND	Ground
18	5V	Power
19	Hot plug	Not used

Pin No	Output Signal	Description
1	Red	RGB Output
2	Greed	RGB Output
3	Blue	RGB Output
13	Horizontal - sync	Horizontal -sync
14	Vertical -sync	Vertical -sync
12	DDC_DATA	DATA
15	DDC_CLK	CLK
5,6,7,8.10	GND	Ground
4,9,11	NC	No Connection

Table 3-5RGB Out Connector, 19 Pin

Table 3-6 Network Connector, RJ45 Modular 8 Pin

Pin No	Output Signal	Description
1	ETHER TD	Ethernet RD+
2	ETHER TD	Ethernet RD-
3	ETHER RD	Ethernet TD+
6	ETHER RD	Ethernet TD-
Others	NC	No connection

Table 3-7 USB 2.0 Connectors

Pin No	Output Signal	Description
1	VCC	USB Power Supply
2	- Data	USB Data (-)
3	+ Data	USB Data (+)
4	GND	USB Power Ground

Table 3-8 Auc	lio Connectors
---------------	----------------

Pin No	Output Signal	Description
1	GND	GND
2	Audio_Left	Audio_Left
3	Audio_Right	Audio_Right

Section 3-10 Available Probes

See *Chapter 9 - Probes, on page 9-19,* for part numbers to be used when ordering new or replacement service probes.

Section 3-11 Software/Option Configuration

For description refer to:

• Section 3-9-1 "System Setup" on page 3-62



NOTICE More detailed information pertaining System Setup and Measure Setup adjustments is found in the Voluson[™] P8 / Voluson[™] P6 Basic User Manual, which is available in different languages.

Section 3-12 Connectivity Setup

The Voluson[™] P8 / Voluson[™] P6 can be connected to various connectivity devices. The following sections describe how to connect the system to a remote archive/work station or a DICOM service, using a TCP/IP connection.

3-12-1 Connectivity Introduction

This section describes communication and connection options between the Voluson[™] P8 / Voluson[™] P6 ultrasound unit and other devices in the hospital information system.

The following scenarios are covered:

- stand-alone Voluson[™] P8 / Voluson[™] P6 Ultrasound unit; see: Section 3-12-1-3 on page 3-74.
- Voluson[™] P8 / Voluson[™] P6 and one or several PC workstations with Software 4D View installed - within a "Sneaker Net" environment. ("Sneaker Net" means that you use a DVD/CD to move data because no network is available); see: 3-12-1-4 on page 3-74.
- Voluson[™] P8 / Voluson[™] P6 and DICOM server in a network; see: Section 3-12-1-5 on page 3-74.

3-12-1-1 The Dataflow Concept

Communication between the Voluson[™] P8 / Voluson[™] P6 ultrasound unit and other information providers on the network takes the form of data flows. Each dataflow defines the transfer of patient information from either an input source to the unit, or from the unit to an output source (see examples in Figure 3-75 on page 3-73).

Patient information can include demographic data and images, as well as reports and Measurement and Analysis (M&A) data.

A dataflow is a set of pre-configured services. Selecting a dataflow will automatically customize the ultrasound unit to work according to the services associated with this dataflow.

By utilizing data flows, the user can configure the Voluson[™] P8 / Voluson[™] P6 ultrasound unit to optimally meet the needs of the facility, while keeping the user interface unchanged. Once the dataflow is selected, the actual location of the database is entirely transparent.

3-12-1-2 Dataflow Examples



The local database is used for patient archiving. Images are stored to internal hard drive.



The local database is used for patient archiving. Afterwards images are stored to a DVD/CD or external USB device, etc.



A remote database is used for patient archiving. Images are also stored to a remote archive.



Search in the DICOM Modality Worklist, the patient found is copied into local database. The patient information and the examination results are stored to the local database. Images are stored to a DICOM server and to an image network volume on the local hard drive.



3-12-1-3 Stand-alone Voluson[™] P8 / Voluson[™] P6

If digital images or 3D/4D data sets are stored, they should be saved in the Archive (Image Management System software).

For Image Management functionality refer to the Basic User Manual of the Voluson[™] P8 / Voluson[™] P6.

NOTICE To avoid loss of essential data, it is highly recommended to **export/backup patient data** as well as measurements **at least once a month**.

Physical Connection:

No network connection needed.

3-12-1-4 Voluson[™] P8 / Voluson[™] P6 + PC (with 4D View Software) within a "Sneaker Net"

A PC (one or several with 4D View software installed) is used for review and work on studies acquired on one or more Voluson[™] P8 / Voluson[™] P6 System without being connected in a network.

The images are first stored on the Voluson[™] P8 / Voluson[™] P6 System 's hard drive (Archive) and then exported from the System 's hard drive to a sneaker device (e.g., DVD/CD), and finally imported from the sneaker device to the "4D View" PC's internal hard drive.

For Image Management functionality refer to the Basic User Manual of the Voluson[™] P8 / Voluson[™] P6.

NOTICE To avoid loss of essential data, it is highly recommended to **export/backup patient data** as well as measurements **at least once a month**.

Physical Connection:

No network connection needed.

3-12-1-5 Connection between Voluson[™] P8 / Voluson[™] P6 and DICOM Server

In this configuration, the Voluson[™] P8 / Voluson[™] P6 is configured to work with a DICOM server in a network environment. Usually, this will be the hospital network. Images are first saved on the local image buffer on the System . At the end of the examination, the images are sent to the DICOM server via a DICOM spooler. This scenario requires that the System is configured to be connected to the DICOM server.

Physical Connection:

You will need one network cable.

- 1.) Connect one end of the cable to the Ethernet connector on the Voluson® P8 / Voluson® P6.
- 2.) Connect the other end of the cable to the wall outlet.
- NOTE: If a Peer-to-Peer Network is connected to the hospital's network, you may connect the Voluson[™] P8 / Voluson[™] P6 to the Peer-to-Peer Network.

For more details refer to Figure 3-13-2 on page 3-76

Section 3-13Network Configuration

3-13-1 TCP/IP Configuration

NOTE: Following Information must be provided by customer or hospital engineer before you can start: A Station name, AE Title, IP address and Port Number for the Voluson[™] P8 / Voluson[™] P6. The IP addresses for the default gateway and other routers at the site for ROUTING INFORMATION. Only if necessary (e.g. for Internet access).

- 1.) Press the UTILITIES key on the control console.
- 2.) In the "Utilities" menu select <u>SETUP</u> button to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select CONNECTIVITY and then click the **DEVICE SETUP** tab.
- 4.) Click the button, read the message and confirm with YES.

Peripherals Device Se	tup Button Configuration Drives	
Dicom	Network	
N	etwork Configuration	
Archive Archive Configurate	Presto be aware that changes and modifications, which are not related to network configuration r cause system dysfunction ! Please continue only you are familiar with this task. Do you want to continue? Yes No	may if

Figure 3-76 Network Configuration

5.) The "Internet Protocol (TCP/IP) Properties" dialog page appears.

NOTE: This example shows fictional numbers!

is capability. Otherwise , you nee e appropriate IP settings	ed to ask your network administrator for
Obtain an IP address autom	etically
Uge the following IP address	8
JP address:	10 96 0 145
Sybnet mask:	255 0 0 0
Default gateway:	10 96 0 138
 Obtain DHS cerver address Use the following DNS serv Braferrad DNS server: Atemate DNS server: 	entometrolit) er addresses
 Vajidate settings upon exit 	Advanced

Figure 3-77 Internet Protocol (TCP/IP)

- 1 You can get IP and DNS settings assigned automatically, if your network supports this capability.
- 2 If fixed IP address is required, ask your network administrator for the appropriate settings. Type in:
 - IP address
 - Subnet mask
 - Default gateway
 - DNS server
- NOTE: For further details refer to the Voluson P-Series Basic User Manual.

3-13-2 Wireless Network Configuration

NOTE: To configure the Voluson P-Series system to work with WLAN, the hospital's network administrator has to provide the required information.

3-13-2-1 Connecting to the WLAN

- 1.) Connect the Wireless Network adapter as described in Section 3-5-5 on page 3-20
- 2.) Press the "Utilities" key on the control console.
- 3.) In the "Utilities" menu press the *Setup* button to invoke the setup desktop on the screen.
- 4.) On the right side of the screen select *Connectivity* and then click the *Device Setup* tab.
- 5.) Click the WLAN Configuration button; see Section Figure 3-76 on page 3-75
6.) The Wireless Network Configuration tool with available Wireless Networks appear.

(((g))	thobrain	Connocted 🌸		
	Security enabled wineless network	caidó.		
((Q))	8Å#rphone	Not Connected		
0	Security enabled wireless network			
((Q))	3LTE-0531C4	Not Connected		
U	Security enabled wireless network	Ulter		
((@))	Non-broadcast Network	Not Connected		
	Security enabled non-broadcast wireless network	Bites		

Figure 3-78 Wireless Networks - Connect

- 7.) Check box "Enable Wireless Connection".
- 8.) Highlight the wireless network you want to use and then click Connect.

NOTE: If the WLAN fails to connect, review and/or recreate the Wireless connection in the Security tab.

3-13-2-2 Disconnecting from the WLAN

- 1.) Press the "Utilities" key on the control console.
- 2.) On the right side of the screen select *Connectivity* and then click the *Device Setup* tab.
- 3.) Click the WLAN Configuration button; see Section Figure 3-76 on page 3-75
- 4.) The Wireless Network Configuration tool with available Wireless Networks appear.
- 5.) Select the WLAN you are connected to and then click *Disconnected*.

3-13-2-3 Adding a WLAN Profile

- 1.) Press the "Utilities" key on the control console.
- 2.) On the right side of the screen select *Connectivity* and then click the *Device Setup* tab.
- 3.) Click the WLAN Configuration button; see Section Figure 3-76 on page 3-75
- 4.) The Wireless Network Configuration tool with available Wireless Networks appear.

5.) Select the Security tab and then click Add.

Wireless Networks Propercies	Monitor Security Diagnosti	C8		
Preferred Wireless Networks			_	
P (hebrein (Connected)	New Wireless Network Pro	operties		
	Wireless hetwork			
	Network Name (551D)			
	Connect even if Net	work is not Broadcasting its Name (SSID)		
	Wireless Network Key			
Wheless Network Key	Network Authentication	Upen		
Natural Name (SSID)	Data Encyption	None		
Hocmark Halle (JOID)				
Network Authentication	Neswork key			
Data Encryption	Confirm Network Key			
Network Key	Key Index	1	10	
Key Index				
IEEE 802.1x Authentication	Etvanced Settings	QK	Cancel	
Customice Add.	Remove Mt	ove Up Move Down		
1472 B				

Figure 3-79 Security - Add

- 6.) Add the following information to the Wireless Network Properties page:
 - Network Name(SSID)
 - Check box " Connect even if Network is not Broadcasting its Name (SSID)"
 - network Authentication (Open, Shared key, WPA PSK or WPA2 PSK)
 - Date Encryption
 - Network Key
 - Key Index
- 7.) After you have filled in all the required information, click OK.

3-13-2-4 Refreshing a WLAN Network

- 1.) Press the "Utilities" key on the control console.
- 2.) On the right side of the screen select Connectivity and then click the Device Setup tab.
- 3.) Click the WLAN Configuration button; see Section Figure 3-76 on page 3-75
- 4.) The Wireless Network Configuration tool with available Wireless Networks appear.
- 5.) Click *Refresh*.

3-13-2-5 Setting a WLAN Network as Non-Preferable

When you make a WLAN non-preferable, you disconnect the network from the system and delete all connection settings from the system. Afterwards the system WILL NOT try to reconnect to this WLAN automatically. And if you want to reconnect, you will need to re-add this WLAN.

- 1.) Press the "Utilities" key on the control console.
- 2.) On the right side of the screen select *Connectivity* and then click the *Device Setup* tab.
- 3.) Click the WLAN Configuration button; see Section Figure 3-76 on page 3-75
- 4.) The Wireless Network Configuration tool with available Wireless Networks appear.
- 5.) Highlight the wireless network you want to set as non-preferred.
- 6.) Click *Make Non-Preferable* and cinfirm the message box.

3-13-2-6 Removing a WLAN Profile

- 1.) Press the "Utilities" key on the control console.
- 2.) On the right side of the screen select *Connectivity* and then click the *Device Setup* tab.
- 3.) Click the WLAN Configuration button; see Section Figure 3-76 on page 3-75
- 4.) The Wireless Network Configuration tool with available Wireless Networks appear.
- 5.) Select the *Security* tab and then click *Remove*.

3-13-2-7 Customizing an existing WLAN Profile

- 1.) Press the "Utilities" key on the control console.
- 2.) On the right side of the screen select *Connectivity* and then click the *Device Setup* tab.
- 3.) Click the WLAN Configuration button; see Section Figure 3-76 on page 3-75
- 4.) The Wireless Network Configuration tool with available Wireless Networks appear.
- 5.) Select the **Security** tab and then click **Customize**.

Wireless Networks Properties N	Agentar Security Diagnostic	8	
Preferred Wireless Networks			
💡 hebrain (Connected)			
1	Wireless Network Property	0	6
	Wireless Network		
	Network Name (SSID)	frebran	
	Connect even if Net	work is not. Broadcasting its Name (SSID)	
Wireless Network Key	Wireless Network Key		
Network Name (SSID)	Network Authentication	WPAPSK	
Network Authentication	Data Encryption	ТКР	
Data Encryption	Network Key		•••••
Key index	Confirm Network Key		•••••
IEEE 802.1x Authentication	Key Index	1	14
Cuitorniza Add	Advanced Settings	<u>Ō</u> K	Cancel

Figure 3-80 Security - Customize

- 6.) Customize the following information:
 - Network Name(SSID)
 - Check box " Connect even if Network is not Broadcasting its Name (SSID)"
 - network Authentication (Open, Shared key, WPA PSK or WPA2 PSK)
 - Date Encryption
 - Network Key
 - Key Index
- 7.) After you have filled in all the required information, click OK.

3-13-2-8 Available WLAN Channels

The available WLAN channels show availability of wireless connect point that the system can talk to. Each channel supports a finite number of users and has limited signal strength. This may effect the ability to connect, the throughput and the connection dropping out.

- 1.) Press the "Utilities" key on the control console.
- 2.) On the right side of the screen select Connectivity and then click the Device Setup tab.
- 3.) Click the WLAN Configuration button; see Section Figure 3-76 on page 3-75
- 4.) The Wireless Network Configuration tool with available Wireless Networks appear.
- 5.) Select the Properties tab .

Wreiese Networke Properties	Monitor Security Diagnostics	
Wireless Network Adapter	NETGEAR WG111v3 Wireless-G USB Adapter #2	•
Connection Status	Connected	
Network Name (SSID)	thebrain	
Authentication	WPA P5K	
Encryption	ТЮР	
Signal Quality	86%	
Speed	54.0 Mbps	
Channel	11	
IP Address	192.168.1.3	
MAC Address	00-18-2F-37-0F-F0	
	Evolable Channels	

Figure 3-81 Properties

6.) Click Available Channels.

3-13-2-9 Monitoring the WLAN

If there are wireless network communication issues, you can monitor the wireless connection to see if it is dropping out and recorvering periodically. This can effect throughput.

- 1.) Press the "Utilities" key on the control console.
- 2.) On the right side of the screen select **Connectivity** and then click the **Device Setup** tab.
- 3.) Click the WLAN Configuration button; see Section Figure 3-76 on page 3-75
- 4.) The Wireless Network Configuration tool with available Wireless Networks appear.

5.) Select the *Monitor* tab .

	vorks Prope	ties Monitor	Security Diagnostics		
Time Conn	ected 00:04	:40			
Packeta	Sent 509		Received 13	Lost (1
06-13-2013 06-13-2013 06-13-2013 06-13-2013 06-13-2013 06-13-2013 06-13-2013	7:30:09 AM: 7:30:09 AM: 7:30:09 AM: 7:30:09 AM: 7:30:09 AM: 7:30:09 AM:	Set notification of Set notification a Set notification a Set notification of Set notification of The connection	connection start from ACM, sesociating from MSM, associated from MSM, authenticating from MSM, connected from MSM, to Thebrain' succeeded. IP	address 169.254.208.247.	

Figure 3-82 Monitor

3-13-2-10 WLAN Diagnostic

Running diagnostics is good if you think the adapterr might be bad. Diagnostics also tell you if the connection is behaving properly. Sometimes the system connects by accident to the DVR or another internal device which uses the TCP/IP protocol. The diagnostics would showw if there are errors when performing the full two way communication. For example, if the IP address starts with 197 or 169 (loopback addresses), then something is wrong.

- 1.) Press the "Utilities" key on the control console.
- 2.) On the right side of the screen select *Connectivity* and then click the *Device Setup* tab.
- 3.) Click the WLAN Configuration button; see Section Figure 3-76 on page 3-75
- 4.) The Wireless Network Configuration tool with available Wireless Networks appear.
- 5.) Select the *Diagnostics* tab and then click *Run Diagnostics*.

Actiona .	Diagnostica Resulta		
Fun Decrostics	Parameter Name	Value	-
-	Disprovios Titre	06-20-2013 10:53 09 AM	1
rvepar	Status	Connected	1
	Availability	(0x3) Flunning or Full Power	1
	Caption	(00000029] NETGEAR WG111v3Wireless-G USB Ad.	1
	Config Manager Error Code	[9x0] Device is working properly.	1
	Config Manager User Config	0	1
	Default Gateway IP	[192.168.1.1] PING PASSED	1
	Description	NETGEAR WG111v3 Wireless-G USB Adapter #2	1
	DHCP Enabled	True	1
	OHCP Lease Obtained	06-20-2013 10:42:40 AM	1
	DHCP Lease Expires	06-21-2013 10-42-40 AM	1
	DHCP Server	[192.168.1.1] PING PASSED	1
	DNS Enabled for WINS Resolution	False	1
	DNS Host Name	D2500804	Т
	DNS Server #1	[192.168.1.1] PING PASSED	1
	Domain DNS Registration Enabled	False	

Figure 3-83 Run Diagnostics

3-13-2-11 Repairing the WLAN

Occasionally you may need to repair a WLAN that has lost it's connection to the Voluson[™] P8 / Voluson[™] P6.

- 1.) Press the "Utilities" key on the control console.
- 2.) On the right side of the screen select *Connectivity* and then click the *Device Setup* tab.
- 3.) Click the WLAN Configuration button; see Section Figure 3-76 on page 3-75
- 4.) The Wireless Network Configuration tool with available Wireless Networks appear.
- 5.) Select the *Diagnostics* tab and then Click *Repair*

NOTE: DO NOT cancel the Repair operation after you have selected to repair the Wireless LAN connection.

3-13-3 How to Setup the Cellular Modem

By means of the Cellular Modem, it is possible to connect the Voluson[™] P8 / Voluson[™] P6 to the Internet by using a SIM card.

When to use the Cellular Modem

The Cellular Modem is useful if no Internet connection is available via LAN or WIFI. Connecting the Voluson S6S8/P6P8 Series to the Internet allows the user to send images via e-mail and/or MMS to patients or physicians.

- NOTE: MMS are sent by e-mail to a 3rd party provider (e.g. SMSglobal). This service needs to be ordered by a 3rd party provider.
- NOTE: Please check with a Smartphone located near the Voluson[™] P8 / Voluson[™] P6, if network coverage is available. Used SIM card in the Smartphone should use same provider as SIM card for Cellular Modem.

Hardware Setup: To use the feature the peripheral Cellular Modem needs to be installed and a SIM card from your local service provider needs to be ordered.

SIM card requirements:

- Data capable
- Standard size
- prepaid or post paid
- NOTE: Since the Voluson[™] P8 / Voluson[™] P6 does not enable browser access, the service provider needs to enable the Internet access on the SIM card before installation in the Cellular Modem. Please ensure from the service provider, that there is no browser registration necessary when using the SIM card.

Necessary SIM card information provided by the SIM card provider

APN (Access Point Name)	e.g., a1.net
User Name for APN	e.g., ppp@A1plus.a
Password for APN	***
SIM card Pin	****
Dial in Phone Number	e.g., *99# - if not explicitly stated by the provider, use *99#

Please ensure that the SIM card information is available before setting up the Voluson[™] P8 / Voluson[™] P6.

Modem Configuration

- 1.) Power Off/Shutdown the system as described in Section 3-6-3 on page 3-29.
- 2.) Insert the SIM card into the Cellular Modem.
- 3.) Connect the Cellular Modem as described in Section 3.4.5 on page 3-17.
- 4.) Press the Utilities key on the control console.
- 5.) In the "Utilities" menu touch the Setup button to invoke the setup desktop on the screen.
- 6.) On the right side of the screen select *Connectivity* and then click the *Device Setup* tab.
- Click the *Modem Configuration* button; see Figure 3-76 on page 3-75. The Modem Configuration screen appear.

Modem Configuration		×
APN:		
User name:		
Password:		
SIM Card PIN:		
Dial:		
Search Modem	Cancel	ок

Figure 3-84 Modem Configuration

- 8.) Enter all the required information.
- NOTE: Please keep the Dial information as *99#. Only in seldom cases different Dial information is needed.
 - 9.) Check box "Connect automatically".
 - 10.) Click OK.
 - 11.) Click the signal strength icon in the status bar.

Select Connect for connection to the service provider.

12.)Please wait while busy symbol is on screen.

If the connection is established: Tooltip of the status icon provides signal strength in percentage.

If the connection is not established: Tooltip of the status icon provides an error message.

- 13.)Depending on the region and/or provider it might be possible that you need one time registration of your SIM card, therefore:
 - a.) Open Windows Start Menu All Programs Internet Explorer.
 - b.) Internet connection OK: close all open windows.
 - c.) Internet connection fail: enter registration key or voucher code, then close all open windows.
- 14.) If it is desired to send E-mails, perform configuration as described in Section 3-13-4 on page 3-85.
- 15.) If it is desired to use also MMS, adjust settings as described in Section 3-13-5 on page 3-86.
- 16.) Assign the Modem to a remote key (P1, P2 and/or P3) as described in Section 3-7-8 "Remote Control Selection" on page 3-52 and adjust the Email settings.
- 17.) Individually enter Patient's Email address and Phone number in the PID screen and adjust Email and/or MMS options as described in Section 3-13-6 on page 3-87.

3-13-4 How to Setup E-mail

If Internet access is available via LAN, Wi-Fi or Cellular modem, it is possible to send images/cines via E-Mail to patients or physicians.

Necessary information provided by the E-mail provider (SMTP settings)

To enable E-mail, the SMTP (Simple Mail Transfer Protocol) settings from your provider are needed.

NOTE: The Voluson[™] P8 / Voluson[™] P6 is only supporting E-mail send; no e-mail receive is possible. To receive reply E-mails, the same E-mail account needs to be installed on an Office-PC.

SMTP server name (Outgoing Messages)	e.g., smtp.gmail.com
SMTP authentication (Outgoing Messages)	e.g., SSL
SMTP port (Outgoing Messages)	e.g., 465

NOTE: Maybe the information above needs to be searched in the Internet from your e-mail provider and is the same for all e-mail users.

Email Configuration

- 1.) Press the Utilities H key on the control console.
- 2.) In the "Utilities" menu select the System Setup button to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select Connectivity and then click the Device Setup tab.
- 4.) Click the *Email Configuration* button; see Figure 3-76 on page 3-75.
 - The Email Configuration screen appear.

configuration			
Identity	SMTP Server Settings		
		None	
		Password, tranimitted	insecurely
Default Subject / Messag	Options		
Subject:		ME	
	Keep sert Emails in Ma		
	MMS Options		
Send Test Email			

Figure 3-85 Email Configuration

- 5.) Enter Your name and Email Address in the Identity group. As an option you can enter a different Reply to Address and a Signature Text.
- 6.) To verify E-mail configuration click on Send Test Email. An E-mail is sent to the entered E-mail address followed by a message box where either a success message or an error message is shown.
- 7.) Store your configuration with click on OK.
- 8.) If it is desired to use also MMS, adjust settings as described in Next page.
- 9.) Individually enter Patient's Email address and Phone number in the PID screen and adjust Email and/or MMS options as described in Next page.

3-13-5 How to Setup E-mail to MMS Service

If the Voluson[™] P8 / Voluson[™] P6 is connected to the Internet (via LAN, Wi-Fi or Cellular modem) and E-mail service is configured properly, it is possible to send images as an MMS.

NOTE: MMS are sent by e-mail to a 3rd party provider (e.g. SMSglobal). This service needs to be ordered by a 3rd party provider.

Registration of MMS Service

To use the MMS feature you need to contract with a 3rd party provider which offers E-mail to MMS service (e.g. SMSglobal). Please contact the service provider!

How this feature works

Voluson[™] P8 / Voluson[™] P6 Series sends an E-mail with an attached image to the E-mail to MMS service. The MMS phone number is encapsulated in the recipient E-mail address

MMS Options

- 1.) Press the **Utilities** H key on the control console.
- 2.) In the "Utilities" menu select the System Setup button to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select **Connectivity** and then click the **Device Setup** tab.
- 4.) Click the Email Configuration button; see Figure 3-76 on page 3-75.
- 5.) In the Email Configuration screen check box "Use Email to MMS Service" and then click on **Settings**.



Figure 3-86 check box

The Email to MMS Service Settings window appear.

Email To MMS Service Settings	×
Service	
Domain Name for MMS Email:	
Example: 12345678@	
Phone Number options	
Remove all non-numeric characters	
Remove leading 00	
Options	
Max. Email size: kB	
Image width: 320 - pixels	
	ок

Figure 3-87 Email to MMS Service Settings

- NOTE: The configuration above works with SMSglobal.
 - 6.) Enter the Domain Name from 3rd party E-mail to MMS service. <u>Note:</u> An E-mail to phone number@Domain Name for MMS Email is sent!
 - 7.) Store your configuration with click on OK.

8.) Individually enter Patient's Email address and Phone number in the PID screen and adjust Email and/or MMS options as described in Figure 3-13-6 on page 3-87.

3-13-6 How to enter Patient's Email address and Phone number in the PID screen

- 1.) Enter the "Patient ID" screen by pressing the Patient ID key on the control console.
- 2.) Click the @ icon (1).

The Patient's Email address and Phone number window appear.

Patient ID:	Last Name:			First		м	
5555-13-10-23-1	DOB (mm/dd/y						
				. Y .	****		
	tient's Email address a	nd Phone	number				
Height							2 2
Weight							P (2)
Weight	Phone Number						े (क) ने कि
	Email Options:						10 CC 1
		anonym	zed				
		JPG	-				
Access.#:		High				efault	
Exam Date Exa						OK P	lication

Figure 3-88 Patient ID screen

- 3.) Enter patient's information and adjust Email/MMS Options (2).
- 4.) Store your configuration with click on OK (3).
- NOTE: Since the E-mail to MMS service provider is maybe not located in the same area as your MMS receptions, you need to add the area code (e.g. +49 or 0049 for Germany) to the used phone numbers in the Patient's E-mail address and Phone number dialog.

Example: local phone number 069913800000 is +49 69913800000 or 0049 69913800000 for Germany

3-13-7 Map Network Drive

- 1.) Press the $\overline{\mathbf{F2}}$ key on the control panel.
- 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select **CONNECTIVITY** and then click the **DRIVES** tab.

onnect USB and Network Dri					
	Туре	Label	Sze	Free Connect to	
Intel Raid 1 Volume SCSI D SanDisk Cruzer Blade USB . hp CDDVDW SH-216DB SC	i HDD Stick DVD wr	Data2 SMJ_MEMORY -	1863G 29G	1763G EXT 1 25G EXT 2 - DVD/CD	
Step Device					
Frata (D					

Figure 3-89 System Setup - Connectivity - DRIVES page

4.) Select the <u>MAP NETWORK DRIVE</u> button to open a dialog where the system can be connected to a shared network drive of another server.

Map Network Drive		×
Drive Number:	NW Drive 1	
Network Folder Name:	\\hostname\folder	
Format: \\hostname\folder		
User:	· · · · · · · · · · · · · · · · · · ·	
Password:		
	Automatic Reconnect	
Connect	Disconnect	D

Figure 3-90 Map Network Drive window

- **NOTICE** The MAP NETWORK DRIVE button is also accessible in the "Connect USB and Network Drives" dialog window that appears when pressing the **EJECT** (= F3) key on the alphanumeric keyboard.
 - 5.) Enter the name of the shared network folder in the "Network Folder Name" field.
 - 6.) Supply a valid user name and a password for this folder.
 - NOTE: If you check the "Automatic Reconnect" box, the system tries to establish the connection again when starting up. Otherwise, the connection must be re-established manually after a shutdown or reboot.

- 7.) Select the <u>CONNECT</u> button to establish the connection to the remote machine. If successful, the <u>DISCONNECT</u> button becomes active.
- **NOTICE** If there is an error during the connection, a warning message appears inside the dialog. In this case, please verify the data in the dialog.
- **NOTICE** If there already is a connection to the remote server, the <u>CONNECT</u> button is grayed. To change the existing connection, first click on <u>DISCONNECT</u> and then enter the new settings.

WARNING Please make sure that the server you are connecting to is trustworthy and reliable. For details, contact your local system administrator. If you backup Archive data to this server, all the patients' demographic data will be copied to this server!

NOTICE The *Map network Drive* button is also accessible in the "Connect USB and Network Drives" dialog window that appears when pressing the *Eject* key on the alphanumeric keyboard.

3-13-8 Insite Exc Configuration

Prerequisites for InSite Setup

If not already available, collect the following information from the hospital network administrator:

- 1.) Proxy Server, if necessary
- 2.) Proxy Authentication, if necessary User _____ and Passward

Configuartion Steps

- 1.) Enter the Common Service Desktop (CSD).
- NOTE: There are different possiblilities to access the Common Service Desktop and its available features;see

2.) Select the Configuration page, then double-click InSite Exc Agent Configuration(A).

Error Logs Diagnostics Image Quality	Calibration Configuration Utilities Replacement PM Home
Configuration	Agent Configuration Device Name: KP8VP8000020 CRM No.: KP8VP8000020
	Display Name: Description: Continent: <select continent=""> Country: <select country=""></select></select>
	Addr Line1: Addr Line2: City: State(Prov): Postal Code:
	Latitude: Longitude:
	Distiding: Floor: Koom: Advanced Configuration Enterprise Server: DEVELOPMENT Service Center: OTHERS Log Level: WARN
	Enterprise Server URL: http://ins2d.med.ge.com/9005 Enterprise Tunnel URL: http://ins2d.med.ge.com/9009 File Repository: D:\unSite2Data\etc
	File Watcher: Enable - Dir: D:\InSteUploadFolder Filter: *bd Proxy Configuration Proxy: Disable - D Addr. Port.
	Proxy Authentication: Disable Scheme: NONE Proxy User: Password:
	Submit Changes Reset Form

Figure 3-91 Common Service Desktop - Configuration

- NOTE: This example shows fictional numbers!
 - 3.) Fill out at least all bold stated mandatory fields in the Agent Configuration section(B).
 - The Device Name9Pre-populated) and the CRM field have to be prefix KP.
 - Select Continent and Country from the pull-down menu.
 - Enter City, State, Postal Code and Institution where the system resides.
 - 4.) Check settings in the Advanced Configuration section (C).
 - Enterprise Server PRODUCT
 - Service Center EURO
 - Log Level WARN

Further fields should be pre-populated and should not be modified. However, please ensure correct setting.

- Enterprise Server URL pre-populated URL.
- Enterprise Tunnel URL -pre-populated URL.
- File Repository This path is set by engineering and must not be changed!
- Dir-D:\InsiteUploadFolder
- Filter-ensure that this field has the entry "*.txt"s
- File Watcher: Should always be Enabled!

- 5.) Enter Proxy Configuration(D).
 - a.) If the customer site does not require a Proxy server, select Disable from the Proxy pull-down menu and continue with step 7.
 - b.) If a Proxy server is available, select Enable from the proxy pull-down menu, enter a valid Proxy IP Address and Port number.
- NOTE: The information MUST properly entered, otherwise remote control does not work. There is no possibility to detect proxy server information automatically.
 - 6.) Click the Submit Changes button(E) and then close the page.
 - 7.) Reboot.
 - 8.) Reenter the Common Service Desktop(CSD).
 - 9.) Confirm that Service Connectivity is "Configured" and "Checked Out" in the Home page. If the system indicated "Checked Out" you can be confident that the system has registered correctly. if required, verify further connectivity(e.g., remote connectivity using your account).
 - 10.)Close the page and check/create InSite permanent user setting; see

3-13-8-1 How to create an InSite Permanent User

An InSite permanent user is required for automatic system error reporting to the digital service network.

1.

Moving the cursor to the InSite ExC link(GE icon) at the right bottom of the display screen and press the left trackball key(=left-click). The "Contact GE" form is displayed.



2. Ensure that Connection is "Checked Out"(1)

- Figure 3-92
- 3. Select Users on the top menu(2).

4. In the next screen click Add user(3).

w.ed	N:					À + B + ⊐ ⊕ + bije+ 3e	dety - TentClose
Contac	CE Our	ue Machino Queu	a Doors				
		1.11		Permanent Users		40/2010 UI	
	12.1	Laut	Hot	Phone	Est	Email	
	Add User		Ren	ve Selected Users	Set Default Ma	chine Contact	
	-			Recent Users			
		Lut	Hot	Phone	Ext	Enall	
	Make Kel	Loss	Fine	Poors Poors	Ext.	Enil	

Figure 3-93 Add User

5. Fill in the required information and confirm with Add User(4).

	Ξ		Usure	Machine Genue	Queso	entact (
		Permanent Users				1
Leal	tat.	Phone	Fint	Last		
 achine Contact	Set Default Na	lected Users	Remove		dd User	
			*Last. TE			
		ON	* First. PE			
		23456789	*Phone: 00			
			Ext:			
			E-mail			
		Add User 🔫				
		Recent Users				i
10 M 10 M	14.4		First	14 14 14		

Figure 3-94 Confirm with Add User

6. Check mark the appropriate user and then click Set Default Machine Contact(5).

au)ettes							B . B	* Page * Safety + To	wik =
Contact C	E Queun	Machine Geove	Users						
1					Permanent Users		A CONTRACT		
	1	Last	0.011-0.014	First	Phose	Ext.	Enall	-	
	(K) test		PERSON		0943123456189				
1	Add User			Remove S	elected Users	Set Default I	lachine Contact		
1					Recent Users				
1		Last	First.		Phone	EM.	E-isel		
	Make Select	ed Users Permane	nt		Remove Selects	dUsers			
					ĮĻ				
Conduct GF	Serves Bounie				Ŷ				
Contact GE Freedor	Serves Branie				Ŷ		§.8	• Dept + Jakes + Ty	ita e
Contact GE Ferenita Contact G	Server Bouile	Bachtre Contor	Umrs		Ŷ		5 · 5 · 9 · 9	* Babe+ Salada + Tg	jeb -
Conduct GE Freenitza Comiser G	E Quesse	Bachtre Goster	Dan		PermanentUsers		9+9-0#	• Dage+ Safety + Tg	jeb •
induct GE Friendes Sentace G	E Queun	Nachtre Gesor Last	Umr	First	PermanentUsers	Čat,	Q+Q+⊂ #	• Base+ Salesy + Ta	job -
Sentert GE Frechtze Sentert G	E Queun	Hackins Gause Last	Uwn	First	Permanent Users Plane BSJ172315470	ba.	Q + Q + Q ⊕ Emell	* Boor * 3440 * 15	job +
Conduct GF Freenites Consider G	Server Douise E Quesso E ICST Add User	Backins Gause Last	PERSON	Fitaer Remove S	Permanent Users Phase BED Q355100	Ent. Set Default II	R + D + D + E mail Iachine Contact	• Boye • Safes • To	yeb =
Contact GF Freenitos Contact G	Server Dowie E Quester IC ICST Add User	Hankins Game	PERSON	First Remove \$	Permanent Users Phase BSC122354700 elected Users Recent Users	Ret. Set Default N	ि • छि • ा क E mail Lachine Conset	• Boye + 3440 + 15	els *

Figure 3-95 Set User as Default

Color of the selected user turns from BLACK to RED(6). The permanent user is created.

7. Close the window.

Section 3-14 Connectivity Setup Worksheet

Site System Information		0
Site:	Floor:	Comments:
Dept:	Room:	
Voluson™ P8 / Voluson™ P6 Type:	REV:	
CONTACT INFORMATION Name Title	Phone	E-Mail Address
TCP/IP Settings	Remote Arch	ive Setup
System IP Settings Name - AE Title: IP Address: Subnet Mask: Default Gateway:	Name - AE T IP Addu Subnet Ma Default Gate Server Na Remote DB User Na	Fitle:
Services (Destination Devices)		
Device Type Manufacturer	Name IP Address	Port AE Title
1		

Section 3-14 Connectivity Setup Worksheet (cont?)

Voluson™	^M P8 /					
Voluson™ Host Nar	[™] P6	Loca	l Port	IP Address].[].[]
AE Title				Not Mook		
				NEL WIDSK	·	
ROUTING		Destinatior	1		GATEWAY IP	Addresses
		IP Address	es	Default		
	ROUTER1	· · · · ·			·	
	ROUTER2 ROUTER3	` ` -			·	
DICOMA] . []			
		MAKE/REVISION	AE TITLE	IP AD	DRESSES	PORT
Store 1					·	
Store 2					·	
Store 3D_1						
Store 3D_2					·	
Print					·	
Worklist					··	
		JL				
Structured						
Reporting						
Storage						
Commu						
MPPS						



Section 3-15 Paperwork

NOTE: During and after installation, the documentation (i.e. User Manual, Installation Manual,...) for the peripheral units must be kept as part of the original system documentation. This will ensure that all relevant safety and user information is available during the operation and service of the complete system.

3-15-1 Product Locator Installation

NOTE: The Product Locator Installation Card shown may not be same as the provided Product Locator card.

GE Medic Mailing Product Lo Address P.O. Box 4 Milwaukee	al Sy ocato 414 9, WI	stem or File 5320	s 9 01-0414					
DESCRIPTION	FDA	MODE	L			REV	SERIAL	
PREPARE FOR ORDERS THAT DO NOT			OCP	BS	ORD			DATE (MO-DA-YR)
HAVE A LOCATOR INSTALLATION REPORT			DISTCOUNTRY	ROOM	-			EMPLOYEE NO.
SYSTEM ID NUMBER			CUSTOMER NO.					
INSTALLATION			DESTINATION - N.	AME AND AE	DRESS			
£								
NSTA 2								ZIR CODE

Figure 3-97 Product Locator Installation Card

3-15-2 User Manual(s)

Check that the correct User Manual(s) for the system and software revision, is included with the installation. Specific language versions of the User Manual may also be available. Check with your GE Sales Representative for availability.

This page was intentionally left blank.

Chapter 4 Functional Checks

Section 4-1 Overview

4-1-1 Purpose of Chapter 4

This chapter provides procedures for quickly checking major functions of the Voluson[™] P8 / Voluson[™] P6 System diagnostics by using the built-in service software, and power supply adjustments.

Section	Description	Page Number
4-1	Overview	4-1
4-2	Required Equipment	4-1
4-3	General Procedure	4-2
4-4	Functional Checks	4-8
4-5	Backup and Restore Database, Preset Configurations and Images	4-11
4-6	Software Configuration Checks	4-24
4-7	Peripheral Checks	4-26
4-8	Mode Transition	4-42
4-9	Site Log	4-43

Table 4-1 Contents in Chapter 4

NOTICE Most of the information pertaining to this Functional Checks chapter is found in the Voluson[™] P8 / Voluson[™] P6 Basic User Manual; see: Table 9-10 on page 9-18.

Section 4-2 Required Equipment

- An empty (blank) DVD/CD+R/RW and/or external USB device (stick or hard disk drive).
- At least one transducer. See *Chapter 9 Probes, on page 9-19* for an overview. (normally you should check all the transducers used on the system)

Section 4-3 General Procedure

▲ CAUTION SYSTEM REQUIRES ALL COVERS Operate this unit only when all board covers and frame panels are securely in place. The covers are required for safe operation, good system performance and cooling purposes. ▲ NOTICE Lockout/Tagout Requirements (For USA only) Follow OSHA Lockout/Tagout requirements by ensuring you are in total control of the Power Cable on the system.



4-3-1 Power On / Boot Up

NOTICE After turning off a system, wait at least 10 seconds before turning it on again. The system may not be able to boot if power is recycled too quickly.

4-3-1-1 System Power On

- 1.) Connect the Main Power Cable to the back of the system.
- 2.) If not already done, screw on the pull-out protection of the mains power cable with the 2 screws.
- 3.) Connect the Main Power Cable to a hospital grade power outlet with the proper rated voltage. Never use an adapter that would defeat the safety ground.
- 4.) Switch ON the Circuit Breaker at the rear of the system.



Figure 4-1 Circuit breaker at rear of system

NOTICE When AC power is applied to the System, the **ON/OFF** button on the control panel illuminates amber, indicating that the System (including the Back-end Processor) is in *Standby* mode.

4-3-1-1 System Power On (cont?)

- 5.) Hold down the **On/Off** button (see: Figure 4-2) on the control panel for ~3 seconds.
- NOTE: The power for on-board peripheral auxiliary equipments are commonly switched with the **ON/OFF** button. The power switch of any attached printer(s) needs to be in ON position before starting the system. However, be aware some auxiliary equipment may switch itself to standby mode (e.g., Color video printer) and must therefore be switched on separately.



On/Off Button

Figure 4-2 On/Off Button on Control Panel

As soon as the software has been loaded, the system enters 2D-Mode with the probe and application that were used before the system was shut down. Total time used for start-up is about 2 minutes.

NOTE: The power for on-board peripheral auxiliary equipments are commonly switched with the **ON/OFF** button. So the auxiliary equipment need not to be switched ON/OFF separately.

4-3-2 Power Off / Shutdown

NOTICE After turning off a system, wait at least 10 seconds before turning it on again. The system may not be able to boot if power is recycled too quickly.

4-3-2-1 System Shutdown

- 1.) If not already in read mode, freeze the image.
- 2.) Press the **ON/OFF** button (see: Figure 4-2) on the control panel. Following dialog appears.



Figure 4-3 Shutdown, Restart or Cancel

- 3.) Select the <u>SHUTDOWN</u> button. The system performs an automatic full shutdown sequence.
- NOTE: Full shut down is also performed when pressing the ON/OFF button on the control panel twice.
 - 4.) Switch OFF the Circuit Breaker at the rear of the system.
- NOTE: The mains outlet of the system for peripheral auxiliary equipment are commonly switched with the **ON/OFF** button. So the auxiliary equipment need not to be switched ON/OFF separately.
- WARNING Disconnection of the Main Power Cable is necessary! For Example: When repairing the system.

5.) After complete power down, unscrew the 2 screws and remove the pull-out protection to disconnect the main power cable from the system or unplug it from the AC wall outlet socket.



Figure 4-4 Circuit Breaker, pull-out protection and main power cable at rear of system

- 6.) Press on the brakes to block the front caster wheels.
- 7.) Disconnect probes.

CAUTION DO NOT disconnect a probe while running (Live Scan "Write" mode)! A software error may occur. In this case switch the unit OFF (perform a reset).

4-3-3 System Features

4-3-3-1 Control Panel



Figure 4-5 Control Panel Tour

- 1. Loudspeaker position
- 2. Menu window digipot controls
- 3. TGC Slider controls
- 4. Trackball
- 5. Alphanumeric Keyboard
- 6. Probeholders

- 7. Menu window flipswitch controls
- 8. Mode keys(digipot controls)
- 9. Toggle switch controls
- 10. Hard keys
- 11. Trackbal buttons

4-3-3-2 Monitor Display



Figure 4-6 Monitor Display Tour

Table 4-2	Monitor Display Features
-----------	--------------------------

1.	Logo	15. Measurement results
2.	Patient Name (Last-, First-, Middle Name)	16. Status bar area
3.	Patient ID-number ; GA (Gestational Age)	17. P buttons
4.	Probe / Application	18. Run/Freeze/Cine
5.	Depth / Frame rate	19. Trackball
6.	Mechanical Index	20
7.	Thermal Index	21
8.	Sonographer's Name	22. Rotary button and Paddle Key
9.	Hospital Name (Identification)	23. On Screen Menu
10.	Date	24. Bodymarks
11.	Time	25. Depth scale markers
12.	Image Info	26. Gray scale wedge
13.	TGC curve	27. Focal zones marker
14.	Image area	28. Orientation marker

Section 4-4 Functional Checks

For a basic functional check of the system's different modes, refer to the Voluson[™] P8 / Voluson[™] P6 Basic User Manual.

- NOTE: Some software may be considered standard depending upon system configuration. If any Modes or Options are not part of the system configuration, the check can be omitted.
- NOTE: Different menus are displayed depending on which Mode is selected. Some function keys only appear if they are available for the selected probe.

4-4-1 Patient Archive (Image Management)

The Voluson[™] P8 / Voluson[™] P6 provides an Patient/Image Management System that allows fast and extremely easy patient, exam and image management.

	Detionts & Evens	Evens On	lo.		•	MAND	OR		
	e Patients & Exams	Exams On					10/23/2015		Show All
tie	Patient ID	Patient	Name	Birthdate	E	Sex	Last Exam	Capacity:	2794.39 GB
				2002010-007-007-007-007-007-007-007-007-007-				Used:	237.31 GB
								Free:	2557.09 GB
								Nr. of Patients:	0/0
								Selected Patients:	
								Selected Exams:	
								Selected Images:	
								l.	0.00 MB
ar	ns							Exam Lo	ock:
	Exam Date	Exam Time	Exam Type	М	Img	Exam Com	nment	Application	

Figure 4-7 Patient Archive - ARCHIVE

Current Patient:

The entered patient data will be used in calculations, patient worksheets, DICOM settings and is displayed on the screen to identify images.

• Archive:

The patient archive database is used for searching a particular exam and/or patient. Via the <u>DATA TRANSFER</u> button, it is possible to send images over the DICOM network, print exams/images, export exams/images, import exams/images, etc.

• Image History:

Image History gives you access to all the US pictures and exams of a particular patient.

Exam Review:

Exam Review allows you to view all exams of a particular patient. Additionally it is possible to view image properties, input comments and voice annotations, etc.

- NOTE: For detailed description of image management functionality and its topics refer to Chapter 12 in the Basic User Manual of Voluson[™] P8 / Voluson[™] P6.
- NOTE: Images can be backed up and restored by means of the **Image Archive** function in the System Setup. Operation see: Section 4-5-6 "Archiving Images" on page 4-21.

4-4-2 Erasing DVD/CD

- 1.) Press the $\overline{\mathbf{F2}}$ key on the control panel.
- 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select **CONNECTIVITY** and then click the **DRIVES** tab.

Peripherals	Device Set	tup	Button Configurat	ion	Drives	
onnect USB and	d Network Drive					
Device		Туре	Label	Size	Free Connect to	
Intel Raid 1 Vo SanDisk Cruze hp CDDVDW	olume SCSI Di er Blade USB SH-216DB SC	HDD Stick DVD wr	Data2 SMJ_MEMORY -	1863G 29G -	1763G EXT 1 25G EXT 2 - DVD/CD	
Stop De			Rescan Drive			
Eject CD,		Мар	o Network Drive			
	CD					

Figure 4-8 System Setup - Connectivity - DRIVES page

- 4.) Click the ERASE CD button to displays the "Erase DVD/CD" window as shown in Figure 4-9.
- 5.) Select the "Erase Mode" and click the [OK] button to start the process.

NOTICE It is highly recommended to use the complete erase mode, to avoid problems with the CD+(R)W! When using a DVD+R/RW, just the fast erase mode is possible.

Erase DVD/CD		×
۲	All data on DVD/CD will be Erase the disc?	erased.
Er	ase Mode: 🔿 complete	 fast
	► ок	Cancel
Figure	4-9 Erase DVD/	CD Window

6.) When erasing is finished, select EXIT to return to the Scan Mode.

Section 4-5 Backup and Restore Database, Preset Configurations and Images

CAUTION It is recommended to Backup the Full System Configuration (Section 4-5-3 on page 4-16) and the Image Archive (Section 4-5-6 on page 4-21) once a week.

- 1.) Press the <u>F2</u> key on the control panel.
- 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select BACKUP and then click the SYSTEM CONFIGURATION tab.

	System Configuration Insige Archive Export/Import DB				
	Small Backup (Scan Settings) Full System Configuration				
	Save Load Save Load Delete				
Image Settings only					
Full System					
Configuration —					

Figure 4-10 System Setup - Backup - SYSTEM CONFIGURATION page

The **SYSTEM CONFIGURATION** page is subdivided in 2 main groups:

A.) Image Settings Only

- Section 4-5-1 "Save Small Backup (Scan Settings)" on page 4-12
- Section 4-5-2 "Load Small Backup (Scan Settings)" on page 4-13

B.) Full System Configuration

- Section 4-5-3 "Save Full System Configuration (Full Backup)" on page 4-16
- Section 4-5-4 "Load Full System Configuration (Full Backup)" on page 4-18
- Section 4-5-5 "Delete Full System Configuration (Full Backup)" on page 4-20

The Image Settings and/or Full System Configuration can be saved to the following destinations:

- D: partition of internal hard disk
- DVD/CD+R/RW
- Mapped Network Drive, see: Section 3-13-2 "Wireless Network Configuration" on page 3-76
- Any other drive connected to the system (e.g.; USB-Stick or external hard disk drive) <u>Note:</u> This function is only available in the Full Backup utility. For further details review: Section 3-5-9 on page 3-23

4-5-1 Save Small Backup (Scan Settings)

The Image Settings contains:

- Application Settings
- 2D Factory and 2D User Presets
- 3D/4D Factory and 3D/4D User Presets
- Annotation Presets
- Scan Assistant Configuration
- Measure Configuration
- Biopsy Lines
- 1.) Insert a DVD/CD+R/RW into the drive or connect an external USB device.
- 2.) Press the **F2** key on the control panel.
- 3.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
- 4.) On the left side of the screen select BACKUP and then click the SYSTEM CONFIGURATION tab.
- 5.) Click the SAVE button of the "Small Backup(Scan Settings)" group.

Small Backup Save		×
Choose media:		
Internal HDD		
DVD/CD		
Network		
External USB Drives	EXT 1 (E:) Intel Raid 1 Volume SCSI Disk Device	•
◎ R:\Factory		
d:\UserSettings\		
		Change folder
	Cancel	Save

Figure 4-11 Image Settings Only - Save window

- 6.) Choose the media and click the \overline{SAVE} button.
- 7.) Select the NEW FILE... key and enter a file name (without extension).
- 8.) Click the \overline{OK} key to start the process. When the saving has been completed, click \overline{OK} .

4-5-2 Load Small Backup (Scan Settings)

CAUTION The loading procedure overwrites the existing image settings on the local hard drive. Make sure to insert the correct System DVD. Additionally you can load the image settings from D:\usersettings\FactoryDefault\Tetris

4-5-2-1 Preparations

- 1.) Insert a DVD/CD+R/RW into the drive or connect an external USB device.
- 2.) Press the **F2** key on the control panel.
- 3.) Select <u>SYSTEM SETUP</u> button to invoke the setup desktop.
- 4.) On the left side of the screen select BACKUP and then click the SYSTEM CONFIGURATION tab.
- 5.) Click the LOAD button of the "Small Backup (Scan Settings)" group.

Small Backup Load		×
Choose media:		
Internal HDD		
OVD/CD		
() Network		Ð
External USB Drives	EXT 1 (E:) Intel Raid 1 Volume SCSI Disk Device	
© R:\Factory		B
d:\UserSettings\		
	Change fold	er
	Cancel Load	

Figure 4-12 Image Settings Only - Load window

6.) Choose the media and click LOAD.

NOTE: If it is desired to load image settings from media **Internal HDD**, click on the <u>CHANGE FOLDER</u> button, browse for the folder "D:\usersettings\FactoryDefault\Tetris" and then click the <u>LOAD</u> button.

- 7.) Select the appropriate file and click \overline{OK} .
- 8.) Select the desired loading procedure:
 - Load "Complete Backup" on page 4-14
 - Load only parts of the "Complete Backup" on page 4-15

4-5-2-2 Load "Complete Backup"

- NOTE: Following procedure should be used, if the user prefers factory default settings, which are adapted for the installed Application Software version.
 - 1.) Perform Section 4-5-2-1 "Preparations" on page 4-13.
 - Select the "Complete Backup" (marked blue; see: Figure 4-13 below) and click the >> button to copy the Complete Backup into the Load Data field.

Small Backup (Scan Settings)	Full System Configuration		
Backup created with SW version: /oluson E10 15.0.1.1826 (Sep 08 2014, 15:29:01)	Current SW versio Voluson S8 17.0.0	on: .0 MAIN (Oct 23 2015, 1	
 Complete Backup Application Settings 2D Factory Presets 2D User Presets 3D/4D Factory Presets 3D/4D User Presets Annotation Presets Scan Assistant Configuration Biopsy Lines 			

Figure 4-13 Load Backup Data

3.) Click the <u>LOAD</u> button to start the loading procedure of the complete backup into the system. The US Application Software restarts.

4-5-2-3 Load only parts of the "Complete Backup"

- NOTE: Following procedure should be used, if the user has saved own 2D/3D/4D Programs or AutoText entries, but new presets have to be added to match the installed Application Software version (e.g., 2D/ 3D/4D Programs for new probe, etc.).
 - 1.) Perform Preparations on page 4-13.
 - 2.) Click the $\frac{1}{4}$ sign (next to "Complete Backup") to open the content tree.



Figure 4-14 Load image settings for probe (e.g., RAB4-8-D)

- 3.) For example: Click the \pm sign and copy the desired content by clicking the >> button; and so on
- NOTE: To return selected items from the "Load Data" field to "Backup Data" field select the $\frac{1}{\sqrt{2}}$ button.
 - 4.) Confirm selection with the LOAD button.

Settings will be loaded and the US Application Software restarts.

4-5-3 Save Full System Configuration (Full Backup)

A backup of the Full System Configuration always contains the following data

- User Settings (databases and files containing User Programs, 2D/3D/4D Programs, Auto Text entries, gray curves and complete System settings such as language, time/date format, etc.)
- System Settings (general "Setup" settings such as Language, Time/Date format, Button configuration, Annotation settings, Biopsy lines, Peripheral data, Video Norm, Archive configuration, etc.)
- Measure Configuration (user specific measure setup settings)
- Patient Archive (database containing patient demographic data and measurements) no images
- Options (Permanent Key that is specific for enabled software options and Demo Key)
- Image Transfer Configuration (DICOM settings e.g., DICOM servers, AE Title, Station Name, etc.)
- Network Configuration (network settings including the computer name)
- Service Platform (state of the Service Software)

NOTE: It is recommended to "Full Backup" system configuration data before upgrading the software and/or image settings (presets). This ensures that if settings need to be reloaded, will be the same ones the customer was using prior to service.

- 1.) Press the **F2** key on the control panel.
- 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select BACKUP and then click the SYSTEM CONFIGURATION tab.
- 4.) Click the <u>SAVE</u> button of the "Full System Configuration" group.

System Configuration Save		
Destination C Internal HDD		
DVD/CD Network External USB Drive	EXT 1 (E:) Memorex TD Classic 003C USB Device	
Enter Description:		— enter description
Image data will not be b	acked up.	
Needed Space: 8 MB	Cancel Next	click [Next] button

Figure 4-15 System Configuration Save

- 5.) Choose the Destination.
- 6.) Enter the description of the full backup.

CAUTION Image data will not be backed up! To backup the Image Archive, refer to Section 4-5-6 on page 4-21.

- 7.) Select the $\overline{\text{NEXT}}$ button.
- 8.) To start the backup process click <u>YES</u>.
- After copying the data, the Voluson[™] P8 / Voluson[™] P6 reboots and the application starts again.
- Section 4-5 Backup and Restore Database, Preset Configurations and Images
4-5-3 Save Full System Configuration (Full Backup) (cont?)

When the "Full Backup" is saved on a network drive (to map a network drive see: Section 3-13-2 "Wireless Network Configuration" on page 3-76), it may be desirable to move the data (e.g., for backup or maintenance).

The backups reside in sub folders of the main "*fullbackup*" -folder found at the root of the drive. <u>For Example:</u> Backups on the mapped **Network Drive** are below path **Z:\fullbackup**.

The directory structure of the full backup data is as follows:

Address 룾 Z:\fullbackup	
Folders	×
🖃 🖳 My Computer	
🖃 쿶 Test (Z:)	
🖃 🔂 fullbackup	
🖻 🧰 fb1	
🕀 🧰 Data	
🗄 🔂 Files	
📄 🔂 📋 fb2	
🗄 🛄 Data	
🗄 🛄 Files	

The sub folders have the names fbX where X is a number (e.g., Z:\fullbackup\fb1).

The data resides within a directory structure within these sub folders. It is possible to move the fbX sub folders, even leaving gaps in the numeration sequence.

However, **NO** change **MUST** be made to the contents of the *fbX* folders itself, otherwise the backup data cannot be restored!

Figure 4-16 directory structure of full backup data



If the destination "Other drive" is selected, the available drives (e.g., external USB-memory stick) can be chosen from the drop down menu.

Figure 4-17 "Other drive" drop down menu

NOTICE When the backup is saved to an external USB-device, the system has to be informed about the removal of the hardware. For this purpose every last dialog of "Full Backup Save" and "Full Backup Delete" has a <u>STOP USB DEVICES</u> button (see: Figure 4-18).

Full Backi	up Save -		
Backup successfully completed. Machine will be rebooted!			
Pleas	se stop USB Devices before unplu	ıgging !	
Stop	USB Devices	Ск	

Figure 4-18 Please stop USB Devices before unplugging!

For further details review: Section 3-5-9 on page 3-23.

4-5-4 Load Full System Configuration (Full Backup)

WARNING It is recommended to backup data before an upgrade; see: Section 4-5-3 on page 4-16. The "Full Backup" loading procedure replaces (overwrites) ALL the existing data (except Application Settings which are adapted for the used System software version) on the local hard drive of the Voluson™ P8 / Voluson™ P6 system!

NOTICE It is **neither required nor advisable to reload a previously stored "Full Backup**" after a software upgrade that was performed by means of the <u>FMI FROM DVD</u> button!

CAUTION There are circumstances where it is not possible to load (restore) all the data. The following rules specify these restrictions:

- Generally, only restoring data from an older to a newer software version is possible. Loading a backup into a system that has a lower software version than the system the backup was created on is prohibited.
- 2.) Options can **only** be restored on the same Voluson[™] P8 / Voluson[™] P6 system within the same major software version.
- 3.) When loading a backup into a system with a software version that has a higher major number, the following items will not be restored:
 - A.) Options
 - B.) State of the Service Platform
- 4.) The **user** is **only** allowed to restore data to a different system if and only if the software version on this system is the same as in the backup.
- 5.) The **user** is **not** allowed to restore the following items to a different system:
 - A.) Windows Network Settings
 - B.) Options
 - C.) DICOM AE Title
 - D.) DICOM Station Name
 - E.) State of the Service Platform

4-5-4 Load Full System Configuration (Full Backup) (cont?)

- 1.) Press the $\overline{\mathbf{F2}}$ key on the control panel.
- 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select BACKUP and then click the SYSTEM CONFIGURATION tab.
- 4.) Click the LOAD button of the "Full System Configuration" group.

System Configuration Load				×	
Destination Thernal HDD DVD/CD Network				r E	-Choose Destination
External USB Drive			1		
Description SPC310 Fullbackup	SerialNo A09999	Date 2016/01/27	Time 09:23		Select Backup
	i I	Cancel	Next	5	Click [Next]

Figure 4-19 System Configuration Load

- 5.) Choose the Destination.
- 6.) Click on the backup to be restored (additional information is displayed in the table).
- 7.) Select the NEXT button. The following window will be displayed.



Figure 4-20 Select Data to be restored

8.) Select the data to be restored to the Voluson[™] P8 / Voluson[™] P6 system.

NOTE: For description of the check box names refer to: Save Full System Configuration (Full Backup) on page 4-16.

4-5-4 Load Full System Configuration (Full Backup) (cont?)

9.) Click the $\overline{\text{NEXT}}$ button and then select $\overline{\text{YES}}$ to start, or $\overline{\text{NO}}$ to cancel the restore procedure.



Figure 4-21 Start Restore Backup now?

After restoring the data, the Voluson[™] P8 / Voluson[™] P6 reboots and the application starts again.

10.) Confirm that the date and time are set correctly

4-5-5 Delete Full System Configuration (Full Backup)

- 1.) Press the **F2** key on the control panel.
- 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select BACKUP and then click the SYSTEM CONFIGURATION tab.
- 4.) Click the DELETE button of the "Full System Configuration" group.

System Configuration Delet	e		×	
Destination Internal HDD 		_		Choose Destination
() 0V0/CD				
External USB Drive				
Description SPC310 Fullbackup	SerialN A09999	o Date 2016/01/27	Time 09:23	- Select Backup
		Cancel	Delete	Click [Delete]

Figure 4-22 System Configuration Delete

- 5.) Choose the Destination.
- 6.) Click on the backup to be deleted (additional information is displayed in the table).
- 7.) Select the DELETE button.



4-5-6 Archiving Images

CAUTION It is recommended to Save Image Archive (Section 4-5-6-1 on page 4-21) and Backup the Full System Configuration (Section 4-5-3 on page 4-16) once a week.

4-5-6-1 Save Image Archive

- NOTE: A backup of the Image Archive always contains the Patient Archive (database containing patient demographic data and measurements) **+ images** of the selected exams.
 - 1.) Press the $\overline{F2}$ key on the control panel.
 - 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
 - 3.) On the left side of the screen select BACKUP and then click the **IMAGE ARCHIVE** tab.



Figure 4-23 System Setup - Backup - IMAGE ARCHIVE page

4.) Click the \overline{SAVE} button.



gure 4-24 image Archive Save - preparation

4-5-6-1 Save Image Archive (cont?)

- 5.) Choose archiving span time from the pop-up menu.
- **NOTICE** If for example "All images older than" **1 Day** is chosen (see Figure 4-24 on page 4-21), images of the current day will not be archived! However, if you click the [Advanced] button you can put this right.
 - 6.) If desired, check mark "Remove Local Images after Backup".
 - 7.) Click the ADVANCED button if it is desired to adapt archive data.
 - 8.) Select the NEXT button.

Backup Location Drive		
DVD/CD		
		choose destination
@ Network		
Entern USB Drives		
Backup Description		
		enter backup
DVD/CD		description
Backup data size		
Disc capacity		
New discs needed		
		click [Next] button
	\checkmark	
	< Back Next > Cancel	

Figure 4-25 Image Archive Save - choose destination

- 9.) Choose the Destination.
- 10.) Enter the description of the image backup.

CAUTION Voluson™ P8 / Voluson™ P6 presets, configurations and image settings will not be backed up! To Backup the Full System Configuration refer to Section 4-5-3 on page 4-16.

- 11.) Select the $\overline{\text{NEXT}}$ button.
- 12.)To start the backup process click $\overline{\text{YES}}$.

4-5-6-2 Load Image Archive

- 1.) Press the $\overline{\mathbf{F2}}$ key on the control panel.
- 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select BACKUP and then click the **IMAGE ARCHIVE** tab.
- 4.) Click the LOAD button (see: Figure 4-23 on page 4-21).

nactup tocation					
DVD/CD					
)isk Cruzer Blade U		
Backup File					
Description		Secul #	Date	Time .	
	< gack				

Figure 4-26 Image Archive Load - choose destination

- 5.) Choose the Destination.
- 6.) Click on the backup to be restored (additional information is displayed in the table).
- 7.) Select the NEXT button. The following window will be displayed.

Enimen					
B 040/C0					
		EXT 1 (E:) SanD	lisk Cruzer Blade U	SB Device	
Backup File					
Description		Serial #	Date	Time	

Figure 4-27 select image archive data to be restored

- Select (check mark) the image archive data to be restored to the Voluson[™] P8 / Voluson[™] P6 system.
- 9.) Click the $\overline{\text{NEXT}}$ button and then select $\overline{\text{YES}}$ to start, or $\overline{\text{NO}}$ to cancel the restore procedure.

Section 4-6 Software Configuration Checks

4-6-1 System Setup

Press the $\overline{F2}$ key on the control panel and then select $\overline{SYSTEM SETUP}$. On the left side of the screen select the desired major group. Each major group contains different pages to check:

Table 4-3 System Setup Checks - GENERAL SETTINGS

Step	Page + Task	Expected Result(s)
1	General: Check Date and Time setting	Date and Time are correct
2	General: Check that Location (Clinic Name) is correct	Location Name is correct
3	General: Check Language settings	desired Language is displayed
4	General: Check EUM Language settings	desired EUM Language is displayed
5	User Setting: Check all the User Settings	settings assigned as desired by the customer
6	Patient Info Display: Check all settings	settings assigned as desired by the customer
7	Scan Assistant: Check settings	settings assigned as desired by the customer

Table 4-4 System Setup Checks - ADMINISTRATION

Step	Page + Task	Expected Result(s)
1	Options: Check that all options are set up correct	D = Demo , I = Inactive , P = Permanent

Table 4-5 System Setup Checks - CONNECTIVITY

Step	Page + Task	Expected Result(s)
1	Peripherals: Check assignment of Report Printer	printer assigned as desired by the customer
2	Peripherals: Check assignment of Foot Switch	Footswitch left/right are assigned as desired by the customer
3	Device Setup: Check DICOM, Network and Archive configuration	setting assigned as desired and required by the customer
4	Button Configuration: Check assignment of remote keys P1 , P2 , P3 .	Remote keys are assigned as desired by the customer
5	Button Configuration: Check assignment of <u>START EXAM</u> and <u>END EXAM</u>	buttons are assigned as desired by the customer

Backup

not applicable

Imaging Presets

Assign all (further) settings as desired and required by the customer.

 Biopsy Setup not applicable

Measure Setup

Assing all (further) settings as desired and requred by the customer.

4-6-2 Measure Setup

Press the $\overline{F2}$ key on the control panel and then select $\overline{MEASURE SETUP}$. The Measure Setup desktop offers three different pages to check.

NOTICE Parameters and possible adjustments depend on the selected Application.

To view, add, delete, reorder, edit or when creating a new parameter (in the **MEASURE & CALC** page), it is very important that all items are chosen correctly and that the relevant item is highlighted. For further information refer to Chapter 18 in the Basic User Manual of Voluson[™] P8 / Voluson[™] P6.

Table 4-6 Measurement Setup Checks

Step	Task	Expected Result(s)
1	Measure & Calc: Check all settings for all applications	setting assigned as desired by the customer
2	Application Parameters: Check all settings for all applications	setting assigned as desired by the customer
3	Global Parameters: Check all settings	setting assigned as desired by the customer

Section 4-7 Peripheral Checks

Check that peripherals work as described below:

Table 4-7Peripheral Checks

Step	Task to do	Expected Result(s)
1	Press the FREEZE key.	Stop image acquisition.
2	Press the remote key (<u>P1</u> , <u>P2</u> , <u>P3</u>) which is assigned to the BW printer.	The image displayed on the screen is printed on the Black & White printer.
3	Press the remote key ($\overline{P1}$, $\overline{P2}$, $\overline{P3}$) which is assigned to the color printer.	The image displayed on the screen is printed on the Color printer.
4	Press the remote key (<u>P1</u> , <u>P2</u> , <u>P3</u>) which is assigned to recorder control.	Recording starts/stops.

4-7-1 ECG Check Out

Connect the USB ECG and check :

Step	Task	Expected Result(s)
1	Press the F2 key on the control panel and then press the "ECG Line" button to display the ECG signal.	It will display a curve along the bottom edge of the image sector.

4-7-2 Control Console Positioning

The control console can be adjusted to a fixed height (910 mm) with an Extender Kit (H46712CE).

4-7-2-1 Assembly procedure for converting Voluson[™] P8 / Voluson[™] P6 from Low Version to High Version

1.) Remove 2 RUBBER CAPS on SPEAKER COVER LEFT and RIGHT



Figure 4-28 Removing the RUBBER CAPS

2.) Unscrew 2 screws to remove the SPEAKER COVER LEFT and RIGHT.



Figure 4-29 Unscrewing 2 screws to remove SPEAKER LEFT and RIGHT

3.) Unscrew 2 screws to remove the MONITOR CABLE COVER. And unscrew 5 screws to disconnect the LCD cables.





4.) Unscrew 1 screw to remove MONITOR ARM COVER BT16.



Figure 4-31 Unscrewing 1 screw to remove the MONITOR ARM COVER BT16

5.) Unscrew 1 screw to remove MONITOR CABLE FIX BRACKET.



Figure 4-32 Unscrewing 1 screw to remove MONITOR CABLE FIX BRACKET

6.) Unscrew 9 screws under the keyboard base.



Figure 4-33 Unscrewing 9 screws under the keyboard base

7.) Remove 5 Probe holders from the keyboard assembly.



Figure 4-34 Removing 5 probe holders

8.) Remove keyboard assembly.



Pull it downwards



- Keyboard lower plastic Keyboard assembly USB cables OPIO cable Power cable
- 9.) Disconnect the OPIO cable, Power cable, USB cables from keyboard assembly.

Figure 4-36 Disconnecting the cables from keyboard assembly

10.) Unscrew 4 screws to remove upper keyboard assembly.



Figure 4-37 Unscrewing 4 screws to remove upper keyboard assembly

11.) Disconnect the OPIO cable, power cable, USB cables from upper keyboard assembly



Figure 4-38 Disconnecting the OPIO cable, Power cable and USB cable from upper keyboard assembly

12.)Remove the cable tie.



Cable tie 2160955





13.)Pull the LCD cables through the LCD ARM and MONITOR HOLDER.



Figure 4-40 Pulling LCD cables through the LCD ARM

14.)Disconnect Speaker cables.

speaker cables



Figure 4-41 Disconnecting speaker cables



15.) Unscrew 2 screws to remove the ground cables .

ground cables, remove 2 screws

Figure 4-42 Removing the ground cables

16.)Unscrew 4 screws to disassemble the keyboard base from the pedestal. Refer to figure below.



Figure 4-43 Unscrewing 4 screws to disassemble keyboard base

17.)Hold the cast base firmly and lift it up as shown in the images below



Hold the cast KEYBOARD BASE firmly and lift it



Lift the base and pull the LCD cables, OPIO cable and Speaker cables through the keyboard base hole



18.)Assemble Extender with pedestal using 4 flat washers, spring washers and hexagon socket head cap. Refer to figure below.



Figure 4-45 Assembling Extender

Table 4-8Part list of Extender

GEPN	Description	Qty
5432893	Pedestal, Extender, Cast	1
2327604	Flat Washer, ISO7089, M8, Steel 140HV, Zinc Plated	4
5412573	M8 Helical spring lock washers with flat end	4
5172296	Hexagon Socket Head Cap Screw, M8-1.25, X25mm	4

19.)Hold the keyboard base firmly and place it on the extender as shown in images below.



Pull all the cables (speaker cable, LCD cables and OPIO cable through the KEYBOARD BASE.

Figure 4-46 Holding the KEYBOARD BASE and place in on the extender



20.) Assemble the keyboard base using 4 flat washers, 4 spring washers and 4 hexagon

Figure 4-47 Assembling the keyboard base

21.) Re-assemble LCD cables through the LCD ARM, Refer to figure below.



Figure 4-48 Re-assembling LCD cables through the LCD ARM.

22.) Assemble HDMI cables for right direction, monitor power cable, monitor USB cable for left direction to align the second colored point as shown. Then screw 1 screw to fix the cables using MONITOR CABLE FIX BRACKET.



Figure 4-49 Routing the cables and screw 1 screw to re-assemble MONITOR CABLE FIX BRACKET

23.)Screw 1 screw to assemble MONITOR ARM COVER BT16. Then screw 5 screws to connect the LCD cables.



Figure 4-50 Screwing 1 screw to assemble LCD ARM COVER then connect the LCD cables



24.)Connect the speaker cables

Figure 4-51 Connecting the speaker cables

25.)Connect the ground cable





26.)Connect the power cable and USB cables



Figure 4-53 Connecting the power and USB cables

27.) Reassemble the KEYBOARD UPPER COVER

28.)Route the cables as shown in the figure below and tie cable tie.



Figure 4-54 Routing the cables



29.) Screw 2 screws and assemble the upper keyboard assembly.





30.) Connect OPIO, power and USB cables.

Figure 4-56 Connecting OPIO, power and USB cables

31.) Reassemble keyboard assembly.





32.) Screw 9 screws under the KEYBOARD BASE.





33.)Reassemble 5 probe holders



Figure 4-59 Assembling 5 probe holders





Figure 4-60 Screwing 2 screws to assemble SPEAKER COVER LEFT AND RIGHT

35.) Assemble 2 RUBBER CAP on SPEAKER COVER LEFT/RIGHT.



Figure 4-61 Assembling 2 Rubber cap on speaker cover left/right

36.) Screw 2 screws to assemble MONITOR CABLE COVER.



Figure 4-62 Screwing 2 screws to assemble MONITOR CABLE COVER

4-7-3 Brakes and Direction (Swivel) Locks

Check the brakes and swivel locks function as described below.

Table 4-9Brakes and Direction (Swivel) Lock

Step	Task	Expected Result(s)
1		Swivel lock engaged.
2		Brakes and swivel lock released.
3		Brakes and swivel lock engaged (= full lock)

Section 4-8 Mode Transition

4-8-1 B Mode

- 1.) Make sure that the probe is connected properly.
- 2.) Select the probe on the screen menu.
- 3.) Press [B] key on the operator panel to enter only B mode.
- 4.) Verify that B-mode scan starts.

4-8-2 M Mode

- 1.) Make shre that the probe is connected properly.
- 2.) Select the probe on the screen menu.
- 3.) Press [M] key on the operator panel.
- 4.) Verify that M-mode scan starts.

4-8-3 B/CF Mode

- 1.) Make sure that the probe is connected properly.
- 2.) Selec the probe on the screen menu.
- 3.) Press [B] key on the operator panel to enter only B mode.
- 4.) Press [CF] key on the operator panel.
- 5.) Verify that B/CF onde scan starts.

4-8-4 PW Mode

- 1.) Make sure that the probe is connected properly.
- 2.) Select the probe on the screen menu.
- 3.) Press [PW] key on the operator panel.
- 4.) Verify that PW mode scan starts.

4-8-5 CW (Optional)

- 1.) Make sure that the probe, which supports CWD, is connected properly.
- 2.) Select the probe and select [CW] on the operator panel or on the application menu.
- 3.) Verify that CW mode scan starts.

4-8-6 3D/4D (Optional)

- 1.) Prepare a 3D/4D probe that the version of software has supported.
- 2.) Make sure that the probe is connected properly.
- 3.) Select the probe on the operator panel.
- 4.) Press 3D or 3D/4D key
- 5.) Verify that Static 3D image is acquired.

NOTE: This test is only applied if CWD hardware option has been installed.

Section 4-9 Site Log

Table 4-10 Voluson[™] P8 / Voluson[™] P6 - Site Log (Paper Documentation)Voluson[™] P8 / Voluson[™] P6

Date	Service person	Problem	Comments

Chapter 5 Components and Functions (Theory)

Section 5-1 Overview

5-1-1 Purpose of Chapter 5

This chapter explains Voluson[™] P8 / Voluson[™] P6's system concepts, component arrangement, and subsystem function. It also describes the Power Distribution scheme and probes.

Table 5-1 Contents in Chapter Voluson™ P8 / Voluson™ P6

Section	Description	Page Number
5-1	Overview	5-1
5-2	General Information	5-2
5-3	FrontEnd Processor	5-22
5-4	BackEnd Processor	5-27
5-5	Internal I/O	5-30
5-6	OPIO (User Interface)	5-31
5-7	Monitor	5-37
5-8	Monitor setup	5-37
5-9	External I/O	5-38
5-10	Peripherals	5-39
5-11	Power Distribution	5-40
5-12	Service Platform (InSite Exc)	5-46
5-13	Common Service Desktop (CSD)	5-49
5-14	Service Page	5-50
5-15	Boot Screen Functions	5-56
5-16	Windows Start Menu	5-59
5-17	LINUX - Voluson Maintenance System	5-61

Section 5-2 General Information

Voluson[™] P8 / Voluson[™] P6 is a digital beamforming curved-, linear- and phased array ultrasound imaging system.

The system can be used for:

- 2D Mode Imaging and additional Operating Modes (XTD-View)
- Color Doppler Imaging (CFM, PD and HD-Flow)
- M Mode + MCF Imaging
- Doppler (PW, CW)
- 3D Mode and Real Time 4D Imaging
- Different combinations of the above modes



Figure 5-1 Voluson[™] P8 / Voluson[™] P6 Major Components

Section 5-2 General Information (cont?)

Among other significant features of the Voluson[™] P8 / Voluson[™] P6 are the following:

- Integrated FrontEnd (uses advanced FGPA technologies)
- Open connectivity using USB ports
- Bluetooth wireless connectivity
- High performance 17" LCD monitor
- Low profile, backlit Keyboard

Voluson[™] P8 / Voluson[™] P6 has a digital beam forming system (incorporated in the FrontEnd) which can handle up to 192 element probes by use of multiplexing.

Signal flow from the Probe Connector Panel, to the FrontEnd (FE) Electronics, to the BackEnd Processor, and finally is displayed on the LCD monitor and peripherals.

Voluson[™] P8 / Voluson[™] P6 internal electronics are divided into three:

- Front End (FE) Processor
- Back End Processor
- Power Supply Unit

Interconnecting signals from FrontEnd, BackEnd, keyboard, monitor, and power distribution subsystems are routed internally.

Major System Components:

- FrontEnd processor: Section 5-3 on page 5-22
- BackEnd processor: 5-4-2 on page 5-28
- Top Console User interface (System I/O with hard keys): Section 5-6 on page 5-31
- Monitor: Section 5-7 on page 5-37
- External I/O: Section 5-9 on page 5-38
- Peripherals: Section 5-10 on page 5-39
- System mechanical chassis: trolley to keep all major components Figure 5-1 on page 5-2

Section 5-2 General Information (cont?)



Figure 5-2 Basic Block diagram of Voluson[™] P8 / Voluson[™] P6

Section 5-2 General Information (cont?)

The Voluson[™] P8 / Voluson[™] P6 used digital beamforming technology which provides high resolution and high penetration performance. It is a general purpose, mobile, software controlled diagnostic ultrasound System . Its function is to acquire ultrasound data and to display the data of different modes. gives the operator the ability to measure anatomical structures and offers analysis packages that provide information that is used to make a diagnosis by competent health care professionals.

The Calculation and Report function supports following application packages:

- Abdomen (ABD)
- Obstetrics (OB)
- Gynecology (GYN)
- Cardiology (CARD)
- Urology (URO)
- Vascular (VAS)
- Neurology (NEURO)
- Small Parts (SMP)
- Pediatrics (PED)
- Musculoskeletal (MSK)

The Voluson[™] P8 / Voluson[™] P6supports a variety of linear- and curved array for various clinical applications.

Any 3 probes may be connected at the same time.

Medical application fields include:

- Obstetrics
- Gynecology and Fertility
- Radiology
- Neurology
- Oncology
- Urology
- Pediatrics
- Musculoskeletal

The system is designed for follow-up expansion.

In addition to the initial operational settings for each transducer pre-programmed in the system, usercustomized parameter settings for each transducer may be inserted by the operator and stored for recall as needed via the system control panel. System configuration is stored on the hard drive and all necessary software is loaded from the hard drive on power up.

Biopsy guidelines are provided on screen to assist in the collection of tissue samples, using biopsy guide adapters offered as an optional accessory.

The system provides the ability to perform remote viewing of images without compression, via DICOM 3.0 compatible output. Management of patient history is possible by image-filing function. High-resolution images are provided by utilizing a technology called digital dynamic receive focusing.

For more detailed explanations of functions and controls refer to the Voluson[™] P8 / Voluson[™] P6 Basic User Manual.

5-2-1 Description of Voluson[™] P8 / Voluson[™] P6 Operating Modes

5-2-1-1 B-Mode or 2D-Mode

B-Mode or 2D-mode is a two-dimensional image of the amplitude of the echo signal. It is used for location and measurement of anatomical structures and for spatial orientation during operation of other modes. In 2D-mode, a two-dimensional cross-section of a three-dimensional soft tissue structure such as the heart is displayed in real time. Ultrasound echoes of different intensities are mapped to different gray scale or color values in the display. The outline of the 2D cross-section may be a rectangle, parallelogram, sector or 360-degree circle, depending on the particular transducer used. 2D-mode can be used in combination with any other mode.

5-2-1-1-1 Harmonic Imaging (HI)

In Harmonic Imaging, acoustic aberrations due to tissue are minimized by receiving and processing the second harmonic signal that is generated within the insonified tissue. Voluson[™] P8 / Voluson[™] P6 's high performance HI provides superb detail resolution and penetration, outstanding contrast resolution, excellent acoustic clutter rejection and an easy to operate user interface. Harmonics enhances near field resolution for improved small parts imaging as well as far field penetration. It diminishes low frequency amplitude noise and improves imaging technically difficult patients. It may be especially beneficial when imaging isoechoic lesions in shallow-depth anatomy in the breast, liver and hard-to-visualize fetal anatomy.

Coded Harmonics may improve the B-Mode image quality without introducing a contrast agent.

5-2-1-1-2 XTD-View

XTD-View (Extended View) provides the ability to construct and view a static 2D image which is wider than the field of view of a given transducer. This feature allows viewing and measurement of anatomy that is larger than what would fit in a single image. XTD-View constructs the extended image from individual image frames as the operator slides the transducer along the surface of the skin in direction of the scan plane.

Examples include scanning of vascular structures and connective tissues in the arms and legs.

5-2-1-2 M-Mode

In M-mode, soft tissue structure is presented as scrolling display, with depth on the Y-axis and time on the X-axis. It is used primarily for cardiac measurements such as value timing on septal wall thickness when accurate timing information is required. M-mode is also known as T-M mode or time-motion mode. Ultrasound echoes of different intensities are mapped to different gray scale values in the display. M-mode displays time motion information of the ultrasound data derived from a stationary beam. Depth is arranged along the vertical axis with time along the horizontal axis. M-mode is normally used in conjunction with a 2D image for spatial reference. The 2D image has a graphical line (M-line) superimposed on the 2D image indicating where the M-mode beam is located.

5-2-1-2-1 MCFM Mode (M Mode + Color Flow Mode)

Color Flow Mode and Color M Mode are Doppler modes intended to add color-coded qualitative information concerning the relative velocity and direction of fluid motion within the 2D mode or M mode image. Color Flow overlays color on the M mode trace using velocity and variance color maps. The Color Flow wedge overlays the 2D mode image and M mode timeline.

5-2-1-3 Color Doppler Modes

Color Doppler is used to detect motion presented as a two-dimensional display. There are following applications of this technique:

- Color Flow Mode (C) used to visualize blood flow velocity and direction
- Power Doppler (PD) used to visualize the spatial distribution of blood
- Bi-Directional Angio (HD-Flow) used to visualize flow direction with spatial resolution and low artifact visibility

5-2-1-3-1 Color Flow Mode

A real-time two-dimensional cross-section image of blood flow is displayed. The 2D cross-section is presented as a full color display, with various colors being used to represent blood flow (velocity, variance, power and/or direction). Often, to provide spatial orientation, the full color blood flow cross-section is overlaid on top of the grayscale cross-section of soft tissue structure (2D echo). For each pixel in the overlay, the decision of whether to display color (Doppler), gray scale (echo) information or a blended combination is based on the relative strength of return echoes from the soft tissue structures and from the red blood cells. Blood velocity is the primary parameter used to determine the display colors, but power and variance may also used. A high pass filter (wall filter) is used to remove the signals from stationary or slowly moving structures. Tissue motion is discriminated from blood flow by assuming that blood is moving faster than the surrounding tissue, although additional parameters may also be used to enhance the discrimination. Color flow can be used in combination with 2D and Spectral Doppler modes as well as with 3D mode.

5-2-1-3-2 Power Doppler

A real-time two dimensional cross-section of blood flow is displayed. The 2D cross-section is presented as a full color display, with various colors being used to represent the power in blood flow echoes. Often, to provide spatial orientation, the full color blood flow cross-section is overlaid on top of the gray scale cross-section of soft tissue structure (2D echo). For each pixel in the overlay, the decision of whether to display color (Doppler power), gray scale (echo) information or a blended combination is based on the relative strength of return echoes from the soft-tissue structures and from the red blood cells. A high pass filter (wall filter) is used to remove the signals from stationary or slowly moving structures. Tissue motion is discriminated from blood flow by assuming that blood is moving faster than the surrounding tissue, although additional parameters may also be used to enhance the discrimination. The power in the remaining signal after wall filtering is then averaged over time (persistence) to present a steady state image of blood flow distribution. Power Doppler can be used in combination with 2D and Spectral Doppler modes as well as with 3D mode.

5-2-1-3-3 Bi-Directional Angio (HD-Flow Mode)

Directional Power Doppler is a Power Doppler mode incorporating the flow direction (much like Color Doppler) into the displayed image. The focus of the settings for Directional Power Doppler is for high spatial resolution and low artifact visibility, allowing vessels to be seen with less blooming and finer detail.

5-2-1-4 Pulsed (PW) Doppler

PW Doppler processing is one of two spectral Doppler modalities. In spectral Doppler, blood flow is presented as a scrolling display, with flow velocity on the Y-axis and time on the X-axis. The presence of spectral broadening indicates turbulent flow, while the absence of spectral broadening indicates laminar flow. PW Doppler provides real time spectral analysis of pulsed Doppler signals. This information describes the Doppler shifted signal from the moving reflectors in the sample volume. PW Doppler can be used alone but is normally used in conjunction with a 2D image with an M-line and sample volume marker superimposed on the 2-D image indicating the position of the Doppler sample volume. The sample volume size and location are specified by the operator. Sample volume can be overlaid by a flow direction cursor which is aligned, by the operator, with the direction of flow in the vessel, thus determining the Doppler angle. This allows the spectral display to be calibrated in flow velocity (m/sec.) as well as frequency (Hz). PW Doppler also provides the capability of performing spectral analysis at a selectable depth and sample volume size. PW Doppler can be used in combination with 2D and Color Flow modes.

5-2-1-5 3D Imaging

The Voluson[™] P8 / Voluson[™] P6 Ultrasound System will be used to acquire multiple, sequential 2D images which can be combined to reconstruct a three dimensional image. These 3D images are useful in visualizing three-dimensional structures, and in understanding the spatial or temporal relationships between the images in the 2D sequence. The 3D image is presented using standard visualization techniques, such as surface or volume rendering.

5-2-1-6 3D Data Collection and Reconstruction

2D gray scale images including Color Flow or Power Doppler information may be reconstructed. The acquisition of volume data sets is performed by sweeping 2D-scans with special transducers (called 3D-transducers) designed for the 2D-scans and the 3D-sweep.

2D ultrasound imaging modes are used to view a two dimensional cross-sections of parts of the body. For example in 2D gray scale imaging, a 2 dimensional cross-section of a 3-dimensional soft-tissue structure such as the heart is displayed in real time. Typically, the user of an ultrasound machine manipulates the position and orientation of this 2D cross-section in real time during an ultrasound exam.

By changing the position of the cross-section, a variety of views of the underlying structure are obtained, and these views can be used to understand a 3-dimensional structure in the body.

To complete survey a 3-dimensional structure in the body, it is necessary to collect 2D images which span a volume containing the structure. One way is to sweep the imaging cross-section by translating it in a direction perpendicular to the cross-section. Another example method is to rotate the cross section about a line contained in the cross section. The Voluson[™] P8 / Voluson[™] P6 Ultrasound System uses the automated so called C-Scan for the motion perpendicular to automated B-scan. Once a representative set of 2D cross-sections are obtained, standard reconstruction techniques can be used to construct other 2D cross-sections, or to view the collection of the cross-sections as a 3D images.

5-2-1-7 3D Image Presentation

Several techniques can be used to aid the human observer in understanding the resulting 2D image as a representation of a three-dimensional object. One is to rotate the volume of data, and present the resulting sequence of 2D projections to the observer. The changing direction of observation helps the observer to separate the features in the volume according to their distance from the observer.
5-2-1-8 3D Rendering

The 3D (volume) rendering is a calculation process to visualize certain 3D-structures of a scanned volume by means of a 2D-image. The gray value for each pixel of the 2D-image is calculated from the voxels along the corresponding projection path (analyzing beam) through the volume. The render (calculation) algorithm, surface or transparent mode, determines how 3D-structures are visualized.



Figure 5-3 Principle: Volume Rendering

5-2-2 Block diagram Voluson[™] P8 / Voluson[™] P6





5-2-2-1 Front End Block diagram

For further details :

see: "Front End Processor - Block diagram" on page 5-22

see: "T-DPI - Blockdiagram" on page 5-23

see: "Beamformer + Frontend" on page 5-24

see: "DRFM - Block diagram" on page 5-25

5-2-2-2 Back End Block diagram

For further details :

see: "BackEnd Processor - Block diagram" on page 5-27

5-2-2-3 OPIO Block diagram

For further details :

see: "Main OPIO - Block Diagram" on page 5-31

5-2-3 Data Flow Control Description

This section describes the functions of the boards vs. different operation modes.

- DBM64 Beamformer Motherboard
- DRFM Mid-Processor, System Control and DMA Controlle

5-2-3-1 B-Mode

1.) DRFM

The DRFM contains the Clock-Management and PRF-Generator. It generates(drives) BF (=Beamformer)-FPGA-Clock (200MHz) and Shot-Trigger for the Beamformer board (DBM64).

Configures PIR (Probe Interface board) and Beamformer (DBM64 with Tx-Frequency, Tx-Focus, Rx-Focus, LineNo (lateral Position), Tx- Apodization, RX-Apodization, Multibeam, etc. The DRFM board also contains the Tx-Power-Reference-DAC.

Furthermore it contains Multibeam-DeInterleave, Subtraction Filter (for HI-Mode, see: Section 5-2-3-1-1 "Special B-Mode Techniques" on page 5-13, DigitalTGC, DC-Canceler, Mixer (Part of Demodulator), LowPassFilter, Decimation (Pixel rate Conversion), Magnitude Calculator (Part of Demodulator), Logarithmic Amplifier, Re-Sample, Edge Enhance (Contrast Enhancement through differentiation), Frame Filter, Blending (adapting Brightness in order to perfectly combine Nearfield-Frame with Farfield-Frame in FFC-Mode, see: Section 5-2-3-1-1 "Special B-Mode Techniques" on page 5-13.

Multibeam-DeInterleave means: Incoming Pixel order shot1**pix1**-shot2**pix1**-shot3**pix1**-shot4**pix1** shot1**pix2**-shot2**pix2**-shot3**pix2**-shot4**pix2**... is converted to the new order: **shot1**pix1-**shot1**pix2-**shot1**pix3..... - **shot2**pix1-**shot2**pix2-**shot2**pix3.....

After DC-cancelling the signal is mixed with RX-Frequency and brought to LF-Spectrum, where the LowPassFilter cuts HF. Mixer and Magnitude-Calculator arrange Complex Demodulation, and Logarithmic Amplifier arrange the conversion from High-Dynamic LinearSignal to the Low-Dynamik(e.g.8Bit) Log-Signal. Several Postprocessing steps (LineFilter, FrameFilter, ReSample, Edge Enhance) enable smooth image quality while keeping contrast high.

a.) Direct Memory Access (DMA) section

B-mode-Data from DRFM is written via Signal Processor (SP) Channel 0 into SDRAM Fifo Buffer memory. DMA Controller 0 transfers the data into PC main memory where scan conversion is performed per software. Cine Mode: Reserved area in PC main memory is used.

- 2.) DBM64 (Voluson[™] P8 / Voluson[™] P6)

This Beamformer board consists of Bemaformer-FPGA, TX-pulser, RX-AFE. DBM64 supports 64 TX/RX channels. Beamformer-FPGA generates TX-Frequency through dividing 200MHz by 2,3,4,5,..., TX-Focus, and Sampling Clocks for the ADC, and manages RX-Foxcus (Delay and Chain-Adder) and Apodization.

5-2-3-1-1 Special B-Mode Techniques

- a.) HI (Coded Harmonic Imaging): In one method of HI the RX-Frequency is doubled, so that the radial resolution is increased due to the higher RX-Frequency. The second method of HI is pulse-inversion: 2 TX-Beams are shot to the same Tissue-location, one with positive, one with negative polarity. The subtraction of both shots (Subtraction Filter) brings to bear the nonlinear-echo-reflection-properties of the tissue (especially in usage of Contrast-medias), which is very useful with extremely difficult-to-image patients.
- b.) XBEAM CRI (CrossBeam Compound Resolution Imaging): Does not need any special functions of DRFM. Image is composed of more than one different-direction-steered images. PC-calculated.

5-2-3-2 M-Mode

1.) DRFM

see: Section 5-2-3-1 "B-Mode" on page 5-12

a.) DMA section

B-mode-Data is written via SP0 into SDRAM Fifo Buffer memory. DMA Controller 1 transfers the data into SOM (System-On-Module) main memory where scan conversion is performed per software, i.e. the sweep image is generated (scaling and interpolation between lines). CineMode: CineMode-Memory is the SOM main memory.

5-2-3-3 D-Mode (Pulsed Wave- and Continuous Wave Doppler)

- 1.) DRFM
 - PRF-generator; see: Section 5-2-3-1 "B-Mode" on page 5-12
 - After DC-cancelling the signal is mixed with RX-Frequency and brought to LF-Spectrum, where the LowPassFilter cuts HF.
 Mixer and Magnitude-Calculator arrange Complex Demodulation.
 - a.) DMA section

D-mode-Data is written via SP0 into SDRAM Fifo Buffer memory. DMA Controller 1 transfers the data into PC main memory where FFT and scan conversion is performed per software, i.e. the sweep image is generated (scaling and interpolation between lines). CineMode: CineMode-Memory is the SOM main memory.

5-2-3-4 D-Mode Autotrace (draws PC-calculated envelope to D-Spectrum)

- 1.) DRFM
 - PRF-generator; see: Section 5-2-3-1 "B-Mode" on page 5-12
 - After DC-cancelling the signal is mixed with RX-Frequency and brought to LF-Spectrum, where the LowPassFilter cuts HF.
 Mixer and Magnitude-Calculator arrange Complex Demodulation.
 - a.) DMA section

D-mode-Data is written via SP0 into SDRAM Fifo Buffer memory. PC calculates Autotrace-Curve from D-Mode data. Cine Mode with Autotrace: Cine Mode-Memory for the Autotrace-Curve is inside SOM-Memory.

Software has to take care that D-Spectrum and Autotrace-Curve are placed exactly one upon the other, means: have the same Cine-Shift.

5-2-3-5 CFM-Mode (Color Flow Mode)

1.) DRFM

- PRF-generator; see: Section 5-2-3-1 "B-Mode" on page 5-12
- After DC-cancelling the signal is mixed with RX-Frequency and brought to LF-Spectrum, where the LowPassFilter cuts HF.
 Mixer and Magnitude-Calculator arrange Complex Demodulation.

5-2-3-6 3D-Mode (Freezes after 1 volume sweep)

see: Section 5-2-3-1 "B-Mode" on page 5-12

- 5-2-3-7 Real Time 4D-Mode (nonstop volume rendering) see: Section 5-2-3-1 "B-Mode" on page 5-12
- 5-2-3-8 XBeam CRI-Mode (CrossBeam Compound Resolution Imaging)

see: Section 5-2-3-1 "B-Mode" on page 5-12

5-2-3-9 Archive write mode (store Image to Archive)

1.) DRFM

Not used

5-2-4 Description of Software Options

To activate the software options:

- 1.) Press the $\overline{\mathbf{F2}}$ button on the OPIO.
- 2.) On the left side of the screen select <u>SYSTEM SETUP</u> to activate the setup desktop screen.
- 3.) On the left side of the screen select <u>ADMINISTRATION</u> and then click the **OPTIONS** tab.

Options	VP6	VP8		
3D/4D Activation	Option a)	Option a)		
Advanced 3D/4D Package	Option b)	Option b)		
Advanced VCI	N/A	Option c)		
SingleView	Option c)	Option c)		
SonoAVC Follicle Pro	Option c)	Option c)		
SonoL&D	Option	Option		
TUI	Option c)	Option c)		
CFM/M-CFM	Option	Standard		
ХТD	N/A	Option		
Anatomical M-Mode	N/A	Option		
SonoNT	N/A	Option		
ΙΟΤΑ	Option	Option		
DICOM	Option	Option		
Recording Module SW-DVR	Option	Option		

Table 5-2 Software Options

NOTE: Option a) : 4D Realtime, Static 3D, SonoRenderlive Option b) : 3D/4D Activation, TUI, SingleView Option c) : Can be used with 3D/4D Activation

5-2-4-1 3D/4D Activation

5-2-4-1-1 4D Real Time

4D Real Time mode is obtained through continuous volume acquisition and parallel calculation of 3D rendered images. In 4D Real Time mode the volume acquisition box is at the same time the render box. All information in the volume box is used for the render process. In 4D Real Time mode a "frame rate" of up 40 volumes/second is possible. By freezing the acquired volumes, size can be adjusted, manipulated manually as known from the Voluson 3D Mode

- 5-2-4-1-2 Static 3D
- NOTE: For further details refer to the Voluson P6P8 Basic User Manual
 - 5-2-4-1-3 SonoRenderlive
- NOTE: For further details refer to the Voluson P6P8 Basic User Manual

5-2-4-2 Advanced 3D/4D Package

5-2-4-2-1 3D/4D Activation

4D Realtime, Static 3D, SonoRenderlive

5-2-4-2-2 TUI

TUI is a new visualization mode for 3D and 4D data sets. The data is presented as slices through the data set which are parallel to each other. An overview image, which is orthogonal to the parallel slices, shows which parts of the volume are displayed in the parallel planes.

This method of visulaization is consistent with the way other medical systems such as CT or MRI, present the data to the user. The distance between the different planes can be adjusted to the requirements of the given data set. In addition it is possible to set the number of planes.

The planes and the overview image can also beprinted to a DICOM printer, for easier comparison of the ultrasound data with CT and/or MRI data.

5-2-4-2-3 SingleView

More flexibility with any Plane, VCI plane is freely selectable. Only Line can be drawn.

- Volumes can be edited in all other visualization Modes.
- Dual Format is now also possible in Render Mode and Sectional Planes Mode.

5-2-4-3 HDLive(3D)

5-2-4-3-1 HDLive 3D

HD Live is an enhancement of the currently available surface Rendering. The position of the virtual light source may be altered to get a natural display with an optimized depth impression.

NOTE: HDLive 3D is only available in static 3D mode.

5-2-4-4 Advanced VCI

More flecxibility with any Plane, VCI plane is freely selectable. Any shape can be drawn.

- Volumes can be editaed in all other visualization Modes.
- Dual Format is now also possible in Render Mode and Sectional Planes Mode.
- VCI slice thickness can be set to zero.

5-2-4-5 SingleView

More flecxibility with any Plane, VCI plane is freely selectable. Any shape can be drawn.

- Volumes can be editaed in all other visualization Modes.
- Dual Format is now also possible in Render Mode and Sectional Planes Mode.

5-2-4-6 SonoAVC follicle Pro

This Feature can automatically detect follicles in a volume of an organ (e.g., ovary) and analyze their shape and volume. From the calculated volume an average diameter can be calculated. It also lists the objects according to their size.

- Each object can be calculated automatically.
- A description name can be defined for each object up to 10 descriptions. With the "Add to Report" button all values of the measured objects can be sent to the worksheet. Also the description name will be sent.
- The description name can be edited in the worksheet.
- If the number button is activated, all objects are assigned a number inside the displayed objectaccording to the measurement index.
- Group function: All objects will be added to one volume. The color of all objects will be changed to red and the measurement will show only one result.

5-2-4-7 SonoL&D

Enhances the labor and delivery process with quantitative progression data.

5-2-4-8 TUI

TUI is a new visualization mode for 3D and 4D data sets. The data is presented as slices through the data set which are parallel to each other. An overview image, which is orthogonal to the parallel slices, shows which parts of the volume are displayed in the parallel planes.

This method of visualization is consistent with the way other medical systems such as CT or MRI, present the data to the user. The distance between the different planes can be adjusted to the requirements of the given data set. In addition it is possible to set the number of planes.

The planes and the overview image can also be printed to a DICOM printer, for easier comparison of the ultrasound data with CT and/or MRI data.

5-2-4-9 CFM/M-CFM

NOTE: For further details refer to the Voluson P6P8 Basic User Manual

5-2-4-10 XTD

NOTE: For further details refer to the Voluson P6P8 Basic User Manual

5-2-4-11 Anatomical M-Mode

Anatomical M-Mode displays a distance/time plot from a cursor line, which can be defined freely.

The M-Mode display changes according to the motion of the M cursor. In the Dual format, two defined distances can be displayed at the same time.

AMM is available in grayscale and color modes (CF, HD Flow)

5-2-4-12 SonoNT

SonoNT is an additional function for manual NT (Nuchal Translucency) measurement. This function supports the user to find the correct position for the NT measurement. The user can switch between NT Method "Manual" and "Sono NT" (semi-automatic).

A Box has to be placed for the NT-ROI. Then the NT-distance is calculated automatically, a graphic (yellow head-image) and the NT-result are displayed.

If no result is found a temporary warning "No valid NT-distance found!" is displayed.

5-2-4-13 IOTA

NOTE: IOTA LR2 Calculation may not be available in all countries (including Japan)

The IOTA (International Ovarian Tumor Analysis) LR2 Wokrsheet contains an ovary measurement tool for women with adnexal tumors that have been selected to undergo surgery. The LR2 model is based on published literature and has been tested only on the stated population. The literature states that the LR2 Model can help to estimate the probability of an adnexal mass of being malignant. The IOTA group has evaluated other ways including an LR2 model in additional to the LR2 model.

5-2-4-14 DICOM

Software package providing following DICOM functionality:

- Storage Service Class
- Print Management Service Class
- Structured Reporting Service Class
- Storage Commit Service Class
- Modality Performed Procedure Step Service Class

Sending of reports - Additionally all OB/Gyn measurements can be sent to a PC*.

Receiving of these reports is supported by ViewPoint workstation "PIA" only. All other workstations can be adapted individually.

* Without using structured reporting.

5-2-4-15 Recording Module SW-DVR

After entering an encrypted Software Option string (password) it is possible to record Ultrasound data on DVD or an USB device. Videos are created in .mp4 file format.

5-2-4-16 IEC62359 Ed.2

Set for all countries except for China.

5-2-5 Description of Hardware Options

Table 5-3 Hardware Options

	HW-Options	Description
1	CW-Doppler	5-2-5-1 CW - Continuous Wave Doppler
2	ECG Module	5-2-5-2 ECG Module
3	WLAN Network Adapter	5-2-5-3 Wireless Network Adapter (WLAN - Wireless Local Area Network)
4	DPS with Battery Assy	5-2-5-4 DPS2 Battery Assy

5-2-5-1 CW - Continuous Wave Doppler

CW Doppler mode provides real time spectral analysis of CW Doppler signals. This information describes the Doppler shifted signal from the moving reflectors in the CW Doppler beam. CW Doppler can be referenced through a small pencil probe or phased array scan head, but it can also be used in conjunction with a 2D image which has an M-line superimposed on the 2D image indicating the position of the Doppler sample volume. For through-the-beamformer CW, this beam is steerable by the operator, and is done by adjusting the location of the M-line. The CW Doppler beam, or M-mode line, can be steered allowing interrogation along an operator-selected line within the image.

NOTE: This feature is available only on Voluson P8TM systems.

5-2-5-2 ECG Module

For details see: Section 5-10-3 "ECG Module" on page 5-39

5-2-5-3 Wireless Network Adapter (WLAN - Wireless Local Area Network) For details see: Section 5-10-4 "Wireless Network Adapter" on page 5-39

5-2-5-4 DPS2 Battery Assy

For details see: Section 5-10-5 "DPS2 Battery Assy" on page 5-39

5-2-6 Data Location

The Voluson[™] P8 / Voluson[™] P6 has a 500 Gbyte Hard disk divided into 4 partitions:

C: System partition:

- Operating System (Windows 7) including all Windows settings (IP-address, Network Name, etc.)
- US-Application Software (UISAPP)
- Global Service Platform Software
- Software Options

D: User partition:

- User Presets (Backup) database
- Images (Archive), Patient-ID's and Reports database
- Service database
- System settings database

R: Rescue partition:

- Factory Images of C:Partition for System recovery after HDD (Windows) crash
- Printer Drivers

LINUX partition: (not visible in Windows)

- Linux operating system for rescue functionality

System	USER	Linux	Rescue
(~12GB)	(~437GB)	(~267MB)	(~16GB)

Figure 5-5 Data Location - distribution of partitions

Section 5-3 FrontEnd Processor

FRONT END



Figure 5-6 Front End Processor - Block diagram

Table 5-4 below outlines the Voluson[™] P8 / Voluson[™] P6 Front End components described in the subsections.

Table 5-4 Voluson [™] P8 / Voluson [™] P6 - From	t End components
--	------------------

Sub-section	Description	Page Number
5-3-1	T-DPI - Probe Interface board	5-23
5-3-2	DBM64- Beam former board	5-24
5-3-3	DRFM- Radio Frequency interface and System controller	5-25

5-3-1 T-DPI - Probe Interface board

Switches the Probe Connectors (3 RS -Connectors) and recognizes Probes

- 3 RS-Probe Connectors
- Probe Select Relays
- Probe Recognition

For Block diagrams refer to:

- Figure 5-7: T-DPI - Blockdiagram



5-3-2 DBM64- Beam former board

DBM64DBM64 board has 64 TX/RX channels, respectively. beamformer board is a complete 64 channel ultrasound Front-end that includes the following features and functions:.

- TX-pulse genetration, TX-Apodization, TX-Focus
- RX-Focus Delay and summation
- Full receiving channel with integrated AFE IC: TGC + Anti-Aliasing Filter + ADC
- High Voltage Multiplexer 192 x 64 channels (DBM64)



Figure 5-8 Beamformer + Frontend

5-3-3 DRFM- Radio Frequency interface and System controller



Figure 5-9 DRFM - Block diagram

5-3-3-1 DRFM - FPGA

- A.) Beamformer interface
- LVDS-interface
- Raw ultrasound data is transferred from the Beamformer to the Interface FPGA.
- Configuration data (Probe Setup data, Beam Setup data) is transferred from the Interface FPGA to the Beamformer.
- FPGA configuration data is transferred from the Interface FPGA to the Beamformer
- B.) DMA Logic
- Receives pre-processed ultrasound data coming from the Processing FPGA.
- Stores this data in the Line Memory buffer (2x SDRAM)
- Transfers buffered data by DMA-transfer via PCI and PCI-Express to the PC
 - Non-TimeMotion data (B, C): DMA0
 - TimeMotion data (M, PW): DMA1.

C.) T-DPI FPGA programming interface

- This FPGA is the interface between the System connectors and the DRFM.
- D.) Ultrasound Data Pre-processing
- Raw ultrasound data is coming in from the Interface FPGA. It is pre-processed.Further processing will be done by the PC. The pre-processed data is transferred back to the Interface-FPGA.
- E.) System control
- PRF (Pulse Repetition Frequency) Generator
- Line Number (Lateral Position)
- Control of TX-Power DACs (generation of TX POWER reference voltage)
- Controls discharge of capacity on DPS board during the reduction of TX POWER
- Shut-down signal coming from the DBM64 board is passed to the SOM
- Probe Select signals, which indicate that a probe is connected to a probe connector.
- Probe Code Interface: The Probe Code can be read from a connected probe, or a new code can be written into the probe..
- Audio Control:
 - PW Doppler Audio Output for buffered signals from the PC
- F.) 4D motor control
- Master of Control for 3D-Sweep
- Master of Control for 4D-Sweeps
- Generation of Volume Trigger and Frame Trigger (for 4D)
- Drives motor (in 3D/4D-probes) via SIN (sine-signal) & COS (cosine signal)
- The HALL-signal coming from the 3D/4D probe is passed to the DSP for zero position detection.

Section 5-4 BackEnd Processor





Table 5-5 Voluson[™] P8 / Voluson[™] P6 - DRFM components

Sub-section	Description	Page Number
5-4-1	Hard Disk Drive	5-28
5-4-2	SOM (System On Module)	5-28

5-4-1 Hard Disk Drive

The Hard Disk is the main storage device of the Voluson[™] P8 / Voluson[™] P6. The Voluson[™] P8 / Voluson[™] P6 500 Gbyte Hard disk, which is controlled by the CPU via signals from SATA, is divided into 4 partitions.

For further details see: Section 5-2-6 "Data Location" on page 5-21.

5-4-2 SOM (System On Module)

5-4-2-1 Congatec

SOM Module for VS6/S8/S10

- On Board HDMI, LAN, USB 2.0, Sound
- CPU: Intel[®] CoreTM i5-3610ME Processor, 2.7GHz

SOM Module for VP6/P8

- On Board HDMI, LAN, USB 2.0, Sound
- CPU: Intel[®] CoreTM i3-3120ME Processor, 2.4GHz

Major Tasks:

- System Control
- 2D- / 3D- / 4D- Image processing and Rendering

-

Control DVD drive (SATA), User Interface (USB), DVR (USB)

ComExpress	[USB
		Ethernet
		HDMI
CPU	[PEG
MAIN		RGB
Pienory	[USB
	[USB
		USB
		USB
		USB
	[USB -
		SATA
SATA	Audio	

Figure 5-11 SOM (System On Module)

Section 5-5 Internal I/O



Figure 5-12 Voluson[™] P8 / Voluson[™] P6: Internal I/O

Section 5-6 OPIO (User Interface)

5-6-1 OPIO Block Diagram



Figure 5-13 Main OPIO - Block Diagram

The Voluson[™] P8 / Voluson[™] P6 OPIO (User Interface) consists of the following electronic subassemblies and/or functional components:

- Upper Keyboard OPIO:
 - Power ON/OFF control
 - 2 USB 2.0 ports
 - Configurable 9 buttons
- Lower Keyboard OPIO:
 - 4 port USB 2.0 Hub controller
 - Slide pots TGC with zero raster position
 - Rotary Encoders with integrated push buttons
 - USB Trackball (2") with dedicated buttons to emulate standard three button mouse
 - USB standard alphanumeric keyboard
 - LED Indicators with wide range dimming

1. Loudspeaker position

5-6-2 OPIO layout



 Menu window digipot controls
 TGC Slider controls
 Trackball
 Alphanumeric Keyboard
 Probeholders
 Menu window flipswitch controls
 Mode keys (digipot controls)
 Toggle switch controls
 Hard keys
 Trackball buttons

Figure 5-14 Voluson[™] P8 / Voluson[™] P6 - OPIO Layout

5-6-3 Button Description



Abc	ABC - Image Annotation Write a comment/annoation directly onto the screen.	Clear	 Clear To erase graphics, measurements and annotations on the screen, depending on the currently used function. If image annotation is active, then only text will be erased. If the measurement function is active, then only measurements will be erased. If bodymark is active, then only bodymarks will be erased If none of the three above functions is active, all graphics, measurements and annotations will be erased.
auto	Automatic Optimization <u>In 2D Mode:</u> Press this key to use automatic optimization on the gray scale to enhance the contrast resolution. <u>In PW Mode:</u> Press this key to use automatic optimization on the PRF and the Baseline. <u>In 3D/4D Mode:</u> Press this key to activate Sono Render Start.	Freeze	Freeze/Scan (Read/Write) When bright: image is frozen (freeze mode). When dark: real time scan (scan mode).
(Z	Pointer Single click: Brings up an arrow shaped cursor for menu and image operations. Double click: Activates the Indicator menu		Dual-Screen Format (vertical distribution) Select the display format (Dual screen display) in 2D and 3D image mode.
	Exit Press the [Exit] key on the control panel to exit the current menu.	\bigcirc	Single-Screen Format Select the display format (Single screen display) in 2D and 3D image mode.
Measure	Measurements Allows measurements/calculations in 2D/3D mode, M mode and Spectral- Doppler mode, using various measure items for different applications. Toggles between Generic Measurement menu and Calc measurement menu.	(X)	Focus (flipswitch) Select position of transmit focus using the flip switch
3D 4D	3D Activates 3D mode (Volume Mode) Real Time 4D Mode Activates the Real Time 4D mode (continuous volume sweep) Last used mode shall appear when [3D/4D] is pressed.	())	Trackball and Trackball keys <u>Trackball:</u> positions cursors, Cine-loop, position and size of the box, etc. <u>upper</u> <u>trackball key:</u> changes the actual trackball function <u>left/right trackball key:</u> sets, fixates cursors and activates pages/ buttons, etc. Double click functions are displayed in brackets.
P1	P1 Programmable key	Report	Report (Worksheet) Activates the Patient worksheet of the currently selected application.

•

(P2)	P2 Programmable key		Quad-Screen Format Select the display format (Quad screen display) in 2D and 3D image mode.
P3	P3 Programmable key		Color Mode (on/off) Pressing activates/deactivates the Color mode. Functions depend on current probe. Rotating allows setting of the CF mode gain within the probe-defined range. Also acts as parallel shift in 3D/4D mode. Color Mode selection [CFM], [PD] or [HDFlow] is done in CF Menu. Last used mode shall be switched on when CF is pressed.
	Acoustic Output (digipot) Adjusts the Ultrasound emission power of a probe and also adjusts the volume in PW mode.	°	Motion Mode (on/off) Pressing activates/deactivates the M mode. Functions depend on current probe. Rotating allows setting of the M mode gain within the probe-defined range. Function also includes Z rotation in 3D/4D mode.
(Depth (1)	Depth (flipswitch) Select the display depth of the 2D image using the flip switch.	R	2D Mode (all additional modes will be switched off) Pressing this control activates 2D Mode. Rotating allows you to set the 2D image gain within the probe-defined range.
83	HR Zoom/ Pan Zoom (digipot) Allows you to modify the Zoom ROI and choose a Zoom mode.	° O	Pulsed Wave Doppler (on/off) Pressing activates/deactivates the PW Doppler mode. Functions depend on current probe. Rotating allows setting of the PW mode gain within the probe- defined range. Function also includes X and Y rotation in 3D/4D mode. Continuous Wave Doppler (on/off) CW is available as a soft menu option in PW menu only when 3Sc-RS probe is active. When CW is running, pressing PW will switch off CW. CW gain can be adjusted with PW rotary.
R	3D Invert Allows to orient the image left/right in 2D mode. In 3D/4D mode renders image orientation 0°/180° (up/down).	1	3D Reverse Allows the image to be inverted in motion modes and renders image rotation 90% 270° in 3D/4D mode.
	Review Switch to the exam review mode Unless no exam has been started, then pressing the [Review] key opens the Archive.		Steer/3D Init In Color flow, ROI can be steered using this button (in Linear probes) In 3D/4D Mode, the button resets the image to its initial position.

Function of the Trackball at Diverse Dialog Pages

In general operations at diverse dialog pages and windows on the system desktop (e.g., Patient Data Entry, Usage of EUM, System Setup, Measurement Setup, etc.) are executed by trackball and the trackball keys (mouse emulation).

	Trackball (mouse position): Positions the cursor (arrow) on the desktop	1]1	Left trackball key (left mouse button) Sets, fixates markers and activates pages/buttons etc. marked by the cursor
، رچی	Upper trackball key (right mouse button) No function in system desktop	٩ <u>ق</u> ٢	Right trackball key (left mouse button) Sets, fixates markers and activates pages/buttons etc. marked by the cursor



If a Contract of C	DICOM Spooler Opens the DICOM job spooler vindow on screen	Eject	Eject Opens a dialog window with all medias that can be ejected.
F5 C	SW-DVR Go to SW-DVR menu	Delete Meas	Delete Measurements Deletes all measurements.
None A	Set Home/Home An image annotation function,	Delete Abc	Delete Abc Deletes all image annotations in the preselected layer.
	⁵ 9/ F10 Grab word/Delete word	Arrow	Arrow/Indicator Toggles the shape of the cursor. You can choose between 2 shapes (hand/arrow),
Help E	EUM Press the [F1] button to invoke he electronic user manual. Operation:	Fn	Function Activates additional keys on the keyboard. Additional key functions are framed on the key (e.g. Set Home).
	Jp/ Down Page up/ Page down Switch between the next or previous page.	Prt Sc	Print Screen Creates a image of the current screen and saves it on the local HDD.
Fore h	.eft / Home Moves left or with the "Fn" key to nome position.	Erd	Right / End Moves right or with the "Fn" key to end position.

Section 5-7 Monitor

NOTE: From Voluson[™] P8 / Voluson[™] P6 system, it's accessible via not monitor adjustment but monitor menu on application. Please refer to Section 5-8.

Section 5-8 Monitor setup

NOTE: Changing the monitor settings through the utility page, it takes 1 second to apply the adjusted value to the monitor.

Press the UTILITIES key on the control panel.
 On the left side of the screen select the MONITOR.



Figure 5-15 Monitor settings

Section 5-9 External I/O



Figure 5-16 External I/O Connectors - on Rear of System (GES)

ltem	Connector Name	Description
1	USB	USB-2.0 port
		Connector for external Monitor
2	HDMI OUT	TMDS signal with DDC_Control (HDMI or DVI)
		Resolution: SXGA(1280 X 1024)
3	NETWORK	DICOM input/output, twisted pair RJ-45 10/100 megabit/s
4	RGB	RBG Analog Output
5	Audio out	Audio out for external speaker



Figure 5-17 External I/O Connectors - on the TOP OPIO

Item	Connector Name	Description
1	USB	USB-2.0 port
2	USB	USB-2.0 port

NOTE: For further description of I/O connectors refer to Section 3-9-3 "External I/O Connectors" on page 3-69.

5-10-1 Printers

5-10-1-1 Black & White Digital Printer

The B<u>&W Digital Printer receives image data via the USB port. The print command is controlled by the keys P1, P2, or P3 on the VolusonTM P8 / VolusonTM P6 control panel (depending on system configuration).</u>

5-10-1-2 Color Digital Printer

The <u>Color Digital Printer receives image data via the USB port.</u> The print command is controlled by the keys <u>P1</u>, <u>P2</u>, or <u>P3</u> on the VolusonTM P8 / VolusonTM P6 control panel (depending on system configuration).

5-10-1-3 Color Deskjet Printer

Normally, a Color Deskjet Printer is used to print out reports and exams, but in some cases also ultrasound images. It is controlled via Bluetooth Adapter.

5-10-2 DVD+R/RW Drive (Writer)

The DVD+R/RW Drive (Writer) is used to backup images and reports. In addition, it is used as the main source of software upgrades and other service utility operations. The DVD+R/RW drive can read/write CDs and DVDs. And also it is one of unit of DVR Recorder when DVR option is installed.

5-10-3 ECG Module

The ECG Module is used for acquiring an ECG-signal to be displayed with the ultrasound image. This optional peripheral serves for gaining an ECG-signal to mark the systolic and end diastolic moments in M-Mode and Doppler evaluations. The ECG Module must not be used for ECG-diagnostics. It is not intended for use as a cardiac monitor and must not be used for an intra-operative application on the heart.

5-10-4 Wireless Network Adapter

The Voluson[™] P8 / Voluson[™] P6 supports a Wireless Network USB Adapter based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity. For details regarding type and installation, refer to Section 3-5-5 "Connecting the Wireless Network Adapter" on page 3-20.

The Wireless Network USB Adapter provides a mobile network connection to the local area network.

5-10-5 DPS2 Battery Assy

The DPS2 Battery Assy is possible power supply without AC-power using battery pack. The battery pack includes a rechargeable Lithium Ion battery and a battery management module.

Section 5-11 Power Distribution

5-11-1 ACFE - Primary Power Module



Figure 5-18 Primary Power Module

5-11-1-1 DPS Block Diagram



Figure 5-19 DPS Block Diagram

5-11-1-2 Power Distribution Block Diagram





5-11-1-3 Power Up Sequence Description

The Power Up Sequence can be divided in the following steps:

- Switch Circuit Breaker in DPS to ON position
- Press the ON button on the Operator Panel
- DRFM power-up

5-11-1-3-1 Power Up Sequence Description



Figure 5-21 Power Up Sequence

- 1.) DRFM, powered by 5Vstb, detects contact of Power-On button event.
- 2.) DRFM sends PSON_N low to DPS
- 3.) DPS powers up +24V, +12V, \pm 5V
- 4.) DPS provides LV_OK as soon as +12V is within specification
- 5.) DPS provides PC voltages from +12V, +5V.
- 6.) DRFM distribute enable signals for +3.3V, +2.5V, +1.2V, +1.1 to itself and DBM64.
- 7.) DRFM provides PS_DONE output signal to DPS.
- 8.) All Supply voltages are switched on.

5-11-1-3-2 Power Down Sequence Description



Figure 5-22 Power Down Sequence

- 1.) On/Off Switch is pressed on OPIO.
- 2.) ON/OFF signal is sent from On/Off Switch via OPIO cable to DRFM
- 3.) "Shut down" dialog comes up and "Shut down" signal is sent.
- 4.) PC "Shut down" sequence is started in DRFM.
- 5.) At the end of this sequence DRFM sends PS_ON Signal to DPS.
- 6.) DPS shuts down all Supply voltages except Standby voltage (5VSB).

5-11-1-4 Mechanical Concept and Overview

The AC Power's main tasks are to supply the internal subsystems with AC power. To reduce inrush current, an inrush current limiter is implemented. Voltage to peripherals are provided from input without configuration.

From the Mains Power Input module, the AC power is routed via an Inrush Current Limiter to an internal ACDC module.

5-11-1-5 Functions of ACFE

- Inrush Current limiter
- Switch the peripheral power

NOTE: All DC-supply voltages for built in peripherals are generated in DCDC module not inside ACFE.

NOTICE The systems mains supply input voltage is a free voltage not need to configure for different AC powerin.
5-11-2 ACDC - primary DC Power Supply

5-11-2-1 Function of ACDC

With the AC input voltage from the ACFE, the ACDC module generates 12Vdc

5-11-3 DCDC - main DC Power Supply

With the 12Vdc from ACDC, the DCDC module generates all DC power sorces:

- Front end voltages
- Standby voltage
- Tx voltages
- DVD supply
- 4D module supply
- Fan supply

5-11-4 4D Module

In addition, the AC/DC device contains the digital motor amplifier.

Section 5-12 Service Platform (InSite Exc)

5-12-1 Introduction

InSite Exc (InSite with Express Connect) is the connectivity to the Voluson P-Series system that allows GE to deliver remote diagnostics capability. InSite is your direct link with a GE Online Service Engineer or Applications Support Engineer, or a Request for Service via the Insite Exc link (GE icon) at the right botton of the display screen.

The GE icon in the status bar change symbol and color depending on ongoing activity; see

The most important features of InSite are:

- Diagnostics available remotely by GE technicians through Common Service Desktop
- Images and log files download
- Virtual Network computing

5-12-2 Access / Security

The Service Platform has different access and security user levels. Each user is only granted access to the tools that are authorized for their use.

- Local Access: via System Setup Administration SERVICE page
- Remote Access: This offers the possibility to view the entire customer's desktop and operation system. Remote access to the Voluson[™] P8 / Voluson[™] P6 System requires permission and customer input before a GE service technician or OLC can access the customer's ultrasound remotely.
- Local Access via Windos Start Menu All Programs Voluson GE Field Engineer Common Service Desktop
- NOTE: A Service Dongle and the "Standard GE Revolving" password (password changes every six months) is necessary when performing proprietary level diagnostics on the Voluson[™] P8 / Voluson[™] P6 ultrasound system.

5-12-2-1 Local Access

- 1.) If not already in read mode, **FREEZE** the image.
- 2.) Press the **UTILITIES** key on the control console.
- 3.) In the Utilities menu select <u>SETUP</u> button to invoke setup desktop on the screen.
- 4.) Connect the USB "standard GE" service dongle to the USB connector(s) on the rear of the system. As soon as the dongle is detected the login window pops up. Remove the dongle.
- 5.) Enter the "Standard GE Revolving" password (changes every six months) and then click ENABLE.
- 6.) On the right side of the screen select ADMINISTRATION and then click on the SERVICE tab.
- 7.) Click the $\overline{\text{CSD}}$ button.
- 8.) As soon as the GEHC Service Home Page appears, select "GE Service" from the pull-down enter the password (password changes every six months) and then click [Okay].

	<u>.ogin</u>	Servic
		Hospital Nan
	Voluson P8	System Type
	00006	CRM Numbe
select : GE Servic	Contine R	elect User Level
	Service	
enter current GE		nter Password

Figure 5-23 Service Login

The Common Service Desktop (CSD) is started and the **[Home]** page - containing basic System Information - appears. The navigation bar at the top of the screen allows to select different tools.

For more detailed information and description refer to Section 5-13 on page 5-49.

5-12-2-2 Remote Access

- NOTICE Remote access is ONLY possible if the service platform(InSite) is properly configured (either by the user or a GE technician at site). Operation see: Section 3-13-8 "Insite Exc Configuration" on page 3-89.
 - NOTE: ONLY registered GE Service personal have access to this feature.

InSite ExC allowas GE technicians to view the entire customer's desktop and operation system. Using VCO(Virtual Console Observation) a service technician or the OLC(OnLine Center) can access and modify all settings and programs or run diagnostics on the customer's Voluson P-Series system.

Remote access to the Voluson[™] P8 / Voluson[™] P6 System requires permission and customer before a GE service technician or OLC can access the customer's system remotely.

Every access request (whether successful or not), as well as actions and changes, will be logged into a service access log that is viewable to authorized users.

"Disruptive Mode" can be selected by the customer directly on the Voluson[™] P8 / Voluson[™] P6(as described below), or requested remotely by the service technician or OLC.

NOTE: For login to Total Access Session via Internet Explorer on remote workstation, see

Section 5-13 Common Service Desktop (CSD)

The system Platform contains a set of software modules that are common to all ultrasound and cardiology systems. The Service Platform will increase service productivity and reduce training and service costs.

5-13-1 Internationalization

The user interface provided by the service platform is designed for GE personnel and as such is in English only. There is no multi-lingual capability built into the Service Interface.

There are different possibilities to access the Common Service Desktop and its available features:

- 1.) Local Access via System Setup Administration SERVICE page
- 2.) *Remote Access* This offers the possibility to view the entire customer's desktop and peration system. Remote access to the Voluson P-Series system requires permission and customer input before a GE service technician or OLC can access the customer's ultrasound remotely.
- 3.) Local(Extended) Access by Windows Start Menu All Programs Voluson GE Field Engineer -Common Service Desktop
- NOTE: A Service Dongle and the "Standard GE Revolving" password (password changes every six months) is necessary when performing proprietary level diagnostics on the Voluson[™] P8 / Voluson[™] P6 ultrasound system.

As soon as the Common Service Desktop (CSD) is started, the Service [Home] Page appears.

It contains the software revision along with the hardware inventory and the results of the latest System Health Information.

-) (2)		à lõi				
	System Information	and the second second second second second second second second second second second second second second second		Carry Series State	Particular and the second second second second second second second second second second second second second s	
Briti	Information Section Con-	Sum		Contraction of the second	Private Contraction of Contraction o	Noneters 1
Str /.	DOC MAIL	+1	B	Mar Inc. Contractor		
ous Type	Veture E10	E F	Annual Sector	17.48.48		
igi Dumbar	AMODA		D Resident strates	and the second se	in the second second second second second second second second second second second second second second second	100 C 100 C
Ice ExC Denses Name	KE1052000	*	Application Infinant	64.8.4.1783	Aug 04 2014	Surgist.
d Mainline	KE1182000	a)	In the second second second second second second second second second second second second second second second	174 9 1743	and on some	and the state
Addrew (1014)	5 246 48 25	A.		States Realth Information		
Address (UP#)	640-3x154566440389601300238844133884407	+7	Design of the second second second second second second second second second second second second second second		Menades	
incast.	251.253.255.0	P	Parray On Finant	1211 618 16	and () (
aray .	1.249.68.254	+2	and the second se	ProDing Information	1.	
Atomia .	EAGULE	· · · · · · · · · · · · · · · · · · ·	Tark News	Lan Provide	None Contractory of States	
eess Leval	Class M	Lys line Mrs Aug 14 17 28 48 (E17 2014	last op Tailt	Nan Reserves	NOT RORDED AND	
tion Connectivity	Costigued	The Checked Out		and the second sec		
Anthe Ageobal Tomasi	2.2.17 (We31) - 6.0.36	+1		the other the state of the stat	ulate i	
nim Area VM	1 6 8,23 404	15)		Propage (rec) 10 .*		
HIR OD CRI	Pigtioon Isotal					
	and the second se					
niny Terffinm	CITERIA SI S	*/				
nor Terfform with Vyenam	D					
naar TedYinn salt Verson var Elatory	10 10 10 Biosoy analatie	Į.				
naar Technan ool: Verson nai Eidory	Consector Freder	-				
nor Jeffinn of Venne te Eday	D Conserved Problem Conserved Problem Section Vice	Stewn				
auer Techtinen och Verson och Elektry Brite Elektry ME-6-13-D-172111	CE_CONTROLS_ST 10 10 10 10 10 10 10 10 10 10	- 				
ner Fedrier uit Venan ver Ridory MLA-11-D (2011)	Conserved Protes P Ro Elevery analytic Conserved Protes Servicition Conserved Protes Conserved P	States				
ner Jedfien ab Venne er Entery Breu M.4-13-D-192111 Opten Name	CLEARING AND AND AND AND AND AND AND AND AND AND	Dama C				
ner Tedfinen eit Venne ner Eblory htt.6-11-D (2011) Optim Name	Conserved Probes De Encoy analate Conserved Probes Security Conserved Option Jonal Option Star	- Stans Active				
And Angel States	CLEARING AND AND AND AND AND AND AND AND AND AND	See				
And Them and Testery Testery MERICAL CONTROL Option Name world AD ME Soptim	Construction of the Construction Problem D So Elsony analaties Construction Problem Options Installed Op	Scene Arter				
A Versa di Versa Salary Salary Optim Name and HD di E ovel M	CLEARING AND AND AND AND AND AND AND AND AND AND	Sona Jarra U				
International Activity of the Second	CLEARTERS 3.5 F 10 To theory analytic SerialVia Analytic Particular Control Provide Control Pr	Sona Jerre				
North Annual Section 2017 Secti	CLEARING AND AND AND AND AND AND AND AND AND AND	Sona Jerre U				
North Territorian North Version and Elatory <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Datase</u> <u>Dat</u>	CLEARING AND AND AND AND AND AND AND AND AND AND	Sana June N				
International Sectors International Sectors International Sectors International AD International A	CLEARTERSTE 10 10 10 10 10 10 10 10 10 10	Bona Jerre H				
Inter Profilems Inter Venesies Inter Venesies Inter Venesies Option Name aussid 4D NE Volt Inter Venesies Inter Venes	CLEARING AND AND AND AND AND AND AND AND AND AND	Sana June N				
International States International States	CLARITESTST 17 17 18 Discover analysis Conserved Probes Conserved Probes Conserved Probes Conserved Probes Conserved	Sona Jerre 10				
International Statements International Statements International Statements International Statements Optimized Statements Statements International Statements Internatio	CLEARING ST 10 10 10 10 10 10 10 10 10 10	Sana June N				
en 7-offens le Vreise te Biater ME-81-9-02111 Option Name Car syste and 420 Car syste and 52 Statistics	Construction State Parallele Construct Problem Construct Problem Construct Problem Construct Problem Construct Const	Bona Jerre H				
en 7-offsten le Neese le Blazer Media 2-0-102111 Option Nana Media 2-0-102111 Media 2-0-10211	CLEARING ST 10 10 10 10 10 10 10 10 10 10	Sana Juny				
en: 7-offens le Vereien Mesta de Catal Mesta de Catal Optime Nuese endel Da Catal Service sendel VC Service Service Service Mesta de Catal Service Serv	Construction of a second problem Second problem Construction Construc	Bona Jerre H				
ent Profilem ent Roberts bit Versen bit Roberts bit Roberts bit Roberts Deplem Stand dia control dia control dia control dia control dia dia dia dia dia dia dia dia	CLEARING AND AND AND AND AND AND AND AND AND AND	Scena Juliya N				
International States St	Construction of a second problem Second problem Construction Construc	Bona Jerre H				
Here Profiless Her Versee Here Versee Mill 4-31 20 (2011) Option Name All 4-31 20 (2011) Option Name All 5-3 Ord ¹⁰ Here Makes Will 2018 All 52 Here Makes Will 2018 Mill 2019 Table Here Mill 2019 Table Here Mill 2019 Table Here Mill 2019 Table Here Mill 2019 Table Here Mill 2019 Table Here Mill 2019 Table	CLEARING AND AND AND AND AND AND AND AND AND AND	Scena Active				

Figure 5-24 Common Service Desktop - Home

The navigation bar at the top of the screen allows to select from following tools for troubleshooting/ adjustment. For detailed description see

NOTE: Whenever any hardware diagnostic tests have to be executed on site, the CSD must be accessed via the Windows Start Menu - All Programs - Voluson - GE Field Engineer - Common Service Desktop

Section 5-14 Service Page

5-14-1 Introduction

The Service Page contains specific software/hardware test modules, system setup, update, etc. for Voluson systems only.

5-14-2 Access / Security

The service page has different access and security user levels. Each user is only granted access to the tools that are authorized for their use.

5-14-3 Service Login

- 1.) Press the UTILITIES key on the control console.
- 2.) In the "Utilities" menu select <u>SETUP</u> button to invoke the setup desktop on the screen.
- 3.) Connect the USB "standard GE" service dongle to the USB connector(s) on the rear of the system. As soon as the dongle is detected the login window pops up.Remove the dongle.
- 4.) Enter the "Standard GE Revolving" password (changes every six months) and then click ENABLE.
- 5.) On the left side of the screen select <u>ADMINISTRATION</u> and then click the **SERVICE** tab.
- 6.) Click the SERVICE TOOLS button to display the "Service Tools" page.



Figure 5-25 Service Tools page

1. Common Service Desktop	7. Show Factory presets	13. Load Application Settings and Factory Presets
2. Auto Tester	8. Monitor Test	14. Keyboard Layout
3. Update	9. Hardware Test	15. Console test
4. Request for Service	10. Connected probes	16. Exit
5. Export System Data	11. Probe EEPROM	
6. TCP/IP Buffersize	12. Delete all patients	

Section 5-14 - Service Page

5-14-3-1 Auto Tester

Autotester is a log function of customer activities. It records all user actions (scanning, entries, performing Calculations, review of Patient Reports, etc...). It is possible to safe (record) as file on HDD. But also export to DVD/CD can be done to allow replay of the records on other units.

NOTICE For intermittent problems this file can be requested from the Service Engineer or customer. It is possible to burn this file on DVD/CD+R/RW.

Operation see: Section 7-6 "How to use the Auto Tester program" on page 7-29.

5-14-3-2 Update

5-14-3-2-1 FMI from DVD

By means of the <u>FMI FROM DVD</u> button, the Systems C:\ image is partly or completely updated. The System Software parts to be upgraded depend on contents of the used System DVD.

- **PRECONDITION:** The first "Boot Device" in BIOS has to be **Hard Disk Drive**. To change BIOS Boot Priority Order setting, see
 - NOTE: During "FMI from DVD" the used system configuration (incl. Full Backup) will be stored on R:\. If required, the previously used System configuration (before FMI from DVD was performed) can be restored by activating the "**Rollback**" function. Operation see: Section 5-15-1-3 on page 5-57.

The Linux script uses a table, which describes the procedure to upgrade the current master image by the new one on the DVD. This table is sored as CSV text on the System DVD. It logs the development history of the master images via a successive Svn. nr. At the same time the steps necessary for upgrading an old image with a new one are defined.

〕 update.csv - Notepad	
File Edit Format View Help	
<pre>#svn nr,mandatory buegeln,application,MS pathches,peripherals,insite,settings,EU 10,8,UIS600,,P0001,,S0001,,10,10 11,,UIS600,,P0001,,S0001,,10,10</pre>	M,image,last mandatory fini svn nr 🔺

Figure 5-26 development history table (example)

# svn nr	Successive version number of the master image.
mandatory buegeln	B means that the systems C:\partition will be completely replaced by the image on the DVD
application	name/number of the Ultrasound Application Sotware
MS patches	name of the MS patch(es)
peripherals	name of the Peripherals driver installation program
insite	directory name of Insite service platform updates
settings	directory name of the new User Settings (Application Settings)
EUM	Electronic User Manual(EUM) files
image	version of image when "mandatory buegeln" = B
last mandatory FMI svn nr	version number of the last mandatory FMI

5-14-3-2-2 ASI - Additional Software Installation Click the <u>ASI</u> button to install additional software. The Software parts to be installed depend on the contents of the System DVD that is used.

5-14-3-2-3 Restore Software Click the <u>RESTORE SOFTWARE</u> button to restore the system software from your hard disk. The installation procedure starts with saving and recording the settings present on the system (silent "Full Backup" and "Rollback"). During the software restore the system will restart several times.

- NOTE: Please make sure that ONLY the DVD writer is connected on the USB ports. Disconnect all otehr external USB devices (such as printers, hubs, bluetooth, memory devices) as this might interfere with the recovery/installation procedure.
- NOTE: Existing User Programs, 3D/4D Programs and Auto Text remain unaffected! Therefore it is not necessary to perform any readout preparations.

5-14-3-3 TCP/IP Buffersize

The TCP/IP Buffersize selects the amount of buffer memory used for DICOM transfers (both directions).

5-14-3-4 Show Factory Presets

Select the Show Factory Presets button to display User and Factory Presets (probe settings).

5-14-3-5 Common Service Desktop (CSD)

Access to the Common Service Desktop (CSD) by entering security user level and password. Each user is only granted access to the tools that are authorized for thier use.

5-14-3-6 Request for Service(DRFM)

Fill out the "Request For Service" form and then send the problem description to GE Service/Application representatives. Operation see: Section 7-2-1 "Request for Service (DRFM)" on page 7-4

5-14-3-7 Delete all Patients

1.) Click the DELETE ALL PATIENTS... button. Following WARNING message appears on the screen.



Figure 5-27 Warning message

WARNING If you select the YES button, all patients data, studies, images and measure report data will be deleted permanently from the hard disk and cannot be recovered!

5-14-3-8 Export System Data

Select the <u>EXPORT SYSTEM DATA</u> button on the "Service Tools" page to Full Backup the System State. This includes dump-files and text files, the full Service Database informations about probes, boards, Software, Options and the Event Log File to the DVD Drive. Operation see: Section 7-4-3 "Export Log's and System Data" on page 7-14.

5-14-3-9 Console Test

Select the MONITOR TEST button to check control console function.

Operation see

5-14-3-10 Keyboard Layout

To change the keyboard layout to different languages. Operation see: Section 6-4 "Modification of Keyboard Layout" on page 6-3.

NOTE: Reconfigure the layout of the keyboard is only useful by changing the concerned keys also. see: Section 8-51 "Replacement of AN KEY TOP" on page 8-155

5-14-3-11 Monitor Test

Select the MONITOR TEST button to perform color calibration. Operation see: Section 6-3 "LCD Monitor Adjustment" on page 6-2.

5-14-3-12 Connected Probes

Select the Connected Probes button. The "Probe Status" window supplies information about type and serial number of connected probe and which position is used for it. There is no edit function included.

Probe Sta	atus			x
Connector	lett probe connector (4		
ID	ML6-15-D (0x0211)			
Serial No:	670952930			
	Previous	-	Next	ок)

Figure 5-28 Probe Status

5-14-3-13 Load Application Settings

If the Tune version of the Application presets does not match the Application Software version, it is probably that there are adverse affects on image quality (e.g., after reloading an old "Full Backup").



NOTICE When reloading these Application Settings, any existing User Programs, 3D/4D Programs and Auto Text **remain unaffected**!

- 1.) Select the LOAD APPLICATION SETTINGS button on the "Service Tools" page (Figure 5-25 on page 5-50).
- 2.) Choose the media and then click \overline{LOAD} .

Application Settings Load			×
Choose media:			
• Internal HDD 🛥			
DVD/CD			
Network	NW Drive 1 (Z:) \\atzipfsv01\atzipall		
External USB Drives			
R:\Factory			•
d:\UserSettings\			
			Change folder
		Cancel	Load.

Figure 5-29 Application Settings Load

3.) Select the desired file and then click \overline{OK} .

Load procedure starts immediately including a reboot of the system.

NOTICE If the ID of the Application Setting is not valid for the currently installed Application Software version, a warning message *"Application Settings from selected backup are not compatible with current system. Application Settings have not be loaded."* appears during boot up sequence.

4.) If warning message is displayed, confirm it with <u>OK</u> and then load appropriate Application Settings (perform loading procedure as described in steps above).

5-14-3-14 Probe EEPROM

NOTE: It is recommended to connect and re-program one probe after the other.

CAUTION Do not assign wrong coding (e.g., programming a RAB to a RIC probe). An inaccurate probe programming will mostly likely damage the probe and/or system.

- Click the *Probe EEPROM* button on the "Service Tools" page (see Section Figure 5-25 "Service Tools page" on page 5-50
- 2.) Check and/or choose correct probe name from the pull-down menu (1).

Probe EE	PROM			×	
Probe C	Connectors				
	Choose a Probe-Name ()R enter hexadec in	ial Piobe-ID:		\square
CW	A H	B	C		$\neg \cup$
	ML6 15 D (0211)				
SNO.	670952930 <>=				-2
Start date		1 07 72 2014	<u> </u>	014 <u>- E</u>	-(3)
	-	(ren			
	EEProm to ".txt	EEProm to	LEPR	om to stat	
					\square
		OK (GLC	BAL EEPROM)	Cancel	

Figure 5-30 Probe EEPROM

- 3.) Check and/or enter probes Serial Number in the appropriate [SNO] filed(2).
- 4.) Select "Today" from the Start date pull-down menu(3).
- 5.) Click the **OK** (Global **EEPROM**) button(4).

NOTE: **DO NOT** disconnect the probe during the re-programming process!

Probe ID and coding is assigned to the probe that is connected to the selected prot.

6.) Confirm with OK.

Section 5-15 Boot Screen Functions

5-15-1 Overview

NOTE: Prior to the "Boot Screen" (see figure below), the BIOS version is shown on the monitor: Following LINUX supported functions are available as soon as the "Boot screen" appears:



Figure 5-31 Boot screen

NOTICE After 3 sec. without pressing any key, the system will boot-up in windows (= **Voluson** item). If you missed selection, retry again with Ctrl+Alt+Del.

5-15-1-1 Voluson

The System will boot-up in windows. The Ultrasound Application is started. For details refer to Section 3-6-2-3 "During a normal boot, you may observe" on page 3-28.

5-15-1-2 GE-Service

The Voluson Maintenance System functions are secured by service password (class C).

- 1.) Turn system OFF and then back ON.
- 2.) As soon as the "Boot Screen" appears (see: Figure 5-31 above), press the **PG DN** [Arrow down] key on the keyboard until the **GE Service** item is highlighted, then press **ENTER**.
- Enter the Password Rudi (case sensitive) and confirm with ENTER. The system boots into LINUX.

CAUTION After 3 sec. without pressing any key, the system will boot-up in windows (= **Voluson** item). If you missed step 2, retry again with **CTRL + ALT + DEL**.

5-15-1-3 Rollback

This function offers the possibility to simply restore the previously used system configuration (rollback), which was stored on R:\ during "FMI from DVD".

- 1.) Turn system OFF and then back ON.
- As soon as the "Boot Screen" appears (see: Figure 5-31 on page 5-56), press the <u>PG DN</u>
 [↓ Arrow down] key on the keyboard until the **Rollback** item is highlighted, then press <u>ENTER</u>.

CAUTION After 3 sec. without pressing any key, the system will boot-up in windows (= **Voluson** item). If you missed step 2, retry again with **CTRL** + **ALT** + **DEL**.

3.) When the following WARNING message appears, press the $\overline{\leftarrow}$ [Arrow left] button to highlight \overline{OK} and then press **ENTER**.



Figure 5-32 Warning message

After performing the rollback, the system reboots.

The Ultrasound Application is started and finally the 2D screen is displayed on the monitor.

5-15-1-4 Memtest(Memory Check)

- 1.) Turn system OFF and then back ON.
- 2.) As soon as the "Boot Screen" appears (see: Figure 5-31 on page 5-56), press the PG DN
 [↓ Arrow down] key on the keyboard until the Rollback item is highlighted, then press ENTER.

CAUTION After 3 sec. without pressing any key, the system will boot-up in windows (= **Voluson** item). If you missed step 2, retry again with **CTRL** + **ALT** + **DEL**.

3.) The PC Memory Test will start automatically and will take about 2.5 hours. If there are errors they will be listed.

Intel Core L1 Cache: L2 Cache: L3 Cache: Menory : IMC : Settings:	Gen2 270 32K 90 256K 40 3072K 33 8104M 16 Intel(R RAM : 800	0 MHz 002 MB/s 910 MB/s 334 MB/s 564 MB/s) Core(TM MHz (DDR:	Test 2; Test #3 Testing Pattern i5-3610 3-1600) /	EMovin : 184K : 8080 HE CPU @ CAS : 1	g inv - 204 8080 2.70 1-11-	ersion 8M 810 GHz / 11-28	s,8b 4M BCLK /Dua	it patto : 100 MH I Channe	ern] Hz el	
WallTime	Cached	RsvdMen	MenMap	Cache	ECC	Test	Pass	Errors	ECC	Errs
0:00:19	8104M	868K	e820	on	off	Std	0	0		

Figure 5-33 Memory check in LINUX

- NOTE: After one cycle(~2.5 hours) the memory check starts again. To interrupt the test, press the Ctrl + Alt + Del key. If you don't interrupt the memory test, it will perform never ending cycles of memory checks.
- NOTE: If after one cycle (about 2.5 hours), no error messages are listed, it can be assumed that the Back End Processor including power supply is working properly.

Section 5-16Windows Start Menu

GE field engineers can find frequently used tools within a sub folder of the Windows Start menu.

- 1.) Turn power on (let system start up completely).
- 2.) Connect the USB "Standard GE" service dongle to the USB connector(s) on the rear of the system. As soon as the dongle is detected the login window pops up. Remove the dongle.
- 3.) Enter the "Standard GE Revolving" password(changes every six months) and then click *Enable*.
- 4.) Press Ctrl + ESC keys simultaneously and open the Windows Start menu.

Windows Explorer		anncare
RebootRecovery	Documents Computer Network Control Panel Devices and Printers	GE Field Engineer Image: Command Prompt Production Image: Computer Management SysDVD Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image: Computer Management Image
Search programs and files	Shut down	

Figure 5-34 Windows Start Menu

Description of Sub folder "GE Field Engineer"

Table 5-6 Sub folder "GE Field Engineer"

Windows Tool	Description
Command Prompt	Performs text-based (command-line) functions.
Common Service Desktop	Access to
Event Viewer	Displays monitoring and troubleshooting messages from Windows and other programs
Monitor Test exe	Activates Monitor test, operation see
Notepad	Creates and edits text files using basic text formatting.
Paint	Creates and edits drawings and displays and edits scanned photos.

Table 5-6 Sub folder "GE Field Engineer"

Windows Tool	Description
Remap Drive Letters	Automatically reassigns drive letters: C: System, D: User, F:CD-Drive, R:Rescue
Service Manual	Displays the Proprietary Service Manual of the system
show hidden devices	Device Manuager shows all devices (e.g. USB, drive devices), ever used on this system
Start DVD-FMI	Activates FMI from DVD-WITHOUT creating a Full Backup! It is highly recommended to use the FMI from DVD button in th System Setup - Service page to update the System Software. Operation See
Start Linux auto	System boots into
Start Restore	Activates Restore C: from recovery partition (R:); operation see
Start Rollback	Activates Rollback; operation see
Taskmanager	Provides information about programs and processes running on the computer. it also displays the most commonly used performance measures for processes.
WinExplorer	Displays files and folders on the computer.
Word Pad	Creates and edits text documents with complex information.

Further functions in the Start Menu

Table 5-7further functions

Wondows Tool	Description
Voluson	Shortcut to start the Ultrasound Application. If activated when application is already running, it kills this application.

Section 5-17LINUX - Voluson Maintenance System

5-17-1 Overview

The Voluson[™] P8 / Voluson[™] P6 systems contains the "Voluson Maintenance system" with improved service functionality (e.g., restore software/recover partitions) +

possibility to perform extended PC Memtest (see: 5-15-1-4 "Memtest(Memory Check)" on page 5-58).

NOTE: It is highly recommended to use the System DVD(see), which contains:

- Linux rescue partition
- System "C:" image
- Ultrasound Application Software [UIS]
- Image (Application) Settings [Backup]
- Service Platform
- Electronic User Manual [EUM]
- Drivers for Peripherals (e.g., printer)
- Scripts

5-17-1-1 General Operation and Selection in LINUX (and BIOS) menu

General operation and selection in BIOS and LINUX menu is done with:



- the alphanumeric keyboard
- the "Arrow" keys [left] , [right] , PG UP [up] , PG DN [down] and
- the "Enter" key on the keyboard

5-17-2 Access/Security

There are different possibilities to access the LINUX "Maintenance System" and its available functions:

- System is still responsive: (starts up without problems, application software is running as usual)
- * via Boot Screen Functions GE Service: functions are secured by service password (class C)

* via Windows Start Menu (for GE Field Engineers ONLY): by means of service dongle and GE password

- System is NOT responsive: (booting from System DVD is required)
- * via NewDisk: changing the BIOS "Boot Priority Order" Setting is necessary

5-17-3 Before Recovering or Initializing the Hard disk

CAUTION If the system is still responsive (system starts up without problems and the application software is running as usual, try to print out or write down System Setup and Measure Setup settings; because they could be lost. Even if most of these settings can be restored after the installation, it is strongly recommend to record them before starting the procedure. Disconnecting ALL external USB devices (except DVD/CD+R/RW drive) is NECESSARY. Re-adjusting those settings and re-installation of any previously attached printer has to be done after the recovery procedure

CAUTION If the system is suspected to be infected with a virus, it is highly recommended to disconnect the network cable before starting the system.

- 1.) Boot up the system, connect a probe and start any user program.
- 2.) Press the UTILITIES key on the control console.
- 3.) In the Utilities menu, select **SETUP** button to invoke the setup desktop on the screen.
- 4.) On the right side of the screen select **ADMINISTRATION**:
 - Click the OPTIONS tab to see which options are currently installed in the system.

Please print out this page or write down the the state of the option (P = Permanent, I = inactive) and the "Permanent Key". If this was not possible, contacting the OLC will be necessary.

NOTICE If the currently installed software has to be upgraded to a newer version, a new software specific "Permanent key is required. (Calculated in OKOS - Option key Order System; <u>http://3.187.187.9/</u> <u>OKOS</u>. For detailed description see . If you do not have permission to access OKOS, contact the On Line Center to get the mecessary key.

- Click the **Service** tab, enter the password SHE and then click **Accept**. In the displayed Service Tools window click the **Keyboard Layout** button to check the default input language setting.

- Click the System Info tab and check Software Version and date of the "Factory Settings"

(see:Section Figure 7-1 "System Setup - Administration - SYSTEM INFO page (e.g., VP8)" on page 7-3).

5.) On the right side of the screen select **BACKUP**:

- Click the **SYSTEM CONFIGURATION** tab and then click on the **SAVE** button of the "Full System Configuration" group. Select destination, enter description and then click on <u>NEXT.</u>

For more details about "Full Backup" see: Section 4-5-3 on page 4-37.

- Click the **IMAGE ARCHIVE** tab and then click on SAVE.

Select destination, enter the description and then click on NEXT.

For more details about saving the Patient Image Archive, see: Section 4-4-1 "Patient Archive (Image Management)" on page 4-9

- 6.) On the right side of the screen select CONNECTIVITY:
 - Click the **Device Setup** tab and Click the **NETWORK CONFIGURATION** button and print out the "internet Prodocol (TCP/IP) Properties" dialog page or write down the IP settings.
- 7.) On the left side of the screen select GENERAL SETTINGS:
- Click the **GENERAL SETTINGS** tab and print out or write down the Time format setting.
- 8.) Disconnect all external USB devices (such as printers hubs, bluetooth, memory devices) as this might interfere with the recovery/installation procedure.
- NOTE: Do **NOT** disconnect the Disk Drive Module.

5-17-4 Voluson Maintenance System - Main Menu

Enter Linux as described in Section 5-17-2 "Access/Security" on page 5-61.

The "Voluson Maintenance System" main menu with following functions appear:

(current IF	address: 127.0.0.1)
use the UP/	DOWN key to navigate
Please sele	et:
Media Advanced About Exit/Reboot Halt	Enter the Media Menu (CD>DVD>USB-Stick) Advanced Functions Menu Display Version Info Restart the system Shut the system down

Figure 5-35 Voluson Maintenance System - Main menu

5-17-4-1 Media

This item switches to the Media Menu (see: Section 5-17-5 "Media Menu" on page 5-65).

It is required that the System DVD is in the drive.

However, if it is necessary to create a "New Hard disk", which contains factory default partition images

(Linux, C:, D: and R:), booting from System DVD is required.

To change "Boot Priority order" in BIOS and setup new HDD, see: "NewDisk" on 5-69.

5-17-4-2 Advanced

This item switches to the Advanced Functions Menu (see: 5-17-6 "Advanced Functions Menu" on page 5-75) that contains the functions "Restore" and "Initialize".

5-17-4-3 About

This item displays various version strings from the Linux system.

5-17-4-4 Exit/Reboot

This item exits the maintenance system and reboots the system.

5-17-4-5 Halt

This item exits the maintenance system. Afterwards the power may safely be turned off.

5-17-5 Media Menu



NOTICE The "Media Menu" is **only** accessible if the System DVD (see: Table 9-13) is inserted into the system's DVD/CD+R/RW Drive

- 1.) If system functionality allows it, collect vital system information as described in 5-17-3 "Before Recovering or Initializing the Hard disk" on page 5-62.
- 2.) Insert the System DVD into the DVD/CD+R/RW Drive.
- 3.) In the "Voluson Maintenance System" main menu (Figure 5-35) select [Media]. The "Media Menu" with following functions appear:

ase sele	Poturn from this many
Restore	Restore C: and R: from MEDIA, keep data on D:
NewDisk	Complete new harddisk setup (all data will be lost)
About	Display Version Info
Shell	Start a shell

Figure 5-36 Media Menu (sample)

NOTE: The "NewDisk" function is only available when booting from DVD.

5-17-5-1 Exit

Return to the "Voluson Maintenance System" main menu.

5-17-5-2 Restore

This function takes the image stored on the "System DVD" to replace the existing image of the "C" partition. Additionally the (R:) Rescue image of (C:) is replaced by the "DVD image".

The System "C" image contains:

- Windows 7 with patches
- Ultrasound Application Software [UIS]
- Image (Application) Settings [Backup]
- Electronic User Manual [EUM]

NOTICE Data on the D: [User] partition (e.g., Patient Archive images, Service Database, Measurements, Patient Data and Reports) will NOT be modified!



NOTICE 1. Press Utilites -Setup - Administration - Options tab and print out this page or write down the " Permanent key"

2. Gather full system configuration by saving a "Full Backup" via Backup = System Configuration, as described in Section "4-5-3 Save Full System Configuration (Full Backup) (cont?)" on page 4-17

Operation:

- 1.) Select [Restore] in the displayed "Media Menu" (see: Figure 5-36 above).
- NOTE: If the message: "Recovery system (Linux) needs to be updated ..." appears, confirm with <u>YES</u>.
- NOTE: If the currently installed software has to be upgraded to a newer version, a new software specific "Permanent key" is required.
 - a.) Enter the appropriate "Permanent Key" (calculated in OKOS; http://3.187.187.9/OKOS), select OK and confirm with Enter.



Figure 5-37 enter permanent key

.If the entered Permanent key is correct, following window appears, confirm with Enter.

Correct permanent key: 2d14e7cb10091009a4118293	
<u>< 0x ></u>	

Figure 5-38 confirm key

2.) Only if you are sure you have saved the "Image Archive" and "Full System Configuration", select Yes in the following dialog box and confirm with Enter.

Restoro C: and R (Harning: all da	Hear : from CD/DUD, k ta on C: will be	nee eep data on D: ? overwritten)	
	<u>∢⊻</u> es⊃)	< No >	

Figure 5-39 confirm dialog with YES

- NOTE: If the message: "Found obsolete image files on R:...." appears, select Yes and confirm with Enter.
 - 3.) Recovering will task some time.

Please wait until the final window (see figure below) appears and then press Enter.



Figure 5-40 Restore C; done

4.) In the displayed menus select [Exit] -> [Exit/Reboot].



Figure 5-41 Exit -> Exit/Reboot

5.) Remove the System DVD from the DVD/CD+R/RW Drive drive.

NOTICE The system boots with windows. An automated process was developed to check disk, assign an unique computer name and matching drive letters. **The system will reboot at least 2 times!**

6.) Please wait until all processes are finished and the final "DOS" window (Figure 5-42 below) appear.



Figure 5-42 press "A" key to start UISApp

7.) Press **A** key to activate the Ultrasound Application Software [UIS].

8.) If prompted, enter the proper "Permanent key" and then click **Submit**.

UISApp	
The BT-option is not set. T without using the ultrasoun You can enter a valid opti Utilities / System Setup / C	The machine will boot Id hardware. on key here or later in Options.
Submit	Continue

Figure 5-43 enter Permanent key

- NOTE: Options will be recovered at a later step using "Full Backup" process.
 - 9.) Customize the system as described in Section 5-17-8 on page 5-80.

NOTE: The "NewDisk" function is **ONLY** available when booting from System DVD.

This function performs operations which result in complete data loss of all files on the entire hard

disk. It re-initializes the hard disk using partition images on the System DVD (setup to factory default).

WARNING COMPLETE DATA LOSS ON THE ENTIRE HARD DISK. Also data on D:\[User] partition (e.g., Patient Archive images, Service Database, Measurement results, Patient data and Reports) will be lost and can not be carried over to the new hard disk.

- **NOTICE** However, if system functionality allows it:
 - save the patient images and corresponding patient data
 via System Setup Backup IMAGE ARCHIVE, as described in Section 4-5-6 on page 4-21
 - gather full system configuration by saving a "Full Backup" via System Setup - Backup - <u>SYSTEM CONFIGURATION</u>, as described in Section 4-5-3 on page 4-16

Backed-up data can be restored after new hard disk setup.

The resulting hard disk contains factory default partition images (Linux, C:, D: and R:); independent of

previous hard disk contents.]

- C:\ [System]: Windows 7 with latest patches, Ultrasound Application Software [UIS], Image Settings [Backup], Service Software [SSW] and Electronic User Manual [EUM]
- D:\ [User]: Initialized Databases for Measurements, Patient Archive Images, Data and Reports
- R:\ [Rescue]: Rescue image of C:\, Printer Driver
- NOTICE Please make sure that ONLY the DVD writher is connected on the USB ports. Disconnect all other external USB devices (such as printers, hubs, bluetooth, memory devices) as this might interfere with the recovery/installation procedure.
- **NOTICE** The BIOS "Boot Priority Order" Setting has to be changed before the New Hard Disk Setup.

NOTICE If the currently installed software has to be upgraded to a newer version, and the system DVD being, used is SPC310 or higher, a new software specific "Permanent key" is required.

5-17-5-3-1 BIOS "Boot Priority Order" Setting

General operation and selection in BIOS and LINUX menu is done with:

- Image: PgUp

 Image: Home

 Image: Home

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: End

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Image: PgDn

 Im
- the alphanumeric keyboard
- the "Arrow" keys [left] , [right] , PG UP [up] , PG DN [down] and
- the "Enter" key on the keyboard

- NOTE: Depending on the installed PC-Motherboard version, different BIOS versions are available. The displayed screens may slightly differ from images shown in this manual.
 - 1.) Insert the System DVD into the DVD Drive.
 - 2.) Turn system off and then back on.
 - 3.) During startup, press the DEL key immediately, to enter the BIOS Setup.
 - 4.) Enter the BIOS password: polaris (case sensitive) and then press Enter.
 - 5.) Use the "Arrow" keys [<-] or [->] on the alphanumeric keyboard to select the [Boot] tab.
 - 6.) Using the keys [PgUp] (Arrow up) and [PgDn](Arrow down) on the alphanumeric keyboard select **Set Boot Priority** and then press **Enter**.

- 7.) Press the [-] key on the keyboard to change the "Boot Priority" order:
 - 1st Boot: from Hard Disk (SATA 2 Drive) to DVD-Drive (SATA 0 Drive)
 - 2nd Boot: from DVD-Drive (SATA 0 Drive) to Hard Disk(SATA 2 Drive).

Quiet Boot	[Enabled]	▲ 2nd Boot Device
Setup Prompt Timeout	2	
POST/Setup VGA Support	[Disabled]	
Bootup NumLock State	[0n]	
Battery Support	[Auto (Battery Manager)]	
System Off Mode	[G3/Mech Off]	
Power Loss Control	[Remain Off]	
AT Shutdown Mode	[Hot S5]	
Enter Setup If No Boot Device	[Yes]	
Enable Popup Boot Menu	[Yes]	a second and a second second second
Boot Priority Selection	[Type Based]	
		++: Select Screen
Type Based Boot Priority		T4: Select Item
1st Boot Device	[SATA O Drive]	Enter: Select
2nd Boot Device		+/-: Change Opt.
and Boot Device	[USB Harddisk]	F1: General Help
4th Boot Device	[Disabled]	F2: Previous Values
5th Boot Device	[Disabled]	F9: Uptimized Defaults
6th Boot Device	[Disabled]	F10: Save & Exit
7th Boot Device	[Disabled]	ESC: EXIT
	[Disabled]	

Figure 5-44 Save & Exit -> Set Priority

- 8.) Press the F10 key on the alphanumeric keyboard.
- 9.) Confirm the message with **Yes** and **Enter** to reboot the system. Proceed with

5-17-5-3-2 New Hard Disk Setup

- NOTE: If not already done, change BIOS "Boot Priority Order" as described in Section 5-17-5-3-1 on page 5-70.
 - 1.) Wait for automatic boot into the "Voluson Maintenance System".
 - 2.) In the displayed menus select [Media] -> [NewDisk] and then press ENTER.

	Return from this menu Restore C: and R: from MEDIA, keep data on D:
lewDisk	Complete new harddisk setup (all data will be lost)
bout	Display Version Info

Figure 5-45 Media -> NewDisk

3.) The following warning message will be displayed.



Figure 5-46 WARNING! WARNING! WARNING!

4.) ONLY if you are absolutely sure, select YES and then confirm with ENTER.

NOTICE If you select YES, all data on the entire hard disk will be lost and can not be recovered! This includes all stored images and patient data!

5.) Creating a new disk will take some time.....

Please wait until the final window (Figure 5-47 below) appears and then press ENTER.

New Harddisk setup OK	
	<u>< 0</u> K >

Figure 5-47 New Harddisk setup OK

- 6.) Remove the System DVD from the DVD/CD+R/RW Drive.
- 7.) In the displayed menus select [Exit] -> [Exit/Reboot].



Figure 5-48 Exit -> Exit/Reboot

- 8.) During startup, press the **DEL** key immediately, to enter the BIOS Setup.
- 9.) Using the "Arrow" keys [<-] or [->] on the alphanumeric keyboard select the [Save&Exit]tab.
- 10.)Select *Load GE BIOS Setting xxxx* ("xxxx" is the installed BIOS version) and then press **Enter**. This changes the "Boot Priority" order back to 1.Boot:Hard Disk.
- 11.) Press the F10 key on the alphanumeric keyboard to save configuration changes
- 12.)Confirm the message with Yes and then press Enter.
- NOTE: The system boots with windows. An automated process was developed to check disk, assign an unigue computer name and matching drive letters. The system will reboot at least 2 times!

13.) Please wait until all processes are finished and the final "DOC" window (see figure below) appear.



Figure 5-49 press the "A" key to start UISApp

14.) Press <u>A</u> key to activate the Ultrasound Application Software [UIS].
15.) If prompted, enter the "Permanent key" and then click *Submit*.

UISApp	
The BT-option is not set. without using the ultrasou You can enter a valid op Utilities / System Setup /	The machine will boot nd hardware. tion key here or later in Options.
Submit	Continue

Figure 5-50 enter Permanent key

16.)Customize the system as described in Section 5-17-8 on page 5-80.

5-17-6 Advanced Functions Menu

- 1.) If system functionality allows it, collect vital system information as described in Section 5-17-8 "After Recovering or Initializing the Hard disk" on page 5-80.
- 2.) Enter Linux as described in Section 5-17-2 "Access/Security" on page 5-61.
- 3.) In the "Voluson Maintenance System" main menu (Figure 5-35) select [Advanced]. The "Advanced Functions Menu" with following functions appear:

Welcome to	the Voluson Advanced Service Menu.
(current IP	address: 127.0.0.1)
use the UP/	DOWN key to navigate
Please sele	et:
lxit	Return to main menu
etwork SHD	Start an SSHD (secure shell daemon)
	[Restore C: from R: command disabled]
	[Initialize Hard Disk: command disabled.

Figure 5-51 Advanced Functions Menu

5-17-6-1 Exit

Return to the "Voluson Maintenance System" main menu.

5-17-6-2 Network

This item provides an easy interface for network setup.

The [Network] function is not intended for use in the field.

5-17-6-3 SSHD

By selecting this item, a SSH-daemon is started on the system.

The [SSHD] function is reserved for extended troubleshooting. Not intended for use in the field.

5-17-6-4 Restore C : from recovery partition(R:)

This image stored on the Rescue (R:) partition is used to replace the existing image of the "C" partition.

- NOTE: **Data on the D: [User] partition** (e.g., Patient Archive images, Measurement results, Patient Data and Reports) will NOT be modified!
- NOTE: "Permanent key" is required!(Utilities System Setup Administration Option tab)
- **NOTICE** The [Restore] function should only be performed if **NO** System DVD is available! If you have a System DVD, please select the [Restore] function that is available in the CD-ROM Functions Menu; see:Section 5-17-5 on page 5-65

5-17-6-5		Initialize Hard (C: and D:) This function performs operations which result in complete data loss of all files on C:\ and D:\
		partition. The image on the on the Rescue (R:) partition of the hard disk is used for restoring C:\.
	WARNING	All data on D:\(User) partition (e.g., Patient Archive images, Measurement results, Patient Data and Reports) will be deleted and re-initialized.
	NOTICE	The [Initialize] function should only be performed if NO System DVD is available! If you have a System DVD, it is highly recommended to use the [New Disk] function (see:Section 5- 17-5-3 on page 5-69), which is only available when booting from the System DVD

5-17-7 ServiceTools

- 1.) Enter Linux as described in
- 2.) In the "Voluson Maintenance System" main menu (Figure 5-35 on page 5-64) select [Advanced].
- 3.) In the "Advanced Functions menu" (Figure 5-51 on page 5-75) select [Service Tools]. The "Service Tools Menu" with following functions appear.

Welcome to	the Voluson Service Tools Menu.
(current I	P address: 127.8.6.1)
Please set	ect:
Exit	Return to Advanced menu
Shell	Open a shell
USB1ree SmartHDDtoct	Show USB Iree SMORT HDD long test
HDDWipeTool	HDD Wipe Tool (remove all Data on C: and D:
the second second second second second second second second second second second second second second second s	Collect Logs and copy to USB Stick
CollectLogs	
CollectLogs CheckLnkSpeed	Check link speed for special devices
CollectLogs CheckLnkSpeed	Check link speed for special devices

Figure 5-52 Service Tools Menu

NOTE: Use the keys [PgUp] (Arrow up) and [PgDn] (Arrow down) on the alphanumeric keyboard to "scroll" up/ down.

5-17-7-1 Exit

Return to the "Advanced Functions Menu".

5-17-7-2 Shell

By selecting this item, a Bash-shell is opened. Enter "exit" to return to the main menu. The [Shell] function is not intended for use in the field.

5-17-7-3 USBTree

The USB Tree displays connected devices and their respective hub. This enables easy control, whetherall devices are correctly wired.

USB Tree
/: 02.P1: ROOT_HUB, ehci_hcd/3p, 480M
I_ P1: If0, HUB, ∕8p, 480M 8087:0020:0.00
I_ P7: If0, HUB, ∕7p, 480M 0424:2517:0.02
L_ P1: If0, vend., , 12M 10c4:ea60:1.00 CP2102 USB to UART Bridge Cont
1_ P2: If0, stor., , 480M 04b4:6830:0.01 USB to IDE
L_ P7: If0, stor., , 480M 1e3d:2093:1.00 Mem.drive
l_ P8: If0, HUB, ∕7p, 480M 04cc:1521:2.00
/: 01.P1: ROOT_HUB, ehci_hcd/3p, 480M
I_ P1: If0, HUB, ∕6p, 480M 8087:0020:0.00
l_ P1: If0, HUB, ∕4p, 480M 05bd:6560:0.07
L_ P1: If0, HID, , 1.5M 05bd:0001:1.00 GE USnd, Extended Keyboard V83
I_PZ : If0, >ifc, , 480M 1731:0002:3.01 ArtistaUSB 640
I_ PZ: If1, >ifc, , 480M 1731:0002:3.01
i_ P3: If0, HID, , 1.5M 05bd:0200:0.00 GE USnd, Alphanumeric Keyboard
i_ P4: IfU, HIU, , 1.5M U/82:0002:0.00 USB Trackerball
i_ FZ; IfU, VENU., , 480M 1741:0301:0.01
nees (ENTED)
press (Linter) _

Figure 5-53 USB Tree (example)

5-17-7-4 SmartHDDtest

This item starts the SMART (Self Monitoring, Analysis and Reporting Technology) long test. It gathers data about the hard disk's performance and operations, detects and reports various indicators of reliability, in the hope of anticipating failures.

NOTE: This test takes about 1-3 hours (depending on the HDD size).

5-17-7-5 HDDWipeTool

By means of this function all data (e.g., patient data, archive images, measurement results and reports) on the hard disk will be removed and overwritten with zeros!

WARNING COMPLETE DATA LOSS ON THE ENTIRE HARD DISK. There is no possibility to restore the data!!!

NOTICE This should be performed before sending hard drives/BEPs back to GPRS for PHI data reasons.

5-17-7-6 CollectLogs

Voluson Log files can be stored on an USB-stick. The stored zip file includes the current system state (as "Full Backup"), Process Logger files, Auto tester files, SMART logs, dump files, etc.

- 1.) Connect an USB-stick.
- 2.) In the "Service Tools Menu" select [CollectLogs] and then press Enter.
- 3.) In the displaye screen select your USB stick and then press the Space key. An asterisk* appears between teh brackets.



Figure 5-54 Select log destination by pressing Space

4.) Click **OK** to save the log files.

5-17-7-7 CheckLnkSpeed

This checks link speed communication between Beamformer and BackEnd Processor. x4 ==> Passed

5-17-8 After Recovering or Initializing the Hard disk

- **NOTICE** In case that **"Full Backup" is NOT available**, contacting the OLC will be necessary to get "Permanent key". **Before calling OLC, please prepare the following data:**
 - SNO of Voluson[™] P8 / Voluson[™] P6
 - Needed option
 - 1.) If not currently done, restart the system (with new HDD) and boot up completely.
 - Connect the USB "standard GE" service dongle to the USB connector(s) on the rear of the system. As soon as the dongle is detected the login window pops up.
 - 3.) Enter the "Standard GE Revolving" password (changes every six months) and click ENABLE.
 - 4.) Connect a probe and start any user program.
 - 5.) Press <u>Utilities</u> key on the control console.
 - 6.) In the "Utilities" menu touch the Setup button to invoke the setup desktop on the screen.
 - 7.) On the right side of the screen select Backup:
 - click the Image Archive tab to reload the Patient Image Archive, operation see .
 - click the System Configuration tab to load the appropriate settings.
 - NOTE: Reloading the Image Settings only (Application Settings) should ONLY be performed, if:
 - **no "Full Backup" available** (for the same system) see: Section 4-5-6-2 "Load Image Archive" on page 4-23
 - NOTE: Reloading a "Full Backup" into the Voluson[™] P8 / Voluson[™] P6 system is ONLY possible, if:
 - **"Full Backup" available** (for the same system)

see: Section 4-5-2-3 "Load only parts of the "Complete Backup"" on page 4-15

- *NOTE:* If you have reloaded the "Full Backup" step 8.) to step 9.) as well as step 13.) to step 14.) in this section can be omitted
 - 8.) On the left side of the screen select <u>ADMINISTRATION</u>,
 click the <u>OPTIONS</u> tab and enter the codes for the options as described in "Section Section 8-7 "Replacement or Activation of Options" on page 8-23.
 -Clickthe Service tab, enter the password SHE and then click **ACCEPT**. In the displayed Service Tools window click the keyboard Layout button to check and match default input language setting as described in Figure 6-4 on page 6-3
 - 9.) On the right side of the screen select <u>GENERAL SETTINGS</u>:
 Click the <u>GENERALSETTINGS</u> tab and check and match the Time format setting.
 - 10.)On the right side of the screen select <u>CONNECTIVITY</u>:
 Click the <u>DEVICE SETUP</u> tab and then click on the Network Configuration button to adjust the TCP/IP Properties (according to printout).
 - 11.) Click the SAVE&EXIT button to store settings and exit the Setup desktop screen.
 - 12.) **Reconnect the external devices**, install all the printers and adjust the printer settings as described in Section 3-7 "Printer Installation" on page 3-32. Afterwards check and match system settings in the System Setup Connectivity <u>BUTTON CONFIGURATION</u> page.
- **NOTICE** Save any presets, configurations and settings to HDD and/or DVD, etc. to have it available for next time. Operation see: Section 4-5-3 "Save Full System Configuration (Full Backup)" on page 4-16".
Chapter 6 Service Adjustments

Section 6-1 Overview

6-1-1 Purpose of Chapter 6

This chapter describes how to test and adjust the mechanical capabilities of a System that may be out of specification. Although some tests may be optional they should only be performed by qualified personnel.

Table 6-1 Chapter Voluson™	' P8 / Voluson™ P6 Contents
----------------------------	-----------------------------

Section	Description	Page Number
6-1	Overview	6-1
6-2	Regulatory	6-1
6-3	LCD Monitor Adjustment	6-2
6-4	Modification of Keyboard Layout	6-3

Section 6-2 Regulatory

Verify, where applicable, that any regulatory information or tests required by national law are present and accounted for, and any regulatory tests required by national law are performed *and* documented.

Section 6-3 LCD Monitor Adjustment

NOTE: From Voluson[™] P8 / Voluson[™] P6 system, it's accessible via not monitor adjustment but monitor menu on application. Please refer to Section 5-8.

Section 6-4 Modification of Keyboard Layout

see: Section 8-51 "Replacement of AN KEY TOP" on page 8-155

6-4-1 Setup the Voluson[™] P8 / Voluson[™] P6 Keyboard Language Layout

- 1.) Press the **UTILITIES** key on the control console.
- 2.) In the "Utilities" menu select <u>SETUP</u> button to invoke the setup desktop on the screen.
- 3.) Connect the USB "Standard GE" service dongle to the USB connector(s) on the rear of the system. As soon as the dongle is detected the login window pops up. Remove the dongle.
- 4.) Enter the "Standard GE Revolving" password (changes every six months) and then click Enable.
- 5.) On the right side of the screen select ADMINISTRATION and then click the **SERVICE** tab.
- 6.) Click the **KEYBOARD LAYOUT** button.
- 7.) Select default input language from the drop down menu.

	Language bar	Advance	ed Key Si	ttings		
Defa	It input language					
Selec fields	t one of the insta	iled input	language	s to use	es the	e default for all inp
Eng	ish (United State	s) - United	States-Ir	ternation	al	
Chin	ese (Simplified, P	RC) - Chin	ese (Sm	offied) · N	licros	oft Pinyin ABC Inp
Engl	ish (United States	s) - United	States-Ir	ternation	al	
Japa	mese (Japan) - M	icrosoft IN	IE			
USCI	ne nag and Hussia) - Ru	ove cuno	na to mot	ny ma ta	1.	
1000	i Duratan		1289308	69 D 2 83	100	
-	Foolab (loted)	2-tool			*	
	Chigian (United a	x oros/				
	· Unted S	tates-later	Iscont			
JP	Japanese (Japan	1)	- ALAR A			Add
1.4	Keyboard					-
	· Microsof	TIME			Ŧ	Remove
CH	Chinese (Simplifie	ed, PRC)				Properties
·	Keyboard					Coholage***
	· Oninese	(Simplified	() - Micros	oft Pinyin		Mave Up
4	W			÷.		Move Down

Figure 6-1 input language

NOTE: Configuring the layout of the keyboard is only useful by changing the concerned keys also.

NOTE: If the desired language is not listed, click the ADD button, choose the desired input language from the drop down menu, as shown in Figure 6-2 below, and then confirm with OK.

ect the language to add using the checkboxes belo	w	OK
B-Belarusian (Belarus)		Cancel
Boshian (Cynllic, Boshia and Herzegovina)	=	Preview
il-Catalan (Catalan) □. Chinese (Smolified, PBC)		
E Keyboard		
Chinese (Simplified) - Microsoft Pinyin	ABI	
Chinese (Simplified) - US Keyboard	NE!	
Show More		
B- Chinese (Simplified, Singapore)	4	

Figure 6-2 add input language

- 8.) If not already done, select the default input language from the drop down menu (see: Figure 6-1). The corresponding keyboard layout is changed automatically.
- 9.) Click on **APPLY** and then close the window with **OK**.
- 10.)Close the Service page with the **SAVE & EXIT** and restart the system.
- 11.) Reenter "Keyboard Layout" by repeating step 1.) to step 6.). This time remove unused language(s)
- 12.) Test the Keyboard function:
 - Press the ABC key on the control panel.
 - Press some keys on the keyboard and verify the entered text.

Chapter 7 Diagnostics/Troubleshooting

Section 7-1 Overview

7-1-1 Purpose of Chapter Voluson[™] P8 / Voluson[™] P6

This section describes how to setup and run the tools and software that help maintain image quality and system operation. Basic host, system, and board level diagnostics are run whenever power is applied. Some Service Tools may be run at the application level.

7-1-2 Overview

There may be a time when it would be advantageous to capture trouble images and system data (logs) for acquisition through remote diagnostics or to be sent back to the manufacturer for analysis. There are different options to acquire this data that would give different results.

Section	Description	Page Number
7-1	Overview	7-1
7-2	Collect Vital System Information	7-2
	7-2-1 Request for Service (DRFM)	7-4
	7-2-2 Shortcuts List	7-6
7-3	Check Points Voltages	7-7
7-4	Screen Captures and Logs	7-8
7-5	Remote Access to Service Platform	7-17
	7-5-1 General	7-17
	7-5-2 How the Customer enables/disables Disruptive Mode and VCO	7-17
	7-5-5 Virtual Network Computing (VNC)	7-24
	7-5-6 CSD (Common Service Desktop)	7-28
7-6	How to use the Auto Tester program	7-29
7-7	Hardware Tests	7-32
7-8	Minimum Configuration to Boot/Scan	7-43
7-9	User Interface Troubleshooting	7-47
7-10	Troubleshooting Trees, Instructions and Tech Tips	7-49
7-11	Error Messages	7-59

Table 7-1 Contents in Chapter 7

Section 7-2 Collect Vital System Information

- 1.) Press the $\overline{F2}$ key on the control panel.
- 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select ADMINISTRATION and then click the SYSTEM INFO tab.

The following information is necessary in order to properly analyze data or images being reported as a malfunction or being returned to the manufacturer:

- System Type
- System Serial number (also visible on label on the back of the system)
- Application Software version
- Backup Version (File Name, Date of Factory Settings, Tune version, etc.)
- additional information (e.g., Hardware ID, "Mainboard Type", HW configuration, etc.)
- NOTE: All the above information can be found in the System Info page; see: Figure 7-1 on page 7-3.

Section 7-2 Collect Vital System Information (cont?)



Move the scroll bars downwards to view additional information about installed software/hardware (e.g., Console information).

Figure 7-1 System Setup - Administration - SYSTEM INFO page (e.g., VP8)

7-2-1 Request for Service (DRFM)

NOTICE Service Connectivity has to be checked out once before you can request for service. i.e., Service platform has to be configured properly; .

There are two possibilities to contact GE:

• by means of the GE "Remote Status Icon" that is displayed on the bottom of the screen.



Move the cursor to the GE icon and press the <u>left trackball key</u> (= left-click) to display the "Request For Service" form (see: Figure 7-2 below).

- via the System Setup <u>SERVICE</u> page
 - 1.) Press the **F2** key on the control panel.
 - 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
 - 3.) On the left side of the screen select ADMINISTRATION and then click the **SERVICE** tab.
 - 4.) Enter the password SHE and click the ACCEPT button to display the Service Tools window.
 - 5.) Click the DRFM button and fill out the displayed form. (Enter detailed Problem description.)



Figure 7-2 Contact GE - Request for Service

4.) Click the <u>SEND</u> button to send the problem description to GE Service/Application representatives.

7-2-1 Request for Service (DRFM) (cont?)

A request confirmation screen is displayed:

Windows Internet Explorer	
Request Submitted. Reference Number: 0380240101	write down and keep
An OnLine Center Engineer will call you directly.	
The request is saved in the Queue for reviewing and/or resending	
ОК	

Figure 7-3 Request submitted

- 5.) Write down and keep the Reference Number for follow up procedures, then click \overline{OK} .
- NOTE: If the service platform is not configured an Error message is displayed. The request is **NOT sent**!

The request is saved in QUEUE for reviewing and/or resending.

	Last Nac	0.0	Eint Name	Date/Time		Descriptio		Status	Reference Number
7	TEST	PE	RSON	03/05/2009 3 10 PM	ProblemType=S	System ProblemAre		Sent	0380240101
	Send	Del	ete						
_	From	TEST, F	ERSON			Date:	03/05/2009 3:10 PM		
	Phone	: 0043768	23800			Problem Type:	System		
_	E-mail	: xxx@>	x.at			Problem Area:	Software		
	System ID	KE8100	26			Status:	Sent		
Ot	her System ID	- L				Ref.#:	0380240101		

Figure 7-4 Contact GE - Queue

7-2-2 Shortcuts List

Press the $\overline{\text{CTRL}}$ + $\overline{\text{H}}$ key simultaneous to display the shortcuts list and a description of what they do.

Shortcut	Description	Access level
Ctrl + 3	Toggle 3DII implementation Cpu/Gpu	Dongle
Ctrl + A	Connected probes	Dongle
Ctrl + Alt + A	Show/hide application for evaluation	Masterkey-hidden
Ctrl + B	Image border on/off	Dongle
Alt + B	Quick settings backup	Masterkey
Ctrl + C	Copy text	User
Ctrl + Alt + C	Console test	Donale
Alt + D	Export system state	User
Ctrl + Alt + D	Switch DICOM SR FollicleFormat	User
Ctrl + E	Elevator test	Donale
Shift + Alt + E	Toggle: Extend Display - Clone mode	Masterkev
Ctrl + Alt + E	Eventmanager watch	Donale
Ctrl + F	Toggle Patient Monitor	Masterkev
Ctrl + Alt + F	Show/hide folder for evaluation	Masterkev-hidden
Ctrl + G	TouchMenu in Dialog	User-hidden
Ctrl + H	This dialog	User
Ctrl + I	Opens intensity utilities dialog	Masterkev
Ctrl + Alt + I	Start/stop presentation mode	User
Ctrl + L	Check limit	Masterkey
Alt + L	Opens log configuration dialog	Donale
Ctrl + M	Mode control on/off	Dongle
Alt + M	SVCPE: disables Mousecatch	Donale
Shift + Ctrl + M	Bring mode state on top	Masterkey
Alt + N	Start Wireshark	Donale
Ctrl + P	Change probe	Donale
Alt + P	Screenshot	User
Shift + Ctrl + P	Change probe backward	Donale
Ctrl + Q	Toggle SBI filter types	Masterkey
Alt + B	BE Processing on/off	Masterkey
Shift + Ctrl + B	DMA recorder on/off	Dongle-hidden

Figure 7-5 Shortcut list (Ctrl + H)

Shortcut	Description
Ctrl + C	copy text
Alt + D	export system state (Full Backup and Dump files)
Ctrl + H	shortcuts list (see: Figure 7-5 above)
Alt + P	stores screenshot on D:\export
Ctrl + V	paste, insert text from clipboard
Ctrl + X	cut text
Ctrl + Z	undo typing
Alt + F5	create process logger snapshot
Alt + F6	burn process logger snapshot to CD
Alt + F7	start/stop process logger
Shift + F11	start remote socket control
Alt + F11	stop remote socket control
Alt + Backspace	undo typing
Shift + Delete	cut text
Shift + Insert	insert text (paste)
Ctrl + Insert	copy text

Section 7-3 Check Points Voltages

7-3-1 How to check power

7-3-1-1 Dachstein Power Supply (DPS)

Turn on mains switch and check green LED of P5V, N5V, LIVE5V and 12V on backplane.



Figure 7-6 Check green LED on backplane

NOTE: If LED is on, DPS has full function (all voltages are within the specified range).

Section 7-4 Screen Captures and Logs

There may be times when the customer or field engineer will want to capture a presentation on the screen so it may be recovered by the OnLine Center. This is accomplished by saving the image(s):

- A.) to Archive and export them (as jpg, bmp or tiff) to DVD/CD+R/RW or external USB drive.
- B.) as jpg and bmp to <u>D:\export</u> by pressing the $\overline{ALT} + \overline{P}$ key on the alphanumeric keyboard. Note: Successive $\overline{ALT} + \overline{P}$ keystrokes (max. 20) overwrite existing snapshots at destination HDD!
- C.) creates one snapshot (Alt-D.bmp) + "Full Backup" of the System state (fullbackup -> fb1) saved by pressing the <u>ALT</u> + <u>D</u> key on the alpha-numeric keyboard.
- NOTE: For further details about Alt + D, see

7-4-1 Capturing a screen

The following is the generic process to capture any screen from the System .

- 1.) Navigate to, and display the image/screen/volume to be captured.
- 2.) Press the **P1**, **P2**, or **P3** key (depending on system configuration) on the control panel and store the image onto the clipboard (frame on left side of the screen).
- NOTE: A short summary of $\overline{P1}$, $\overline{P2}$, and $\overline{P3}$ key's configuration is shown in the status area on the screen.



Figure 7-7 summary of keys configuration

3.) Select the stored image(s) and export them to DVD drive, an external USB drive (optional) or mapped Network drive (jpg,bmp, tiff or Volume file).

7-4-2 Capturing Network Logs with Network Sniffer

Wireshark is a network sniffer program that monitors network traffic and allows you to capture network data without redirecting or altering it.

- NOTE: Logs collected should be stored under D:export to ensure that these sniffer logs will be included in the zip file. when you perform Alt + D or export system data via System Setup - Administration - Service.
 - 1.) On the Regular Scan Screen, press Alt + N. This launches the network sniffer application.

2.) On the network sniffer screen select Capture -> Options.

The Wireshark N	etwork Analyzer		
<u>File Edit View Go</u>	Gapture Analyze St	atistics Te	lephony <u>T</u> aals <u>H</u> elp
	Linterfaces	Ctr +I	
	Dotors	Ctrl+K	
Filter:	🕑 Start	Ctrl+E	▼ Expression Clear Apply
-	Stop	Ctrl+E	
A	Restart	Ctrl+R	
WIRESH	Capture Elters		Most Popular Network Protocol Analyzer

Figure 7-8 Capture -> Options

- 3.) Choose your Network in the "Interface" pull-down menu (1) -> Intel Network or Wireless adapter.
- NOTE: Remember, if the device has a DVR, it will show up in the "Interface" list.
- NOTE: If you are working with a Wireless connection, you must uncheck the "Capture packets in promiscuous mode" (A). The wireless option does not support this mode.
 - 4.) If desired, select a "Capture Filter" from the pull-down menu (2); see

Interface: Local 🗸 Intel(R) 82578DM Gigabi	t Network Connection (Microsoft's Packet
IP address: 3.249.69.22 Link-layer header type: Ethernet Capture packets in promiscuous mode Capture packets in pcap-ng format (experimental)	Wireless Settings Remote Settings Buffer size: 1 grabyte(s)
Capture Filter: port 104 and host 3.249.81.21	Display Options
Use multiple files Use multiple files Next file every Next file every	Update list of packets in real time Automatic scrolling in live capture Hide capture info dialog
Stop Capture	Name Resolution Enable MAC name resolution
after 1 C packet(s) after 1 0 megabyte(s)	Enable network name resolution

Figure 7-9 Capture Options

- 5.) Adjust "Display Options"(3) for best performance to avoid packet loss on high throughput.
- 6.) Select Start(4).
- 7.) Minimize network sniffer window and initiate communication to the DICOM device (e.g., send

images to the storage device or query Worklist.)

8.) Press Alt + N to restore Sniffer window and observe the network activity.

	Ene Ful New Sc	Chorse Sonitae Statistics restaurity Tools Re		
	我我我我 8	· 原因X结节 (+ + * *	2 1	
	- Filteri		Expression _ Clear Apply	
	No. Time	Source Destination	Protocol Info	
	1 0.00000	0 3.249.69.22 3.213.81.21	TCP ff-annunc > 5104 [SYN] Seq=0 win=65535 Len=0 NSS=1460 SACK_PE	84-1
1	2 0.000911	3,213,81,21 3,249,69,22 TCP	5101 > rmiactivation [SYN, ACK] Seq=0 ACK=1 Win=65535 Len=0 MSSw1460 SA	VCK_PERM=1
	4 0.001262	1,249,69,22 1,213,81,21 DICOM	A-ASSOCIATE request Volusion> IDICON	
- 1	5 0.003659	3.213.81.21 3.249.69.22 TCP	[TCP segment of a reassembled PDU]	
1	6 0,180010	3.249.69.22 3.213.81.21 TCP	rmiactivation > 5104 [ACK] Seq-740 Ack-2 Win-65534 Len-0	
1	7 0.180548	8.218.81.21 3.249.69.22 DICOM	A-ASSOCIATE ACCEPT VOTUSON < IDICOM	
1	8 0.182764	3.249.69.22 3.213.81.21 TCP	[TCP segment of a reassembled PDU]	
1	9 0.183659	3.249.69.22 3.213.81.21 DICOM	P-DATA, C-STORE-RQ ID=16	
1	10 0.183671	3.249.69.22 3.213.81.21 TCP	[TCP segment of a reassembled PDU]	
1	11 0.184639	3.213.81.21 3.249.69.22 TCP	5104 > remactivation [ACK] Seq=343 ACK=2212 Win=65535 Len=0	
	12 0.184003	3.240.00.22 3.213.01.21 10.	TCP segment of a reassembled POUL	
	14 0 184584	2 740 69 77 2 712 81 71 109	free segment of a reassembled enail	
	15 0.185661	3, 213, 81, 21 3, 249, 69, 22 TCP	5104 > rejactivation [acs] Sep=343 ack=5132 win=65535 Len=0	
	10 0.183088	5.215.81.21 5.249.69.22 TCP	5104 > relactivation [ACK] Seq=545 ACK=5592 Win=65555 Len=0	
	17 0.185700	3.249.69.22 3.213.81.21 TCP	[TCP segment of a reassembled POU]	
	18 0.185710	3.249.69.22 3.213.81.21 TCP	[TCP segment of a reassembled PDU]	
	19 0.185718	3.249.69.22 3.213.81.21 TCP	[TCP segment of a reassembled PDU]	
	20 0.185764	3.249.69.22 3.213.81.21 TCP	[TCP segment of a reassembled PDU]	
	21 0.185773	3.249.69.22 3.213.81.21 TCP	[TCP segment of a reassembled PDU]	
1	22 0.189019	3.613.61.61 3.649.69, 64 16P	5104 > Fmildetivation [Ack] Seq=341 Ack=3512 Win=05515 Len=0	
1	24 0.186648	3.240,69.22 3.213,61.21 100	TCP segment of a reassembled PDU]	
1	25 0.186655	3, 249, 69, 22 3, 213, 81, 21 109	TCP segment of a reassembled PDU	
1	26 0.186780	3.213.81.21 3.249.69.22 TCP	5104 > rmiactivation [ACK] Seg=343 Ack=12432 win=65535 Len=0	
1	27 0.186799	3.249.69.22 3.213.81.21 TCP	[TCP segment of a reassembled PDU]	
1	28 0.186809	3.249.69.22 3.213.81.21 TCP	[TCP segment of a reassembled POU]	
1	29 0.186818	3.249.69.22 3.213.81.21 TCP	[TCP segment of a reassembled PDU]	
	30 0.187089	3.213.81.21 3.249.69.22 TCP	5104 > rmiactivation [ACK] Seq=343 Ack=15352 win=65535 Len=0	
1	31 0.187109	3.249.69.22 3.213.81.21 TCP	[TCP segment of a reassembled PDU]	
3	32 0.18/120	5.249.69.72 5.213.81.21 TCP	TCP segment of a reassemiled PDU	
	33 0, 10/12/	3.249.09.22 3.213.01.21 TCP	TTCP Segment of a redssempled PDUI	
	* Frame 15: 60	bytes on wire (460 bits), 60 bytes o	captured (450 bits)	
	E Ethernet II,	SPC: Portwell_20:15:04 (00:90:FB:20:	135104), DSt1 DT1_29159188 (00101129129159188)	
1	Transmission	Contral Protocol Crc Dort I ff. annur	7, 051, 5,249,09,22 (5,249,09,22) 97 (1080) Day Barty 5104 (5104) Sant D. Lent D.	
1	1 1101001000100	concion Processi, are porci in anna	N LAVED , MALEN LI JAVE (JAVE), JOH V, LOU N	
1				
1				
۱ .				
1				
1				
1				
1				
1	N N			
1	0000 00 90 fb	20 15 04 00 01 29 29 59 ee 08 00 45 67 40 00 80 06 26 68 03 fo 45 14 03	ds 0500 8b f	
1 .	0020 51 15 04	41 13 f0 d5 43 09 a5 00 00 00 00 70	02 QACp.	
1	0030 ff ff ee	0c 00 00 02 04 03 54 01 01 04 02		
1		A CHARLEN AND A SECOND CONCEPTION AND A SECOND AND A SECO	TAMPATAWA ANY NO.	
	-			

А	"Packnet List" the packet list pane displays all the packets in the current capture file. Each line in the packet list corresponds to one packet in the capture file.
В	"Packet Details" pane - shows the current packet (selected in the "Packet List" pane) in a more detailed form. This pane shows the protocols and protocol fields of the packet selected in the "Packet List" pane.
С	"Packet Bytes" pane - The packet bytes pane shows the data of the current packet (selected in the "Packet List" pane) in a hexdump style.

9.) In addition use the "Filter" tool(5) on the screen to filter what is displayed. Filter the DICOM packets, since they are the most probable for the troubleshooting;

10.)Select Capture -> Stop, or select the icon in the task bar to stop the capture.

11.)Select File -> Save As, enter the file name D:\export\xxxx (xxxx= name of your preference).

Save in:	incort 🖸			- + E 🗗 🗉	3-
My Recent Documents Desktop	ASDF.pcap				
Av Computer					
	File name:	d:\export\	0000	•	Save -
My Network Places	Rie name. Save as type:	d:\export\ Wirsshark	ooox /tepdump/ Nopea	ap (*pcap,*cap) 💌	<u>S</u> ave Cancel Halo
My Network Places	Fle game. Save astype:	d:\export\v	ooox Acpdump/ Kopea	▼ ap (*pcap.*cap) ▼	Save Cancel Halo
My Network Places	Fle game. Save as type:	d:\export\v Wirsahark	ooox Acpdump/ Kopea • Displayed	ap (*pcap.*cap) 💌	Save Cancel Halo
Wy Network Places	Fle game. Save as type:	d:SexportV Wreshark	xtopdump/ Ibpea	▼ ap (*pcap.*cap) ▼	Save Cancel Halo
My Network Places	File game. Save as type: acket	d:\exportV Wreshark Captured 2973 T	xtopdunp / Ibpos f Displayed 139 1	p (*pcap.*cap) 💌	Save Cancel Halo
Ny Network Places	File game. Save as type: soket okals	d:\exportV Wreshark Captured 2373 T 0	xtopdump / Ibpos f f Displayedi 139 1 0	p (*pcap.*cap) 👤	Save Cancel Halo
My Network Places Packet Range (* All packets (* Selected p (* Marked ce (* First to land	File game. Save as type: soket citats maked	d:\exportV Wirschark Captured 2373 T 0 0	xtopdump / Ibpoe (* Displayed 139 1	p (* pcap.* cap) 💌	Save Cancel Halo
My Network Places Packet Range (* All packets (* Selected p (* Marked bat (* First to land (* Range: [*	Flegame. Sevelastype: soket okala maked	C Captured 2373 0 0 0	rtopdump / Kopca (* Displayed 139 1 0	▼ ap (*pcap.*cap) ▼	Save Cancel Halo

Figure 7-10 Save captured values

If you have used a screen filter, select "Displayed" (B). This will save only rhe filltered values rather than the entire capture.

12.)Click Save (6).

- NOTE: Wireshark uses lipcap (*.pcap, *.cap) file format as the default format to save captured packets. (If you need to open this file with D-Trace or DVTK, the capture canb eresaved in NA Sniffer Windows format).
 - 13.) Exit the sniffer application by clicking on the [X] in the upper right corner.



Figure 7-11 Exit Wireshark

14.) If you have already performed Save as, you can continue without saving and quit the program.

7-4-2-1 How to use a Capture Filter

Use filters to limit the captured data. Filter by IP and port number or by IP only.

by IP and port number

- 1.) Click on CAPTURE FILTER (see: Figure 7-9 on page 7-9).
- 2.) Select <u>NEW(1)</u>.
- 3.) Edit "Filter name"(A). For example: DICOM port 104
- 4.) Enter the "Filter string" with the following syntax: **port xxx and host yy.yy.yy.yy**, where xxx is the number of "My computer" in the System and yy.yy.yy.yy is the IP address of the device under test (PACS, server. etc.)

Edit	Capture Filter	
	Ethernet type 0x0806 (ARP)	^
	No Broadcast and no Multicast	
	No ARP	
Nevi	IP only	
	IP address 192.168.0.1	
	IPX only	
	TCP only	
	UCP only	
	TCP or UDP part 80 (HTTP)	
Delete	HTTP TCP port (80)	
(2000)	No ARP and no DNS	
	Non-HTTP and non-SMTP to/from www.wireshark.org	
	DICOM port 104	9
Properties		
Filter nam	e: DICOM port 104	
Filter strin	g: port 1D4 and host 3.249.81.21	
		_

Figure 7-12 Capture Filter

5.) Click <u>OK</u> (2).

by IP only

- 1.) Click on CAPTURE FILTER (see: Figure 7-12 on page 7-12).
- 2.) Select IP only (B).
- 3.) Use the IP address of the System or the one from the DICOM device under test on the "Filter string" field, using the following syntax: **host yy.yy.yy** (example: host 3.62.21.12).
- 4.) Click <u>OK</u> (2).

7-4-2-2 How to use a Screen Filter

In addition to the "pre" capture filter, use the Filter tool in the screen to filter what is displayed. Filter the DICOM packets, since they are the most probable for the troubleshooting.

1.) Type **dicom** in the *"Filter"* field and click on $\overline{\text{APPLY}}$.

The display should filter all DICOM packets, filtering out image data.

Ele Edit View Co. Cashira Asabira Statistica V	h (Microsoft's Packet Scheduler) (port 5104 and host 3.213.81.21) - Wireshark	
***	(~~~~)	
Filter: dicom	▼ Expression Clear Apply	
No. Time Source Destination	Protocol Info	A
4 0.001262 3.249.69.22 3.213.81	21 DICOM A-ASSOCIATE request Voluson> JDICOM	
7 0.180648 3.213.81.21 3.249.69	22 DICOM A-ASSOCIATE accept Voluson < JDICOM	
9 0.183659 3.249.69.22 3.213.81	21 DICOM P-DATA, C-STORE-RQ ID-16 21 DICOM P-DATA Ultrasound Image Storage Ergoment (reassembled in #2298)	
68 0.189419 3.249.69.22 3.213.81	.21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
99 0.191409 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
130 0.193467 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
161 0.195104 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
229 0.200328 3.249.69.22 3.213.81	.21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298) .21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
263 0.203223 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
299 0.205866 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
333 0.208693 3.249.69.22 3.213.81 268 0.211224 2.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298) 21 DICOM R-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
403 0. 214041 3. 249. 69. 22 3. 213. 81	.21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298) .21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
438 0.216914 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
473 0.219685 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
509 0.222498 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
579 0. 227990 3. 249. 69. 22 3. 213. 61 579 0. 227990 3. 249. 69. 22 3. 213. 81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2296) 21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
614 0.230801 3.249.69.22 3.213.81	.21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
648 0.233595 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
684 0.236334 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
719 0.239119 3.249.69.22 3.213.81 754 0.241851 2.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298) 21 DICOM B-DATA Ultrasound Image Storage Fragment (reassembled in #2298)	
788 0.244637 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image storage Fragment (reassembled in #2298) 21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
824 0.247470 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
859 0.250179 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
894 0.202948 5.249.09.22 5.215.81 028 0.255607 3.240 60 22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
963 0.258330 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298) 21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
998 0.261131 3.249.69.22 3.213.81	21 DICOM P-DATA, Ultrasound Image Storage Fragment (reassembled in #2298)	
1033 0.263888 3.249.69.22 3.213.81	21 DICOM P-DATA. Ultrasound Image Storage Fragment (reassembled in #2298)	×
■ Frame 9: 1514 bytes on wire (12112	bits), 1514 bytes captured (12112 bits)	
Ethernet II, SFC: DF1_29:59:60 (00) Toterpet Protocol, Src: 3,249.69,22	(3.249.69.22), Dot: 9000000122012004 (00190100120120104)	
 Transmission Control Protocol, Src 	Port: rmiactivation (1098), Dst Port: 104 (104), Seq: 752, Ack: 343, Len: 1460	
[Reassembled TCP Segments (160 byte	s): #8(12), #9(148)]	
DICOM, C-STORE-RQ ID=16		
0000 00 90 fb 2c 15 04 00 01 29 29	59 ee 08 00 45 00,))YE.	^
0020 51 15 04 4a 13 f0 26 0a 0d 92	ea fe 21 f4 50 18 Q	
0030 fo 30 37 67 00 00 00 00 00 00	A# AA AA AA 88 AA	-
Contraction of the second seco		P. 6. P. 6. 1
File: "C:\DOCUME~1\ADMINI~1\LOCALS~1\Tem Pad	ets: 2317 Displayed: 73 Marked: 0 Dropped: 0	Profile: Default

Figure 7-13 Filter: dicom

2.) To deactivate the filter, click on CLEAR.

7-4-3 Export Log's and System Data

There are two possibilities to export system data (and log's):

- 1.) by pressing the **ALT** + **D** key to save a snapshot and "Full Backup" of the System state; see: Section 7-4-3-1 on page 7-14
- 2.) via the EXPORT SYSTEM DATA button in the System Setup Administration SERVICE page; see: Section 7-4-3-2 on page 7-16

7-4-3-1 Export System Data (by pressing the ALT + D key)

 $\overline{ALT} + \overline{D}$ uses "Full Backup" to gather <u>data</u> from the system. In addition it creates one screenshot (Alt-D.bmp) of the point in time when $\overline{ALT} + \overline{D}$ was pressed. The main use is when R&D or OLC need detailed information about the system (e.g., when experiencing strange behaviour or when the problem should be investigated by R&D). It is **not** intended to replace or enhance the existing Full Backup functionality.

NOTE: The Full Backup created by Alt + D was pressed. The main use is when R&D or OLC need detailed information about the system (e.g., when experiencing strange behaviour or when the problem shoud be investigated by R&D). It is intended to replace or enhance the existing Full Backup functionality.

Data can be stored on the hard disk (D:\export\fullbackup\fb1), or you can export them to DVD/CD. Including the D:\export folder, which contains dump files (for details see: Section 7-4-3-2-1), Process Logger files, Autotester files, SMART logs and Screenshots [Alt + P].

- NOTE: Successive $\overline{ALT} + \overline{D}$ keystrokes overwrite existing snapshots (Alt-D.bmp) at destination HDD.
 - 1.) Press the $\overline{\text{ALT}} + \overline{\text{D}}$ key on the keyboard simultaneously.



Figure 7-14 "Alt - D" backup

2.) Select whether you what to backup data with our without hardware diagnosis tests.

NOTICE Please detach all probes if you want to execute hardware diagnosis, then click Yes.

System Configuration Save	c	X
Destination		
Internal HDD	Deete All	
● 1/0/00		
Network		
External US8 Drive		
Full Backup: Zip Password	i i	
Default	(6-8 Cheracters)	
Enter Description:		
System state		
Image data wil not be bac	sted up.	
Free Space: 107510 MB	Cancel	Next

Figure 7-15 System Configuration Save

- 3.) Select the destination of the "System state" backup.
- 4.) Select the $\overline{\text{NEXT}}$ button to start the backup process.

After saving the data, the Voluson[™] P8 / Voluson[™] P6 reboots and the application starts again.

7-4-3-2 Export Log's and System Data (via Service Page)

- 1.) Press the **UTILITIES** key on the control console.
- 2.) In the "Utilities" menu select SETUP to invoke the setup desktop on the screen.
- 3.) If not already done, connect the USB "standard GE" service dongle to the USB connector(s) on the rear of the system. As soon as the dongle is detected the login window pops up.
- 4.) Enter the "Standard GE Revolving" password (changes every six months) and then click ENABLE.
- 5.) On the left side of the screen select ADMINISTRATION and then click the **SERVICE** tab.
- 6.) Click the <u>SERVICE TOOLS</u> button on the Service window to get access to the "Service Tools" page.
- 7.) Click on the EXPORT SYSTEM DATA... button to Full Backup the System State. This includes dump files (see: Section 7-4-3-2-1) and text files, full Service Database informations about probes, boards, Software, Options and the Event Log File.

7-4-3-2-1 Dump-file

Every time an error message like Figure 7-16 is produced, a dump-file and a text file containing the error dump and the error message are created in D:\export. Up to 20 dump files are stored there.



Figure 7-16 system has encountered a problem

NOTE: To deposit this screen as an image file on D:\export, press Alt + P, For more details see Figure 7-4 on page 7-8

After clicking on \overline{OK} the system reboots automatically.

Section 7-5 Remote Access to Service Platform

7-5-1 General

This offers GE technicians the possibility to view the entire customer's desktop and operation system. Using VCO (Virtual Console Observation) a service technician or the OnLine Center can access and modify all PC settings and programs or run diagnostics on the customer's ultrasound System.

NOTICE Remote access is **ONLY possible if the service platform is properly configured** (either by the user or a GE technician at site).

Remote access to the Voluson[™] P8 / Voluson[™] P6 System requires permission and customer input before a GE service technician or OLC can access the customer's ultrasound System remotely.

"Disruptive Mode" can be selected by the customer directly on the Voluson[™] P8 / Voluson[™] P6 (see: Section 7-5-2 on page 7-17), or remotely by the service technician or OLC.

7-5-2 How the Customer enables/disables Disruptive Mode and VCO

- 1.) If not already in read mode, **FREEZE** the image.
- 2.) Move the cursor to the InSite ExC link (GE icon aht the right bottom of the display screen) and press the right trackball key (= right-click).
- 3.) Select *Connect Clinical Lifeline* (see: Figure 7-17 below). This activates "Disruptive Mode" and "VCO" for the application OLC to quickly assist the customer.
- 4.) If you select Cancel, "Disruptive Mode" and "VCO" is turned OFF



Figure 7-17 Connect Clinical Lifeline

NOTE: Visual information about the GE network status is shown in the status area on the bottom of the screen.

GE	Gray = Idle State	Remote access is inactive.
GE	Yellow = Access pending	Remote Access connection is active, but Disruptive Mode and Virtual Console Observation (VCO) is not yet enabled.
GE	Red = Disrupted State	Remote Access is active. All processes [UL_VNC and UL_CSD] are active. In this state the Voluson P-Series system should NOT be used clinically.
GE	Gray + envelope	New Software Update Package is available for download and installation. Operation see Section 8-2-4 "Software Update Package - Download/Installation Procedure" on page 8-13.

NOTE: If the customer does not wish to have diagnostics running at the time of the request, select Cancel.A message is sent back to the OLC or FE that permission to change Disruptive Status is denied.

7-5-3 Virtual Network Computing (VNC)

NOTICE The system may require a correct proxy configuration. Please ask the customer.

- 1.) In the **Total Access Session** window (see: *Figure 7-26 on page 7-24*) find the item labeled **UL_VNC** and click on the [Connect] button. Within ~ 1 minute the "Proxy Config" window opens.
- 2.) If available and required enter the correct proxy server address and then click [OK].

TotalAccess: Proxy Config 🛛 🔯
Proxy Server Vee a proxy server Addrese: XXXXXX Authenticate User Name
OK Cancel

Figure 7-18 Proxy Config

3.) The next window shows the command to be issued, click on [OK] to grant the request. The "virtual" Monitor of the Voluson[™] P8 / Voluson[™] P6 is displayed on your remote workstaticcreen.



Figure 7-19 "virtual" Monitor Screen of Voluson™ P8 / Voluson™ P6

The tool bar on top of the virtual monitor screen contains useful options.

1	2	3	4	5	6	7	8	9			
SAR			2	8	А _{вс}			Y			
Figure	e 7-2	0 To	ol ba	r on t	00 00	f virt	ual s	creen			

1	Send Ctrl+Alt+Del (= Taskmanager) to host
2	Toggle Fullscreen Mode (On/Off)
3	Show Connection Options
4	Refresh Screen
5	Send "Start" Ctrl+ESC (= Windows Start Menu) to host
6	Send Custom Key
7	Show Status window
8	Close Connection
9	Hide Tool bar Options

Press the <u>**CTRL</u>** + <u>**H**</u> key on the alphanumeric keyboard, to display a list of shortcuts available whenusing the "Virtual Network Computing (VNC)" feature.</u>

Shortcuts list	×
Shortcut Description Access level CH + 3 Toggle 301 implementation Cpu/Gpu Dongle CH + A Connected probes Dongle CH + AK + A Show/hide application for evaluation Masterkay-hidden CH + AK + A Show/hide application for evaluation Masterkay-hidden CH + AK + C Console text Dongle AK + B Quick settings backup Masterkay CH + AK + C Console text Dongle CH + AK + C Console text Dongle CH + AK + C Console text Dongle CH + AK + D Switch DICOM SR FolicleFormat User CH + AK + E Toggle Patent Monitor Masterkay CH + AK + E Toggle Patent Monitor Masterkay CH + AK + F Show/hide folder for evaluation Masterkay-hidden CH + AK + F Show/hide folder for evaluation Masterkay CH + AK + F Show/hide folder for evaluation Masterkay CH + AK + F Show/hide folder for evaluation Masterkay CH + AK + F Show/hide folder for evaluation <td></td>	

Figure 7-21 Tool bar on top of virtual screen

TIP: Frequently used shortcut functions:

- to "release" the mouse cursor, press the shortcut $\overline{CTRL} + \overline{M}$ (Mode Control On/Off Toggle function)
- to display the system setup, press the shortcut $\overline{ALT} + \overline{SHIFT} + \overline{S}$
- to display the Console Emulator (see: Figure 7-31 on page 7-27), press the shortcut $\overline{ALT} + \overline{S}$

NOTE: For complete shortcut list refer to Section 7-2-2 "Shortcuts List" on page 7-6.



Press the shortcut $\overline{ALT} + \overline{S}$ on the alphanumeric keyboard, to display the Console Emulator.

Figure 7-22 Voluson[™] P8 / Voluson[™] P6 Console Emulator

- NOTE: For description of keys and their functions refer to Section 5-6-2 "OPIO layout" on page 5-32.
- NOTE: To regain free sight to the monitor image, the virtual VolusonTM P8 / VolusonTM P6 console disappears as soon as you select a button. It is simply hidden in the background. Press the shortcut $\underline{ALT} + \underline{S}$ twice to show it again.

7-5-4 CSD (Common Service Desktop)

- 1.) In the Total Access Session window (see Figure 7-26 on page 7-24) find the item labeled UL-CSD and click on Connect. Within ~ 1 minute the "Proxy Config" window opens.
- NOTE: The system may require a correnct proxy configuration. Please ask the customer.
 - 2.) If available and required enter the correct proxy server address from your location and then click OK.

TotalA	ccess: Proxy Config 🛛 👔 👔
- Prox,	Server
₩ U	se a proxy server
	Address: XXXXXX
E A	uthenlicate
L	Jser Name:
	Password:
	OK Cancel

Figure 7-23 Proxy Config

3.) The next window shows the command to be issued, click on OK to grant the request.

ow Co	mmand	
1	A request has been made to launch the following command on this system:	
-	is-plore exe http://loca.host.5088/modality-cad/	
	Click OK to grant this request, otherwise click Cancel	
	T Do not ask about this command again	

Figure 7-24 allow command

4.) Select "GE Service" from the pull-down menu, enter the password (changes every six months) and then click Okay.

NOTE: For detailed description see Figure 7-6 on page 7-29

Section 7-6 How to use the Auto Tester program

- 1.) Press the UTILITIES key on the control panel.
- 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
- 3.) If not already done, connect the USB "standard GE" service dongle to the USB connector(s) on the rear of the system. As soon as the dongle is detected the login window pops up.
- 4.) Enter the "Standard GE Revolving" password (changes every six months) and then click ENABLE.
- 5.) On the left side of the screen select ADMINISTRATION and then click the SERVICE tab.
- 6.) Click the <u>SERVICE TOOLS</u> button on the Service window to get access to the "Service Tools" page.
- 7.) Activate the "Auto Tester" program by clicking START. The following message box appears.

1	Test recorder will be started now.
	1) To activate AutoTester, press ALT-GR key on the keyboard. 2) To start recording, press red RECORD button on the toolbar. 3) To stop recording, press ALT-GR key on the keyboard.
	Please call technical support for using.
	<u>Q</u> k <u>C</u> ancel

Figure 7-25 Message Box

- 8.) Click <u>OK</u>.
- 9.) Press the ALT GR key on the alphanumeric keyboard.
- 10.) Activate the "Auto Tester" program by clicking the "Record" icon on the displayed screen.

<u>File Edit View Tools H</u> elp	
■ ● ■ Ø <mark> </mark> > > > = = > > > × > ×	
Testinfo: Record (F4)	Curient state:
Author: Test Person Keyboard	State Yalue
Duration: 0 sec. (0 events)	B r
Date:	ВС -
Description:	м - МС -
Comment:	PV/ -
Even iton mode:	CW - Mcde 2
Repeat 0 times No Sync	Menu 1.00
Q Random (0-inf.) Q Synchronize	Format 1
Fast Sync	
Events Error Log	
Name Nr Source When Duration Info	B BC M MC PW CW Mode
т Т	
Start recording events	Stopped Event: 0/0 Clien 🧖

Figure 7-26 Autotester record

- 11.) Start scanning. You can scan normally and everything will be recorded to the program (up to several hours.)
- NOTE: It is important that you are recording the processes where the errors normally occur.

```
Stop Event: 241 of 242
```

Stop the program <u>by clicking</u> on [Stop] shown on the screen, or by pressing the **ALT GR** key on the alphanumeric keyboard.

The following screen will appear.

∰ <u>File E</u> dit <u>V</u> iew	Iools	Help								1		
Testinfo: Save Author: Le Duration: 47 Date: Description: Comment: Repeat 0 O Random	Burn or st Perso 'sec. (3: (0-inf.)	CD i0 events) Synchror No S Sync Fast	IZation:	vent gource Vent gource Vent Key Vent Key Vent Key	:s; board иsc Адрр late <u>m</u> ouce moves		Current State Info B BC M MC PW CW Mode Menu Forma	state r - - 2 2 t	:			
Name	Nr	Source	When	Duration	Info	В	ВС	м	MC	PW	cw	Mode
Begin	1		18:25:08	0		r	-	-	-	-	-	
Record Info	2	UISApp	18:25:08	109	MM recording is OFF	r	-	-	-	-		
MouseMove	з	Mouse	18:25:08	31	(960, 540)							
MouseMove	4	Mouse	18:25:09	63	(960, 540)							
🔨 MouseMove	5	Mouse	18:25:09	31	(960, 540)							
<				11								•
*					TH .							
Save the active doci	ument						Stopp	ed	Ever	nt: 0/8.	10	Clien /

Figure 7-27 Auto Tester Finished

12.)Select the "Save" icon. The file will be saved in D:Export\AutotesterScripts*.*.

13.)Press Alt + D to export system data and the needed logs. Operation see

NOTE: he standalone recorded "Auto Tester" file makes only sense with the Alt + D log! To analyze the workflow the exact date and time of occurrence needs to be documented!

14.) If desired, save the script file also on DVD/CD. Therefore:

- Insert an empty DVD/CD+R/RW in the Drive and select the "Burn on CD" icon.
- Enter a Filename.
- After the DVD/CD write is finished click the OK button.

15.) Close the "Auto Tester" program.

7-6-1 Limitation of the Auto Tester

The following information will not be recorded. Depending on the moment the Auto Tester is activated, this must be provided by the customer or the field engineer.

- Which probe is in use and which probes are connected?
- Which Mode is activated?
- Which peripherals are connected (Dicom, Printer, etc..)?

Collected information from all steps above + exported system data and needed logs (Alt + D) can be sent to the Make Center. With this information the Make Center can see how the customer is using the system and reproduce potential failures.

NOTE: Providing all information at once will help the Make Center find the root cause and speeds up finding a solution for the customer.

Section 7-7 Hardware Tests

- 1.) Press $\overline{F2}$ key on the control panel.
- 2.) In the $\overline{F2}$ menu, press $\overline{SYSTEM SETUP}$ button to invoke the setup desktop on the sceen.
- 3.) If not already done, connect the USB "standard GE" service dongle to the USB connector(s) on the system. As soon as the dongle is detected, the login window pops up.
- 4.) Enter the "Standard GE Revolving" password (changes every six months) and the click ENABLE.
- 5.) On the left side of the screen, select <u>ADMINISTRATION</u> and then click the <u>SERVICE</u> tab.
- 6.) Click the <u>SERVICE TOOLS</u> button on the Service window to get access to the "Service Tools" page.

Administration/Service/Service	Tools		×
System Serial Numb	per:	609999	
AutoTester	Update	Tools	
Start		CSD	
l	FMI from DVD		
			Probe EEPROM
			Load Application Settings and Factory Presets
TCP/IP Buffersize			
40 • kB			

Figure 7-28 Service Tool Page

- 7.) Click the HARDWARE TEST button.
- 8.) Confirm the displayed "Warning" message with \overline{OK} button.



Figure 7-29 Confirm 'Warning" Message

NOTE: The "System Diagnostics Tool" (see: Figure 7-38 on page 7-32) appears on the screen.

Automatic/Not-Automatic diagnostic tests are executed from this System Diagnostics Tool.

Diagnostic				
C Surtem Queral Text				
	Everute Test	Show Penort		
	LACCOLL FLOR	Show Keport		(YELE)
				00
	Start UISAnn	Shutdown system	Exit	
DPS		L L		
UDC4D				
U MDM				
	13:50:04 successfully killed	UISApp.		
BATTERY				
DRFM				
··· Voltage DRFM				
Temperature DRFM				
- IIC DRFM Interface				
HW ID Config				
FPGA DRFM Interface				
E DPS				
Voltage DPS				
ADM Interface				
HV Linearity				
HV Stop				
DC4D Interface				
Voltage DBM				
Temperature DBM				
Signalgen				
Voltage DPI				
Battery				
Battery Interface				
Battery Status				
Battery Discharging To Shipment Level				
1				

Figure 7-30 System Diagnostics Tool

7-7-1 Audio(System) Interface Test.

Test of the Audio path from system to Speaker and AudioOutput can be performed.

- 1.) Select the AUDIO(SYSTEM) INTERFACE TEST button in the Diagnostics Tool window.
- 2.) Check if there is hearable audio sound from Speaker and AudioOutput port on rear panel.

7-7-2 Apertur Lateral Min

This test is used for detection of missing channels on Dachstein Probe Interface (DPI) or missing elements on probe, which are typically shown as dark Ultrasound Lines.

NOTE: To distinguish if it is a board problem, or if the probe is defective, it would be helpful to have an additional probe on site.

7-7-2-1 Check for missing channels or elements.

- 1.) Connect a probe and then press the **FREEZE** key to "run" the live scan (Write Mode)
- 2.) Select the **APERTUR LATERAL MIN** button in the Diagnostics Tool window.



Figure 7-31 Apertur Lateral Min Test

Missing channels or elements can easily be detected as dark shadows(shots with low intensity) from Ultrasound image.

7-7-3 Automatic Diagnostic Test.

Automatic diagnostic test can be performed by selecting the desired test item from Selected Test item.

1.) Select the desired test item from "Selection Combo Box" in Diagnostics Tool window.

Diagnostic
🖃 🗌 System Overall Test
🗄 🖳 Service
🖕 🗖 VPD
Figure 7-32 Automatic Test Selection Box

- 2.) Select the desired execution loop count from "Test Loop Count" button.
- 3.) Execute the diagnostic test by selecting the RUN TEST button.
- 4.) Then it displays the test result (PASSED or FAILED) at the end of each diagnostic test.

Each test item is categorized by its functionality, and grouped.

Whenever executing the diagnostic test from System Diagnostics Tool, its execution log message will be displayed in Log Window, and saved also in log file located in D:\Export\diagnosis.txt with execution time-stamp.

Overall Test like "DRFM - Overall Test" means that it executes sub-diagnostic test items one by one automatically.

Table 7-1 below outlines Voluson[™] P8 / Voluson[™] P6 Diagnostics Tool described in the sub-sections.

 Table 7-1
 Automatic diagnostic Test

Sub-section	Description	Page Number
7-7-3-1	System Overall Test	7-36
7-7-3-2	VPD	7-37
7-7-3-3	DRFM Overall Test	7-38
7-7-3-4	DBM	7-39
7-7-3-5	DPI	7-40
7-7-3-6	DPS	7-40
7-7-3-7	OPIO Overall Test	7-41
7-7-3-8	Battery	7-41

7-7-3-1 System Overall Test

System Overall Test is root-top level test that executes all the sub diagnostic tests. It executes each sub diagnostic test one by one, and summarizes the test result at the end of the test execution.

7-7-3-2 VPD

This diagnostic test performs the self-diagnosis of each vital product data for board or parts.

7-7-3-2-1 DRFM

It verifies VPD information embedded in EEPROM on DRFM board and displays the part of VPD information and the test result as PASSED/FAILED.

7-7-3-2-2 DBM

It verifies VPD information embedded in EEPROM on DBM board and displays the part of VPD information and the test result as PASSED/FAILED.

7-7-3-2-3 DPI

It verifies VPD information embedded in EEPROM on DPI board and displays the part of VPD information and the test result as PASSED/FAILED.

7-7-3-2-4 DPS

It verifies VPD information embedded in EEPROM on DPS board and displays the part of VPD information and the test result as PASSED/FAILED.

7-7-3-2-5 DC4D

It verifies VPD information embedded in EEPROM on DC4D and displays the part of VPD information and the test result as PASSED/FAILED.

7-7-3-2-6 MDM

It verifies VPD information embedded in EEPROM on MDM and displays the part of VPD information and the test result as PASSED/FAILED.

7-7-3-2-7 OPIO

It verifies VPD information embedded in EEPROM on OPIO and displays the part of VPD information and the test result as PASSED/FAILED.

7-7-3-2-8 BATTERY

It verifies VPD information embedded in EEPROM on BATTERY Pack and displays the part of VPD information and the test result as PASSED/FAILED.

7-7-3-3 DRFM Overall Test

This diagnostic test performs the self-diagnosis of each electric component and interface in the DRFM board.

Table 7-2 below outlines Voluson[™] P8 / Voluson[™] P6 Diagnostics Tool described in the sub-sections.

 Table 7-2
 Automatic diagnostic test under DRFM Test

Sub-section	Description	Page Number
7-7-3-3-1	Voltage DRFM	7-38
7-7-3-3-2	Temperature DRFM	7-38
7-7-3-3-3	IIC DRFM Interface	7-38
7-7-3-3-4	HW ID Config	7-38
7-7-3-3-5	FPGA DRFM Interface	7-38

7-7-3-3-1 Voltage DRFM

It verifies Each Power Voltage Level on DRFM board, and displays the current voltage levels and the test result as PASSED/FAILED.

7-7-3-3-2 Temperature DRFM

It verifies each GPU, CPU, DPS temperature measure on DRFM and displays the current temperature status and the test result as PASSED/FAILED.

7-7-3-3-3 IIC DRFM Interface

It verifies I2C path named I2C_Local by using EEPROM on DRFM board and displays the test result as PASSED/FAILED.

7-7-3-3-4 HW ID Config

It verifies HW ID configuration on DRFM board and displays the current HW ID and the test result as PASSED/FAILED.

7-7-3-3-5 FPGA DRFM Interface

It verifies FPGA(DRFM) configuration on DRFM board by reading/writing test data and displays the test result as PASSED/FAILED.
7-7-3-4 DBM

This diagnostic test performs the self-diagnosis of every electric component and interface in DBM board.

Table 7-3 below outlines Voluson[™] P8 / Voluson[™] P6 Diagnostics Tool described in the sub-sections.

Table 7-3Automatic diagnostic test under DBM Test

Sub-section	Description	Page Number
7-7-3-4-1	Voltage DBM	7-39
7-7-3-4-2	Temperature DBM	7-39
7-7-3-4-3	SCI(Scan Control Interface)	7-39
7-7-3-4-4	MLA(Multi-Line Acquisition)	7-39
7-7-3-4-5	ADC(Analog Digital Converter)	7-39
7-7-3-4-6	SignalGen	7-39
7-7-3-4-7	TxPulser	7-39
7-7-3-4-8	CW(Continues Wave)	7-40

7-7-3-4-1 Voltage DBM

It verifies Each Power Voltage level on DBM board and displays the current voltage levels and the test result as PASSED/FAILED.

7-7-3-4-2 Temperature DBM

It verifies DBM Temerature Interface on DBM board and displays the current DBM FPGA temperature and the test result as PASSED/FAILED.

7-7-3-4-3 SCI(Scan Control Interface)

It verifies SCI between DBM-FPGA and DRFM-FPGA and displays the current available GL(GeckoLight)units and the test result as PASSED/FAILED.

7-7-3-4-4 MLA(Multi-Line Acquisition)

It verifies MLA Interface between DRFM and DBM and displays the current passed GL units and the test result as PASSED/FAILED.

7-7-3-4-5 ADC(Analog Digital Converter)

It verifies ADC Interface between DBM and AFE on DBM board and displays the current passed total ADC number and the test result as PASSED/FAILED.

7-7-3-4-6 SignalGen

SignalGen is called by ASP(Analog signal Path). It verifies from AFE to DRFM by generating test wave signal and recording it with ADC and displays each channels diagnostics result, and the overall test result as PASSED/FAILED.

7-7-3-4-7 TxPulser

It verifies Tx Signal from TxPulser on DBM board by firing test Tx pulse wave and reading back from corresponding Rx channel and displays each channels diagnostics result and the overall test result as PASSED/FAILED.

7-7-3-4-8 CW(Continues Wave)

It verifies signal path from AFE to DRFM by generating test wave signal and recording it with IQ phase recorder and displays each channels diagnostics result and the overall test result as PASSED/FAILED.

7-7-3-5 DPI

This diagnostic test performs the self-diagnosis of each electric component and interface in DPI board.

Table 7-4 below outlines Voluson[™] P8 / Voluson[™] P6 Diagnostics Tool described in the sub-sections.

Table 7-4 Automatic diagnostic test under DPI Test

Sub-section	Description	Page Number
7-7-3-5-1	Voltage DPI	7-40

7-7-3-5-1 Voltage DPI

It verifies Each Power Voltage Levels on DPI board and displays the current voltage levels and the test result as PASSED/FAILED.

7-7-3-6 DPS

This diagnostic test performs the self-diagnosis of each electric component and interface in DPS board.

Table 7-5 below outlines Voluson[™] P8 / Voluson[™] P6 Diagnostics Tool described in the sub-sections.

Table 7-5 Automatic diagnostic test under DPS Test

Sub-section	Description	Page Number
7-7-3-6-1	Voltage DPS	7-40
7-7-3-6-2	ADM Interface	7-40
7-7-3-6-3	HV Linearity	7-40
7-7-3-6-4	HV Stop	7-40
7-7-3-6-5	DC4D Interface	7-41
7-7-3-6-6	15W protection	7-41

7-7-3-6-1 Voltage DPS

It verifies Each Power Voltage Levels on DPS board, and displays the current voltage levels and the test result as PASSED/FAILED.

7-7-3-6-2 ADM Interface

It verifies the interface to ADM1062 chip on DPS board by reading /writing test data and displays the test result as PASSED/FAILED.

7-7-3-6-3 HV Linearity

It verifies the linearity of HVA and HVB voltage by writing test voltage and reading back corresponding voltage, and displays the written and read voltage in log window, and the test result as PASSED/ FAILED.

7-7-3-6-4 HV Stop

It verifies ADM operation when HV_Stop is asserted whether HVA/HVB outputs 0V, and displays the current voltage changes and the test result as PASSED/FAILED.

7-7-3-6-5 DC4D Interface

It verifies I2C path names I2C_DC4D by using EEPROM on DC4D board and displays the test result as PASSED/FAILED.

7-7-3-6-6 15W protection

It verifies current measurement value which is restriction for 15 watt on DPS.

7-7-3-7 OPIO Overall Test

This diagnostic test performs the self-diagnosis of each electric component and interface on OPIO board.

Table 7-10 below outlines Voluson[™] P8 / Voluson[™] P6 Diagnostics Tool described in the sub-sections.

Table 7-6 Automatic diagnostic test under OPIO Test

Sub-section	Description	Page Number
7-7-3-7-1	VPD(OPIO) Test	7-41

7-7-3-7-1 VPD(OPIO) Test

It verifies VPD Information embedded in EEPROM on OPIO board, and displays the part of VPD information and the test result as PASSED/FAILED.

NOTE: This VPD information is set by Manufacturer since Mizar BT12. In case of Mizar BT11 OPIO, this information could be empty. In that case, the test result as PASSED with blank information.

7-7-3-8 Battery

This diagnostic test performs the self-diagnosis of battery and battery control board status.

Table 7-11 below outlines Voluson[™] P8 / Voluson[™] P6 Diagnostics Tool described in the sub-sections.

 Table 7-7
 Automatic diagnostic test under Battery Test

Sub-section	Description	Page Number
7-7-3-8-1	Battery Interface	7-41
7-7-3-8-2	Battery Status	7-41
7-7-3-8-3	Battery Discharging to Shipment Level	7-41

7-7-3-8-1 Battery Interface

It veriftes whether installed Battery and verifies I2C path by using EEPROM on Battery Pack and the test result as PASSED/FAILED.

7-7-3-8-2 Battery Status

It verifies Battery Status(Temperature, Voltage, Full charge Capacity, Cycle count), the result means if battery is healthy.

7-7-3-8-3 Battery Discharging to Shipment Level

During a test of charging and discharging a battery, the test will demad 15% or higher amount of remaining battery. In case of shipment by airplane, make sure that the battery has less than 30% of remaining battery. By running Battery Discharging to shipment level item in diagnostics menu, the product will discharge until below 30%.

7-7-3-9 **HW Test Dialog** This diagnostics test performs the self-diagnosis of each of manual function testing. 7-7-3-9-1 Aperture Lateral std It verifies system displays single aperture scan image on/off. 7-7-3-9-2 Audio Interface This diagnostics test performs if there is hearable audio sounding from speaker when executing this test. 7-7-3-9-3 **USB** Loopback This diagnostics test performs check usb port status by plugged usb loopback. 7-7-3-9-4 UVC(HDMI) Test It verifies HDMI connection between UVC device and ultrasound machine.

Section 7-8 Minimum Configuration to Boot/Scan

7-8-1 Booting without using the Ultrasound Hardware

If the low-level ultrasound hardware is failing, the application can not be initialized correctly. Consequently, proper boot-up of the system is prevented.

By steadily pressing the H key on the alphanumeric keyboard during startup, the application can be started, even if the ultrasound-hardware is broken.

The hardware is not initialized; the application simply does not get ultrasound data into process.

However, one can use the Image Archive function to save patient archive and images, and to gather system information by saving a "Full Backup". The remote service capabilities are also present.

Before that some BIOS value should be changed to boot without ultrasound hardware.

BIOS value change:

- 1.) Turn the system on and press "Del" key to enter the BIOS menu.
- 2.) Enter Password "polaris" and press "Enter" key.
- 3.) In case of Ivybridge Com Express, go to "Advanced -> PCI & PCI Express -> PCI Express Port 0"

Aptio Setup Utility - Copyright (C) 2012 America Main <mark>Advanced</mark> Boot Security Save & Exit	an Aptio Setup Utility – Copyright (C) 2012 A Advanced
> Graphics > Watchdog > Handware Health Monitoring	PCI 64bit Resources Handling Above 46 Decoding [Disabled]
 PCI & PCI Express ACCI RTC Wake Trusted Computing CPU Platform Controller Hub (PCH) SATA Memory Configuration Intel(R) Rapid Start Technology USB Serial Port Console Redirection PC Speaker Configuration 	PCI Settings PCI Latency Timer [32 PCI Bus Clocks] VGA Palette Snoop [Disabled] PERR# Generation [Disabled] SERR# Generation [Disabled] Generate EXCDO/1_PERST# [10ms] P PIRQ Routing & IRQ Reservation

4.) Set to "Disable"



In case of Skylake Com Express, Move to "Advanced -> PCI Express Configuration -> PCI Express Port 0-3"

Aptio Setup Utility - Copyright (C) 2017 A Main Advanced Chipset Security Boot Save & Exit	Aptio Setup Utility Advanced	y — Copyright (C) 20
<pre>> Graphics > Watchdog > Module Serial Ports > Hardware Health Monitoring > Trusted Computing > Trusted Computing > RTC Wake Settings > LPC Generic I/O Range Decode > ACPI > Intel ICC > PCH-FW Configuration > SMRAT Settings > Serial Port Console Redirection > CPU > SATA Configuration > Acoustic Management > PCI Configuration > PCI Point Stack > Configuration > UEFI Network Stack > CSM & Option ROM Control > NVME Configuration > SDIO Configuration > USB > Diagnostic Settings > PC Speaker</pre>	PCI Express Clock Gating DNI Link ASPM Processor Side Port8xh Decode Peer Memory Write Enable Compliance Test Mode PCIE-USB Glitch W/A PCIE function swap PCI Express Gen3 Eq Lanes PCI Express Gen3 Eq Lanes PCI Express GEN 2 Settings PCI Express GEN 2 Settings PCI Express Port 9-5 PCI Express Port 5 PCI Express Port 5 PCI Express Port 7	[Disabled] [Disabled] [Disabled] [Disabled] [Disabled] [Disabled] [Disabled]

5.) Set to "Disable"



- 6.) Press "F10" key and select "Yes" to save change.
- NOTE: How to check CPU code name, Ivybridge or Skylake.
 - 1.) Turn the system on and go to BIOS mode by pressing "Del" key.
 - 2.) Go to 'Main' -> 'Platform Information'
 - Skylake: There is 'Skylake' in the field of 'Condename'
 Ivybridge: There is no 'Codename' field.
- NOTE: BIOS value to be changed again after simulation mode for normal scan mode as following procedure.
 - 1.) Turn the system on and press "Del" key to enter the BIOS Menu.
 - 2.) Enter Password "polaris" and Press 'Enter" key.
 - 3.) Press 'F9' and select 'Yes'.
 - 4.) Press 'F10' and select 'Yes' to save change.

Operation:

- 1.) Power On / Boot Up the system as described in Section 3-6-2 "Power On / Boot Up" on page 3-25.
- 2.) As soon as the start-up process bar indicates "**Initialization of Voluson**", press the **H** key on the Alphanumeric keyboard.



Figure 7-33 Start-up bar: "Initialization of Voluson"

3.) Keep the **H** key pressed during complete startup (~ 1 minute). Following message appears:



Figure 7-34 H Key pressed during startup

- 4.) Click on CONTINUE. The "Probe Selection" menu appears on the screen.
- 5.) Press the FREEZE key. The application starts, but does not show any Ultrasound information.
- 6.) Backup all images (see:Section 4-5-6 "Archiving Images" on page 4-21).
- 7.) Save a "Full Backup" as described in Section 4-5-3 "Save Full System Configuration (Full Backup)" on page 4-16) or press the <u>ALT+D</u> key to gather detailed information and data from the system. (see: Section 7-4-3-1 "Export System Data (by pressing the ALT + D key)" on page 7-14).
- 8.) Press the <u>F2</u> key on the control panel and select <u>SYSTEM SETUP</u> to invoke setup desktop.
- 9.) Select ADMINISTRATION, open the SYSTEM INGO page and click REBOOT MACHINE.

Service System Info	Options		
General			
Voluson™ P8 BT 16		Serial Number:	A09999
		Software Version:	SPC310
System Info: Software		System Info: Hardware	
Level: Ext. 0 MV E UISApp: 16.0.00 MV (Dec 16 2015, 10:21:54) UISApp: 16.0.00 MV (Dec 16 2015, 10:16:35) 30/40: 51.0.1 30 (Nov 10 2015, 13:45:15) NLS Versian (Archive) 10:2-2:015 NLS Versian (Archive) 10:2-2:015 NLS Versian (DECeremHanu) 60:26:2013 NLS Versian (UIS) 66:26:2013 NLS Versian (UIS) 66:26:2013 Sockup FileName: S10:8856_SPC310_MV1_SPC310_16.0.0.2297_220:12 FactorySettings: Date: 1372015 Vers: A08000DB06PG00H105A Tune: SPC310 MV Ext.0 A origin: S10:8865_SPC310_MV1_16.0.0.2297_22102015_general changed: 20 factory, 30/40 factory Userprogram Version: 16.1 EUM: Unknown EUM Version! ProbeData: Dec 16 2015 10:12:09 CRC: 4ECC05EE Serviceptidform: not installed!	015_general.7z	CPU: 3491 MHz Identifier: Intel64 Family 6 Moc GPU: NVIDIA Quadro K4000 (310.90) RM* 15384MB physical. 15307MB useable MotCtfl acts as proxy simulated ECG HRS: Dec 16 2015, 10:18:59 Hardware ID: EF hardware: 64 channels HARDWARE: Mainboard Type: unknown Display Panel: unknown CONSOLES: ConsoleEmul-TetrisConsole: Versionlunknown) FSU3000GCansole: Versionlunknown)	iel 62 Stepping 4
Patent Applications			Reboot Machine

Figure 7-35 Reboot Machine

Section 7-9 User Interface Troubleshooting

7-9-1 Console Test

- 1.) Connect the USB "standard GE" service dongle on the front USB connector(s). As soon as the dongle is detected the login window pops up.
- 2.) <u>Enter the</u> "Standard GE Revolving" password (password changes every six months) and then click <u>ENABLE</u>.
- 3.) Start a probe.
- 4.) Press the **F2** key on the control panel.
- 5.) In the "Utilities" menu, select SYSTEM SETUP to invoke the setup desktop on the screen.
- 6.) On the left side of the screen select ADMINISTRATION and then click the SERVICE tab.
- 7.) In the displayed window, select the **SERVICE TOOLS** button. The "Service Tools" window appears on the screen; see: Figure 7-45 on page 7-47.

Administration/Service/Service1	Tools		x
System Serial Numb	er:	09999	
AutoTester	Update	Tools	
Start			
1			
			Probe EEPROM
			Load Application Settings and Factory Presets
TCP/IP Buffersize			
40 kB			

Figure 7-36 Sevice Tools

8.) Click the **CONSOLE TEST** button.

9.) The "TetrisConsole - Console Tester" window is displayed.



Figure 7-37 Console Tester

NOTE: For description of keys and their functions as well as the key code numbers refer to: Figure 5-6-2: OPIO layout on page 5-32.

Task	Actions and expected Results
DISCONNECT	Disconnect <> Reconnect
GET VERSION	The Console version is shown in the Status window on the screen.
LED TEST	Select the <u>LED TEST</u> button. All LEDs will be switched on/off. First click: All LEDs changes to green. Second click: All LEDs go off. Third click: All LEDs changes to orange. Forth click: : All LEDs go off. The <u>CLEAR LED'S</u> button sets all LED's off. (The illumination of all hardkeys is switched off.)
Hardkey Test	Press each hardkey. Indication (+ key code number) of each key is shown in the Status window on the screen.
Encoder Test	Swivel the encoders (digipots) left and right and check the display in the Status window on the screen.
Slider Test	Slider position on the screen should change correctly.
Trackball Test	Check movement of the mouse cursor.

10.)Exit the Test program by pressing CLOSE.

Section 7-10 Troubleshooting Trees, Instructions and Tech Tips

Table 7-8 below outlines Voluson[™] P8 / Voluson[™] P6 troubleshooting trees and instructions shown in the sub-sections.

Sub-section	Description	Page Number
7-10-1	System does not boot up	7-50
7-10-2	Noise disturbs the Image	7-51
7-10-3	Trackball - Impaired Sensitivity	7-52
7-10-4	Printer Malfunction	7-53
7-10-5	Monitor Troubleshooting	7-54
7-10-6	DVD/CD+R/RW Drive Test	7-55
7-10-7	Network Troubleshooting	7-57
7-10-8	Tech Tips	7-58

 Table 7-8
 Troubleshooting Trees and Instructions

7-10-1 System does not boot up



Figure 7-38 System does not Power On / Boot Up

7-10-2 Noise disturbs the Image



Figure 7-39 Noise disturbs the Image - Troubleshooting

7-10-3 Trackball - Impaired Sensitivity



7-10-4 Printer Malfunction



Figure 7-41 Printer Malfunction

7-10-5 Monitor Troubleshooting

Fault symptom	Check these items
	Check the HDMI and Power cable are properly connected to monitor.
No image/No signal	Check the HDMI and Power cable are properly connected to DRFM.
	Check no pins of the HDMI and Power cable are bent.
Video test pattern are not clear, bright parallel or square	Replace the monitor.

For further details refer to Section 6-3 "LCD Monitor Adjustment" on page 6-2.

7-10-6 DVD/CD+R/RW Drive Test

- NOTE: Only DVD+R/RW and CD+(R)W medias are available.
 - 1.) Insert an empty DVD/CD+R/RW into the Drive.
 - 2.) Enter "Patient Archive" by pressing the **PATIENT** key on the control panel.

							-	(B an)		
Current Patient	🛞 Patie	nts & Exams	Exams Only				U AND	OR		Show (
archive								11/10/2013		
xam Review	Patients	-1.15	The start start		This date				Conneity	2794 39
rchive-Patient	9999	-15-04-22-1	/ Potient No	ime	Birthddte	1	F	04/22/2015	Used:	810.95
ka se Current	9999	-15-05-08-1 -15-10-23-1	test			1	F	05/08/2015 10/23/2015		1983.44
dit Data									Nr. of Potients:	3/3
uit Data										
									Selected Patients:	
eopen cxam									Selected Exams: Selected Images:	
										2.77 MB
	Exams								Exam La	ick: 👔
ata Transfer	В Еко	m Date 💷	Exam Time	Exam Type		Img	Exam Con	nment	Application	
xport	10	/23/2015	13:07:21						Obstetrics	
mport										
rint										
DICOM Send										
	* 2									
					Delete / An	onymize				

Figure 7-42 Patient Archive - ARCHIVE

- 3.) On the left side of the screen select ARCHIVE as shown in Figure 7-51 above.
- 4.) If not already selected, choose Source "Local Archive" Drive from the pop-up menu.
- 5.) Select an Exam (with images).

7-10-6 DVD/CD+R/RW Drive Test (cont?)

- 6.) Export images of the selected exam to DVD/CD+R/RW:
 - a.) Click the $\overline{\text{EXPORT}}$ button.
 - b.) If not already selected, choose "DVD/CD" drive from pop-up menu.
 - c.) Enter "File name".
 - d.) Select any Voluson Format (*.4dv) from the pop-up menu.
 - e.) Click the \overline{SAVE} button.

	Source Local Archive	-	Search Pati	ent ID	-			Search	
Current Patient					AND	OR OR			
Archive	Patients & Exams	Exams Only				12/16/2015 -			
Exam Review	Patients	E	cport - F:\						
Archive-Patient	B Patient ID 9999-15-04-22-1 9999-15-05-08-1	/ Patien	Save in:	🛃 DVID/CD Rec (Ft)		B B	Capacity: Used: Free:	2794.39 GB 810.95 GB 1983.44 GB	
	9999-15-10-23-1	test							
Edit Data							Nr. of Patients:		
							Selected Patients Selected Exams:		
							Selected Images:		
				DMG_20151216_1				2.77 MB	
	Exams			Voluson Format uncom	pressed (*.4dv) 👻				
Data Transfer	B Exam Date 🛆	Exam Time					Application		
Export	10/23/2015	13:07:21	Estimated Filesize:	2.77 MB	Used Space:	0 68	Obstetrics		
Import									
Print									
DICOM Send									
				Delete / Anonym					
			Set				•	□-} (°	

Figure 7-43 Export images to DVD/CD - as *.4dv format

- 7.) After successful export, choose Source "4DV" from the pop-up menu.
- 8.) The images, which you have chosen to export should be visible.

7-10-7 Network Troubleshooting

7-10-7-1 No Connection to the Network at All

P	Gray = Cable disconnected or no network signal on a connected cable.
₽	Green = Cable connected to a network. Does not imply proper network settings.

- Check that the network cable between the VVoluson[™] P8 / Voluson[™] P6 system and the wall network is connected and well seated in both ends. (Use a network cable that is known to be OK.)
- 2.) Connect a network cable between the system and a PC by either using a hub or a cross-over cable. Try to ping from system to IP address on PC. If OK, hardware connection inside the system is OK.

7-10-7-2 GE remote service connection

The customer gets visual information about GE remote service status (shown in the status area on the right bottom of the screen).

GE	Gray = Idle State	Remote access is inactive.
GE	Yellow = Access pending	Remote Access connection is active, but Disruptive Mode and Virtual Console Observation (VCO) is not yet enabled.
Central Contraction of the second sec	Red = Disrupted State	Remote Access is active. All processes [UL_VNC and UL_CSD] are active. In this state the Voluson P-Series system should NOT be used clinically.
GE	Gray + envelope	New Software Update Package is available for download and installation. Operation see Section 8-2-4 "Software Update Package - Download/Installation Procedure" on page 8-13.

7-10-8 Tech Tips

Use Table 7-9 below to access Voluson[™] P8 / Voluson[™] P6 (troubleshooting) Technical Tips listed. Each entry in the table will hyper-link to the issue, cause and solution.

Table 7-9 Technical Tips

Sub-section	Description	Page Number
7-10-8-1	Storing SonoView images to Voluson™ P8 / Voluson™ P6	7-58

7-10-8-1 Storing SonoView images to Voluson[™] P8 / Voluson[™] P6

- Issue: Storing SonoView images from Voluson[™] 730/Expert/Pro/ProV to Voluson[™] P8 / Voluson[™] P6
- Cause: Archive is different (no SonoView on Voluson[™] P8 / Voluson[™] P6)
- **Solution:** 1.) Perform SonoView Backup on VolusonTM 730/Expert/Pro/ProV to external hard disk (USB) or DVD 2.) Import File "V730.mdb" from external hard disk (USB) or CD/DVD on VolusonTM P8 / VolusonTM P6

Procedure:

- 1.) Connect external hard disk or insert CD/DVD on the Voluson[™] P8 / Voluson[™] P6.
- 2.) Open Archive --> select "Data Transfer" --> "Import". The "Open File" window appears

Open File - F:\		×
Look in:	🛃 DVD/CD Rec (F;)	- 🖻 🍟
		75
File name:		Open
Files of type:	V730 Format (v730.mdb)	- Cancel

Figure 7-44 Open File

- 3.) Select Drive in the "Look In" pull down menu.
- 4.) In the "File of type" field change file type to "V730 Format (v730.mdb)".
- 5.) Browse for the folder where SonoView Backup was stored.
- 6.) Select file "v730.mdb" and then click OPEN.

Section 7-11 Error Messages

NOTICE If the problem (error message) still exists after performing the described actions, call technical support.

Index	Error Message	Reason	Action(s)
01.	Error on Power Management	When exceeds 15watt Protection limit	 See error message. Activated probe deselect.
02.	Scan Sequencer Data invalid Scan Sequencer protection PRF Generator checksum error	Restart the system	 See error message. Stop scanning
03.	Voluson VPD data for Device DRFM corrupt (CRC2 check failed) or read from HW failed. A backup of the data is used. We are sorry for the inconvenience. If the problem persists, please call technical support.	Restart the system	 See error message. Restart the system

GE DIRECTION 5723243, REVISION 6

Index	Error Message	Reason	Action(s)
04.	DMA stream error. Press Freeze to continue scanning. If the problem persists please call your service technician.	Restart the system	 See error message. Stop scanning
05.	Wigh system temperature reached! If the system temperature stays high, the system will shut down within 10 minutes. OK Language Selection: © English	Restart the system	 See error message. Shut down the system within 10 minutes.
06.	HRS × Error: Motor Control Unit RS232 communication timeout. Action: Confirm the message by pressing the OK button and restart the system. If problem persists please contact technical support. OK	Restart the system	1. See error message. 2.Restart the system

This page was intentionally left blank.

Chapter 8 Replacement Procedures

Section 8-1 Overview

8-1-1 Purpose of Chapter 8

This chapter contains replacement procedures for different modules and their subsystems.

NOTICE The **Manpower**, time and **Tools** indicated in the Sub-sections include all requirements from **Preparations** to **Installation Procedures**.

WARNING No covers or panels should be removed from the system (high-voltage risk). Service and repairs must only be performed by authorized personal. Attempting do-it-yourself repairs invalidate warranty and are an infringement to regulations and are inadmissible acc. to IEC 60601-1. Under the condition of regular maintenance by authorized service personnel a lifetime of 7 years for the equipment and 5 years for the probes may be expected.



The Waste of Electrical and Electronic Equipment (WEEE) must not be disposed as unsorted municipal waste and must be collected separately.

Please contact the manufacturer or other authorized disposal company for information concerning the decommission of your equipment.

Section	Description	Page Number
8-1	Overview	8-1
8-2	System Software - Installation/Upgrade Procedure	8-4
8-3	Software and Functional Checks after Installation/Upgrade Procedure	8-20
8-4	Image Settings Only - Loading Procedure	8-22
8-5	Full Backup (Full System Configuration) - Loading Procedure	8-22
8-6	Image Archive - Loading Procedure	8-22
8-7	Replacement or Activation of Options	8-23
8-8	Replacement of FRONT CABINET BEZEL ASSY BT16	8-25
8-9	Replacement of ASSY BEZEL FRONT DVD PLASTIC BT16	8-26
8-10	Replacement of FRONT PRINTER BEZEL ASSY BT16	8-27
8-11	Replacement of Cover Top Cabinet Plastic	8-28
8-12	Replacement of Front PEDESTAL COVER BT16	8-30
8-13	Replacement of TRAY PEDESTAL CABINET PLASTIC BT16	8-32

Table 8-1 Chapter 8 Contents

Chapter 8 - Replacement Procedures

Section	Description	Page Number
8-14	Replacement of REAR CABINET BEZEL ASSY BT16	8-34
8-15	Replacement of ENCODER set	8-35
8-16	Replacement of Power ON/OFF key PCB Assembly	8-40
8-17	Replacement of Keyboard Assembly-TOP	8-46
8-18	Replacement of OPIO BUTTON SET	8-51
8-19	Replacement of OPIO Plastic lower cover assy	8-56
8-20	Replacement of OPIO Plastic upper cover assy	8-62
8-21	Replacement of Monitor	8-67
8-22	Replacement of the MONITOR ARM	8-69
8-23	Replacement of LCD Cable	8-72
8-24	Replacement of ASSY Bumper Base Rubber	8-81
8-25	Replacement of OPIO	8-87
8-26	Replacement of the SPEAKER	8-91
8-27	Remove the PEDESTAL BOTTOM COVER BT16	8-92
8-28	Replacement of the NEST	8-93
8-29	Replacement of the AIR FILTER	8-98
8-30	Replacement of the Probe Holder(KIT)	8-100
8-31	Replacement of SIDE COVER LASSY BT16	8-101
8-32	Replacement of SIDE COVER R ASSY	8-103
8-33	Replacement of the Trackball	8-106
8-34	Replacement of the TGC BOARD	8-111
8-35	Replacement of AN KEYBOARD ASSY	8-113
8-36	Replacement of the Caster Cap BT16	8-115
8-37	Replacement of the CASTER	8-121
8-38	Replacement of the SIDE CABINET TRAY BT16	8-123
8-39	Replacement of the REAR HANDLE	8-124
8-40	Replacement of the SPEAKER COVER LEFT/RIGHT	8-127
8-41	Replacement of the DPS/DPS with Battery	8-128
8-42	Replacement of the DRFM	8-130
8-43	Replacement of the SOM in DRFM	8-139
8-44	Replacement of the HDD in DRFM	8-141
8-45	Replacement of the DBM64	8-142
8-46	Replacement of the T-DPI	8-144
8-47	Replacement of the CSI	8-147
8-48	Replacement of the CBP	8-149

Table 8-1Chapter 8 Contents

Section	Description	Page Number
8-49	Replacement of the DVD	8-151
8-50	Replacement of the OPIO USB Sub PWA	8-153
8-51	Replacement of AN KEY TOP	8-155
8-52	Replacing optional Peripherals	8-156
8-53	Replacement of FAN with Cable ASSY II	8-172
8-54	Functional Checks after FRU replacement (Debrief Guidelines)	8-173
8-55	Replacement of UVC	8-174
8-56	Replacement of CWD piggy	8-175
8-57	Replacement of ECG Kit assy	8-180
8-58	Replacement of Battery Pack Assy	8-184
8-59	Replacement of WIRELESS LAN	8-186

Table 8-1Chapter 8 Contents

8-1-2 Returning/Shipping System, Probes and Repair Parts

When returning or shipping the Voluson[™] P8 / Voluson[™] P6 system in the original packaging:

• the Control Console has to be centered and locked in "unextended" position

NOTE: For Control Console Positioning refer to 4-7-2 on page 4-27.

Equipment being returned must be clean and free of blood and other infectious substances.

GEHC policy states that body fluids must be properly removed from any part or equipment prior to shipment. GEHC employees, as well as customers, are responsible for ensuring that parts/equipment have been properly decontaminated prior to shipment. Under no circumstance should a part or equipment with visible body fluids be taken or shipped from a clinic or site (for example, body coils or and ultrasound probe).

The purpose of the regulation is to protect employees in the transportation industry, as well as the people who will receive or open this package.

The US Department of Transportation (DOT) has ruled that "items what were saturated and/or dripping with human blood that are now caked with dried blood; or which were used or intended for use in patient care" are "regulated medical waste" for transportation purpose and must be transported as a hazardous material.

Section 8-2 System Software - Installation/Upgrade Procedure

Introduction

There are two possibilities to update the system software:

- 1.) via the FMI from DVD button in the System Setup Service page
 - Software parts to be upgraded (e.g., Ultrasound Application Software, Service Software, EUM, MS patches, etc.) and installation time depend on contents of the used System DVD.
 - PRECONDITION: The first "Boot Device" in BIOS has to be Hard Disk Drive. To change BIOS Boot Priority Order setting.
 - If the currently installed software has to be upgraded to a newer version, a new software specific "Permanent key" is required. (Calculated in OKOS; http://3.187.187.9/OKOS. For detailed description see Section 8.2.1.3 on page 8-7.) If you do not have permission to access OKOS, contact the On Line Center to get the necessary key.
- 2.) by downloading and installing a Software Update Package via active InSite connection
 - Software parts to be upgraded (e.g., Ultrasound Application Software, Service Software, EUM, MS patches, etc.) and installation time depend on contents of the SW update package.
 - PRECONDITION: InSite connection has to be configured and checked out.

CAUTION Disconnecting ALL external USB devices (except DVD drive) is NECESSARY. Re-installation of any previously attached printer has to be done after the upgrade procedure.

Manpower

One person ~ 1 hour (depends on contents of System DVD resp. SW update package, peripherals, etc.)

Tools

System DVD (Under the top cabinet cover, inside the Voluson[™] P8 / Voluson[™] P6) or active InSite connection

Ultrasound Multipurpose Phantom* (if available)

NOTE: The use of test phantoms is only recommended if required by your facility's (customer's) QA program.

8-2-1 Before the Installation/Upgrade procedure

Before performing the Software Upgrade:

- perform an initial verification of the system and its functions; see Table 8-2
- check the current Application Software versio and the installed Options (8-2-1-2)
- if the currently installed software has to be upgraded by a newer version, calculate new software specific "Permanent key" in OKOS.

NOTE: It is **NOT necessary** to save Full System Configuration (Full Backup) prior to the upgrade. All existing User Programs, 3D/4D Programs and Auto Text settings remain untouched!

8-2-1-1 System Functional Checks

Mode	Task	Expected Result
2D Mode Quality	Connect an abdominal probe, press the <u>PROBE</u> key, select the "Abdomen" - Application and start the "Default" -Program. Record a 2D image of the Liver. If there is no abdominal probe, record a 2D image the Thyroid using a small parts probeand corresponding program.	regular and homogenous 2D image
Receiver Frequency	Use the <u>FREQUENCY</u> control to switch the Receiver Frequency range (penet./norm/resol.).	no disturbances in the 2D image during changing the Receiver Frequency
M Mode	Start the "Abdomen" -Program, adjust the M Cursor (vessel) and activate the M Mode. Adjust the <u>SPEED</u> key to change the M Mode sweep speed. After <u>FREEZE</u> , move the <u>TRACKBALL</u> to recall the stored sequence.	the M Cursor agree with Vessel Cine loop is displayed
Volume Mode	Start the Volume acquisition using a Real Time 4D probe.	continuous Volume Acquisition (without any "jumps") and smooth echo shape with clear defined image edge
Triplex Mode	Start the "Abdomen" -Program and switch on the C <u>FM- and the</u> <u>PW</u> Mode. Adjust the Doppler Cursor and press the <u>right trackball</u> <u>key</u> to activate the Triplex-Mode.	no disturbances in the 2D/Color and the Doppler image

Table 8-2System Function

NOTE: * The use of test phantoms is only recommended if required by your facility 's (customer's)QA program.

8-2-1-2 Check vital System Setup data

- 1.) Press the UTILITIES key on the control console.
- 2.) In the "Utilities" menu select SETUP button to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select ADMINISTRATION and then click the SYSTEM INFO tab.
- Check the currently installed Software/Hardware version of the Voluson[™] P8 / Voluson[™] P6 system.



Figure 8-1 Version check (System Setup - Administration - SYSTEM INFO page)

- 1. Currently installed Ultrasound Application Software version
- 2. Date of Factory Settings
- 5.) Select the Option tab to see which options are currently installed. Please print out the options page or write down down the state of the options (P = permanent, I = inactive).

NOTE: It is not necessary to note the Permanent Key; it is the state of the option that matters.

Service	System Info	Options		
	Voluson™ F	28		
P 3D/4D Activ P Advanced 3 P HDlive 3D P Advanced V P SingleView	ation D/4D Package Cl	Valid Permanent Permanent Permanent Permanent	System Serial Number A09999	
P SonoAVC*** P SonoLSD P TUI P XTD P Anatomical P SonoNT P IOTA LR2 P DICOM	follicle Pro M-Mode	Permanent Permanent Permanent Permanent Permanent Permanent Permanent	Demo Key	Submit
2 P Recording M P IEC62359 Ec P BT Activation P RLS	lodule SW-DVR 1.2 n	Permanent Permanent Permanent	Permanent Key 26XR-80E0-Ek3D-88HU-KhFF-XK5C	Submit
			3 Month Demo	

Figure 8-2 System Setup - Administration - Option page

- 1. D= Demo (Option is activated for demo and expires at date shown in the "Valid" column)
 - I = Inactive (Option is not activated)
 - P = Permanent (Option is permanently activated, i.e., purchased)
 - d = deactivated (Option is inactive)
- 2. Permanent Key
- NOTE: If the currently installed software has to be upgraded to a newer version, and the system is updated via the FMI from DVD button, a new software specific "Permanent key" is required. (Calculated in OKOS Option Key Order System; http://3.187.187.9/OKOS. For detailed description see Section 8.2.1.3 on page 8-7.)

8-2-2 System Software - Installation Procedure (FMI from DVD)

The system software installation procedure starts with saving and recording the settings present on the system (silent "Rollback"). Then the new software is written to the hard disk using the System DVD. Application Settings are automatically updated, to match with new Software version.

Existing User Programs, 3D/4D Programs and Auto Text remain unaffected! Afterwards the new software is configured such that it is integrated again in its environment.

NOTE: For more detailed information about "FMI from DVD" refer to 5-14-3-2-1 on page 5-51.

- 1.) Perform Preparations as described in 8-2-1 on page 8-4.
- 2.) If not already done, disconnect all external USB devices (except DVD/CD+R/RW drive).
- 3.) Insert the System DVD into the drive.
- 4.) **Restart** the system. (Turn system OFF and then back ON.)

NOTICE If the system boots into LINUX, the "Boot priority order" in BIOS is incorrect. Using the alphanumeric keyboard set "Boot priority order" to 1. boot device: Hard Disk;

- 5.) Press the Utilities key on the control console.
- 6.) In the "Utilities" menu select SETUP to invoke the setup desktop on the screen.
- 7.) On the left side of the screen select ADMINISTRATION and then click the **SERVICE** tab.
- 8.) Type in the password SHE and click ACCEPT.

Administration/Service/ServiceToo	ls		x
System Serial Number:		<u>866604</u>	
AutoTester	Update	Tools	
Start			
		Keyboard Layout Load Application Settings and Factory Presets	
TCP/IP Buffersize			
40 KB			

Figure 8-3 Service Tools

9.) Click the FMI FROM DVD button (see: Figure 8-3 on page 8-8) for updating the System Software.

10.) Verify that only the DVD drive is connected to the system, then click OK (Figure 8-4 below).



Figure 8-4 Verify that USB devices are disconnected, then click OK

11.)To start update procedure click YES

The system saves Full Backup in silent mode on R:, then it reboots into LINUX. A silent "Rollback" image from C:\ is stored on R:\. After executing all LINUX commands, the system reboots again.

- NOTE: If the currently installed software has to be upgraded to a newer version, a new software specific "Permanent key is required.
 - 12.)Enter the appropriate "Permanent Key" (calculated in OKOS), select OK and confirm with ENTER.



<u>Note:</u> This Example shows fictional numbers.

Figure 8-5 Inserting Permanent Key

If the entered Permanent key is correct, following window appears, confirm with **ENTER**.



Figure 8-6 Confirming Permanent Key

13.) Check disk is performed automatically - restart.



Figure 8-7 Check disk is performed automatically

14.)3 dots (one after the other) appear on the screen (see: Figure 8-8 below).15.)Booting auto....



Figure 8-8 Boot screen - auto

16.) Updating will take some time....

<pre>sdd: Wrote 0 records + 0 bytes (total of 0 bytes = 0.00k). ntfsresize v2.0.0 (libntfs 10:0:0) Device name : /dev/sdal NTFS volume version: 3.1 Cluster size : 4096 bytes Current volume size: 34359734784 bytes (34360 MB) Current device size: 34359738368 bytes (34360 MB) Checking filesystem consistency 100.00 percent completed Accounting clusters Space in use : 16338 MB (47.5×) Collecting resizing constraints You night resize at 16337305600 bytes or 16338 MB (freeing 18022 MB). Please make a test run using both the -n and -s options before real resizing? ntfsclone v2.0.0 (libntfs 10:0:0) NTFS volume version: 3.1 Cluster size : 4096 bytes Current device size: 34359734272 bytes (34360 MB) Current device size: 3435973868 bytes (34360 MB) Scanning volume 100.00 percent completed Accounting clusters Space in use : 16338 MB (47.5×) Saving NTFS to inage</pre>
Saving NIFS to inage

Figure 8-9 Please wait...

17.) Please wait until all processes are finished (100 percent completed).

18.) The system is rebooting into windows (Boot screen - Voluson).

NOTE: An automated process was developed to install the required software parts, perform check disk, remap driveletters and match settings. During this process the system might reboot several times!



Figure 8-10 auto processes are running

19.)Please wait until all processes are finished. Finally the 2D screen is displayed on the monitor.20.)Remove the System DVD from the DVD/CD+R/RW Drive drive

NOTE: If the BT warning dialog appears, enter the proper "Permanent key" and then click SUBMIT.

21.) If Control Panel is not working after first boot up, please **shut down** the system; then boot up again.

NOTICE After turning off a system, wait at least 10 seconds before turning it on again. The system may not be able to boot if power is recycled too quickly.

- 22.) **Reconnect the external devices**, install all the printers and adjust the printer settings as described in Section 3-7 "Printer Installation" on page 3-32.
- 23.) Check and match Printer Remote Control selection in the System Setup Connectivity BUTTON CONFIGURATION page.
- 24.)Confirm that the date and time are set correctly and that the Windows automatic DST feature is ON.
- 25.)Perform Software and Functional checks as described in Section 8-3 on page 8-20.

8-2-3 Software DVD Storage

1.) Disassemble the Top Cabinet Cover.



Figure 8-11 Disassembling the Top Cabinet Cover

2.) Put Software DVD in the jacket.



Figure 8-12 Putting Software DVD

3.) Re-assemble the Top Cabinet Cover.
8-2-4 Software Update Package - Download/Installation Procedure

8-2-4-1 Overview



This icon (at the right bottom of the screen) indicates that a new Software Update Package is available for download and installation.

The system software installation procedure starts with saving and recording the settings present on the system (silent "Full Backup" and "Rollback"). Then the new software is written to the hard disk. Application Settings are automatically updated, to match with new Software version.

Existing User Programs, 3D/4D Programs and Auto Text remain unaffected! Afterwards the new software is configured such that it is integrated again in its environment.

8-2-4-2 Update Procedure

- 1.) Remove any CD/DVD from the DVD drive.
- 2.) Perform Preparations as described in Section 8-2-1-1
- 3.) If not already done, disconnect all external USB devices (except DVD drive).
- 4.) Press the ON/OFF button on the control console.
- 5.) In the displayed screen click **Download**.



Figure 8-13 Download SW update package

6.) Download takes some time; please wait. (Download maybe paused by means of the Pause button.)

BASIC SERVICE MANUAL

7.) When downloading is finished, click Install.



Figure 8-14 Download finished - click Install

NOTE: Installation may take up to one hour. DO NOT interrupt the installation! If you want to install the new software later, click Exit. Installation can be resumed by clicking Install (in the Shutdown window).



8.) After clicking Install, the SW update procedure starts.

The system saves Full Backup in silent mode on R:, then it reboots into LINUX.



Figure 8-15 Installation in progress

9.) Check disk is performed automatically - restart.

```
checking file system on C:
The type of the file system is NTFS.
volume label is SYSTEM.
one of your disks needs to be checked for consistency. You
may cancel the disk check, but it is strongly recommended
that you continue.
windows will now check the disk.
CHKDSK is verifying files (stage 1 of 3)...
  81152 file records processed.
File verification completed.
  53 large file records processed.
  0 bad file records processed.
  0 EA records processed.
  44 reparse records processed.
CHKDSK is verifying indexes (stage 2 of 3)...
51 percent complete. (81450 of 110810 index entries processed)
```

Figure 8-16 Check disk is performed automatically

A silent "Rollback" image from C:\ is stored on R:\. After executing all LINUX commands, the system reboots again.

10.)3 dots (one after the other) appear on the screen.

11.)Booting auto.



Figure 8-17 Boot screen - auto

12.)Updating will take some time. First the image is saved to R:\ (Saving NTSF to image); then the image is restored from R:\ (Restoring NTFS from image).

```
sdd: Wrote 0 records + 0 bytes (total of 0 bytes = 0.00k).
ntfsresize v2.0.0 (libntfs 10:0:0)
Device name
                 : /dev/sda1
NTFS volume version: 3.1
Cluster size : 4096 bytes
Current volume size: 34359734784 bytes (34360 MB)
Current device size: 34359738368 bytes (34360 MB)
Checking filesystem consistency ...
100.00 percent completed
Accounting clusters ...
                 : 16338 MB (47.5%)
Space in use
Collecting resizing constraints ...
You might resize at 16337305600 bytes or 16338 MB (freeing 18022 MB).
Please make a test run using both the -n and -s options before real resizing!
ntfsclone v2.0.0 (libntfs 10:0:0)
NTFS volume version: 3.1
Cluster size
                : 4096 bytes
Current volume size: 34359734272 bytes (34360 MB)
Current device size: 34359738368 bytes (34360 MB)
Scanning volume ...
100.00 percent completed
Accounting clusters ...
                 : 16338 MB (47.5%)
Space in use
Saving NTFS to image ...
 3.59 percent completed
```

13.) Please wait until all processes are finished (100 percent completed).

14.) The system is rebooting into windows (Boot screen - Voluson).

NOTE: An automated process was developed to install the required software parts, perform check disk, remap drive letters and match settings. During this process the system might reboot several times!

C:\Windows\system32\cmd.exe	- C X
- Update D: drive after FMI	_
- Create folder d:\DUR\export	
- Create folder d:\usersettings\old_settings"	
- Copy old settings in the old_settings folder	
- Delete old settings	
- Copy new settings from r:\system\settings\ to d:\usersettings	
- Copy USA settings from r:\system\settings\USA\ to d:\usersettings	
- Restore Application and Probe Settings	
- S10S8S6: Restore Application and Probe Settings	
- S10S8S6: Remove settings temp directory	
	-

Figure 8-18 Automatic processes are running

15.)Wait until all processes are finished.

Finally the 2D screen with the "New Software Verification" report is displayed on the monitor.

New Software Verification		
New Software installed. Verification needed. Please check the following:		
	ок	Failed
2D Mode		
M-Mode		
PW-Mode		
Color-Mode	M	
Print		
Measure		
Worksheet		
Annotation		
Image Store/Reload		
Archive		
Check details (move cursor over check item) Check that it is possible to connect to Patient Archive. Signature Test Person Send		

Figure 8-19 New Software Verification

- 16.)Reconnect the external devices, install all the printers and adjust the printer settings as described in Section 3-7 "Printer Installation" on page 3-32.
- 17.) Check and match Printer Remote Control selection in the System Setup Connectivity Button Configuration page.
- 18.)Confirm date and time setting in the System Setup General Settings General Settings page.
- 19.)Perform a check of all modes and features listed. (Move the cursor over the feature name to get information how to check.) Section 3-7 "Printer Installation" on page 3-32.
- 20.) When all features are OK, enter your signature and then click Send. See Figure 8-19 above.
- NOTE: If one feature gets "Failed", rollback the installation (restore the previously used system configuration). For more detailed information, see Section 5-15-1-3 "Rollback" on page 5-57.

Section 8-3 Software and Functional Checks after Installation/Upgrade Procedure

- 1.) Press the UTILITIES key on the control panel.
- 2.) In the "Utilities" menu select $\overline{\text{SETUP}}$ to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select ADMINISTRATION and then click the OPTION tab.
- 4.) Verify the correct settings of the <u>OPTIONS</u> page; see: Figure 8-2 on page 8-7. If necessary, customize the settings according to the printout.
- 5.) Click the **<u>SYSTEM INFO</u>** tab.

Service System Info Options		
General		
Voluson™ P8 BT 16	Serial Number:	A09999
	Software Version:	SPC310
system Info: Software	System Info: Hardware	
Level: Ext. 0 MV B UISAgp: 16.0.0.0 MV (IOct 23 2015, 11:19:25) UISAgp: 16.0.0.0 MV (IOct 23 2015, 10:18:77) NUS: Version (IOCt 19 2015, 09:68:11) 3D/47: 51.0.1 30 (IOct 20 2015, 10:18:77) NUS Version (IOCt 20:05) NUS Version (IOLS) 06:26:2013 NUS Version (IUS): 06:26:2013 NUS Version (IUS): 06:26:2013 NUS Version (IUS): 06:26:2013 NUS Version (IUS): 06:26:2013 NUS Version (IUS): 06:26:2013 NUS Version (IUS): 06:26:2013 NUS Version (IUS): 06:26:2013 NUS Version (IUS): 06:26:2013 NUS Version (IUS): 06:26:2013 NUS Version (IUS): 06:26:2013 NUS Version (IUS): 06:26:2013 Vers: A0800000607000H105A Tune: SPC310 MV Ext0.A origin: S106866; SPC310_IV1_16.0.0:2297_22102015_general changed: 20 factory; 3D/40 factory Userprogram Version: 16.1 EUN: Unknown EUM Version! ProbeDate: 012 2015 11:11:18 CRC: CCEF37D6 Serviceplatform: not installed!	CPU: 3491 MHz Identifier: Intel64 Family 6 M GPU: NVIDIA Quadro K4000 (31090) RAM: 1634MB physical, 16307MB useable MotCtrl acts as proxy simulated ECG HRS: Oct 23 2015, 11:16:51 Hardware ID: BF hardware: 64 channels HARDWARE: Mainboard Type: unknown Display Panel: unknown Display Panel: unknown CONSOLES: ConsoleEmul-TerrisConsole: Version(unknown)	n)

Figure 8-20 System Setup - Administration - SYSTEM INFO page

- 6.) Check the Application Software version.
- 7.) Check that the Tune version of the Application presets match the Application Software version.

NOTICE It is **neither required nor advisable to reload a previously stored "Full Backup**" after a software upgrade that was performed by means of the <u>FMI FROM DVD</u> button!

If the Tune version does not match the Application Software version, a warning message appears whenever booting up the system.

In this case, it is essential to load the **proper Application Settings** (image presets), adapted for the installed software version. Refer to: 5-14-3-12 "Connected Probes" on page 5-53.

- 8.) Perform basic functional checks to ensure system is functioning normally.
- 9.) Check Service Connectivity ; if required, perform InSite Checkout. i.e., Service Platform has to be configured properly.

Table 8-3	Software	Upgrade	Checklist
-----------	----------	---------	-----------

Check Items	Result		
The software was successfully installed without errors according to the instructions.	[]Passed	[]Failed	
Voluson SPC310 Software Part Number and Revision were correct as the instructions. Part number : Part Revision :	[]Passed	[]Failed	
Demo images were successfully imported (Optional).	[]Passed	[]Failed	[]N/A
Function Check A Power ON/Boot up	[]Passed	[]Failed	
Mode Transitions	[]Passed	[]Failed	
B-Flow (Optional)	[]Passed	[]Failed	[]N/A
CW (Optional)	[]Passed	[]Failed	[]N/A
4D (Optional)	[]Passed	[]Failed	[]N/A
Power Shut Down	[]Passed	[]Failed	
System Serial Number : Probe Used (Name and Serial Number Written below) :			
Overall Results : Passed / Failed			
Date (MM/DD/YYYY) :	-		
SSO ID and Name (Print) :			
Signature :	-		

Section 8-4 Image Settings Only - Loading Procedure

8-4-1 Introduction

The Image Settings contain:

- Application Settings
- 2D Factory and 2D user Presets
- 3D/4D Factory and 3D/4D User Presets
- Annotation Presets
- Scan Assistant Configuration
- Measure configuration
- Biopsy Lines

8-4-2 Loading Procedure

see: 4-5-2 "Load Small Backup (Scan Settings)" on page 4-13

Section 8-5 Full Backup (Full System Configuration) - Loading Procedure

8-5-1 Introduction

The Full Backup contains following data:

- User Settings (databases and files containing User Programs, 2D/3D/4D Programs, Auto Text entries, gray curves and complete System settings such as language, time/date format, etc.)
- Measure Configuration (user specific measure setup settings)
- Patient Archive (database containing patient demographic data and measurements) no images
- Options (Permanent Key that is specific for enabled software options and Demo Key)
- Image Transfer Configuration (DICOM settings e.g., DICOM servers, AE Title, Station Name, etc.)
- Network Configuration (network settings including the computer name)
- Service Platform (state of the Service Software)

8-5-2 Loading Procedure

see: 4-5-4 "Load Full System Configuration (Full Backup)" on page 4-18

Section 8-6 Image Archive - Loading Procedure

8-6-1 Introduction

A backup of the Image Archive contains the Patient Archive (database containing patient demographic data and measurements) **+ images**.

8-6-2 Loading Procedure

see: 4-5-6-2 "Load Image Archive" on page 4-23

Section 8-7 Replacement or Activation of Options

Following Software options are available:

Options	VP6	VP8
3D/4D Activation	Option a)	Option a)
Advanced 3D/4D Package	Option b)	Option b)
HDlive TM 3D	Not Available	Option c)
Advanced VCI	Not Available	Option c)
SingleView	Option c)	Option c)
SonoAVC follicle Pro	Option c)	Option c)
Sono L&D	Option	Option
TUI	Option c)	Option c)
CFMM-CFM	Option	Standard
ХТД	Not Available	Option
Anatomical M-Mode	Not Available	Option
SonoNT	Not Available	Option
ΙΟΤΑ	Option	Option
DICOM	Option	Option
Recording Module SW-DVR	Option	Option

Table 8-4Software options

NOTE: Option a) : 4D Realtime, Static 3D, SonoRenderlive Option b) : 3D/4D Activation, TUI, SingleView

Option c) : Can be used with 3D/4D Activation

8-7-1 Operation for activating Options

- 1.) Press the $\overline{F2}$ key on the control panel.
- 2.) In the "Utilities" menu select SYSTEM SETUP to invoke the setup desktop on the screen.
- 3.) On the left side of the screen select <u>ADMINISTRATION</u> and then click the <u>OPTIONS</u> tab (see: Figure 8-2 on page 8-7.)

8-7-1-1 Operation for installing a "Demo Key" or a "Permanent Key":

- 1.) Position the cursor inside the input field desired and press the right/left trackball key.
- 2.) If one exists, clear/edit the current key code.
- 3.) Enter the encrypted serial code with the keyboard and click on **SUBMIT**. (Code will be checked.)
- 4.) Click the <u>SAVE&EXIT</u> button.
- NOTE: After activating a key code, restart (turn off and on) the Voluson[™] P8 / Voluson[™] P6 system.

Section 8-8 Replacement of FRONT CABINET BEZEL ASSY BT16

FRONT CABINET BEZEL

ASSY BT16

8-8-1 Manpower

1 person, 1 minute

8-8-2 Tools

Not required

8-8-3 Disassembly Procedure

1.) Remove the FRONT CABINET BEZEL ASSY BT16. Refer to the figure below.



Figure 8-21 Removing the FRONT CABINET BEZEL ASSY BT16

8-8-4 Installation Procedure

Section 8-9 Replacement of ASSY BEZEL FRONT DVD PLASTIC BT16

8-9-1 Manpower

1 people, 1 minute

8-9-2 Tools

Not required

8-9-3 Disassembly Procedure

1.) Remove the ASSY BEZEL FRONT DVD PLASTIC BT16. Refer to the figure below.



ASSY BEZEL FRONT DVD PLASTIC BT16

Figure 8-22 Removing the ASSY BEZEL FRONT DVD PLASTIC BT16

8-9-4 Installation Procedure

Section 8-10 Replacement of FRONT PRINTER BEZEL ASSY BT16

8-10-1 Manpower

1 people, 5 minutes

8-10-2 Tools

Philips screw driver

8-10-3 Disassembly Procedure

1.) Remove the FRONT PRINTER BEZEL ASSY BT16. Refer to the figure below.



Figure 8-23 Removing the FRONT PRINTER BEZEL ASSY BT16

2.) Unscrew 2 screws and remove the PRINTER DUMMY COVER ASSY BT16. Refer to the figure below.





8-10-4 Installation Procedure

Section 8-11 Replacement of Cover Top Cabinet Plastic

8-11-1 Manpower

1 people, 3 minutes

8-11-2 Tools

Not required

8-11-3 Disassembly Procedure

1.) Remove the FRONT CABINET BEZEL ASSY BT16. Refer to the figure below.



Figure 8-25 Removing the FRONT CABINET BEZEL ASSY BT16

2.) Remove the FRONT PRINTER BEZEL ASSY BT16. Refer to the figure below.



Figure 8-26 Removing the FRONT PRINTER BEZEL ASSY BT16

3.) Remove the TOP CABINET COVER BT16. Refer to the figure below.



Figure 8-27 Removing the TOP CABINET COVER BT16

8-11-4 Installation Procedure

Section 8-12 Replacement of Front PEDESTAL COVER BT16

8-12-1 Manpower

1 people, 5 minutes

8-12-2 Tools

Philips screw driver

8-12-3 Disassembly Procedure

1.) Remove the FRONT PRINTER BEZEL ASSY BT16. Refer to the figure below.



Figure 8-28 Removing the FRONT PRINTER BEZEL ASSY BT16

2.) Remove the TOP CABINET COVER 16. Refer to the figure below.



Figure 8-29 Removing the TOP CABINET COVER BT16

3.) Remove BOTTOM PEDESTAL COVER BT16. Refer to the figure below.



Figure 8-30 Removing the BOTTOM PEDESTAL COVER BT16

4.) Unscrew 2 screws, and remove the Cover Front Pedestal. Refer to the figure below.



Figure 8-31 Removing the FRONT PEDESTAL COVER BT16

8-12-4 Installation Procedure

Section 8-13 Replacement of TRAY PEDESTAL CABINET PLASTIC BT16

8-13-1 Manpower

1 people, 5 minutes

8-13-2 Tools

Not required

8-13-3 Disassembly Procedure

1.) Remove the TRAY PEDESTAL CABINET PLASTIC BT16. Refer to the figure below.



Figure 8-32 Removing the TRAY PEDESTAL CABINET PLASTIC BT16

2.) Remove the two Self-Adhesive Loops. Refer to the figure below.



Figure 8-33 Removing the two Self-Adhesive Loops

3.) Install the Self-Adhesive Hook and Loop set on the TRAY PEDESTAL CABINET PLASTIC BT16. Refer to the figure below.



Figure 8-34 Installing the Self-Adhesive Hook and Loop set

4.) Remove the Paper and place the TRAY PEDESTAL CABINET PLASTIC on the System Pedestal. Refer to the figure below.



Figure 8-35 Removing the Paper and placing the TRAY PEDESTAL CABINET PLASTIC BT16

Section 8-14 Replacement of REAR CABINET BEZEL ASSY BT16

8-14-1 Manpower

1 person, 1 minute

8-14-2 Tools

Not required

8-14-3 Disassembly Procedure

1.) Remove the Rear Cabinet BEZEL ASSY BT16. Refer to the figure below.



Figure 8-36 Removing the REAR CABINET BEZEL ASSY BT16

8-14-4 Installation Procedure

Section 8-15 Replacement of ENCODER set

8-15-1 Manpower

One person, 40 minutes

8-15-2 Tools

Philips screw driver, spanner

8-15-3 Removal procedure

1.) Unscrew 9 screws at the bottom of the keyboard body. Refer to the figures below.





Figure 8-37 Unscrewing 9 screws

2.) Remove 5 probe holders. Refer to the figure below.



Figure 8-38 Removing 5 probe holders

3.) Lift up main keyboard assy. Refer to the figure below.



Figure 8-39 Lifting up main keyboard assy

4.) Disconnect 4 cables. Refer to the figure below.



Figure 8-40 Disconnecting 4 cables

5.) Pull 10 encoder key caps out. Refer to the figure below.



Figure 8-41 Pulling 10 encoder key caps out

6.) Unscrew 2 screws on trackball and disconnect the cable to remove the trackball. Refer to the figures below.



Figure 8-42 Unscrewing 2 screws on trackball

7.) After removing trackball, unscrew 21 screws and disconnect TGC cable. And lift up the main keyboard circuit board. Refer to the figure below.



Figure 8-43 Lifting up the main keyboard circuit board after unscrew 21 screws and disconnecting TGC cable

8.) By using spanner, unscrew the nut of encoder to be replaced. And replace the encoder. Refer to the figures below.



Figure 8-44 Unscrewing the nut of encoder to be replaced

9.) Pull the encoder out from the main keyboard circuit board. Refer to the figure below.



Figure 8-45 Pulling the encoder out from the main keyboard circuit board

8-15-4 Installation Procedure

Section 8-16 Replacement of Power ON/OFF key PCB Assembly

8-16-1 Manpower

One person, 30 minutes

8-16-2 Tools

Philips screw driver

8-16-3 Disassembly procedure

1.) Unscrew 9 screws at the bottom of the keyboard body. Refer to the figures below.





Figure 8-46 Unscrewing 9 screws

2.) Remove 5 probe holders. Refer to the figure below.



- Figure 8-47 Removing 5 probe holders
- 3.) Lift up main keyboard assy. Refer to the figure below.



Figure 8-48 Lifting up main keyboard assy

4.) Disconnect 4 cables under the main keyboard assy. Refer to the figure below.



Figure 8-49 Disconnecting 4 cables

5.) Unscrew 2 screws on the system body. Refer to the figure below.



Figure 8-50 Unscrewing 2 screws on the system body

6.) Remove 2 RUBBER CAPS on SPEAKER COVER LEFT/RIGHT.



Figure 8-51 Assembling 2 RUBBER CAPS on SPEAKER COVER LEFT/RIGHT

7.) Unscrew 2 screws and then remove the SPEAKER COVER LEFT/RIGHT. Refer to figure below.



Figure 8-52 Unscrewing 2 screws to remove SPEAKER COVER LEFT/RIGHT

8.) Unscrew 2 screws and remove the UPPER KEYBOARD ASSY.



Figure 8-53 Removing Upper keyboard Assy

9.) Unscrew 7 screws then remove metal cover and USB connection circuit board. Refer to the figure below.



Figure 8-54 Unscrewing 7 screws

10.) Remove the On-Off key circuit. Refer to the figures below.



Figure 8-55 Removing the On-Off key circuit

8-16-4 Installation procedure

Section 8-17 Replacement of Keyboard Assembly-TOP

8-17-1 Manpower

One person, 25 minutes

8-17-2 Tools

Philips screwdriver

8-17-3 Disassembly procedure

1.) Unscrew 9 screws at the bottom of the keyboard body. Refer to the figures below.





Figure 8-56 Unscrew 9 screws

2.) Remove 5 probe holders. Refer to the figure below.



Figure 8-57 Removing 5 probe holders

3.) Lift up main keyboard assy. Refer to the figure below.



Figure 8-58 Lifting up main keyboard assy

4.) Disconnect 4 cables under the main keyboard assy. Refer to the figure below.



Figure 8-59 Disconnecting 4 cables

5.) Unscrew 2 screws and remove cable tie on the system body. Refer to the figure below.



Figure 8-60 Unscrewing 2 screws and removing cable tie on the system body
6.) Remove 2 RUBBER CAPS on SPEAKER COVER LEFT/RIGHT. Refer to the figure below.



Figure 8-61 Removing 2 RUBBER CAPs on SPEAKER COVER LEFT/RIGHT

7.) Unscrew 2 screws and then remove the SPEAKER COVER LEFT/RIGHT. Refer to figure below.



Figure 8-62 Unscrewing 2 screws to remove SPEAKER COVER LEFT/RIGHT

8.) Unscrew 2 screws and pick up the sub keyboard. Refer to the figures below.





Figure 8-63 Picking up the sub keyboard

8-17-4 Installation procedure

Install a new part in the reverse order of removal procedure.

Section 8-18 Replacement of OPIO BUTTON SET

8-18-1 Manpower

One person, 40 minutes

8-18-2 Tools

Philips screwdriver

8-18-3 Removal Procedure

1.) Unscrew 9 screws at the bottom of the keyboard body. Refer to the figures below.





Figure 8-64 Unscrewing 9 screws

2.) Remove 5 probe holders. Refer to the figure below.



Figure 8-65 Removing 5 probe holders

3.) Lift up main keyboard assy. Refer to the figure below.



Figure 8-66 Lifting up main keyboard assy

4.) Disconnect 4 cables. Refer to the figure below.



Figure 8-67 Disconnecting 4 cables

5.) Pull 10 encoder key caps out. Refer to the figure below.



Figure 8-68 Pulling 10 encoder key caps out

6.) Unscrew 2 screws on trackball and disconnect the cable to remove the trackball. Refer to the figures below.



Figure 8-69 Unscrew 2 screws on trackball

7.) After removing trackball, unscrew 21 screws and disconnect TGC calbe. And lift up the main keyboard circuit board. Refer to the figure below.



Figure 8-70 Lifting up the main keyboard circuit board after unscrewing 21 screws and disconnecting TGC cable

8.) Remove the button to be replaced. Refer to the figure below.



Figure 8-71 Removing the button

8-18-4 Installation Procedure

Install a new part in the reverse order of removal procedure.

Section 8-19 Replacement of OPIO Plastic lower cover assy

8-19-1 Manpower

One person, 40 minutes

8-19-2 Tools

Philips screwdriver

8-19-3 Disassembly procedure

1.) Unscrew 9 screws at the bottom of the keyboard body. Refer to the figures below.





Figure 8-72 Unscrewing 9 screws

2.) Remove 5 probe holders. Refer to the figure below.



Figure 8-73 Removing 5 probe holders

3.) Lift up main keyboard assy. Refer to the figure below.



Figure 8-74 Lifting up main keyboard assy

4.) Disconnect 4 cables. Refer to the figure below.



Figure 8-75 Disconnecting 4 cables

5.) Pull 10 encoder key caps and 8 TGC control key caps out. Refer to the figure below.



Figure 8-76 Pulling 10 encoder key caps and 8 TGC control key caps out

6.) Disconnect A/N key cable and unscrew 10 screws of A/N key. Refer to the figures below.



Figure 8-77 Disconnecting A/N key cable and unscrew 10 screws

7.) Unscrew 4 screws of TGC control circuit board after disconnecting the cable. Refer to the figures below.



Figure 8-78 Unscrewing 4 screws of TGC control circuit board

8.) Pull out the circuit board. Refer to the figure below.



Figure 8-79 Pulling out the circuit board

9.) Unscrew 2 screws on trackball and disconnect the cable to remove the trackball. Then remove trackball. Refer to the figure below.



Figure 8-80 Unscrewing 2 screws on trackball and disconnecting the cable

10.)Unscrew 21 screws from main keyboard. Then pull the main circuit board out. Refer to the figure below.



Figure 8-81 Unscrewing 21 screws from main keyboard

8-19-4 Installation procedure

Install a new part in the reverse order of removal procedure.

Section 8-20 Replacement of OPIO Plastic upper cover assy

8-20-1 Manpower

One person, 30 minutes

8-20-2 Tools

Philips screwdriver

8-20-3 Disassembly procedure

1.) Unscrew 9 screws at the bottom of the keyboard body. Refer to the figures below.





Figure 8-82 Unscrewing 9 screws

2.) Remove 5 probe holders. Refer to the figure below.



Figure 8-83 Removing 5 probe holders

3.) Lift up main keyboard assy. Refer to the figure below.



Figure 8-84 Lifting up main keyboard assy

4.) Disconnect 4 cables under the main keyboard assy. Refer to the figure below.



Figure 8-85 Disconnecting 4 cables

5.) Unscrew 2 screws on the system body. Refer to the figure below.



Figure 8-86 Unscrewing 2 screws on the system body Section 8-20 - Replacement of OPIO Plastic upper cover assy

6.) Remove 2 RUBBER CAPS on SPEAKER COVER LEFT/RIGHT.



Figure 8-87 Removing the RUBBER CAPS

7.) Unscrew 2 screws and then remove the SPEAKER COVER LEFT/RIGHT.. Refer to the figures below.



Figure 8-88 Unscrewing 2 screws to remove SPEAKER COVER LEFT/RIGHT

8.) Unscrew 2 screws and remove the upper keyboard assy.



Figure 8-89 Unscrewing 2 screws

Chapter 8 - Replacement Procedures

9.) Unscrew 7 screws then remove metal cover, power On/Off key assembly and USB connection circuir board. Refer to the figure below.



Figure 8-90 Unscrewing 7 screws

8-20-4 Installation procedure

Install a new part in the reverse order of removal procedure.

Section 8-21 Replacement of Monitor

8-21-1 Manpower

2 people, 10 minutes

8-21-2 Tools

Philips screwdriver, Allen Wrench

8-21-3 Removal Procedure

1.) Unscrew 2 screws to remove the Monitor REAR CABINET BEZEL ASSY BT16. Refer to the figure below.



Figure 8-91 Unscrewing 2 screws to remove the Monitor REAR CABINET BEZEL ASSY BT16

2.) Unscrew 5 screws to disconnect the LCD cables.



Figure 8-92 Unscrewing 5 screws to disconnect the LCD cables

3.) One person grab the MONITOR. the other person should unscrew the 2 hexagonal socket screws and then separate the MONITOR for the LCD ARM. Refer to the figure below.



Figure 8-93 Unscrewing 2 hexagonal screws to separate MONITOR

8-21-4 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-8: Replacement of Monitor Functional Tests.

Section 8-22

Replacement of the MONITOR ARM

8-22-1 Manpower

Two persons, 20 minutes

8-22-2 Tools

Philips screwdriver, Nipper, Allen Wrench

8-22-3 Removal Procedure

- 1.) Disassemble the LCD MONITOR. Refer to the Section 8-21 "Replacement of Monitor" .
- 2.) Unscrew 1 screw to remove Monitor arm cover. Refer to the figure below.



Figure 8-94 Removing the LCD Arm Cover

3.) Removing 2 RUBBER CAPS on SPEAKER COVER LFET/RIGHT.



Figure 8-95 Removing 2 RUBBER CAPS on SPEAKER COVER LEFT/RIGHT

4.) Unscrew 2 screws, and then remove SPEAKER COVER LEFT/RIGHT. Refer to the figure below.



Figure 8-96 Unscrewing 2 screws to remove SPEAKER COVER LEFT/RIGHT

5.) Unscrew 1 screw to remove Monitor Cable Fix bracket.



- MONITOR CABLE FIX BRACKET



6.) Pull the LCD Cables through the LCD ARM and MONITOR HOLDER.



Figure 8-98 Pulling out the LCD Cables from LCD ARM

7.) Unscrew LCD ARM STOPPER SCREW. Refer to figure below.



Figure 8-99 Unscrewing LCD ARM STOPPER SCREW

8.) Pull out the LCD ARM from the LCD ARM HOLDER



Figure 8-100 Pulling out the LCD ARM from the LCD ARM HOLDER

8-22-4 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-9: Replacement of the MONITOR STAND ARM Functional Tests.

Section 8-23 Replacement of LCD Cable

8-23-1 Manpower

One person, 15 minutes

8-23-2 Tools

Philips screw driver, Flat-blade screwdriver, wrench, Pincette, Cutter

8-23-3 Disassembly Procedure

1.) Unscrew 2 screws to remove the MONITOR REAR CABINET BEZEL ASSY BT16. Refer to the figure below.



Figure 8-101 Unscrewing 2 screws to remove the MONITOR REAR CABINET BEZEL ASSY BT16

2.) Unscrew 5 screws to disconnect the LCD Cables.



Figure 8-102 Unscrewing 5 screws to disconnect the LCD Cables

3.) Unscrew 1 screw to remove MONITOR ARM COVER. Refer to the figure below.



Figure 8-103 Unscrewing 1 screw to remove Monitor arm cover

4.) Unscrew 1 screw to remove MONITOR CABLE FIX BRKT. Refer to the figure below.



Figure 8-104 Unscrewing 1 screw to remove MONITOR CABLE FIX BRKT

5.) Remove 2 RUBBER CAPS on SPEAKER COVER LEFT/RIGHT. Refer to the figure below.



Figure 8-105 Removing 2 RUBBER CAPS on SPEAKER COVER LEFT/RIGHT

6.) Unscrew 2 screws, and then remove SPEAKER COVER LEFT/RIGHT. Refer to the figure below.



Figure 8-106 Unscrewing 3 screw to remove SPEAKER COVER LEFT/RIGHT

7.) Unscrew 9 screws at the bottom of the OPIO. Refer to the figure below.



Figure 8-107 Unscrewing 9 screws at the bottom of the OPIO

8.) Lift up the OPIO and disconnect Power, OPIO, 2 USB cables from the OPIO HUB PWA. Refer to the figure below.





9.) Remove the FRONT PRINTER BEZEL ASSY BT16. Refer to the figure below.



FRONT PRINTER BEZEL ASSY BT16

Figure 8-109 Removing the FRONT PRINTER BEZEL ASSY BT16



TOP CABINET COVER BT16

Figure 8-110 Removing the TOP CABINET COVER BT16

10.) Remove the Bottom Pedestal Cover BT16.



Bottom Pedestal Cover BT16

Figure 8-111 Removing the Bottom Pedestal Cover BT16

11.) Unscrew 2 screws and remove FRONT PEDESTAL COVER BT16.



Figure 8-112 Removing the FRONT PEDESTAL COVER BT16

12.)Untie the cable ties on keyboard base. Refer to the figure below.



Figure 8-113 Untiing the cable ties

13.)Untie the cable clamps underneath the pedestal. Refer to the figure below.



Figure 8-114 Untiing the cable clamps

14.)Unscrew 2 screws to remove POWER CORD FIX BRACKET. Refer to the figure below.



Figure 8-115 Unscrewing 2 screws to remove POWER CORD FIX BRACKET

15.) Disassemble power cord and REAR CABINET BEZEL ASSY BT16. Refer to the figure below.



Figure 8-116 Disassembling power cord and REAR CABINET BEZEL ASSY BT16

16.) Unscrew 7 screws and disassemble REAR EMI COVER.



Figure 8-117 Unscrewing 7 screwing to disassemble REAR EMI COVER

17.)Pull out the LCD Cables through the hole. Refer to the figure below.



18.) Disconnect Monitor cables.



Figure 8-118 Disconnecting Monitor cables

8-23-4 Assembly Procedure

Install the new parts in the reverse order of disassembly procedure.

Section 8-24 Replacement of ASSY Bumper Base Rubber

8-24-1 Manpower

One person, 13 minutes

8-24-2 Tools Philips screwdriver

8-24-3 Disassembly Procedure

1.) Remove the FRONT CABINET BEZEL ASSY BT16. Refer to the figure below.



Figure 8-119 Removing the FRONT CABINET BEZEL ASSY BT16

2.) Remove the FRONT PRINTER BEZEL ASSY BT16. Refer to the figure below.



Figure 8-120 Removing the FRONT PRINTER BEZEL ASSY BT16

3.) Remove the TOP CABINET COVER BT16. Refer to the figure below.





4.) Remove the REAR CABINET BEZEL ASSY BT16. Refer to the figure below.





Figure 8-122 Remove the REAR CABINET BEZEL ASSY

5.) Unscrew 3 screws, and remove the RS Knobs. Refer to the figure below.



Removing thrid RS Knob

Figure 8-123 Removing the RS Knob

6.) Unscrew 4 screws, and remove the TRAY SIDE CABINET BT16. Refer to the figure below.



Figure 8-124 Removing the TRAY SIDE CABINET BT16

7.) Unscrew 2 screws, and remove the ASSY Left Side plastic Cover. Refer to the figure below.



Figure 8-125 Removing the ASSY Left Side Plastic Cover

8.) Unscrew 2 screws, and remove the ASSY RIGHT SIDE PLASTIC COVER BT16. Refer to the figure below.



Figure 8-126 Removing the ASSY RIGHT SIDE PLASTIC COVER BT16
9.) Remove the COVER CASTOR NARROW L/R Plastic. Refer to the figure below.



Figure 8-127 Removing the COVER CASTOR NARROW L/R Plastic

10.) Remove the Bumper Base Rubber. Refer to the figure below.



Figure 8-128 Removing the Bumper Base Rubber

8-24-4 Installation Procedure

Install the new parts in the reverse order of removal procedure.

Section 8-25 Replacement of OPIO

8-25-1 Manpower

One person, 15 minutes

8-25-2 Tools

Philips screwdriver, Nipper, Allen Wrench

8-25-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-25-4 Removal Procedure

1.) Remove 2 RUBBER CAPs on SPEAKER COVER LEFT/RIGHT. Refer to the figure below.



Figure 8-129 Removing 2 RUBBER CAPS on SPEAKER COVER LEFT/RIGHT

2.) Unscrew 2 screws, and then remove SPEAKER Cover L/R. Refer to the figure below.



Figure 8-130 Unscrewing 2 screws to remove SPEAKER COVER L/R

3.) Remove the 5 probe holders. Refer to the figure below.



Figure 8-131 Removing the 5 probe holders

4.) Unscrew 9 screws located in the bottom of the OPIO. Refer to the figure below.



Figure 8-132 Unscrewing 9 screws located on the bottom of the OPIO

5.) Lift up the OPIO and disconnect Power, OPIO, 2 USB cables from the OPIO HUB PWA. Refer to the figure below.



Insert power cable



6.) Cut the CABLE TIE by nipper.



Figure 8-134 Cutting the CABLE TIE by nipper

7.) Unscrew 4 screws to remove upper keyboard assembly.



Figure 8-135 Unscrewing 4 screws to remove upper keyboard assembly

8-25-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-10: Replacement of OPIO Functional Tests.

Section 8-26 Replacement of the SPEAKER

8-26-1 Manpower

One person, 30 minutes

8-26-2 Tools

Philips screwdriver

8-26-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-26-4 Removal Procedure

- 1.) Remove the MAIN OPIO and SUB OPIO. Refer to the Section 8-25 on page 8-87 OPIO.
- 2.) Disconnect the 2 SPEAKER CONNECTORS. Refer to the figure below.



Figure 8-136 Disconnecting SPEAKER CONNECTOR

3.) Unscrew each 3 screws of SPEAKER ASSY L, R and remove. Refer to the figure below.



Figure 8-137 Unscrewing 6 screws to separate SPEAKER ASSY

8-26-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-11: Replacement of the SPEAKER Functional Tests.

Section 8-27 Remove the PEDESTAL BOTTOM COVER BT16

8-27-1 Manpower

One person, 2 minutes

8-27-2 Tools

N/A

8-27-3 Preparations

N/A

8-27-4 Removal Procedure

1.) Remove PEDESTAL BOTTOM COVER BT16. Refer to the figure below.



Figure 8-138 Removing the PEDESTAL BOTTOM COVER BT16

8-27-5 Installation Procedure

1.) Install the new parts in the reverse order of removal.

Section 8-28 Replacement of the NEST

8-28-1 Manpower

One person, 10 minutes

8-28-2 Tools

Philips screwdriver, Allen Wrench

8-28-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-28-4 Removal Procedure

1.) Remove the FRONT CABINET BEZEL ASSY BT16. Refer to the figure below.



Figure 8-139 Removing the FRONT CABINET BEZEL ASSY BT16

2.) Remove the REAR CABINET BEZEL ASSY BT16. Refer to the figure below.



Figure 8-140 Removing the Rear Cabinet Bezel Assy BT16

3.) Unscrew 7 screws and remove the REAR EMI COVER BRKT. Refer to the figure below.



Figure 8-141 Removing the REAR EMI COVER BRKT

4.) Disconnect all connectors.



Figure 8-142 Disconnection all cables

5.) Set the 3 RS KNOBS to unlock position to separate from the SIDE COVER R. and unscrew one screw from the each 3 RS KNOB. Refer to the figure below.





6.) Unscrew 4 screws and remove the Nest box. Refer to the figure below.





Figure 8-144 Unscrewing 4 screws and removing the NEST BOX

8-28-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-13: Replacement of the NEST Functional Tests.

Section 8-29 Replacement of the AIR FILTER

8-29-1 Manpower

One person, 1 minutes

8-29-2 Tools

None

8-29-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-29-4 Removal Procedure

1.) Pull out the FRONT CABINET BEZEL ASSY BT16. Refer to the figure below.



Figure 8-145 Removing the FRONT CABINET BEZEL ASSY BT16

2.) Pull out the AIR FILTER. Refer to the figure below.



Figure 8-146 Removing the AIR FILTER

Section 8-29 - Replacement of the AIR FILTER

8-29-5 Installation Procedure

1.) Install the new parts in the reverse order of removal.

Section 8-30 Replacement of the Probe Holder(KIT)

8-30-1 Manpower

One person, 1 minutes

8-30-2 Tools

None

8-30-3 Removal Procedure

1.) Remove 5 probe holders. Refer to the figure below.



Figure 8-147 Removing the 5 PROBE HOLDERs

8-30-4 Installation Procedure

1.) Install the new parts in the reverse order of removal.

Section 8-31 Replacement of SIDE COVER L ASSY BT16

8-31-1 Manpower

One person, 5 minutes

8-31-2 Tools Philips Screwdriver

8-31-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-31-4 Removal Procedure

1.) Unscrew 2 screws, and remove the Tray Side Cabinet BT16. Refer to the figure below.



Figure 8-148 Removing the Tray Side Cabinet BT16

2.) Remove the FRONT PRINTER BEZEL ASSY BT16. Refer to the figure below.



Figure 8-149 Removing the FRONT PRINTER BEZEL ASSY BT16

3.) Remove the TOP CABINET COVER BT16. Refer to the figure below.



Figure 8-150 Removing the TOP CABINET COVER BT16

4.) Unscrew 2 screws, and remove the ASSY LEFT SIDE PLASTIC COVER BT16. Refer to the figure below.



Figure 8-151 Removing the ASSY LEFT SIDE PLASTIC COVER BT16

8-31-5 Installation Procedure

1.) Install the new parts in the reverse order of removal.

Section 8-32 Replacement of SIDE COVER R ASSY

8-32-1 Manpower

One person, 5 minutes

8-32-2 Tools Philips Screwdriver

8-32-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-32-4 Removal Procedure

1.) Unscrew 2 screws, and remove the Tray Side Cabinet. Refer to the figure below.



Figure 8-152 Removing the Tray Side Cabinet

2.) Remove the FRONT PRINTER BEZEL ASSY BT16. Refer to the figure below.



Figure 8-153 Removing the FRONT PRINTER BEZEL ASSY BT16

3.) Remove the COVER TOP CABINET PLASTIC BT16. Refer to the figure below.



Figure 8-154 Removing the COVER TOP CABINET PLASTIC BT16

4.) Unscrew 3 screws, and remove the RS Knobs. Refer to the figure below.



Removing first RS knob



Removing second RS Knob



Removing third KR Knob



Figure 8-155 Removing the RS Knob

5.) Unscrew 2 screws, and remove the ASSY RIGHT SIDE PLASTIC COVER BT16. Refer to the figure below.



Figure 8-156 Removing the ASSY RIGHT SIDE PLASTIC COVER BT16

8-32-5 Installation Procedure

1.) Install the new parts in the reverse order of removal.

Section 8-33 Replacement of the Trackball

8-33-1 Manpower

One person, 20 minutes

8-33-2 Tools

Philips Screwdriver

8-33-3 Removal procedure

1.) Unscrew 9 screws at the bottom of the keyboard body. Refer to the figures below.





Figure 8-157 Unscrewing 9 screws

2.) Remove 5 probe holders. Refer to the figure below.



Figure 8-158 Removing 5 probe holders

3.) Lift up main keyboard assy. Refer to the figure below.



Figure 8-159 Lifting up main keyboard assy

4.) Disconnect 4 cables. Refer to the figure below.



Figure 8-160 Disconnecting 4 cables

5.) Unscrew 2 screws on trackball and disconnect the cable side of the trackball. Refer to the figures below.



Figure 8-161 Unscrewing 2 screws on trackball

8-33-4 Installation Procedure

- 1.) Put the trackball guide ring. Refer to the figure below.
 - If the trackball guide ring is installed already, please skip step 1).



Figure 8-162 Installing the trackball guide ring

2.) Connect the cable to the connector on the main PWA and screw the trackball with 2 screws. Refer to the figure below.



Figure 8-163 Connecting the cable to the connector and screwing the trackball

NOTE: Please check the position of the label as the below figure to connect in the right position.



CP : Main PWA side Ball : Trackball side

3.) Install the OPIO ASSY like as reverse order of removal procedure from step 4) of 8-33-3 "Removal procedure".

Section 8-34 Replacement of the TGC BOARD

8-34-1 Manpower

One person, 10 minutes

8-34-2 Tools

Philips Screwdriver

8-34-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-34-4 Removal Procedure

- 1.) Follow the removal procedure of Section 8-25 "Replacement of OPIO" .
- 2.) Remove 8 TGC control key caps. refer to Section 8-19 "Replacement of OPIO Plastic lower cover assy" on page 8-56
- 3.) Disconnect TGC BOARD CABLE. Refer to the figure below.



Figure 8-164 Disconnecting TGC BOARD CABLE

4.) Unscrew 4 screws, then pull out the TGC BOARD. Refer to the figure below.



Figure 8-165 Unscrewing 4 screws and pulling out the TGC BOARD

8-34-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-19: Replacement of the TGC BOARD Functional Tests.

Section 8-35 Replacement of AN KEYBOARD ASSY

8-35-1 Manpower

One person, 15 minutes

8-35-2 Tools

Philips Screwdriver

8-35-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-35-4 Removal Procedure

- 1.) Follow the removal procedure of Section 8-25 "Replacement of OPIO" .
- 2.) Disconnect the HUB TO MAIN OPIO CABLE. Refer to the figure below.



Figure 8-166 Disconnecting the HUB TO MAIN OPIO CABLE

3.) Unscrew 10 screws. and pull out the AN KEYBOARD and OPIO HUB PWA ASSY. Refer to the figure below.



Figure 8-167 Unscrewing 10 screws from the AN KEYBOARD

Chapter 8 - Replacement Procedures

8-35-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-20: Replacement of AN KEYBOARD ASSY Functional Tests.

Section 8-36 Replacement of the Caster Cap BT16

8-36-1 Manpower

One person, 2 minutes

8-36-2 Tools

None

8-36-3 **Preparations**

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- NOTE: Lock Caster before removing it.

8-36-4 Removal Procedure

1.) Remove the FRONT CABINET BEZEL ASSY BT16. Refer to the figure below.



Figure 8-168 Removing the FRONT CABINET BEZEL ASSY BT16

2.) Remove the FRONT PRINTER BEZEL ASSY BT16. Refer to the figure below.



Figure 8-169 Removing the FRONT PRINTER BEZEL ASSY BT16

3.) Remove the Top Cabinet Cover BT16. Refer to the figure below.



Figure 8-170 Removing the Top Cabinet Cover BT16

4.) Remove the Rear Cabinet Bezel Assy BT16. Refer to the figure below.v



Figure 8-171 Removing the Rear Cabinet Bezel Assy BT16

5.) Unscrew 3 screws, and remove the RS Knobs. Refer to the figure below.



Figure 8-172 Removing the RS Knob

6.) Unscrew 4 screws, and remove the SIDE CABINET TRAY BT16. Refer to the figure below.



Figure 8-173 Removing the SIDE CABINET TRAY BT16

7.) Unscrew 2 screws, and remove the SIDE COVER LASSY BT16. Refer to the figure below.



Figure 8-174 Removing the SIDE COVER L ASSYBT16

8.) Unscrew 2 screws, and remove the SIDE COVER R ASSYBT16 . Refer to the figure below.



Figure 8-175 Removing the SIDE COVER R ASSYBT16

9.) Remove the COVER CASTOR NARROW L/R BT16. Refer to the figure below.



Figure 8-176 Removing the COVER CASTOR NARROW L/R BT16

8-36-5 Installation Procedure

1.) Install the new parts in the reverse order of removal.
Section 8-37 Replacement of the CASTER

8-37-1 Manpower

One person, 10 minutes

8-37-2 Tools

Monkey Wrench

8-37-3 Preparations

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- NOTE: Lock casters before removing them.

8-37-4 Removal Procedure

- 1.) Follow the removal procedure of Section 8-24 "Replacement of ASSY Bumper Base Rubber" .
- 2.) Unscrew the NUT. And pull out the CASTER. Refer to the figure below.



Figure 8-177 Unscrewing the NUT



Figure 8-178 Unscrewing the nut

8-37-5 Installation Procedure

1.) Install the new parts in the reverse order of removal.

Section 8-38 Replacement of the SIDE CABINET TRAY BT16

8-38-1 Manpower

One person, 2 minutes

8-38-2 Tools Philips screwdriver

8-38-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-38-4 Removal Procedure

1.) Unscrew 2 screws and remove the SIDE CABINET TRAY BT16. Refer to the figure below.



Figure 8-179 Unscrewing 2 screws and remove SIDE CABINET TRAY BT16

8-38-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-25: Replacement of the Side Cabinet Tray BT16 Functional Tests.

Section 8-39 Replacement of the REAR HANDLE

8-39-1 Manpower

One person, 5 minutes

8-39-2 Tools

Philips screwdriver, Allen Wrench

8-39-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-39-4 Removal Procedure

1.) Remove the ASSY BEZEL FRONT PRINTER PLASTIC BT16. Refer to the figure below.



Figure 8-180 Removing the ASSY BEZEL FRONT PRINTER PLASTIC BT16

2.) Remove the TOP CABINET COVER BT16. Refer to the figure below.



Figure 8-181 Removing the TOP CABINET COVER BT16

3.) Remove BOTTOM PEDESTAL COVER BT16. Refer to the figure below.



Figure 8-182 Removing the BOTTOM PEDESTAL COVER BT16

4.) Unscrew 2 screws, and remove the FRONT PEDESTAL COVER BT16. Refer to the figure below.



Figure 8-183 Removing the FRONT PEDESTAL COVER BT16

5.) Unscrew 2 screws, and remove the REAR HANDLE. Refer to the figure below.



Figure 8-184 Removing the REAR HANDLE

8-39-5 Installation Procedure

1.) Install the new parts in the reverse order of removal.

Section 8-40 Replacement of the SPEAKER COVER LEFT/RIGHT

8-40-1 Manpower

One person, 5 minutes

8-40-2 Tools Philips screwdriver

8-40-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-40-4 Removal Procedure

1.) Remove 2 RUBBER CAPS on SPEAKER COVER LEFT/RIGHT. Refer to the figure below.



Figure 8-185 Removing 2 RUBBER CAPS on SPEAKER COVER LEFT/RIGHT

2.) Unscrew 2 screws, then remove the SPEAKER COVER LEFT/RIGHT. Refer to the figure below.



Figure 8-186 Unscrewing 2 screws to remove SPEAKER COVER LEFT/RIGHT

8-40-5 Installation Procedure

1.) Install the new parts in the reverse order of removal.

Section 8-41 Replacement of the DPS/DPS with Battery

8-41-1 Manpower

One person, 30 minutes

8-41-2 Tools

Philips screwdriver, Allen Wrench

8-41-3 Preparations

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- 2.) Remove the REAR CABINET BEZEL ASSY BT16s and disconnect cables as described in 8-28-4 "Removal Procedure" 2), 3), 4) and 7) on page 8-93.
- 3.) Remove the NEST EMI BRKT BT16 as described in 8-56-4 "Removal Procedure"

8-41-4 Removal Procedure



Figure 8-187 DPS

1.) Draw the DPS out of the Nest Frame.



Figure 8-188 Drawing the DPS

8-41-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-28: Replacement of the DPS/DPS with Battery Functional Tests.

Section 8-42 Replacement of the DRFM

8-42-1 Manpower

One person, 30 minutes

8-42-2 Tools

Philips screwdriver, Allen Wrench

8-42-3 Preparations

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- 2.) Remove the REAR CABINET BEZEL ASSY BT16s and disconnect cables as described in 8-28-4 "Removal Procedure" 2), 3), 4) and 7) on page 8-93.
- 3.) Remove the NEST EMI BRKT BT16 as described in 8-56-4 "Removal Procedure"

8-42-4 Removal Procedure



Figure 8-189 DRFM

1.) Draw the DRFM out of the Nest Frame.



Figure 8-190 Drawing the DRFM

8-42-5 Installation Procedure

8-42-5-1 DRFM (5497712) Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perfom 8-42-6 Serial Number Reprogamming Procedure to reprogram the serial number.

NOTICE Check S1. If GPU is mounted, 4 pin of the switch should be located in the left side. If GPU is not moutned, 4 pin of the switch should be located in the right side.



Figure 8-191 Location of 4 pin of switch

8-42-5-2 DRFM-2 (S5497712-2) Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform 8-42-6 Serial Number Reprogramming Procedure to reprogram the serial number.
- 3.) Perform 8-42-7 "Installation of software patch CD"

NOTE: Check S1. if GPU is mounted, PIN number 1,2,3 of the switch should be located in left. -If GPU is not mounted, PIN number 1,2,3 of the switch should be located in right. -If UVC option is included, PIN number 4 of the switch should be located in left. -If UVC option is not included, PIN number 4 of the switch should be located in right.



Figure 8-192 Location of 4 pin of switch

8-42-6 Serial Number - Reprogramming Procedure

NOTICE To reprogramming the System Serial Number, contact the OLC(On Line Center) to get the necessary "Serial Key" and "Permanent Key" (calculated in OKOS) !!!

Before calling OLC please prepare the following data:

- SNO of Voluson[™] P8 / Voluson[™] P6 (Alphanumeric serial number can be found on main label at back of system)
- Hardware ID number (See SYSTEM INFO page or label of DRFM board)
- 1.) Gather System Serial number and Hardware ID
 - Press the <u>F2</u> key on upper OPIO, select <u>SYSTEM SETUP</u>, select <u>ADMINISTRATION</u>, click on <u>SYSTEM INFO</u> and write down the "Hardware ID" number.



Figure 8-193 System Setup - Administrator - System Info page

NOTICE The Hardware ID can also be found on the label on the DRFM board.



Figure 8-194 Hardware ID on label DRFM

- 2.) Call the OLC to get the "Serial Key" and the "Permanent Key"
- 3.) Program the System Serial number and re-enter the Permanent Key To program the System SNO, click the **OPTIONS** tab:

Service Syste	m Info Options		
Volus	son™ P8		
Option P 3D/4D Activation P Advanced 3D/4D Package P HDlive 3D P Advanced VCI	Valid Permonent Permonent Permonent Permonent	System Serial Number A09999	Field to enter the "Serial Key"
P SingleView P Sono4/C TM follicle Pro P SonoL&D P TUI P XTD P Anatomical M-Mode P SonoNT P IOTA LR2	Permanent Permanent Permanent Permanent Permanent Permanent Permanent Permanent	Demo Key Submit	
P DICOM P Recording Module SW-DVR P IEC62359 Ed.2 P RLS P BT Activation	Permanent Permanent Permanent Permanent Permanent	Permanent Key 26XR-B0E0-Ek3D-88HU-KhFF-XK5C Submit	— Field to enter Permanent key
		3 Month Demo	

Figure 8-195 System Setup - Administration - Options page

- a.) Enter the "Serial key" (alphanumeric letters based on system serial number and DRFM Hardware ID) in the field "Serial Number" (e.g., AEE1193428AA6078123456SU7). Then press ENTER. it takes about several seconds to get response.
- b.) <u>Enter the "Per</u>manent Key" in the field Permanent key, click the **SUBMIT** button and afterwards **SAVE & EXIT**.

Confirm the Message box "BT-key state has been changed." with YES. The system reboots.

NOTICE If the previous mentioned steps was done correctly, the system will show the correct SNO and the prior



NOTICE DO NOT reboot the system before you have changed the serial number successfully!

- 4.) Check System Serial number, System Type, Hardware ID and Software options
 - a.) Press the <u>F2 key on upper OPIO</u>, select <u>SYSTEM SETUP</u>, select <u>ADMINISTRATION</u> and then select the <u>OPTION</u> tab.

System Type must be correct depending on Voluson[™] P8 / Voluson[™] P6.

Software options and serial number must be correct.

installed options are enabled in the **OPTIONS** page.

5.) Perform: FRU8-29 Replacement of the DRFM - Functional Tests.

8-42-7 Installation of software patch CD

- NOTE: In case of the software (Base SW or Application SW) is re-installed on the system with DRFM-2, SW patch needs to be installed again for Ext.4 and previous versions.
- NOTE: Software patch does not need to be installed from software version Ext.5 or later.
- NOTE: Software patch can also be downloaded at:

http://ge.box.com/s/yspo13ahrk3uq79gmif10api72p73f1

- 1.) Insert Software patch CD on the system.
- 2.) Click the ASI button for patch (Util System setup Administration Service tab Service tool).

No exam started!	® *		01	/13/2017	1:14:31 AM	TIb 0.6 MI 1.2	CARD 18.5cm / 1.2	
	Administration/Service/Service	eTools					×	
	System Serial Number:		A09999					
Connectivity								
ackup			-					A
maging Presets	AutoTester	Update		ools				
iopsy Setup a								
Measure Setup	Stat			Show Fact				
		Restore Software						
						Load Application Settin and Factory Presets	igs	
	TCP/IP Buffersize							
	40 💌 kB						Exit	
						56 s 4	133 / 56 s	
							8	
ave & Exit								
xit							Poge 1/1	
							a	
			00		11.5	111 🚓	🛛 a 🖄	
			Set	Set	Desi		.	
						-		

Figure 8-196 Click the ASI button

3.) Choose media to DVD/CD and click Load.

Additional Software Installatio	n	×
Choose media:		
Internal HDD		
O DVD/CD		
Network		
External USB Drives		
		Change folder
	Cancel	Load

Figure 8-197 Choosing media to DVD/CD

4.) Click 'OK'.

Choose file:	×
Store State	ОК
	Cancel

Figure 8-198 Click OK

5.) Insert 'y' or 'yes' to install patch on command window.

6.) If "Operation was a success" is displayed on command window, patch is well installed.

C:\Windows\system32\cmd.exe		

Are you sure to apply? Yes or No or Quit		
: y 1 file(s) copied.		
- Operation was a success		
Press any key to continue		
-		

Figure 8-199 "Operation was a success" is displayed on command window

- 7.) Shutdown to replace DRFM.
- NOTE: After installing the software, please keep the software patch CD with the system for later usage. For S10/S6/S8, please store the CD inside the rear cover. For P6/P8, please store the CD below the top cabinet cover.
- NOTE: In case of an inoperative system, please replace the DRFM-2 first before installing the software patch CD. After installing the software patch CD, please re-start the system.

Section 8-43 Replacement of the SOM in DRFM

8-43-1 Manpower

One person, 30 minutes

8-43-2 Tools

Philips screwdriver

8-43-3 Preparations

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- 2.) Remove the REAR CABINET BEZEL ASSY BT16 and disconnect cables as described in 8-28-4 "Removal Procedure" 2), 3), 4) and 7) on page 8-93.
- 3.) Remove the NEST EMI BRKT BT16 as described in 8-56-4 "Removal Procedure"
- 4.) Remove the DRFM as described in 8-42-3 on page 8-130.

8-43-4 Removal Procedure

1.) Unscrew 5 screws and pull the SOM board out of the DRFM.





Figure 8-200 Unscrewing 5 screws and pulling the SOM board out of the DRFM

CAUTION When replacing with new SOM, Push the SOM in both side of DRFM ASSEMBLY without putting weight on the board.

8-43-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-30: Replacement of the SOM in DRFM Functional Tests.

NOTICE As a new specification, the system can be turned off up to 3 times due to recognizing GPU, initializing Intel device and Bios. In this case, please turn on the system again.

Section 8-44 Replacement of the HDD in DRFM

8-44-1 Manpower

One person, 30 minutes

8-44-2 Tools

Philips screwdriver

8-44-3 Preparations

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- 2.) Remove the REAR CABINET BEZEL ASSY BT16 and disconnect cables as described in 8-28-4 "Removal Procedure" 2), 3), 4) and 7) on page 8-93.
- 3.) Remove the NEST EMI BRKT BT16 as described in 8-56-4 "Removal Procedure"
- 4.) Remove the DRFM as described in 8-42-3 on page 8-130.

8-44-4 Removal Procedure

1.) Unscrew 4 screws and pull the HDD out of the DRFM.





Figure 8-201 Pulling the HDD

8-44-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Set up the new hard disk as described in 5-17-5-3-2 on page 5-72.
- 3.) Perform: FRU8-32: Replacement of the HDD in DRFM Functional Tests.

Section 8-45 Replacement of the DBM64

8-45-1 Manpower

One person, 30 minutes

8-45-2 Tools

Philips screwdriver

8-45-3 Preparations

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- 2.) Remove the REAR CABINET BEZEL ASSY BT16 and disconnect cables as described in 8-28-4 "Removal Procedure" 2), 3), 4) and 7) on page 8-93.

8-45-4 Removal Procedure



Figure 8-202 DBM/DPI

1.) Pull the DBM/DPI out of the Nest Frame



Figure 8-203 Drawing the DBM/DPI

Section 8-45 - Replacement of the DBM64

- 2.) Unscrew 6 screws.
- 3.) Remove DBM64 from the EMI SHIELD BRACKET.





Figure 8-204 Unscrewing 6 screws and removing the EMI SHIELD BRACKET

8-45-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-36: Replacement of the DBM64 Functional Tests..

Section 8-46 Replacement of the T-DPI

8-46-1 Manpower

One person, 30 minutes

8-46-2 Tools

Philips screwdriver, Allen Wrench, Hirose ejector

8-46-3 Preparations

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- 2.) Remove the REAR CABINET BEZEL ASSY BT16 and disconnect cables as described in 8-28-4 "Removal Procedure" 2), 3), 4) and 7) on page 8-93.
- 3.) Remove the NEST EMI BRKT BT16 as described in 8-56-4 "Removal Procedure"
- 4.) Remove 3 RS Knobs.

8-46-4 Removal Procedure



Figure 8-205 DBM/T-DPI

1.) Draw the DBM/T-DPI out of the Nest Frame.



Figure 8-206 Drawing the DBM/T-DPI

2.) Unscrew 6 screws.

3.) Remove T-DPI from the EMI SHIELD BRACKET.



Figure 8-207 Removing the EMI SHIELD BRACKET



Figure 8-208 Bottom of T-DPI

8-46-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-37: Replacement of the T-DPI Functional Tests..

Section 8-47 Replacement of the CSI

8-47-1 Manpower

One person, 30 minutes

8-47-2 Tools

Philips screwdriver

8-47-3 Preparations

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- 2.) Pull out the NEST as described in Section 8-28 "Replacement of the NEST" on page 8-93

8-47-4 Removal Procedure

1.) Unscrew 4 screws to remove the LED Indicator bracket.



Figure 8-209 Opening the rear bracket

2.) Unscrew 4 screws to remove CSI board and Separate the LED connector.



Figure 8-210 Seperating LED connector/FAN connector

8-47-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-38: Replacement of the CSI Functional Tests..

Section 8-48 Replacement of the CBP

8-48-1 Manpower

One person, 30 minutes

8-48-2 Tools

Philips screwdriver, Allen Wrench

8-48-3 Preparations

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- 2.) Pull out the NEST as described in Section 8-28 "Replacement of the NEST" on page 8-93.

8-48-4 Removal Procedure

- 1.) Remove the CSI. Refer to Section 8-47 "Replacement of the CSI" on page 8-147
- 2.) Remove fan connector and unscrew 8 screws.



Figure 8-211 Removing fan connector and unscrewing 8 screws

3.) Unscrew 6 screws.



Figure 8-212 Unscrewing 6 screws

8-48-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-39: Replacement of the CBP Functional Tests.

Section 8-49 Replacement of the DVD

8-49-1 Manpower

One person, 10 minutes

8-49-2 Tools

Philips screwdriver

8-49-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-49-4 Removal Procedure

1.) Remove FRONT PRINTER BEZEL ASSY BT16. Refer to the below picture.



Figure 8-213 Removing FRONT PRINTER BEZEL ASSY BT16

2.) Unplug two cables from the DVD.



Figure 8-214 Unpluging two cables

3.) Unscrewing 2 screws to remove the DVD.



Figure 8-215 Removing the DVD

4.) Unscrewing 4 screws to remove the SIDE STRIPS.





Figure 8-216 Removing the SIDE STRIPS

8-49-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-40: Replacement of the DVD Functional Tests..

Section 8-50 Replacement of the OPIO USB Sub PWA

8-50-1 Manpower

One person, 30 minutes

8-50-2 Tools

Philips screwdriver

8-50-3 Preparations

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- 2.) Remove the OPIO, covers and cables as described in 8-25-4 "Removal Procedure" on page 8-87.

8-50-4 Removal Procedure

1.) Pull 2 cables from Main Keyboard ASSY, and prepare the Sub Keyboard ASSY.



Figure 8-217 Pulling 2 cables

2.) Unscrew 5 screws and disconnect 2 USB cables, Then Remove 2 Brackets and OPIO USB Sub PWA.



Figure 8-218 Removing 2 Brackets and OPIO USB Sub PWA

8-50-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-42: Replacement of the OPIO USB Sub PWA Functional Tests.

Section 8-51 Replacement of AN KEY TOP

8-51-1 Manpower

One person, 30 minutes

8-51-2 Tools

Flat head screw driver or Flat tool

8-51-3 Preparations

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-51-4 Key Caps - Removal Procedure

1.) Remove the Key(should be changed) with Flat tool. Refer to the figure below.



Figure 8-219 Removing the Key(should be changed)

2.) Assemble the Key. Refer to the figure below.



Figure 8-220 Assembling the key

3.) Perform: FRU8-43: Replacement of AN KEY TOP - Functional Tests.

Section 8-52 Replacing optional Peripherals

	NOTICE	Normally auxiliary devices and peripherals come pre-installed with the Voluson [™] P8 / Voluson [™] P6
		system.

8-52-1 Manpower

One person, 70 minutes

8-52-2 Tools

Standard Field Service Tool Kit

NOTICE READ and UNDERSTAND these instructions thoroughly before proceeding with the installation. Perform each step in sequence and check it off when completed. If a problem occurs after completion, go back through the procedure and check for implementation errors before contacting your Ultrasound Region.

CAUTION Possible Operational damage. Failure to strictly follow ESD (Electrostatic Discharge) precautions during this installation may cause constant or intermittent operational abnormalities. Strictly follow all precautions.
8-52-3 **Printer Installation (BW and Color)**

8-52-3-1 BW Printer: SONY UP-D898, Color Printer: SONY UP-D25MD

- 1.) Assemble 2 EMI gaskets (5448934 EMI gasket, side, b-w printer bkt-3) on printer base plate.
- 2.) Assemble 2 EMI gaskets (5447303 EMI gasket, side, b-w printer bkt-2) on printer base plate.
- 3.) Assemble 2 EMI gaskets (5457475 EMI gasket, side, b-w printer bkt-1) on printer base plate.
- 4.) Assemble printer base pate with B/W printer using 8 screws (2306562-screw FH M3 x 6).



EMI Gaskets (5448934)



EMI Gaskets (5447303)



EMI Gaskets (5457475)



Figure 8-221 B/W Printer assembly

- 5.) Disassemble FRONT PRINTER BEZEL ASSY BT16.
- 6.) Remove PRINTER DUMMY COVER PLATE BT16.



Figure 8-222 Disassembling PRINTER DUMMY COVER PLATE BT16

- 7.) Unscrew 2 screws to disassemble power cord fix bracket.
- 8.) Remove the power cord and REAR CABINET BEZEL ASSY BT16.





Figure 8-223 Disassembling REAR CABINET BEZEL ASSY BT16

- 9.) Unscrew 7 screws and disassemble REAR EMI COVER.
- 10.) Unscrew 2 screws and disassemble printer EMI cover 1 and 2.



Figure 8-224 Disassembling printer EMI covers

11.) Assemble Printer assembly.

12.)Push the printer assembly till it makes contact with sheet metal chassis.





Printer Assembly

Push the printer assembly

Figure 8-225 Assembling printer

- 13.)Carefully insert the printer base plate in to the chassis slot.
- 14.)Assemble the printer base plate with chassis using 2 screws (2159634-screw BH M4X10). 15.)Assemble FRONT CABINET BEZEL ASSY BT16.



Printer base plate



Assemble printer base plate with two screws



FRONT CABINET BEZEL ASSY BT16

Figure 8-226 Assembling printer base plate

- 16.) Insert the printer USB cable and printer power cable.
- 17.)Insert the printer power cable in to the nest box.
- 18.) Insert the printer USB cable in to the nest box.







Inserting Printer power cable into the nest box



Inserting Printer USB cable into the nest box.

Figure 8-227 Inserting Printer USB and Power cable

- 19.)Check the printer USB cable and power cable to passing through in EMI cover slot. Then screw 2 screws and assemble printer EMI cover 1 and 2.
- 20.)Route the B/W printer USB and power cable through the left side cable clamp.



EMI cover slot



Left side clamp

Figure 8-228 Routing the printer cables

- 21.) Screw the 7 screws and fix the REAR EMI COVER.
- 22.)Assemble the REAR CABINET BEZEL ASSY BT16, power cord and POWER CORD FIX BRACKET.
- 23.) Assemble the FRONT PRINTER BEZEL ASSY BT16.



Screw the 7 screws



Assemble power cord and FRONT PRINTER BEZEL ASSY BT16 FRONT PRINTER BEZEL ASSY BT16

....

Figure 8-229 Assembling rear side parts

8-52-3-2 Color Printer Assembly

- 1.) Assemble 2 EMI gaskets (5448934 EMI gasket, side, b-w printer bkt-3) on printer base plate.
- 2.) Assemble 2 EMI gaskets (5448934 EMI gasket, side, b-w printer bkt-3) on printer base plate.
- 3.) Assemble 2 EMI gaskets (5457475 EMI gasket, side, b-w printer bkt-1) on printer base plate.
- 4.) Assemble printer base pate with B/W printer using 8 screws (2306562-screw FH M3 x 6).





EMI Gaskets (5447303)



EMI Gaskets (5457475)



Figure 8-230 Color Printer assembly

5.) Remove the FRONT PRINTER BEZEL ASSY BT16.



Figure 8-231 FRONT PRINTER BEZEL ASSY BT16

6.) Disassemble FRONT PRINTER BEZEL ASSY BT16.



POWER CORD FIX BRACKET



REAR CABINET BEZEL ASSY BT16

Figure 8-232 Removing POWER CORD FIX BRACKET and REAR CABINET BEZEL ASSY BT16

- 7.) Unscrew 7 screws and disassemble REAR EMI COVER.
- 8.) Unscrew 2 screws and disassemble printer EMI cover 1 and 2.







Unscrew 7 screws

2 screwsscrews and printer EMI covers 1 and 2

Rear side view after removing the EMI covers 1 and 2

Figure 8-233 Disassembling printer EMI covers

- 9.) Disassemble FRONT CABINET BEZEL ASSY BT16.
- 10.) Remove left side printer bracket.
- 11.) Remove left side printer bracket.
- 12.) Remove right side printer bracket.





Left side printer bracket



Right side printer bracket

FRONT CABINET BEZEL ASSY BT16

Figure 8-234 Removing FRONT CABINET BEZEL ASSY BT16 and printer brackets

13.) Assemble the printer assembly.

14.) Assemble the printer base plate with chassis using 2 screws (2159634 - screw BH M4X10).





2 screws (2159634 -screw BH M4X10)

Figure 8-235 Assembling printer base plate

15.)Insert the printer USB cable and printer power cable.16.)Insert the printer power cable in to the nest box.



Do Taour for Too

Printer Power cable in Nest box

Printer USB cable

Printer Power cable

Figure 8-236 Printer cables

- 17.) Insert the printer USB cable in to the nest box.
- 18.)Route the color printer USB and power cable through the left side cable clamp.



Printer USB cable in Nest box



Left side cable clamp



- 19.) Screw the 7 screws and fix the REAR EMI COVER.
- 20.)Assemble the REAR CABINET BEZEL ASSY BT16, power cord and POWER CORD FIX BRACKET.



Screw the 7 screws



Assemble REAR CABINET BEZEL ASSY BT16, power cord and POWER CORD FIX BRACKET

Figure 8-238 Assembling the rear side parts

- 21.) Assemble the DVD front cover plastic with DVD strip and B/W printer strip using 8 screws (2327596 screw washer head M3x6).
- 22.)Assemble 4 numbers of Holding Catch, female with DVD front cover using 8 screws (2306562 screw FH M3x6)



Figure 8-239 Assembling DVD front cover

- 23.) Assemble 2 numbers of holding catch male with sheet metal chassis using 4 screws (2306562 screw FH M3x6)
- 24.) Assemble ASSY BEZEL FRONT DVD PLASTIC BT16 with sheet metal chassis.



Holding Catch, Male



Figure 8-240 Assembling Holding Catch, male and ASSY BEZEL FRONT DVD PLASTIC BT16

25.) Assemble the FRONT CABINET BEZEL ASSY BT16.



Figure 8-241 Assembling the FRONT CABINET BEZEL ASSY BT16

8-52-4 HORIZONTAL TV PROBE HOLDER Installation

1.) Install HORIZONTAL TV PROBE HOLDER on the left side bottom of OPIO with 3 screws.



Figure 8-242 Assembling HORIZONTAL TV PROBE HOLDER with 3 screws



Figure 8-243 HORIZONTAL TV PROBE HOLDER is installed on Left Side only

8-52-5 VERTICAL TV PROBE HOLDER Installation

1.) Install VERTICAL TV PROBE HOLDER BASE on the right side bottom of OPIO with 2 screws.



Figure 8-244 Assembling TV PROBE HOLDER BASE with 2 screws (2159634, BH M4x10)

2.) Place the TV PROBE HOLDER RUBBER on the PROBE HOLDER BASE.



TV PROBE HOLDER BASE

Figure 8-245 Inserting TV PROBE HOLDER RUBBER to PROBE HOLDER BASE

Section 8-53 Replacement of FAN with Cable ASSY II

8-53-1 Manpower

One person, 30 minutes.

8-53-2 Tools

Philips screwdriver, Allen Wrench

8-53-3 Preparations

- 1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.
- 2.) Pull out the NEST as described in Section 8-28 "Replacement of the NEST" on page 8-93.

8-53-4 Removal Procedure

1.) Unscrew 4 screws and remove fan connector.



Figure 8-246

8-53-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- NOTE: In case of installing FAN with Cable ASSY (GPN:5669586), replace screws to SCREW PH M4X30 (GPN:5176333) in FRU.
 - 2.) Perform: FRU8-47: Replacement of FAN with Cable ASSY II Functional Tests

Section 8-54 Functional Checks after FRU replacement (Debrief Guidelines)

- 1.) Perform required Functional and/or Leakage Current tests based upon the FRU being replaced.
- 2.) Clarify the scripts to debrief a Service Dispatch using your pole's dispatch tool.

Use this script in the Service Comments when debriefing a Service Dispatch.

For a replaced FRU, use the following debrief script:

Proprietary Service Manual, Voluson[™] P8 / Voluson[™] P6, Revision Voluson[™] P8 / Voluson[™] P6, Section [fill in appropriate section]. Equipment passed all required tests and is ready for use.

And, if testing leaking current, use the following text.

Proprietary Service Manual, Voluson[™] P8 / Voluson[™] P6, Revision Voluson[™] P8 / Voluson[™] P6, Section [fill in appropriate section]. Leakage Current meets allowable limits. Equipment passed all required tests and is ready for us.

Section 8-55 Replacement of UVC

Replace FRU part as described in system's UVC Installation Kit Installation Instruction (5758249) in CDL.

Section 8-56 Replacement of CWD piggy

8-56-1 Manpower

One person, 30 minutes.

8-56-2 Tools

Philips screwdriver, Hirose ejector

8-56-3 Preparations

Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-56-4 Removal Procedure

1.) Unscrew 2 screws and remove POWER CORD FIX BRKT and power cord.



Figure 8-247 Power Bracket

2.) Remove REAR CABINET BEZEL ASSY BT16



Figure 8-248 REAR CABINET BEZEL ASSY BT16

3.) Unscrew 7 screws and disassemble the REAR EMI COVER.



Figure 8-249 Unscrewing 7 fastners and disassembling the REAR EMI COVER

4.) Unplug all cables and Unscrew 7 screws and remove the NEST EMI BRKT BT16.



Figure 8-250 Unpluging all cables and removing the NEST EMI BRKT BT16

5.) Remove 3 RS KNOBS .



Figure 8-251 Removing 3 RS Knobs

6.) Pull out DBM64/T-DPI Boards.



Figure 8-252 Pulling out DBM64/T-DPI Boards

7.) Unscrew 1 screw and replace the CWD Piggy.



Figure 8-253 Unscrewing 1 screw and replacing the CWD piggy

8-56-5 Installation Procedure

- 1.) Install the new board assy in the reverse order of removal procedure.
- 2.) Perform: FRU8-48: Functional Checks after FRU replacement (Debrief Guidelines) -Functional Tests

Section 8-57 Replacement of ECG Kit assy

8-57-1 Manpower

One person, 10 minutes.

8-57-2 Tools

Philips screwdriver

8-57-3 Preparations

Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-57-4 Removal Procedure

- 1.) Remove 5 probe holders.
- 2.) Unscrew 9 numbers of screws below the keyboard base.



Figure 8-254 Removing 5 Probe holders and unscrewing 9 screws below the keyboard base

- 3.) Open keyboard assembly.
- 4.) Remove ECG DUMMY BRKT.





Figure 8-255 ECG DUMMY BRKT

8-57-5 Installation Procedure

- 1.) Assemble ECG kit on keyboard base.
- 2.) Screw ECG kit with Keyboard base using 2 screws (2159625-screw w/SP PH m4x8)and fix ECG USB cable by using the hook of bracket.



Figure 8-256 ECG kit Installation

- 3.) Connect the USB cable with Keyboard assembly as shown.
- 4.) Assemble Keyboard assembly.





Figure 8-257 USB cable

- 5.) Screw 9 numbers of screws below the .
- 6.) Assemble 5 probe holders.



Figure 8-258 KEYBOARD BASE and probe holders

7.) Attach ECG label.



Figure 8-259 ECG label

8.) Perform: FRU8-49: Replacement of ECG Kit assy - Functional Tests

Section 8-58 Replacement of Battery Pack Assy

8-58-1 Manpower

One person, 20 minutes

8-58-2 Tools

Philips screwdriver

8-58-3 Preparation

Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-58-4 Removal procedure

- 1.) Follow the removal procedure of Section 8-41 "Replacement of the DPS/DPS with Battery" on page 8-128.
- 2.) Unscrew 14 screws and remove DPS with Battery cover.



Figure 8-260 Removing DPS with Battery cover

3.) Disconnect Battery power and signal cables.



Figure 8-261 Disassembling Battery power and signal cables from DPS with Battery board

4.) Open cover and replace Battery pack from DPS with Battery top cover.



Figure 8-262 Unscrewing 3 screws and replacing Battery pack from DPS with Battery top cover

8-58-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform: FRU8-50: Replacement of Battery Pack Assy Functional Tests.
- NOTE: When the AC power is plugged in, the system fan will be operated automatically until the battery is fully chaged. Even though the AC power is plugged in with the full battery, the system fan will also be operated automatically for less than one minute.

Section 8-59 Replacement of WIRELESS LAN

8-59-1 Manpower

One person, 30 minutes

8-59-2 Tools

Standard Field Service Tool Kit

8-59-3 Preparation

1.) Power Off/Shutdown the system as described in 4-3-2 on page 4-4.

8-59-4 Removal Procedure

1.) Unscrew 2 screws to remove POWER CORD BRACKET.



Figure 8-263 Unscrewing 2 screws to remove POWER CORD BRACKET

2.) Remove REAR COVER and unscrew 7 screws to remove REAR EMI COVER.



Figure 8-264 Removing REAR COVER and unscrewing 7 screws to remove REAR EMI COVER

3.) Diconnect the WERELESS LAN cable from NEST BOX.



Figure 8-265 Disconnecting WIRELESS LAN cable from NEST BOX

4.) Untie the cable clamp.



Figure 8-266 Untying cable clamp to unroute WIRELESS LAN Cable

5.) Pull out WIRELESS LAN dongle from loop sheet.



Figure 8-267 Pulling out WIRELESS LAN dongle from loop sheet

6.) Unfold WIRELESS LAN and Check the dongle label before installation.



Figure 8-268 Checking the dongle label

7.) Attach loop sheet in WIRELESS LAN dongle. Refer to below figure. (5499363,self adhesive hook and loop W30XL75)



Figure 8-269 Attaching loop sheet

8-59-5 Installation Procedure

- 1.) Install the new parts in the reverse order of removal.
- 2.) Perform :
- 3.) Perform :

8-59-6 Set up WIRELESS LAN

- 1.) Press <u>Utility</u> -> <u>System setup</u> -> <u>Connectivity</u> -> <u>Device Setup</u> -><u>WLAN Configuration</u>. The Wireless Network Configuration tool appears.
- 2.) Go to Wireless Network tab and check that available Wireless Networks connection list.
- 3.) Double click the available wireless network resource and edit the network key to connect.

8-59-7 Functional Test

- 1.) Select Utility -> System setup -> Connectivity -> Device Setup ->WLAN Configuration...
- 2.) Move to Properties tab and check the MAC Address is shown.

(0) Wireless Network Configur	ration	×
Wireless Networks Propertie	Monitor Security Diagnostics	
Wireless Network Adapter	NETGEAR A6210 WiFi USB3.0 Adapter	•
Connection Status	Disconnected	
Network Name (SSID)		
Authentication		
Encryption		
Signal Quality		
Speed		
LP Address		
MAC Address	6C-80-CE-1E-43-1A	
nna nacios	Avaiable Channels	
1	ſ	Close

Figure 8-270 Functional Test for WIRELESS LAN

FRU8-2: System Software - Installation/Upgrade Procedure

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
8-3	Software and Functional Checks after Installation/Upgrade Procedure	Voluson [™] P8 / Voluson [™] P6, Revision Voluson [™] P8 / Voluson [™] P6, Section 8-2. Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-3: Software and Functional Checks after Installation/Upgrade Procedure

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
Table 8-2	System Function	Voluson [™] P8 / Voluson [™] P6, Revision Voluson [™] P8 / Voluson [™] P6, Section 8-3. Equipment passed all required tests and is ready for use.
4-3-2	Power Off / Shutdown	

FRU8-4: Image Settings Only - Loading Procedure

go to 4-5-2 Load Small Backup (Scan Settings)

FRU8-5: Full Backup (Full System Configuration) - Loading Procedure

go to 4-5-4 Load Full System Configuration (Full Backup)

FRU8-6: Image Archive - Loading Procedure

go to 4-5-6-2 Load Image Archive

FRU8-7: Replacement or Activation of Options

See Section	Functional and/or Leakage Current Test	Debrief Script
Table 8-2	System Function	Proprietary Service Manual,
	functional checks depend on activated option	Revision Voluson™ P8 / Voluson™ P6, Section 8-7.
		Equipment passed all required tests and is ready for use

FRU8-8: Replacement of Monitor

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
6-3	LCD Monitor Adjustment	Voluson [™] P8 / Voluson [™] P6, Revision 6, Section 8-21. Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-9: Replacement of OPIO

See Section	Functional and/or Leakage Current Test	Debrief Script
		Proprietary Service Manual, Voluson™ P8 / Voluson™ P6,
Table 8-2	System Function	Revision 6, Section 8-25
		Equipment passed all required tests and is ready for use.

FRU8-10: Replacement of OPIO

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
7-9-1	Console Test	Voluson [™] P8 / Voluson [™] P6, Revision 6 Section 8-25 Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-11: Replacement of the SPEAKER

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
Table 8-2	System Function	Revision 6, Section 8-26 Equipment passed all required tests and is ready for use.
4-3-2	Power Off / Shutdown	

FRU8-13: Replacement of the NEST

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
Table 8-2	System Function	Voluson™ P8 / Voluson™ P6, Revision 6, Section 8-28 Equipment passed all required tests and is ready for use.
4-3-2	Power Off / Shutdown	

FRU8-18: Replacement of the Trackball

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
7-9-1	Console Test	P6, Revision 6, Section 8-33 Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-19: Replacement of the TGC BOARD

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual.
7-9-1	Console Test	Voluson [™] P8 / Voluson [™] P6, Revision 6, Section 8-34 Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-20: Replacement of AN KEYBOARD ASSY

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
7-9-1	Console Test	Voluson [™] P8 / Voluson [™] P6, Revision 6, Section 8-35 Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	
FRU8-28: Replacement of the DPS/DPS with Battery

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual, Voluson™ P8 / Voluson™ P6, Revision 6, <u>Section 8-41</u> Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-29 Replacement of the DRFM

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual, Voluson™ P8 / Voluson™ P6, Revision 6, Section 8-42 Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-30: Replacement of the SOM in DRFM

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual, Voluson [™] P8 / Voluson [™] P6, Revision 6, Section 8-43 Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-32: Replacement of the HDD in DRFM

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual, Voluson™ P8 / Voluson™ P6, Revision 6, Section 8-44 Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-36: Replacement of the DBM64

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual, Voluson™ P8 / Voluson™ P6, Revision 6, <u>Section 8-45</u> Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-37: Replacement of the T-DPI

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual, Voluson™ P8 / Voluson™ P6, Revision 6, Section 8-46 Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-38: Replacement of the CSI

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual, Voluson™ P8 / Voluson™ P6, Revision 6, Section 8-47 Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-39: Replacement of the CBP

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual, Voluson™ P8 / Voluson™ P6, Revision 6, Section 8-48 Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-40: Replacement of the DVD

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual, Voluson™ P8 / Voluson™ P6, Revision 6, <u>Section 8-49</u> Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
7-10-6	DVD/CD+R/RW Drive Test	
4-3-2	Power Off / Shutdown	

FRU8-41: Replacement of the OPIO Hub PWA

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
7-9-1	Console Test	Voluson [™] P8 / Voluson [™] P6, Revision 6, Section 8-37 Equipment passed all required tests and is ready for use.
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	

FRU8-42: Replacement of the OPIO USB Sub PWA

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
7-9-1	Console Test	Voluson [™] P8 / Voluson [™] P6, Revision 6, Section 8-50 Equipment passed all required
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	tests and is ready for use.

FRU8-43: Replacement of AN KEY TOP

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual, Voluson™ P8 / Voluson™ P6, Revision 6, Section 8-51 Equipment passed all required
7-9-1	Console Test	
Table 8-2	System Function	
4-3-2	Power Off / Shutdown	tests and is ready for use.

FRU8-44: Replacing optional Peripherals

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
7-9-1	Console Test	Voluson™ P8 / Voluson™ P6
Table 8-2	System Function	Equipment passed all required tests and is ready for use.
4-3-2	Power Off / Shutdown	

FRU8-45: Replacing optional Peripherals

Functional and/or Leakage Current Test - N/A

FRU8-46: Replacing optional Peripherals

See Section	Functional and/or Leakage Current Test	Debrief Script
10-8-5	Enclosure Leakage Current Test	Proprietary Service Manual,
4-7	Peripheral Checks	Revision 6, Section 8-52 Equipment passed all required tests and is ready for use.

FRU8-47: Replacement of FAN with Cable ASSY II

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
Table 8-2	System Function	Voluson™ P8 / Voluson™ P6, Revision 6. Section 8-53
4-3-2	Power Off / Shutdown	Equipment passed all required tests and is ready for use.

FRU8-48: Functional Checks after FRU replacement (Debrief Guidelines)

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	Proprietary Service Manual,
10-6-2	Functional Checks	Revision 6, Equipment passed
4-3-2	Power Off / Shutdown	all required tests and is ready for use.

FRU8-49: Replacement of ECG Kit assy

See Section	Functional and/or Leakage Current Test	Debrief Script
10-8-5	Enclosure Leakage Current Test	Proprietary Service Manual,
4-7	Peripheral Checks	Voluson [™] P8 / Voluson [™] P6, Revision 6, Section 8-57 Equipment passed all required tests and is ready for use.

FRU8-50: Replacement of Battery Pack Assy

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	
N/A	Wait for 30 minutes to charge battery	Proprietary Service Manual, Voluson™ P8 / Voluson™ P6.
N/A	Disconnect Circuit Breaker of AC powerPIR	Revision 6, Section 8-58
Table 8-2	System Function	Equipment passed all required tests and is ready for use.
4-3-2	Power Off / Shutdown	

FRU8-52: Replacement of Battery

See Section	Functional and/or Leakage Current Test	Debrief Script
4-3-1	Power On / Boot Up	
N/A	Wait for 30 minutes to charge battery	Proprietary Service Manual, Voluson™ P8 / Voluson™ P6
N/A	Disconnect Circuit Breaker of AC powerPIR	Revision 6, Section 8-59
Table 8-2	System Function	Equipment passed all required tests and is ready for use.
4-3-2	Power Off / Shutdown	

This page was intentionally left blank.

Chapter 9 Renewal Parts

Section 9-1 Overview

9-1-1 Purpose of Chapter 9

This chapter gives an overview of replacement parts available for the Voluson[™] P8 / Voluson[™] P6.

Section	Description	Page Number
9-1	Overview	9-1
9-2	List of Abbreviations	9-2
9-3	Parts List Groups	9-3
9-4	Plastics Covers (Front/Sides/Rear)	9-4
9-5	LCD Monitor	9-6
9-6	OPIO	9-7
9-7	Nest Box Parts	9-10
9-8	Mechanical Parts	9-13
9-9	Options	9-15
9-10	Optional Peripherals and Accessories	9-16
9-11	System Manuals	9-18
9-12	Probes	9-19
9-13	Power Cord	9-24
9-14	Biopsy Needle Guide	9-26

Table 9-1Contents in Chapter 9

Section 9-2 List of Abbreviations

AC	Alternating Current	
ADC	Analog to Digital Converter	
A/N Key	Alpha Numeric Keys	
ASIC	Application Specific Integrated Circuit	
Assy	Assembly	
DBM64	64ch Dachstein Beamformer Mla4	
СВР	Backplane interface module	
DPS	Dachstein Power Supply	
DPS with battery	Dachstein Power Supply with battery	
CPU	Central Processing Unit	
CSI	Common Status Indicator module	
CWDM	Continuous wave doppler module	
DAC	Digital to Analog Converter	
DC	Direct Current	
DSP	Digital Signal Processing	
DVD	Digital Video Disc	
DVI	Digital Visual Interface	
ECGP	Electrocardiography module	
EUM	Electronic User Manual	
FRU 1	Replacement part available in parts hub	
FRU 2	Replacement part available from the manufacturer (lead time involved)	
HDD	Hard Disk Drive	
Int	Internal	
I/O	Input/Output	
LCD	Liquid Crystal Display	
PCI	Peripheral Component Interconnect	
PWA	Printed Wire Assembly	
DRFM	Dachstein Radio frequency Mid-processor	
SOM	System On Module	
USB	Universal Serial Bus	
CRU	Customer replaceable unit	

Section 9-3 Parts List Groups

Table	9.
-------	----

9-2 Mechanical and user accessible parts

ltem	Part Group Name	Table Number	Description
101-120	Plastic Covers	Table 9-3 on page 9-5	Housing Covers
201	LCD Monitor	Table 9-2 on page 9-6	Monitor and its covers
301-325	OPIO	Table 9-5 on page 9-8	User interface parts & speaker
401-425	Nest Box	Table 9-6 on page 9-11	Main board modules Including front/back end boards
501-515	Mechanical Parts	Table 9-7 on page 9-14	Mechanical Parts
601-604	Options	Table 9-8 on page 9-15	Options and power cord
701-710	Optional Peripherals and Accessories	Table 9-9 on page 9-17	Optional Equipment
	System Manuals - Voluson™ P8 / Voluson™ P6	Table 9-10 on page 9-18	System Manuals
801-802 803 804-806	Probes • 2D curved array Transducers • 2D linear array Transducers • Real-Time 4D Volume Probes	Table 9-12 on page 9-19 Table 9-13 on page 9-20 Table 9-14 on page 9-21	Probes
807	2D-Probes - Phased Array Transducers	Table 9-15 on page 9-22	Probe
901-913	Power Cord	Table 9-17 on page 9-25	Power Cord
1001-1010	Biopsy Needle Guides	Table 9-18 on page 9-26	Biopsy Needle Guides

Section 9-4 Plastics Covers (Front/Sides/Rear)



Figure 9-1 Plastic Covers

Item	Part Name	Part Number	Description	Qty	FRU	BT13	BT14	BT15	BT16
101	COVER CASTER NARROW SET BT16	5728121	COVER CASTER NARROW SET BT16	1	1	Я	И	Ν	Y
102	SIDE COVER L ASSY BT16	5722366	Left side Plastic cover Voluson TM P8/ Voluson TM P6	1	1	Z	Z	И	Y
103	SIDE COVER R ASSY BT16	5722363	Right side Plastic cover Voluson™ P8 / Voluson™ P6	1	1	Ν	Ν	Ν	Y
105	FRONT CABINET BAZEL ASSY BT16	5722369	Front Cabinet Plastic Cover	1	1	Ν	Ν	Ν	Y
106	ASSY, BEZEL, FRONT, DVD, PLASTIC BT16	5722738	Front Plastic cover for DVD	1	1	Я	Я	И	Y
107	FRONT PRINTER BEZEL ASSY BT16	5722371	Front Plastic cover for printer	1	1	Ν	Ν	N	Y
108	REAR CABINET BEZEL ASSY BT16	5722373	Rear Plastic cover for Voluson™ P8 / Voluson™ P6	1	1	Ν	Ν	N	Y
109	TOP CABINET COVER BT16	5722375	Top Cover for cabinet	1	1	Ν	Ν	Ν	Y
110	FRONT PEDESTAL COVER BT16	5722376	FRONT PEDESTAL COVER BT16	1	1	И	И	И	Y
111	BOTTOM PEDESTAL COVER BT16	5722377	BOTTOM PEDESTAL COVER BT16	1	1	И	Ν	И	Y
112	SIDE CABINET TRAY BT16	5722378	2 side trays for Voluson™ P8 / Voluson™ P6	1	1	Ν	Ν	Ν	Y
113	OPIO TOP COVER SET BT16	5728123	OPIO TOP COVER SET BT16	1	1	Ν	Ν	Ν	Y
114	TRAY, PEDESTAL, CABINET, PLASTIC BT16	5728127	TRAY, PEDESTAL, CABINET, PLASTIC BT16	1	1	z	z	z	Y
115	PRINTER DUMMY COVER PLATE BT16	5725303	PRINTER DUMMY COVER PLATE BT16	1	1	Ν	Ν	Ν	Y
116	COVER SET FOR VP6_8 BT16	5725312	COVER SET FOR VP6_8 BT16	1	1	Ν	Ν	Ν	Y

Section 9-5 LCD Monitor



Figure 9-2 LCD Monitor

ltem	Part Name	Part Number	Description	Qty	FRU	BT13	BT14	BT15	BT16
201	TE17INCH LCDMON	5669733	17" LED Monitor	1	1	Ν	Ν	Ν	Y
202	17INCH MONITOR ARM BT16	5722185	17" MONITOR ARM BT16	1	1	Ν	Ν	Ν	Y
203	17INCH MONITOR ARM COVER BT16	5720705	17" MONITOR ARM COVER BT16	1	1	Ν	Ν	Ν	Y
204	Tetris HDMI Cable	5717001	Tetris HDMI Cable	1	1	Ν	Ν	Ν	Y
205	Tetris Monitor Power Cable	5717002	Tetris Monitor Power Cable	1	1	Ν	Ν	Ν	Y
206	Tetris Monitor USB Cable	5717003	Tetris Monitor USB Cable	1	1	Ν	Ν	Ν	Y
207	TE17INCH COVERS	5728055	TE17INCH COVERS	1	1	Ν	Ν	Ν	Y

Section 9-6 OPIO



Figure 9-3 OPIO

Table 9-5 OPIO

ltem	Part Name	Part Number	Description	Qty FRU		BT13	BT14	BT15	BT16
301	VP8P6 keyboard Assembly- TOP BT16	5451539-2	VP8P6 keyboard Assembly- TOP BT16	1	1	Ν	Ν	Ν	Y
302	VP8P6Lower OPIO Assembly with English AN Keyboard BT16	5437484-2	VP8P6Lower OPIO Assembly with English AN Keyboard BT16	1	1	Ν	Ν	Ν	Y
303	OPIO Main PWA Assy VP8P6 BT16	5444766-2	OPIO Main PWA Assy VP8P6 BT16	1	1	Ν	Ν	Ν	Y
304	Trackball cable for VP8P6 BT16	5726342	Trackball cable for VP8P6 BT16	1	1	Ν	Ν	Ν	Υ
305	AN Keyboard Assembly VP6_P8 BT16	5722468	AN Keyboard Assembly VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
307	Trackball for Voluson performance series-T	5457377-4	Trackball for Voluson performance series-T	1	1	Ν	Ν	Ν	Y
308	OPIO button sets VP6_P8 BT16	5725308	OPIO button sets VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
309	OPIO Plastic upper cover VP6_P8 BT16	5728209	OPIO Plastic upper cover VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
310	OPIO Plastic Lower Covers VP6_P8 BT16	5725311	OPIO Plastic Lower Covers VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
311	AN Key Top with Base Assembly, Swedish VP6_P8 BT16	5722469	AN Key Top with Base Assembly, Swedish VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
312	AN Key Top with Base Assembly, Spanish VP6_P8 BT16	5722470	AN Key Top with Base Assembly, Spanish VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
313	AN Key Top with Base Assembly, RUSSIAN VP6_P8 BT16	5722471	AN Key Top with Base Assembly, RUSSIAN VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
314	AN Key Top with Base Assembly, Portuguese VP6_P8 BT16	5722473	AN Key Top with Base Assembly, Portuguese VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
315	AN Key Top with Base Assembly, Norwegian VP6_P8 BT16	5722474	AN Key Top with Base Assembly, Norwegian VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
316	AN Key Top with Base Assembly, Japanese VP6_P8 BT16	5722476	AN Key Top with Base Assembly, Japanese VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
317	AN Key Top with Base Assembly, Italian VP6_P8 BT16	5722477	AN Key Top with Base Assembly, Italian VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
318	AN Key Top with Base Assembly, French VP6_P8 BT16	5722478	AN Key Top with Base Assembly, French VP6_P8 BT16	1	1	Ν	Ν	Ν	Y

Table 9-5 OPIO

Item	Part Name	Part Number	Description	Qty	FRU	BT13	BT14	BT15	BT16
319	AN Key Top with Base Assembly, FinnishVP6_P8 BT16	5722479	AN Key Top with Base Assembly, FinnishVP6_P8 BT16	1	1 1		Ν	Ν	Y
320	AN Key Top with Base Assembly, Englsih VP6_P8 BT16	5722482	AN Key Top with Base Assembly, Englsih VP6_P8 BT16	1	1 1		Ν	Ν	Y
321	AN Key Top with Base Assembly, Dannish VP6_P8 BT16	5722483	AN Key Top with Base Assembly, Dannish VP6_P8 BT16	1	1	N	Ν	Ν	Y
322	AN Key Top with Base Assembly, Swiss VP6_P8 BT16	5722680	AN Key Top with Base Assembly, Swiss VP6_P8 BT16	1	1	N	Ν	Ν	Y
323	Encoder set~Tetris BT16	5725314	Encoder set~Tetris BT16	1	1	Ν	Ν	Ν	Y
324	VOLUSON P6_P8 OPIO RUBBER SET	5726091	VOLUSON P6_P8 OPIO RUBBER SET	1	1	N	Ν	Ν	Y
325	RUBBER CAP VP6_P8 BT16	5727408	RUBBER CAP VP6_P8 BT16	1	1	Ν	Ν	Ν	Y
326	TGC Assy	5449578	TGC Assembly	1	1	Y	Y	Y	Y
327	Power ON/OFF Key PCB Assy	5450807	Power ON/OFF Key PCB Assy	1	1	Y	Y	Y	Y
328	OPIO USB Sub PWA Assy	5461194	OPIO USB Sub PWA Assy	1	1	Y	Y	Y	Y
329	Speaker Assy	5408080	Speaker Assembly	1	1	Y	Y	Y	Y

Section 9-7 Nest Box Parts



Figure 9-4 Nest Box parts

Table 9-6	Nest Box
-----------	----------

ltem	Part Name	Part Number	Description	Qty	FRU	BT13	BT14	BT15	BT16
401	T-DPI PWA assy	5719539-2	Probe Interface Board Assy	1	1	N	N	Ν	Y
402	DBM64 Assy	5573639-2	64ch Dachstein Beamformer Mla4	1	1	N	N	Ν	Y
403	DCWD Piggy	6497597-2	Dachstein CWD Piggy	1	1	N	N	Ν	Y
404	DRFM -2 FRU SET	S5497712- 2	DRFM-2 Assy with FPGA Patch	1	1	N	N	Ν	Y
405	HDD	5459671	2.5inch 500GB SATA HDD	1	1	Y	Y	Y	Y
406	CBP Assy	5364094	CBP ASSY	1	1	Y	Y	Y	Y
407	CSI Assy	5364095	CSI Assy	1	1	Y	Y	Y	Y
408	DVD unit	5393433	DVD Drive	1	1	Y	Y	Y	Y
409	AC Cable Holder	5408086	AC CABLE HOLDER SET	1	1	Y	Y	Y	Y
410	OPIO Cable Assy	6020400	OPIO Cable Assy	1	1	Y	Y	Y	Y
411	System Main FAN	5669586	System Main FAN	1	1	N	N	Ν	Y
412	Type 6 COM Express with 8G Memory	5721572	i3 SOM with 8G Memory	1	1	N	N	Ν	Y
413	i3 Skylake with 8Gbyte RAM	7324556	i3 Skylake with 8Gbyte RAM (Usable in the system which is SW Ext.7 or later version)	1	1	N	N	Ν	Y
414	DPS with battery Assy	6004002-2	DPS with battery Assy	1	1	N	N	Ν	Y
415	DPS Assy	6004001-2	DPS Assy	1	1	N	N	Ν	Y
416	Battery pack	5450061	Battery pack	1	1	N	Y	Y	Y
417	HDMI Cable for Main Monitor	5717001	HDMI Cable for Main Monitor	1	1	N	N	Ν	Y
418	MONITOR POWER cable	5717002	MONITOR POWER cable	1	1	N	N	Ν	Y
419	USB Cable for Main Monitor	5717003	USB Cable for Main Monitor	1	1	N	N	Ν	Y
420	peripheral Cable Assy	5445881	Peripheral Cable Assy	1	1	Y	Y	Y	Y
421	Power cable for DVD and Cellular Module	5611034	Power Cable for DVD and Cellular Module	1	1	N	N	Y	Y

Table 9-6 Nest Box

Item	Part Name	Part Number	Description	Qty	FRU	BT13	BT14	BT15	BT16
423	Manganese Dioxide Lithum Coin Battery	5173038	Manganese Dioxide Lithum Coin Battery, CR2450	1	1	Y	Y	Y	Y

Section 9-8 Mechanical Parts



		Part							
ltem	Part Name	Number	Description	Qty	FRU	BT13	BT14	BT15	BT16
501	Total Lock Caster	5400391-2	Total Lock Caster	1	1	Y	Y	Y	Y
502	Swivel Lock Caster	5400392-2	Caster with swivel available	1	1	Y	Y	Y	Y
503	BASE BUMPER BT16	5722382	BASE BUMPER BT16	1	1	Ν	Ν	Ν	Y
504	Handle VP BT16	5722186	Handle VP BT16	1	1	Ν	Ν	Ν	Y
505	Cable Hook BT16	5725317	Cable Hook	1	1	Ν	Ν	Ν	Y
506	Probe Holder 2~Rubber	5433118	Probe Holder 2	1	1	Y	Y	Y	Y
507	Probe Holder 3!Rubber	5433119	Probe Holder 3	1	1	Y	Y	Y	Y
508	Air Filter	5374942	Air Filter	1	1	Y	Y	Y	Y
509	Power Cord Fix Bracket 110V	5497621	Power Cord Fix Bracket 110V	1	1	Y	Y	Y	Y
510	Power Cord Fix Bracket 220V	5497620	Power Cord Fix Bracket 220V	1	1	Y	Y	Y	Y
511	Probe Holder set VP6_8 BT16	5726089	Probe Holder set	1	1	Z	Z	Ν	Y
512	RS KNOB SET BT16	5726088	RS KNOB SET BT16	1	1	Z	Z	Ν	Y
513	PROBE HOLDER LONG 2	5779581	PROBE HOLDER LONG 2	1	1	Ν	Y	Y	Y
514	Caster Cap Set BT16	5725315	Caster Cap Set BT16	1	1	Ν	Ν	Ν	Y

Table 9-7 Mechanical Parts

Section 9-9 Options





Figure 9-6 Options

Table 9-8 Options

ltem	Part Name	Part Number	Description	Qty	FRU	BT13	BT14	BT15	BT16
601	Vertical TV probe holder	5408092	Vertical TV probe holder	1	1	Y	Y	Y	Y
602	Horizontal TV probe holder	5408514	Horizontal TV probe holder	1	1	Y	Y	Y	Y
603	3 button footswitch Rev.1.1	5380960-2	3 button Foot Swtich	1	1	Y	Y	Y	Y
618	ECG Module Assy	5669519	ECG Module Assy	1	1	N	Y	Y	Y
619	Power Cord Fix Bracket 110V	5497621	Power Cord Fix Bracket 110V	1	1	Y	Y	Y	Y
620	Power Cord Fix Bracket 220V	5497620	Power Cord Fix Bracket 220V	1	1	Y	Y	Y	Y
621	EMI filter Assy	5589104	EMI filter Assy	1	1	Y	Y	Y	Y

Section 9-10 Optional Peripherals and Accessories

9-10-1 Printers and options



Figure 9-7 Optional Peripherals and Accessories - Printers

Table 9-9 Optional Peripherals and Accessories

ltem	Part Name	Part Number	Description	Qty	FRU	BT13	BT14	BT15	BT16
701	Voluson P6/P8 Software	5692801-2 5692801-3 5692801-4 5692801-5 5692801-6 5692801-7	Voluson sysDVD Software SPC310 Ext.4 Voluson sysDVD Software SPC310 Ext.5 Voluson sysDVD Software SPC310 Ext.6 Voluson sysDVD Software SPC310 Ext.7 Voluson sysDVD Software SPC310 Ext.8 Voluson sysDVD Software SPC310 Ext.9	1	1	Z	Ν	Ν	Y
702	EternalBlue Tool Patch CD for Voluson Product	5778725	EternalBlue Tool Patch CD for Voluson Product	1	1	Ν	Y	Y	Y
703	B&W Printer Digital (SONY, UP- D898)	5599699	B&W Printer Digital (SONY, UP-D898)	1	1	Y	Y	Y	Y
704	Color Printer Digital (SONY, UP-D25MD)	H44642LW (5393211)	Color Printer Digital (SONY, UP-D25MD)	1	N/A	Y	Y	Y	Y
705	Color Laser Printer HP M452	066E8922 (For 220V) 066E8923 (For 110V)	Color Laser Printer HP M452	1	N/A	Y	Y	Y	Y
706	Printer Installation Kit (BW and Color)	H44892LC (5722386)	BW Printer Bracket, Color Printer Bracket, Cable set	1	N/A	Ν	N	N	Y
707	WLAN Stick	KTZ196269 (H48671DT)	Wireless Network Interface ("Netgear" WLAN Adapter)	1	N/A	Y	Y	Y	Y
708	ECG kit assy	5669842	consists of ECG Module, ECG label and 2 screws	1	1	Y	Y	Y	Y
709	IEC Type ECG CABLE	5341188	ECG Patient cable only for EU, ASIA	1	1	Y	Y	Y	Y
710	Norav ECG Patient Cable AHA Type	5178978	ECG Patient cable for US	1	1	Y	Y	Y	Y
711	Universal Video Converter S200	5589401-2	Universal Video Converter S200	1	1	Y	Y	Y	Y
712	Universal Video Conerter S300	5750263	Universal video Converter S300	1	1	Ν	Y	Y	Y
713	Cellular Modem	KTZ304025	Power Supply, SIM Card, Placing SIM Card, USB Cable, Antenna, Loop fastener, Hook Fastener	1	1	Ν	N	Y	Y
714	Common wireless LAN Assy A6210	5737413	Common wireless LAN ASSY A6210	1	1	Ν	Y	Y	Y
715	USB Isolator Assy	5507797	USB Isolator Assy	1	1	Ν	Y	Y	Y
716	LAN Isolator Assy	5507798	LAN Isolator Assy	1	1	Ν	Y	Y	Y

NOTE: The illustrations may not correspond to the actual product!!

Section 9-11 System Manuals

Part Name	Part # VP8/VP6
Service Manual	5723243
System User Manua	ls
Basic User Manual, English	5654430-100
Basic User Manual, French	5654430-101
Basic User Manual, Spanish	5654430-106
Basic User Manual, German	5654430-108
Basic User Manual, Italian	5654430-111
Basic User Manual, Dutch	5654430-121
Basic User Manual, Portuguese	5654430-127
Basic User Manual, Estonian	5654430-129
Basic User Manual, Slovenian	5654430-131
Basic User Manual, Japanese	5654430-140
Basic User Manual, Swedish	5654430-142
Basic User Manual, Traditional Chinese	5654430-143
Basic User Manual, Korean	5654430-144
Basic User Manual, Russian	5654430-145
Basic User Manual, Polish	5654430-150
Basic User Manual, Greek	5654430-151
Basic User Manual, Hungarian	5654430-153
Basic User Manual, Slovakian	5654430-154
Basic User Manual, Czech	5654430-155
Basic User Manual, Turkish	5654430-159
Basic User Manual, Danish	5654430-160
Basic User Manual, Norwegian	5654430-161
Basic User Manual, Finnish	5654430-162
Basic User Manual, Bulgarian	5654430-165
Basic User Manual, Romanian	5654430-167
Basic User Manual, Croatian	5654430-168
Basic User Manual, Lithuanian	5654430-174
Basic User Manual, Latvian	5654430-175
Basic User Manual, Serbian	5654430-176
Basic User Manual, European Portuguese	5654430-177
Basic User Manual, Ukrainian	5654430-180
Basic User Manual, Indonesian	5654430-181
Basic User Manual, Kazakhstan	5654430-184
Advanced Reference Manual, English	5654432-100
Advanced Acoustic Output References, English	5715367-100

Table 9-10 System Manuals - Voluson[™] P8 / Voluson[™] P6

Section 9-11 - System Manuals

Section 9-12 Probes

Table 9-11 below outlines the replacement parts described in the sub-sections.

Table 9-11 Probes - Replacement Parts

Sub-section	Description	Page Number
9-12-1	2D-Probes - Curved Array Transducers	9-19
9-12-2	2D-Probes - Linear Array Transducer	9-20
9-12-3	Real-Time 4D Volume Probes	9-21

NOTE: If a probe is only available for Voluson[™] P8, it is marked by * (eg. 3Sc-RS*).

9-12-1 2D-Probes - Curved Array Transducers



Figure 9-8 2D curved array Transducers

Table 9-12	2D curved array Transducers
------------	-----------------------------

ltem	Part Name	Part Number	Description	Qty	CRU	FRU
801	4C-RS	5488477	broadband curved array transducer, 2.0 - 5.0 MHz, 128 Elements Applications: Abdominal, Obstetrics, Gynecology	-	1	1
			Micro Convex transducer 2.9 - 9.7 MHz, 192			
802	IC9-RS	5722023	Elements	-	1	1
			Applications: OB, Gyn, Transrectal			

9-12-2 2D-Probes - Linear Array Transducer



Figure 9-9 2D Linear Array Transducer

Table 9-132D linear array Transducers

ltem	Part Name	Part Number	Description	Qty	CRU	FRU
803	12L-RS	5499501	Small and lightweight linear-array transducer 4.0 - 10.0 MHz, 192 Elements Applications: Small parts, Peripheral vascular, Pediatrics, Orthopedics	-	1	1

9-12-3 Real-Time 4D Volume Probes



Figure 9-10 Real-Time 4D Volume Probes

Table 9-14 Real-Time 4D Volume Probes

Item	Part Name	Part Number	Description	Qty	CRU	FRU
804	RIC5-9A-RS	KTZ304128	Real-time 4D endocavity broadband electronic curved array transducer 3.8 - 9.3 MHz, 192 Elements, field of view: max. 180° Applications: Gynecology, Obstetrics, Transrectal	-	1	1
805	RAB2-6-RS	KTZ303982	Real-time 4D broadband electronic curved-array transducer 2.0 - 5.0 MHz, 128 Elements Applications: Abdominal, OB, Gyn	-	1	1

* A green round label is attached on the RIC5-9A-RS (KTZ304128)



9-12-4 2D-Probes - Phased Array Transducers



Figure 9-11 2D Phased Array Probe

Table 9-15	2D-Probes -	Phased A	Arrav T	ransducers
	20110000	i naooa /	unay i	ranoaaooro

ltem	Part Name	Part Number	Description	Qty	CRU	FRU
807	3Sc-RS*	47237516 (H45041DL)	Broadband phased array transducer, 1.0 - 4.0 MHz, 64 Elements Applications: Abdominal, Cardiology, Obstetrics, Pediatrics, Cephalic	1	1	1

* The part is only applied for VP8

9-12-5 Probe-Compatibility

					Affe	ected	Produ	icts		
	Part Information			BT13		BT14		BT15		16 310)
Array type	Part Number	Part Description	VP6	VP8	VP6	VP8	VP6	VP8	VP6	VP8
	5488477	4C-RS	х	х	x	х	х	х	х	x
Curved	5499516	E8C-RS	x	x	x	x	x	x	-	-
	5722023	IC9-RS	-	-	-	-	-	-	x	x
Linear	5499501	12L-RS	x	x	x	x	x	x	x	x
Phased	47237516	3Sc-RS	x	x	x	x	x	x	•	x
	KTZ304063	RIC5-9A-RS	-	-	-	-	-	-	x	x
	KTZ304128	RIC5-9A-RS	-	-	-	-	-	•	x	x
Volume	KTZ303990	RIC5-9W-RS	x	x	x	x	x	x	-	-
	KTZ303981	RAB2-5-RS	x	x	x	x	x	x	-	-
	KTZ30982	RAB2-6-RS	x	x	х	х	x	х	х	x

Table 9-16 Probe Compatibility for Voluson P Series

Legend: X: Usable / -: Not Usable

Section 9-13 Power Cord



Figure 9-12 Power Cords

Item	Part Name	Part Number	Description	Qty	CRU	FRU
901	Power Cord for India	5182611	Power Cord for India	1	1	1
902	Power Cord for Switzerland	5182235	Power Cord for Switzerland	1	1	1
903	Power Cord for UK/HK	5182816	Power Cord for UK/HK	1	1	1
904	Power Cord for ANZ	5182296	Power Cord for ANZ	1	1	1
905	Power Cord for Denmark	5182083	Power Cord for Denmark	1	1	1
906	Power Cord for Italy	5182940	Power Cord for Italy	1	1	1
907	Power Cord for Argentina	5182942	Power Cord for Argentina	1	1	1
908	Power Cord for Israel 5182453		Power Cord for Israel	1	1	1
909	Power Cord 110V for Canada/USA/JPN	2388982	Power Cord 110V for Canada/USA/JPN	1	1	1
	Power Cord for Taiwan	5792418	Power Cord for Taiwan	1	1	1
910	Power Cord 220V for EU	2327990	Power Cord 220V for EU	1	1	1
911	Power Cord for China	2388981	Power Cord for China	1	1	1
912	Power Cord for Brazil	5399665	Power Cord for Brazil	1	1	1
913	Power Cord for South Africa	5408183	Power Cord for South Africa	1	1	1
914	Power Cord for Japan	5408490	Power Cord for Japan	1	1	1

Table 9-17 Power Cord

Section 9-14 Biopsy Needle Guide



Figure 9-13 Biopsy Needle Guides

Table 9-18	Biopsy Needle Guides
------------	-----------------------------

ltem	Part Name	Part Number	Description		CRU	FRU
1001	PEC63	H46721R	Reusable biopsy needle guide for probe RIC5-9A-RS needle diameter: < 1.8 mm	-	1	Ν
1002	RIC Single-andgle bracket	H48681GF	Disposable biopsy needle guide for probe RIC5-9A-RS needle diameter:1.2 - 1.6 mm	-	1	Ν
1003	RAB Single-angle bracket	H48681ML	Non Sterile Single Angld Bracket needle guide for porbe RAB2-6-RS needle diameter: > 0.6mm - < 2.1 mm	-	1	Ν
1004	12L-RS Multiangle bracket	H40432LC	Non Sterile Multi Angle Bracktet needle guide for probe 12I-RS needle diameter: > 0.6 mm -< 2.1 mm		1	Ν

Table 9-18 Biopsy Needle Guides

Item	Part Name	Part Number	Description	Qty	CRU	FRU
1005	3Sc-RS Multiangle bracket	H46222LC	Non Sterile Multi Angle Bracket needle guide for probe 3Sc-RS needle diameter: > 0.6 mm - < 2.1 mm	-	1	N
1006	4C-RS Multiangle bracket	E8385NA	Non Sterile Multi Angle Bracket needle guide starter kit for probe 4C- RS needle diameter: > 0.6 mm - < 2.1 mm	-	1	Ν
1007	IC9-RS Biopsy guide (disposable)	H48691YW	Disposable Biopsy needle guide for probe IC9-RS needle diameter: < 1.65 mm	-	1	Ν
1008	IC9-RS Biopsy guide (reuseable)	H48701MM	Reusable Biopsy needle guide for probe IC9-RS	-	1	Ν
1009	IC9-RS Biopsy guide	H48701MN	Reusable Biopsy needle guide for probe IC9-RS	-	1	Ν

Chapter 10 Care & Maintenance

Section 10-1 Overview

10-1-1 Periodic Maintenance Inspections

It has been determined by engineering that your Voluson[™] P8 / Voluson[™] P6 system does not have any high wear components that fail with use, therefore no Periodic Maintenance Inspections are mandatory.

However, some Customers Quality Assurance Programs may require additional tasks and/or inspections at a different frequency than listed in this manual.

10-1-2 Purpose of Chapter 10

This chapter describes **Care & Maintenance** on the Voluson[™] P8 / Voluson[™] P6 system and its peripherals.

These procedures are intended to **maintain the quality** of the ultrasound **systems performance**. Read this chapter completely and familiarize yourself with the procedures before performing a task.

Section	Description	Page Number
10-1	Overview	10-1
10-2	Why do Maintenance	10-2
10-3	Maintenance Task Schedule	10-2
10-5	Tools Required	10-7
10-6	System Maintenance	10-8
10-7	Using a Phantom (Optional)	10-14
10-8	Electrical Safety Tests	10-14
10-9	When There's Too Much Leakage Current	10-31
	Ultrasound INSPECTION CERTIFICATE	10-32

 Table 10-1
 Contents in Chapter 10

CAUTION Practice good ESD prevention. Wear an anti-static strap when handling electronic parts and even when disconnecting/connecting cables.

DANGER THERE ARE SEVERAL PLACES ON THE BACKPLANE, THE AC DISTRIBUTION, AND DC DISTRIBUTION THAT ARE DANGEROUS. BE SURE TO DISCONNECT THE SYSTEM POWER PLUG AND SWITCH OFF THE MAIN CIRCUIT BREAKER BEFORE YOU REMOVE ANY PARTS. BE CAUTIOUS WHENEVER POWER IS STILL ON AND COVERS ARE REMOVED.

CAUTION Do not pull out or insert circuit boards while power is ON.

CAUTION DO NOT operate this unit unless all board covers and frame panels are securely in place, to ensure optimal system performance and cooling. When covers are removed, EMI may be present.

Section 10-2 Why do Maintenance

10-2-1 Keeping Records

It is good business practice that ultrasound facilities maintain records of quality checks and corrective maintenance. The Ultrasound Inspection Certificate (see: page 10-32) provides the customer with documentation that the ultrasound System is maintained on a periodic basis.

A copy of the Ultrasound Inspection Certificate should be kept in the same room or near the System .

10-2-2 Quality Assurance

In order to gain accreditation from organizations such as the American College of Radiology (USA), it is the customer's responsibility to have a quality assurance program in place for each System . The program must be directed by a medical physicists, the supervising radiologist/physician or appropriate designer.

Routine quality control testing must occur regularly. The same tests are performed during each period so that changes can be monitored over time and effective corrective action can be taken.

Testing results, corrective action and the effects of corrective action must be documented and maintained on the site.

Your GE service representative can help you with establishing, performing and maintaining records for a quality assurance program. Please contact us for coverage information and/or price for service.

Section 10-3 Maintenance Task Schedule

10-3-1 How often should care & maintenance tasks be performed?

The Customer Care Schedule (see: page 10-3) specifies how often your Voluson[™] P8 / Voluson[™] P6 should be serviced and outlines items requiring special attention.

NOTE: It is the customer's responsibility to ensure the Voluson[™] P8 / Voluson[™] P6 care & maintenance is performed as scheduled in order to retain its high level of safety, dependability and performance.

Your GE Service Representative has an in-depth knowlegde of your Voluson[™] P8 / Voluson[™] P6 ultrasound scanning system and can best provide competent, efficient service. Please contact us for coverage information and/or price for service.

The service procedures and recommended intervals shown in the Customer Care Schedule assumes that you use your Voluson[™] P8 / Voluson[™] P6 for an average patient load (10-12 per day) and not use it as a primary mobile unit which is transported between diagnostic facilities.

NOTE: If conditions exist which exceed typical usage and patient load, then it is recommended to increase the maintenance frequencies.

Abbreviations used in the Customer Care Schedule Table 10-2:

D = Daily W = Weekly M = Monthly A = Annually
10-3-1 How often should care & maintenance tasks be performed? (cont?)

ltem	Service at Indicated Time	D	w	М	Α	Notes
AC Mains Cable	Inspect AC Mains Cable			•		Mobile Unit Check weekly
Cables and Connectors	Check if all cables are fixed well seated at the correct position and if there is no mechanical damage visible.				•	also after corrective maintenance
User Interface	Clean alphanumerical keyboard, Functional keys, Digital potentiometers, TGC-Shift potentiometers. (vacuum cleaner, lukewarm soap water on a soft, damp cloth)		•			Be careful not to get the cloth too wet so that moisture does not enter the loudspeakers, TGC-Slider, or other keys!
LCD Monitor and Probe holder	Clean LCD Monitor surface and Probe holder with a fluid detergent in warm water on a soft, damp cloth.		•			Be careful not to get the cloth too wet so that moisture does not enter the entire system.
Mechanical parts	Clean and inspect the mechanical function of wheels, casters, brakes and swivel locks as well as side door, foot rest, front and rear handle, and monitor holder. Remove Dust and Coupling gel.			•		Mobile Unit Check Daily
Control Console movement	Check Translation/Rotation and Height Adjustment (Elevation)				•	more frequently at Mobile Units
Trackball Check	Check proper operation (Cursor movement X, Y direction)	•				If failure occurs go to trackball cleaning.
Trackball Cleaning	Remove trackball ring; open the trackball housing and take out the trackball to clean it with soft tissue and screwdriver shaft.				•	Please record it in the systems setup maintenance report
Disk Drives (Data Backup)	Test Image filing (Archive) Import and Export data capability (DVD/CD Drive)		•	•*		* save the image filing data weekly or at least monthly on DVD/CD depending on the number of examinations
Safe Probe Operation	Clean probes and probe cables and check acoustic lens housing (cracks) and probe cables. In case of mechanical damage, don't use them! Danger: Safety risk for operator and patient.	•*				* or before each use
Probe Air bubbles	To detect air bubbles in filling liquid, shake the probe carefully and check abnormal noise.					
Probe connectors	Remove dust/dirt of all probe connectors. Clean with vacuum cleaner if dust is visible.			•		
Console Leakage Current Checks					•	Also after corrective maintenance or as required by your facilities QA program.
Peripheral Leakage Current Checks					•	Also after corrective maintenance or as required by your facilities QA program.
Surface Probe Leakage Current Checks					•	Also after corrective maintenance or as required by your facilities QA program.

Table 10-2 Customer Care Schedule

Table 10-2 Customer Care Schedule

ltem	Service at Indicated Time	D	w	М	Α	Notes
Endocavity Probe Leakage Current Checks					•	Also after corrective maintenance or as required by your facilities QA program.
Measurement Accuracy Checks					٠	Also after corrective maintenance or as required by your facilities QA program.
Probe/ Phantom(optional) Checks	Check axial and lateral resolution (see Basic User Manual Technical specifications). Check Gain and TGC changes, vary the focus and check reaction on screen.				•	Also after corrective maintenance or as required by your facilities QA program.
Functional Checks of all probes Section 10-6-2 on page 10-9					•	Also after corrective maintenance or as required by your facilities QA program.

Section 10-4 Tools Required

Tool ID	Description	Tool ID	Description
9-45358	Pliers Retaining Ring	9-XL9971MM	Xcelite-hex Blade 1.27mm
9-4078	Scribe	9-XL9972MM	Xcelite-hex Blade 1.5mm
9-44572	Wrench Open End 3/8 - 7/16	9-XL9973MM	Xcelite-hex Blade 2 mm
9-44579	Wrench Open End 1/2 - 9/16	9-XL9974MM	Xcelite-hex Blade 2.5mm
9-44579	Wrench Open End 1/2 - 9/16	9-XL9975MM	Xcelite-hex Blade 3mm
9-45385	Pliers, Arc Joint 7 inch	9-XL9976MM	Xcelite-hex Blade 4mm
9-45378	Pliers, Slip Joint	9-XL9977MM	Xcelite-hex Blade 5mm
9-4518	Pliers, Long Nose, Miniature	9-XL991CM	Handle
9-4518	Pliers, Long Nose, Miniature	C2356E	Screw starter - Kedman Quick Wedge
9-44776	Ignition Wrench Set, 10 pc.	BLBO	Box - 18 Compartment
9-44601	Wrench, Adj., 4 inch	DWL4283T	Box - 5 Compartment
9-4151	Screwdriver, Blade, Stubby	9-41322	Pickup Tool, Claw type
9-41421	Screwdriver, Blade, Pocket clip	9-6757	6 pc Needle File Set
9-41594	Screwdriver, Blade 1/8 in. x 4 in.	9-9487	Utility Knife
9-41581	Screwdriver, Blade 3/16 in. x 4 in.	9-45341	Pliers Vice Grip 10 inch
9-39451	20' Steel Tape, locking Spring load	9-3001	Xacto Pen Knife
9-GH807	Ratchet, Offset, Slotted	9-HT62002	Solder Aid, Fork and Hook
68-412	Ratchet, Offset, Phillips	9-4099	Mirror, Round, Telescoping
9-GH130	Tapered Reamer	9-GH3001	Steel Rule Decimal 6 inch
9-41584	Screwdriver, slotted 1/4 in.X 6 in.	9-GH300ME	Steel Rule Metric 6 inch
9-4118	Screwdriver, Phillips #2, Stubby	9-XL9920	Xcelite-hex Blade.050 inch
9-41293	Screwdriver, Phillips #0	9-XL9921	Xcelite-hex Blade 1/16 inch
9-41294	Screwdriver, Phillips #1	9-XL9922	Xcelite-hex Blade 5/16 inch
9-41295	Screwdriver, Phillips #2	9-XL9923	Xcelite-hex Blade 3/32 inch
9-46677	Hex Keys, 20 pc., Metric	9-XL9924	Xcelite-hex Blade 1/8 inch
9-34701	1/4 in. Standard.Socket set (19 pc)	9-XL9925	Xcelite-hex Blade 5/32 inch
9-43499	1/2 inch Socket 1/4 inch drive	9-XL9926	Xcelite-hex Blade 3/16 inch
9-4355	Flex Spinner	9-XL99764	Xcelite-hex Blade 7/64
9-43523	Breaker	9-XL99964	Xcelite-hex Blade 9/64
9-43531	6 inch Ext.	9-XLM60	Mini-screwdriver kit
9-65283	Case 8.5 in. x 4.5 in. x 2 in. Deep	9-45072	Pliers 6 inch Diagonal

Table 10-3 Overview of GE-1 Tool Kit Contents

Table 10-3	Overview of GE-1 Tool Kit Contents ((Continued)	

Tool ID	Description	Tool ID	Description
9-46696	Hex Keys	9-XL100X	Wire Stripper/Cutter 5 inch - 100X
9-39829	Torpedo Level, Magnetic	9-XL87CG	Pliers - very fine needle nose-87CG
9-38461	Hammer, Ball Peen, 4 oz	9-WEWDT-07	Weller-Soldering-Replacement Tip(1)
9-4280	Universal Joint 1/4 inch	9-WS175-E	Wiss - Surgical Scissors
9-WEW60P3	Weller - Soldering Iron, 3 wire	KH174	Hemostat 5 inch Straight
9-WECT5B6	Weller - Soldering Iron Tip	KH175	Hemostat 5 inch curved
9-WEWDP12	Weller - Desoldering Pump	9-Z9480121	Alignment tool (red)
93383	Flashlight Mini-Mag Lite (AAA Bat.)		
9-GH408	Tweezers		
21576	Brush - Bristle		
9-4516	Pliers 4 1/4 inch Diagonal		

Table 10-4 Overview of GE-2 Tool Kit Contents

GE-2 Sears Kit (#99034)				
Tool ID	Description	Tool ID	Description	
9-45381	Pliers, Arc Joint 9 1/2 inch	9-44067	Socket 1 1/16 in. for 1/2 in. drive	
9-45092	Pliers, Linesman 8 1/2 inch	9-42679	Socket 10MM Hex for 1/2 in. drive (2273333)	
9-42882	Punch, Pin 3/32 inch	9-44262	Extension 10 inch for 1/2 in. drive (2273405)	
9-42884	Punch, Pin 5/32 inch	9-4258	3/8 inch to 1/2 inch Adapter	
9-42886	Punch, Pin 1/4 inch	9-34374	3/8 inch Metric Socket Set - 12 PT	
9-42973	Cold Chisel 1/2 inch	9-44311	16mm Socket 12 pt.	
9-GH77	Center Punch Automatic	9-33485	Metal Socket Tray	
9-GH890	File Handle, Adj.	9-33484	Metal Socket Tray	
9-31276	File, Round, Bastard 8 inch	9-33484	Metal Socket Tray	
9-31277	File, Half Round, Bastard 8 inch	9-52068	Tap and Drill Set	
9-31263	File, Flat Mill 8 inch	9-52722	#6 Тар	
21045C	Close Quarter Saw	9-52723	#8 Tap	
9-44604	Wrench, Adj 10 inch		High Speed Drill Set	
9-41587	Screwdriver 5/16 inch x 8 inch		#36 Drill	
9-41586	Screwdriver, Stubby 5/16 inch		#29 Drill	
9-GH19512	Countersink 1/2 inch	9-44046	3/8 inch Socket Set	
9-44741	12 PC Combination Wrench Set			

Section 10-5 Tools Required

10-5-1 Special Tools, Supplies and Equipment

10-5-1-1 Specific Requirements for Care & Maintenance

Table 10-6 Overview of Requirements for Care & Maintenance

ΤοοΙ	Part Number	Comments
Digital Volt Meter (DVM)		minimum 5% accuracy, 3.5 digit and 200 Ohm range required
Anti Static Kit	46–194427P231 46–194427P279 46–194427P369 46–194427P373 46–194427P370	Kit includes anti–static mat, wrist strap and cables for 200 to 240 V system 3M #2204 Large adjustable wrist strap 3M #2214 Small adjustable wrist strap 3M #3051 conductive ground cord
Anti Static Vacuum Cleaner	46–194427P278 46–194427P279	120V 230V
Safety Analyzer		Any Calibrated Electrical Safety Analyzer compliant with AAMI/ ESI 1993 or IEC 60601 or AS/NZS 3551
QIQ Phantom(Optional)	E8370RB	RMI Grayscale Target Model 403GS
B/W Printer Cleaning Sheet		see printer user manual for requirements
Color Printer Cleaning Sheet		see printer user manual for requirements
Disposable Gloves		
Emergency Repair Disk	5173797	Emergency Repair Disk should be an external USB disk which compliance with local regulatory requirements. The HDD capacity should be over 30GB and should only have one hard disk partition.

Section 10-6 System Maintenance

10-6-1 Preliminary Checks

The preliminary checks take about 15 minutes to perform. Refer to the system user documentation whenever necessary.

|--|

Step	ltem	Description
1	Ask & Listen	Ask the customer if they have any problems or questions about the equipment.
2	Paperwork	Fill in the top of the Ultrasound Inspection Certificate (see: page 10-32). Note all probes and system options.
3	Power up	Turn the system power on and verify that all fans and peripherals turn on. Watch the displays during power up to verify that no warning or error messages are displayed.
4	Probes	Verify that the system properly recognizes all probes.
5	Displays	Verify proper display on the LCD monitor.
6	Presets	"Full Backup" all customer presets on Hard disk and/or DVD (see: Section 4-5-3 "Save Full System Configuration (Full Backup)" on page 4-16).
7	Image Archive	Backup the Image Archive on DVD, USB-Stick, etc. (see: Section 4-5-6-1 "Save Image Archive" on page 4-21).

10-6-2 Functional Checks

The functional checks take about 60 minutes to perform. Refer to the Voluson[™] P8 / Voluson[™] P6 Basic User Manual whenever necessary.

10-6-2-1 System Checks

Table 10-8	System	Functional	Checks
------------	--------	------------	--------

Step	ltem	Description
1	B Mode	Verify basic B Mode (2D) operation. Check the basic system controls that affect this mode of operation.
2	M Mode	Verify basic M Mode operation. Check the basic system controls that affect this mode of operation.
3	C Mode	Verify basic CFM Mode (Color Flow Mode) operation. Check the basic system controls that affect this mode of operation.
4	PD Mode	Verify basic PD Mode (Power Doppler Mode) operation. Check the basic system controls that affect this mode of operation.
5	Doppler Modes	Verify basic Doppler Mode operation (PW). Check the basic system controls that affect this mode of operation.
6	3D Mode	Verify basic 3D Mode operation. Check the basic system controls that affect this mode of operation.
7	RealTime 4D Mode (optional)	Verify basic RealTime 4D Mode operation. Check the basic system controls that affect this mode of operation.
8	*Applicable Software Options	Verify the basic operation of all optional modes. Check the basic system controls that affect each options operation.
9	Keyboard Test	Perform the Keyboard Test Procedure to verify that all keyboard controls are OK.
10	LCD Monitor	Verify basic LCD Monitor display functions.
11	Measurements	Scan a gray scale phantom(optional) and use the measurement controls to verify distance and area calculation accuracy. Refer to the Basic User Manual, for measurement accuracy specifications.

NOTE:

* Some software may be considered standard depending upon system configuration.

10-6-2-2 Peripheral/Option Checks

If any peripherals or options are not part of the system configuration, the check can be omitted. Refer to Table 3-2, ?Approved Peripherals,? on page 3-68 for a list of approved peripherals.

Table 10-9 Approved Peripheral/Hardware Option Functional Checks

Step	ltem	Description
1	B/W Printer	Verify hardcopy output of the B/W video page printer. Clean heads and covers if necessary.
2	Color Printer	Verify hardcopy output of the Color video page printer. Clean heads and covers if necessary.
3	Color Deskjet (Bluetooth) Printer	Verify hardcopy output of the Deskjet (Bluetooth) printer. Clean heads and covers if necessary.
4	DVR	Verify record/playback capabilities of the DVR.
5	DVD Recorder	Verify record capabilities of the DVD Recorder. Clean heads and covers if necessary.
6	DICOM	Verify that DICOM is functioning properly. Send an image to a DICOM device.
7	DVD-Drive	Verify that the DVD-drive reads/writes properly (export/recall image in Image Management System = Archive)
8	ECG	Verify basic operation with customer.
9	Cellular Modem	Power Supply, SIM Card, Placing SIM Card, Antenna, Loop Fastener, Hook Fastener

10-6-3 Input Power

10-6-3-1 Mains Cable Inspection

Table 10-10 Mains Cable Inspection

Step	Item	Description
1	Unplug Cord	Disconnect the mains cable from the wall and system.
2	Inspect	Inspect it and its connectors for damage of any kind.
3	Terminals	Verify that the LINE, NEUTRAL and GROUND wires are properly attached to the terminals, and that no strands may cause a short circuit.
4	Inlet Connector	Inlet connector retainer is functional.

10-6-4 Cleaning

10-6-4-1 General Cleaning

Frequent and diligent cleaning of the Voluson[™] P8 / Voluson[™] P6 reduces the risk of spreading infection from person to person, and also helps to maintain a clean work environment.

Step	ltem	Description
1	Console	Use a fluid detergent in warm water on a soft, damp cloth to carefully wipe the entire system. Be careful not to get the cloth too wet so that moisture does not enter the console. Caution: DO NOT allow any liquid to drip or seep into the system.
2	LCD Monitor	Clean LCD Monitor surface with a fluid detergent in warm water on a soft, damp cloth. Caution: DO NOT spray any liquid directly onto the Voluson [™] P8 / Voluson [™] P6 covers, LCD Monitor, keyboard, etc.

 Table 10-11
 General Cleaning

10-6-5 Physical Inspection

Table 10-12 Physical Checks

Step	ltem	Description
1	Labeling	Verify that all system labeling is present and in readable condition.
2	Scratches & Dents	Inspect the console for dents, scratches or cracks.
3	LCD Monitor Display	Inspect the LCD Monitor Display for scratches and raster burns. Verify proper operation of Contrast and Brightness controls.
4	Control Panel and	Inspect the Control Panel and Keyboard. Note any damaged or missing items. (Replace faulty components, as required).
	litoyboard	Verify proper operation of Control Panel backlighting and TGC sliders.
5	DVD+R/RW Drive	Clean the drive head and media with the vendor-supplied cleaning kit.Advise the user to repeat this often, to prevent future problems. DVDs/CDs must be stored away from dust and cigarette smoke. Do not use alcohol or benzene to clean the drive
6	Wheels & Brakes	Check all wheels and casters for wear and verify operation of foot brake, to stop the unit from moving, and release mechanism. Check all wheel locks and swivel locks for proper operation.
7	Cables & Connectors	Check all internal cable harnesses and connectors for wear and secure connector seating. Pay special attention to probe strain or bend reliefs.
8	Power Cord	Check the power cord for cuts, loose hardware, tire marks, exposed insulation or other deterioration, and verify continuity. Tighten the clamps that secure the power cord to the unit and the outlet plug to the cord.
9	Shielding & Covers	Check to ensure that all EMI shielding, internal covers, air flow panels and screws are in place. Missing covers and hardware could cause EMI/RFI problems during scanning.
10	Peripherals	Check and clean the peripherals according to the manufacturer's directions. To prevent EMI or system overheating, dress the peripheral cables inside the peripheral cover.
11	External I/O	Check all connectors for damage and verify that the labeling is good.
12	Op Panel Lights	Check proper operation of all control panel key illuminations (flash once during system start-up).

10-6-6 Optional Diagnostic Checks

Optionally you can access the diagnostic software as described in Chapters 5 or 7. View the error logs and run desired diagnostics.

10-6-7 Probe Maintenance

10-6-7-1 Probe Related Checks

Table 10-13 Probe Related Checks

Step	ltem	Description
1	Probes	Thoroughly check the system probe connectors and remove dust from inside the connector sockets if necessary. Visually check for bent, damaged or missing pins.
2	Probe Holder	Clean probe holders (they may need to be soaked to remove excess gel).

10-6-7-2 Basic Probe Care

The Basic User Manual and/or care card provides a complete description of probe care, maintenance, cleaning and disinfection. Ensure that you are completely familiar with the proper care of GE probes.

Ultrasound probes can be easily damaged by improper handling. Review the Basic User Manual of Voluson[™] P8 / Voluson[™] P6 for more details. Failure to follow these precautions can result in serious injury and equipment damage. Failure to properly handle or maintain a probe may also void its warranty.



Any evidence of wear indicates the probe cannot be used.

Do a visual check of the probe pins and system sockets before plugging in a probe.

10-6-7-3 Basic Probe Cleaning and/or Disinfection

Refer to the Basic User Manual of Voluson[™] P8 / Voluson[™] P6 for details on cleaning.

- CAUTION Failure to follow the prescribed cleaning or disinfection procedures will void the probe's warranty. DO NOT soak or wipe the lens with any product not listed in the Voluson™ P8 / Voluson™ P6 Basic User Manual and/or care card. Doing so could result in irreparable damage to the probe and/or Voluson™ P8 / Voluson™ P6 system.
- **CAUTION** Follow the Care Card instructions supplied with each probe (inside the transducer boxes) for disinfectants and gels that are compatible with the surface material of the probes.
- CAUTION To help protect yourself from blood borne diseases, when cleaning and handling probes, wear approved, non-allergenic disposable gloves.
- **NOTICE** Disinfect a defective probe before you return it. Be sure to tag the probe as being disinfected.



Please be aware of the sensitive probe head. TAKE EXTREME CARE!



NEVER place or store a probe on its scan head!



When disinfecting a probe, ensure that there is sufficient space between the probe and the

10-6-7-4 Disinfection by means of the RIC-Holder

Especially for Real-time 4D endocavity probes (RIC), it is necessary to take extreme care when transporting the system with the probe attached, or during the disinfection process. Inadequate handling may lead to dead elements, shocked head mechanics, etc.

The RIC-Holder (especially developed for RIC Real-time 4D endocavity probes) guarantees that the sensitive probe head does not hit the bottom of the container during the disinfection procedure.

NOTE: Operation instructions are supplied with each RIC-Holder (KTZ225469).



Section 10-7 Using a Phantom (Optional)

The use of a Phantom is not required during Preventive maintenance. Customer may use it as part of their Quality Assurance Program tests.

Section 10-8 Electrical Safety Tests

10-8-1 Safety Test Overview

The electrical safety tests in this section are based on and conform to IEC60601-1 standard including national deviations. They are intended for the electrical safety evaluation of cord-connected, electrically operated, patient care equipment. If additional information is needed, refer to IEC 60601-1 documents including national deviations.

WARNING THE USER MUST ENSURE THAT THE SAFETY INSPECTIONS ARE PERFORMED AT LEAST EVERY 12 MONTHS ACCORDING TO THE REQUIREMENTS OF THE PATIENT SAFETY STANDARD IEC60601-1 standard including national deviations. ONLY TRAINED PERSONS ARE ALLOWED TO PERFORM THE SAFETY INSPECTIONS MENTIONED ABOVE.

CAUTION To avoid electrical shock, the unit under test must not be connected to other electrical equipment. Remove all interconnecting cables and wires. The unit under test must not be contacted by users or patients while performing these tests.

CAUTION Possible risk of infection. Do not handle soiled or contaminated probes and other components that have been in patient contact. Follow appropriate cleaning and disinfecting procedures before handling the equipment.

WARNING Test the Voluson[™] P8 / Voluson[™] P6 system, peripherals and probes for leakage current.

Excessive leakage current can cause FATAL INJURY OR DEATH. High leakage current can also indicate degradation of insulation and a potential for electrical failure. DO NOT use probes or equipment having excessive leakage current.

CAUTION Compare all safety-test results with safety-test results of previously performed safety tests e.g. last year etc. In case of unexplainable abrupt changes of safety-test results consult experienced authorized service personnel or GE for further analysis.

To minimize the risk of a probe causing electrical shock, the customer should observe the following recommendations:

- DO NOT use a probe that is cracked or damaged in any way
- Check probe leakage current:
 - * once a year on surface probes
 - once a year on endocavitary probes
 - whenever probe damage is suspected

10-8-2 GEHC Leakage Current Limits for Voluson[™] P8 / Voluson[™] P6

The following limits are summarized for IEC60601-1 standard including national deviations and IEC 62353 Medical Electrical Equipment - Recurrent test and test after repair of medical electrical equipment.

Measurement limits per IEC60601-1 standard including national deviations.

Table 10-14	Enclosure Leakage	Current Limits -Accessible	Surfaces not	protectivel	y earthed
-------------	-------------------	-----------------------------------	--------------	-------------	-----------

Conditions	Country		
Conditions	USA	Others	
Close Protective earth and close neutral with normal polarity	0.1 mA*	0.1 mA***	
Close Protective earth and close neutral with reverse polarity	0.1 mA*	0.1 mA***	
Open Protective earth and close neutral with normal polarity	0.3 mA**	0.5 mA***	
Open Protective earth and close neutral with reverse polarity	0.3 mA**	0.5 mA***	
Open neutral and close Protective earth with normal polarity	0.5 mA*	0.5 mA***	
Open neutral and close Protective earth with reverse polarity	0.5 mA*	0.5 mA***	

Table 10-15 Earth Leakage Current Limits

Conditions	Country		
Conditions	USA	Others	
Close Protective earth and close neutral with normal polarity	0.3 mA**	0.5 mA***	
Close Protective earth and close neutral with reverse polarity	0.3 mA**	0.5 mA***	
Open neutral and close Protective earth with normal polarity	1 mA*	1 mA***	
Open neutral and close Protective earth with reverse polarity	1 mA*	1 mA***	

Table 10-16 Type BF Patient Leakage Limits - Non-Conductive Surface

Conditions	Country		
Conditions	USA	Others	
Close Protective earth and close neutral with normal polarity	0.1 mA*	0.1 mA***	
Close Protective earth and close neutral with reverse polarity	0.1 mA*	0.1 mA***	
Open Protective earth and close neutral with normal polarity	0.5 mA*	0.5 mA***	
Open Protective earth and close neutral with reverse polarity	0.5 mA*	0.5 mA***	
Open neutral and close Protective earth with normal polarity	0.5 mA*	0.5 mA***	
Open neutral and close Protective earth with reverse polarity	0.5 mA*	0.5 mA***	

Table 10-17 Type CF Patient Leakage Limits - ECG leads

Conditions	Country		
Conditions	USA	Others	
Close Protective earth and close neutral with normal polarity	0.01 mA*	0.01 mA***	

Conditions	Country		
Conditions	USA	Others	
Close Protective earth and close neutral with reverse polarity	0.01 mA*	0.01 mA***	
Open Protective earth and close neutral with normal polarity	0.05 mA*	0.05 mA***	
Open Protective earth and close neutral with reverse polarity	0.05 mA*	0.05 mA***	
Open neutral and close Protective earth with normal polarity	0.05 mA*	0.05 mA***	
Open neutral and close Protective earth with reverse polarity	0.05 mA*	0.05 mA***	

Table 10-18 Type CF Patient Auxiliary Limits

Conditions	Country		
Conditions	USA	Others	
Close Protective earth and close neutral with normal polarity	0.01 mA*	0.01 mA***	
Close Protective earth and close neutral with reverse polarity	0.01 mA*	0.01 mA***	
Open Protective earth and close neutral with normal polarity	0.05 mA*	0.05 mA***	
Open Protective earth and close neutral with reverse polarity	0.05 mA*	0.05 mA***	
Open neutral and close Protective earth with normal polarity	0.05 mA*	0.05 mA***	
Open neutral and close Protective earth with reverse polarity	0.05 mA*	0.05 mA***	

Table 10-19 Isolation between Mains and Applied Limits****- Patient Leakage Main to Type BF Applied part

Conditions	Country		
Conditions	USA	Others	
Close Protective earth and close neutral with normal polarity	5 mA*	5 mA***	
Close Protective earth and close neutral with reverse polarity	5 mA*	5 mA***	

Table 10-20 Isolation between Mains and Applied Limits****- Patient Leakage Main to Type CF Applied part

Conditions	Conditions	untry
Conditions	USA	Others
Close Protective earth and close neutral with normal polarity	0.05 mA*	0.05 mA***
Close Protective earth and close neutral with reverse polarity	0.05 mA*	0.05 mA***

Table 10-21 Total Patient leakage current: Type CF probe to ground (Only for Europe)

Conditions	Limitation
Close Protective earth and close neutral with normal polarity	0.05 mA*****
Close Protective earth and close neutral with reverse polarity	0.05 mA*****
Open Protective earth and close neutral with normal polarity	0.1mA*****
Open Protective earth and close neutral with reverse polarity	0.1mA*****
Open neutral and close Protective earth with normal polarity	0.1mA*****
Open neutral and close Protective earth with reverse polarity	0.1mA*****

Table 10-22 Total Patient leakage current: Type CF probe to Mains (Only for Europe)

Conditions	Limitation
Close Protective earth and close neutral with normal polarity	0.1 mA*****
Close Protective earth and close neutral with reverse polarity	0.1 mA*****

NOTE: * Measurement limits per UL 60601-1 Medical Electrical Equipment Safety Standards Table IV ** Measurement limits per UL 60601-1 Medical Electrical Equipment Safety Standards, Table 19.5DV.1 *** Measurement limits per IEC 60601-1 Ed 2. Medical Electrical Equipment Safety Standards, Table IV

> **** Isolation between Mains and Applied Limits refers to the measurement of leakage current flow which would flow from mains to patient if the patient were to come into contact with mains voltage.

*****Measurement limits per IEC 60601-1 Ed 3. Medical Electrical Equipment Safety Standards, Table 3

******Measurement limits per IEC 60601-1 Ed 3. Medical Electrical Equipment Safety Standards, Table 4

The following tests are performed at the factory and should be performed at the customer site as well.

- Grounding Continuity
- Earth Leakage Current
- Enclosure Leakage Current
- Patient Leakage Current

All measurements should be made with an electrical safety analyzer.

10-8-3 Outlet Test - Wiring Arrangement - USA & Canada

Test all outlets in the area for proper grounding and wiring arrangement by plugging in the neon outlet tester and noting the combination of lights that are illuminated. Any problems found should be reported to the hospital immediately and the receptacle should not be used.





NOTE: No outlet tester can detect the condition where the Neutral (grounded supply) conductor and the Grounding (protective earth) conductor are reversed. If later tests indicate high leakage currents, this should be suspected as a possible cause and the outlet wiring should be visually inspected.

10-8-4 Grounding Continuity

CAUTION Electric Shock Hazard!

The patient or operator MUST NOT come into contact with the equipment during this test

Measure the resistance from the third pin of the attachment plug to the exposed protectively-earthed metal parts of the case. The ground wire resistance should be less than **0.2** ohms. Reference the procedure in the IEC60601-1-1.



Figure 10-2 Ground Continuity Test

CAUTION Lacquer is an isolation barrier! Resistor may be high-impedance! Measure only on blank parts, stated in Figure 10-2 above.

10-8-4-1 Meter Procedure

Follow these steps to test the Ground wire resistance.

- 1.) Turn the Voluson[™] P8 / Voluson[™] P6 unit OFF.
- 2.) Plug the unit into the meter, and the meter into the tested AC wall outlet.
- 3.) Plug the black chassis cable into the meter's "CHASSIS" connector and attach the black chassis cable clamp to an exposed protectively earthed metal part of the Voluson[™] P8 / Voluson[™] P6 unit such as Potential equilibrium connector.
- 4.) Set the meter's "FUNCTION" switch to the RESISTANCE position.
- 5.) Set the meter's "POLARITY" switch to the OFF (center) position.
- 6.) Measure and record the Ground wire resistance. This should be less than 0.2 Ohms.

10-8-5 Enclosure Leakage Current Test

10-8-5-1 Definition

This test measures the current that would flow in a grounded person who touched accessible nonprotectively-earthed parts of equipment if the ground wire were to break. The test verifies the isolation of the power line from the chassis.

The meter is connected from accessible non-protectively-earthed parts of the case to ground. Measurements should be made with the ground open and closed, with power line polarity normal and reversed, and with the neutral open and closed. Record the highest reading.

DANGER Electric Shock Hazard.

When the meter's ground switch is OPEN, DO NOT not touch the unit!

CAUTION Equipment damage possibility. Never switch the Polarity and the status of Neutral when the unit is powered ON. Be sure to turn the unit power OFF before switching them using the POLARITY switch and/or the NEUTRAL switch. Otherwise, the unit may be damaged.

10-8-5-2 Generic Procedure

The test verifies the isolation of the power line from the enclosure. The testing meter is connected from accessible non-protectively-earthed parts of the case to ground. Measurements should be made with the ground open and closed, with power line polarity normal and reversed, and with the neutral open and closed. Record the highest reading of current.



Figure 10-3 Set Up for Test of Enclosure Leakage Current, IEC 60601-1 Clause 19

NOTE: Color of Power outlet cable

i)USA and Canada Hot : Black Neutral : White Ground : Green or Green-yellow ii)Others

Hot : Brown

Neutral : Blue

Ground : Green-yellow

Electrical leakage testing may be accomplished with any calibrated Electrical Safety Analyzer tool compliant with AAMI/ESI 1993 or IEC 60601 or AS/NZS 3551.

When using a test instrument, its power plug may be inserted into the wall outlet and the equipment under test is plugged into the receptacle on the panel of the meter. This places the meter in the grounding conductor and the current flowing from the case to ground will be indicated in any of the current ranges. The maximum allowable limit for chassis source leakage is shown in Table 10-14 on page 10-15.

10-8-5-3 Data Sheet for Enclosure Leakage Current

The test passes when all readings measure less than the value shown in Table 10-14. Record all data on the Ultrasound Inspection Certificate.

Tester Neutral	Tester Polarity Switch	Protective Earth Switch	Test 1 Wheel	Test 2 LCD	Optional Test 3	Optional Test 4
Enter	Name of tested perip	oheral here:				
Closed	Normal	Closed				
Closed	Normal	Open				
Closed	Reversed	Closed				
Closed	Reversed	Open				
Open	Normal	Closed				
Open	Reversed	Closed				

Table 10-23 Typical Data Sheet for Enclosure Leakage Current

10-8-6 Earth Leakage Current Test

10-8-6-1 Definition

This test measures the current that would flow to a grounded person who touched accessible protectively-earthed parts of equipment if the ground wire should break.

The meter is connected from accessible protectively-earthed parts of the equipment to ground. Measurements should be made with power line polarity normal and reversed, and with the neutral open and closed Record the highest reading.

CAUTION Equipment damage possibility, Never switch the Polarity and the status of Neutral when the unit is powered ON. Be sure to turn the unit power OFF before switching them using the POLARITY switch and/or the NEUTRAL switch. Otherwise, the unit may be damaged.

10-8-6-2 Generic Procedure

The testing meter is connected from accessible protectively-earthed parts of the equipment to ground. Measurements should be made with power line polarity normal and reversed, and with the neutral open and closed. Record the highest reading of current.



Figure 10-4 Set Up for Test of Earth Leakage Current, IEC 60601-1 Clause 19

NOTE: Color of Power coutlet cable i) USA and Canada Hot : Black Neutral : White Ground : Green or Green-yellow ii) Others Hot : Brown Neutral : Blue Ground : Green-yellow Electrical leakage testing may be accomplished with any calibrated Electrical Safety Analyzer tool compliant with AAMI/ESI 1993 or IEC 60601 or AS/NZS 3551.

When using a test instrument, its power plug may be inserted into the wall outlet and the equipment under test is plugged into the receptacle on the panel of the meter. This places the meter in the grounding conductor and the current flowing through protective earth will be indicated in any of the current ranges. The maximum allowable limit for earth leakage current is shown in Table 10-15 on page 10-15.

Table 10-24 Typical Data Sheet for Earth Leakage Current

Tester Neutral	Tester Polarity Switch	Measured Earth Leakage Current
E	nter Name of tested peripheral he	re
Closed	Normal	
Closed	Reversed	
Open	Normal	
Open	Reversed	

10-8-7 Type CF Patient Leakage Current Test - ECG Leads

10-8-7-1 Definition

This test measures the current which would flow to ground from any of the isolated ECG leads. The meter simulates a patient who is connected to the ECG equipment and is grounded by touching some other grounded surface. Measurements should be made with the ground open and closed, with power line polarity normal and reversed, and with the neutral open and closed. For each combination, the operating controls, such as the lead switch, should be operated to find the worst case condition.

CAUTION Equipment damage possibility. Never switch the Polarity and the status of Neutral when the unit is powered ON. Be sure to turn the unit power OFF before switching them using the POLARITY switch and/or the NEUTRAL switch. Otherwise, the unit may be damaged.

10-8-7-2 Generic Procedure

Measurements should be made with the ground open and closed, with power line polarity normal and reversed, and with the neutral open and closed. For each combination, the operating controls, such as the lead switch, should be operated to find the worst case condition.



Figure 10-5 Test Circuit for Measuring Leakage current between patient lead and Ground - Isolated

NOTE: Color of Power outlet cable

i) USA and Canada Hot : Black Neutral : White Ground : Green or Green-yellow

ii) Others Hot : Brown Neutral : Blue Ground : Green-yellow

Table 10-25 Typical Data Sheet for Type CF Patient Leakage Current Test - ECG Leads

Tester Neutral	Tester Polarity Switch	Ground Switch	Measured Earth Leakage Current
Closed	Normal	Closed	
Closed	Normal	Open	
Closed	Reversed	Closed	
Closed	Reversed	Open	
Open	Normal	Closed	
Open	Reversed	Closed	

10-8-8 Type BF Patient Leakage Current Test - Probe

10-8-8-1 Definition

This test measures the current that would flow to ground from any of the probes through a patient who is being scanned and becomes grounded by touching some other grounded surface.

NOTE: Some leakage current is expected on each probe, depending on its design. Small variations in probe leakage currents are normal from probe to probe. Other variations will result from differences in line voltage and test lead placement. It is abnormal if no leakage current is measured. If no leakage current is detected, check the

configuration of the test equipment.

CAUTION Equipment damage possibility. Never switch the Polarity and the status of Neutral when the unit is powered ON. Be sure to turn the unit power OFF before switching them using the POLARITY switch and/or the NEUTRAL switch. Otherwise, the unit may be damaged.

10-8-8-2 Generic Procedure on Leakage Current

Measurements should be made with the ground open and closed, with power line polarity normal and reversed, and with neutral open and closed.

For each combination, the probe must be active to find the worst case condition.



Figure 10-6 Set Up for Probe Leakage Current

NOTE: Saline water pod should be insulated from floor and earth ground.

Table 10-26	Typical Data Sheet for	Type BF Patient Leal	age Current Test

Tester Neutral	Tester Polarity Switch	Ground Switch	Measured Leakage Current
Closed	Normal	Closed	
Closed	Normal	Open	
Closed	Reversed	Closed	
Closed	Reversed	Open	
Open	Normal	Closed	
Open	Reversed	Closed	

10-8-9 Type CF Patient Auxiliary current - ECG Lead to Probe

Reference the procedure in the IEC 60601-1. Measure current flow from Probe to all ECG leads connected together. The maximum allowable limit for earth leakage current is shown in Table 10-18 on page 10-17.

CAUTION Equipment damage possibility. Never switch the Polarity and the status of Neutral when the unit is powered ON. Be sure to turn the unit power OFF before switching them using the POLARITY switch and/or the NEUTRAL switch. Otherwise, the unit may be damaged.

Tester Neutral	Tester Polarity Switch	Ground Switch	Measured Leakage Current
Closed	Normal	Closed	
Closed	Normal	Open	
Closed	Reversed	Closed	
Closed	Reversed	Open	
Open	Normal	Closed	
Open	Reversed	Closed	

Table 10-27	Typical Data She	of for Type BE	Patient Auxilian	Current Test
	Typical Data She	естог туре БГ	Fallent Auxiliar	y current lest

10-8-10 Type BF Patient Leakage current - Mains to Probe

Reference the procedure in the IEC 60601-1. Measure leakage current flow from mains to Probe.

A DANGER Electric Shock Hazard.

Line voltage is applied to Probe during this test. To avoid possible electric shock hazard, the system being tested must not be touched by patients, users or anyone during testing.

CAUTION Equipment damage possibility. Never switch the Polarity and the status of Neutral when the unit is powered ON. Be sure to turn the unit power OFF before switching them using the POLARITY switch and/or the NEUTRAL switch. Otherwise, the unit may be damaged.

Table 10-28 Typical Data Sheet for Type BF Patient Leakage Current - Mains to Probe

Tester Neutral	Tester Polarity Switch	Ground Switch	Measured Leakage Current
Closed	Normal	Closed	
Closed	Reversed	Closed	

10-8-11 Type CF Patient Leakage current - Mains to ECG lead

Reference the procedure in the IEC 60601-1. Measure leakage current flow from mains to each of the ECG leads.

DANGER Electric Shock Hazard.

Line voltage is applied to the ECG leads during this test. To avoid possible electric shock hazard, the system being tested must not be touched by patients, users or anyone during testing.

CAUTION Equipment damage possibility. Never switch the Polarity and the status of Neutral when the unit is powered ON. Be sure to turn the unit power OFF before switching them using the POLARITY switch and/or the NEUTRAL switch. Otherwise, the unit may be damaged.

 Table 10-29
 Typical Data Sheet for Type CF Patient Leakage Current - Mains to ECG Lead

Tester Neutral	Tester Polarity Switch	Ground Switch	Measured Leakage Current
Closed	Normal	Closed	

Tester Neutral	Tester Polarity Switch	Ground Switch	Measured Leakage Current
Closed	Reversed	Closed	

10-8-12 Total Patient leakage current : Type CF probe to ground(Only for Europe)

10-8-12-1 Definition

This test measures the current that would flow to ground from all ECG leads through a patient who is being scanned and becomes grounded by touching some other grounded surface.

CAUTION Equipment damage possibility. Never switch the Polarity and the status of Neutral when the unit is powered ON. Be sure to turn the unit power OFF before switching them using the POLARITY switch and/or the NEUTRAL switch. Otherwise, the unit may be damaged.

10-8-12-2 Generic Procedure for measurement

Put all ECG leads into saline water and measure leakage current with the ground open and closed, with power line polarity normal and reversed, and with neutral open and closed. For each combination, ECG leads must be active simultaneously. Please, refer to "Type CF Patient Leakage Current Test - ECG Leads" part for detail.

Tester Neutral	Tester Polarity Switch	Ground Switch	Measured Leakage Current
Closed	Normal	Closed	
Closed	Normal	Open	
Closed	Reversed	Closed	
Closed	Reversed	Open	
Open	Normal	Closed	
Open	Reversed	Closed	

Table 10-30 Typical Data Sheet for Total Patient Leakage Current - Type CF probes to ground

10-8-13 Total Patient leakage current : Mains to Type CF probe (Only for Europe)

Reference the procedure in the IEC 60601-1 Ed 3. Measure leakage current flow from mains to all ECG leads connected together.

A DANGER Electric Shock Hazard.

Line voltage is applied to the ECG leads during this test. To avoid possible electric shock hazard, the system being tested must not be touched by patients, users or anyone during testing.

CAUTION Equipment damage possibility. Never switch the Polarity and the status of Neutral when the unit is powered ON. Be sure to turn the unit power OFF before switching them using the POLARITY switch and/or the NEUTRAL switch. Otherwise, the unit may be damaged.

Table 10-31 Typical Data Sheet for Total Patient Leakage Current - Mains to Type CF probes

Tester Neutral	Tester Polarity Switch	Ground Switch	Measured Leakage Current
Closed	Normal	Closed	
Closed	Reversed	Closed	

Section 10-9 When There's Too Much Leakage Current...

10-9-1 Earth and/or Enclosure Fails

Follow the below checklist in case of earth and/or enclosure leakage current failure.

- Confirm the ground of the power cord and plug for continuity.
- Ensure the ground is not broken, frayed or intermittent. If that, replace any defective part.
- Tighten all grounds. Ensure star washers are under all ground studs.
- Inspect wiring for bad crimps, poor connections, or damage.
- Test the wall outlet. Verify it is grounded and is free of other wiring abnormalities. If any deviation is found, notify the user or owner to correct it. In this case, check the other outlets to see if they could be used instead as a workaround.
- NOTE: No outlet tester can detect the condition where the white neutral wire and the green grounding wire are reversed. If later tests indicate high leakage currents, this should be suspected as a possible cause and the outlet wiring should be visually inspected.

10-9-2 Probe Fails

- Test another probe to isolate if the fault lies with the probe or the System .
- NOTE: Each probe will have some amount of leakage, dependent on its design. Small variations in probe leakage currents are normal from probe to probe. Other variations will result from differences in line voltage and test lead placement. The maximum allowable leakage current for body surface contact probe differs from an inter-cavity probe. Be sure to enter the correct probe type in the appropriate space on the check list.
 - Test the probe in another connector to isolate if the fault lies with the probe or the System . If excessive leakage current is slot dependent, inspect the system connector for bent pins, poor connections, and ground continuity.

If the problem remains with the probe, replace the probe.

10-9-3 Peripheral Fails

Tighten all grounds. Ensure star washers are under all ground studs.

Inspect wiring for bad crimps, poor connections, or damage.

10-9-4 Still Fails

If all else fails, begin isolation by removing the probes, external peripherals, and then the on-board peripherals one at a time while monitoring the leakage current measurement.

10-9-5 New Unit

If the leakage current measurement tests fail on a new unit and if situation cannot be corrected, submit a Safety Failure Report to document the system problem. Remove unit from operation.

10-9-6 ECG Fails

Inspect cables for damage or poor connections.

ULTRASOUND INSPECTION CERTIFICATE

	System ID:	Dispatch Number / Date Performed:	Warranty/Contract/HBS	
tem Type Model Number: Serial Number:		Serial Number:	Manufacture Date:	
Frequency:	Scan Format*:	Model Number:	Serial Number:	
Frequency:	Scan Format*:	Model Number:	Serial Number:	
Frequency:	Scan Format*:	Model Number:	Serial Number:	
Frequency:	Scan Format*:	Model Number:	Serial Number:	
Frequency:	Scan Format*:	Model Number:	Serial Number:	
Frequency:	Scan Format*:	Model Number:	Serial Number:	
Frequency:	Scan Format*:	Model Number:	Serial Number:	
Frequency:	Scan Format*:	Model Number:	Serial Number:	
Frequency:	Scan Format*:	Model Number:	Serial Number:	
	Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency: Frequency:	System ID: Model Number: Model Number: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*: Frequency: Scan Format*:	System ID:Dispatch Number / Date Performed:Model Number:Serial Number:Frequency:Scan Format*:Frequency:Scan Format*:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:Frequency:Scan Format*:Model Number:	

* Scan Format: Phased Array, Linear Array, Curved Array, Mechanical Array or Other

FUNCTIONAL CHECKS

PHYSICAL INSPECTION AND CLEANING

Functional Check (if applicable)	OK? or N/A	Physical Inspection and Cleaning (if applicable)	Inspect	Clean
B-Mode Function		Console		
M-Mode Function		Monitor		
Doppler Modes Functions				
Color Modes Functions				
3D/4D-Mode Function		Probe Holders		
Applicable Software Options		External I/O		
Applicable Hardware Options		Wheels, Brakes & Swivel Locks		
Control Panel		Cables and Connectors		
Monitor		Approved Peripherals (VCR, DVD Drive, Printers, etc.)		
Measurement Accuracy				

COMMENTS:

ELECTRICAL SAFETY

Outlet and Ground Continuity test

Outlet/Ground Continuity	Max Value Allowed	Value Measured	OK?	Comments
Outlet (correct ground &wiring config.)	N/A	N/A		
System Ground Continuity	0.2 Ohm			

Earth leakage current test

Tester Neutral	Tester Polarity Switch	Max Value Allowed	Value Measured	OK?	Comments			
Enter Name of tested peripheral here:								
Closed	Normal	0.3mA(USA)/0.5mA(Others)						
Closed	Reversed	0.3mA(USA)/0.5mA(Others)						
Open	Normal	1mA						
Open	Reversed	1mA						

Enclosure leakage current test

Tester Neutral	Tester Polarity Switch	Protective Earth Switch	Max Value Allowed	Test 1 Wheel	Test 2 LCD	Optional Test 3	Optional Test 4	OK?	Comments
			Enter Name	of tested pe	eripheral he	re:			
Closed	Normal	Closed	0.1mA(USA)/ 0.1mA(Others)						
Closed	Normal	Open	0.3mA(USA)/ 0.5mA(Others)						
Closed	Reversed	Closed	0.1mA(USA)/ 0.1mA(Others)						
Closed	Reversed	Open	0.3mA(USA)/ 0.5mA(Others)						
Open	Normal	Closed	0.5mA(USA)/ 0.5mA(Others)						
Open	Reversed	Closed	0.5mA(USA)/ 0.5mA(Others)						

Type CF Patient Leakage Current Test - ECG Leads

ECG lead 1

Tester Neutral	Tester Polarity Switch	Ground Switch	Max Value Allowed	Value Measured	OK?	Comments
Closed	Normal	Closed	0.01mA			
Closed	Normal	Open	0.05mA			
Closed	Reversed	Closed	0.01mA			
Closed	Reversed	Open	0.05mA			
Open	Normal	Closed	0.05mA			
Open	Reversed	Closed	0.05mA			

ECG lead 2

Tester Neutral	Tester Polarity Switch	Ground Switch	Max Value Allowed	Value Measured	OK?	Comments
Closed	Normal	Closed	0.01mA			
Closed	Normal	Open	0.05mA			
Closed	Reversed	Closed	0.01mA			
Closed	Reversed	Open	0.05mA			
Open	Normal	Closed	0.05mA			
Open	Reversed	Closed	0.05mA			

ECG lead 3

Tester Neutral	Tester Polarity Switch	Ground Switch	Max Value Allowed	Value Measured	OK?	Comments
Closed	Normal	Closed	0.01mA			
Closed	Normal	Open	0.05mA			
Closed	Reversed	Closed	0.01mA			
Closed	Reversed	Open	0.05mA			
Open	Normal	Closed	0.05mA			
Open	Reversed	Closed	0.05mA			

Type BF Patient Leakage Current Test - Probes (This test should be done for all probe)

Tester Neutral	Tester Polarity Switch	Ground Switch	Max Value Allowed	Value Measured	OK?	Comments
Closed	Normal	Closed	0.1mA			
Closed	Normal	Open	0.5mA			
Closed	Reversed	Closed	0.1mA			
Closed	Reversed	Open	0.5mA			
Open	Normal	Closed	0.5mA			
Open	Reversed	Closed	0.5mA			

Type CF Patient Auxiliary Current Test - ECG Lead to Probes

Tester Neutral	Tester Polarity Switch	Ground Switch	Max Value Allowed	Value Measured	OK?	Comments
Closed	Normal	Closed	0.01mA			
Closed	Normal	Open	0.05mA			
Closed	Reversed	Closed	0.01mA			
Closed	Reversed	Open	0.05mA			
Open	Normal	Closed	0.05mA			
Open	Reversed	Closed	0.05mA			

Type BF Patient Leakage Current Test - Mains to Probe

Probe (This test should be done for all probes)

Tester Neutral	Tester Polarity Switch	Ground Switch	Max Value Allowed	Value Measured	OK?	Comments
Closed	Normal	Closed	5mA			
Closed	Reversed	Closed	5mA			

Type CF Patient Leakage Current Test - Mains to ECG leads

ECG leads connected all together

Tester Neutral	Tester Polarity Switch	Ground Switch	Max Value Allowed	Value Measured	OK?	Comments
Closed	Normal	Closed	0.05mA			
Closed	Reversed	Closed	0.05mA			

Total Patient Leakage Current - Type CF probe to Ground

Tester Neutral	Tester Polarity Switch	Ground Switch	Max Value Allowed	Value Measured	OK?	Comments
Closed	Normal	Closed	0.05mA			
Closed	Normal	Open	0.1mA			
Closed	Reversed	Closed	0.05mA			
Closed	Reversed	Open	0.1mA			
Open	Normal	Closed	0.1mA			
Open	Reversed	Closed	0.1mA			

Total Patient Leakage Current - Mains to Type CF probes

Tester Neutral	Tester Polarity Switch	Ground Switch	Max Value Allowed	Value Measured	OK?	Comments
Closed	Normal	Closed	0.1mA			
Closed	Reversed	Closed	0.1mA			

Final Check. All system covers are in place. System scans with all probes as expected.

Accepted by: _____

© Voluson™P8 / Voluso™P6 GE 9, Sunhwan-ro 214beon-gil, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea

www.gehealthcare.com

